



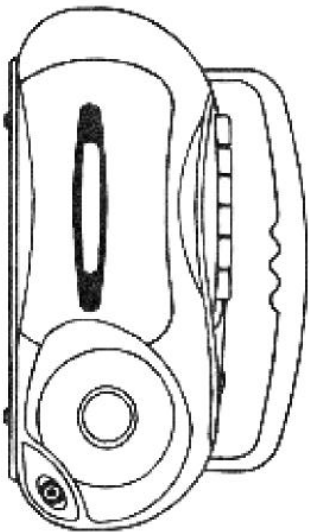


Model: VX730

AM/FM Radio Cassette Recorder



- CONTROLS LOCATION**
- | | |
|-----------------------------------|-------------------------|
| 1. Pause button | 11. Phone jack |
| 2. Stop / Eject button | 12. Handle |
| 3. Fast forward button | 13. Volume control |
| 4. Rewind button | 14. Dial pointer |
| 5. Play button | 15. Function switch |
| 6. Record button | 16. Band selector |
| 7. Cassette compartment | 17. Power on indicator |
| 8. Tuning knob | 18. Rod antenna |
| 9. Speaker | 19. Battery compartment |
| 10. Built-in condenser microphone | 20. AC socket |

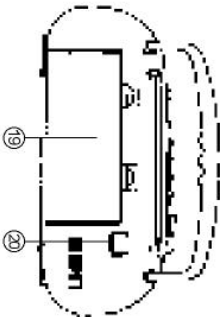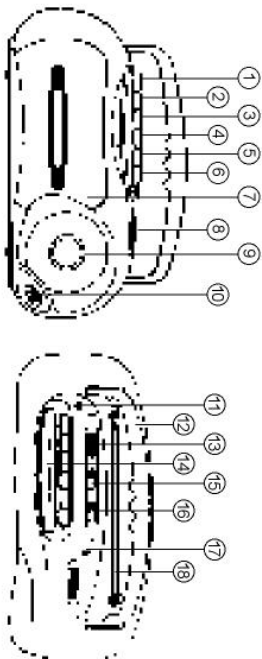

POWER SOURCE

To use with batteries (DC power source)

- How to insert batteries:**
- Place four UM-1 (or "D" size or HP-2) batteries in the BATTERY COMPARTMENT paying careful attention to the polarity. (Batteries not included)
 - Old batteries can leak and cause corrosion, so never leave rundown batteries in your unit, or replace at once.

To use with household current:

- Connect the AC power cord (included) to the AC SOCKET other side connect to the AC receptacle mains when not in used.

TO LISTEN TO THE RADIO

- Set the FUNCTION SELECTOR to "RADIO" position.
- Set BAND SELECTOR to the desired band.
- Tune to the desired station by slowly turning the TUNING KNOB control.
- Adjust the volume level with the SLIDE VOLUME control.
- The radio can be turned off by setting the FUNCTION SELECTOR to the "TAPE" position.

ANTENNA

For AM Reception, the unit has a built-in ferrite bar antenna. Rotate the unit to obtain maximum reception.

FM antenna

To listen to FM broadcasts, extend the ROD ANTENNA to the most suitable length.

Reception may be improved by turning the antenna to different direction.

Notes: Be sure to re-insert rod antenna before raising or lowering the carrying handle, do not apply excessive force when handling the antenna because to do so may damage it.

CASSETTE OPERATION

- Push the STOP / EJECT button to open the cassette cover the cassette should be inserted so that the open part (where the tape is exposed) is facing upward, close the cassette cover completely.
- Set the FUNCTION SELECTOR to the "TAPE" position and then push the PLAY button.
- Adjust the volume level with the VOLUME control.
- To stop the tape push the STOP button.
- When the tape comes to end, the unit stops automatically, and the power is turned off.
- Push the STOP/EJECT button, the cover opens and the cassette can then be removed or reversed.

FAST FORWARD AND REWIND

The tape can rapidly moved toward (to the left) by pushing the F.F. button, the tape can be rapidly rewind (to the right) by Pushed the REW button.

RECORDING

- Recording through the Built-in Microphone
- Set the FUNCTION SELECTOR to the "TAPE" position.
 - Push the RECORD button.
 - Recording can be made through the microphone.
 - The unit will be automatically turned off at the end of the tape.

Recording of radio broadcasts


- Set the FUNCTION SELECTOR to "RADIO" position and tune to the radio broadcast where is to be recorded. Set the volume of radio to an ordinary volume level.
- Push the RECORD button.
- For playback set the FUNCTION SELECTOR to "TAPE" position rewind the tape to the beginning position and operated as described in PLAY button.

PRIVATE LISTENING

Plug the earphone (not included) into the HEADPHONE JACK this will automatically disconnect the SPEAKER.

SPECIFICATIONS


Frequency Range	AM 530 – 1700 KHz FM 88 – 108 MHz
Antenna	FM Telescopic Antenna FM Ferrite Core Antenna
Tape Speed	4.75 cm/sec
Wow & Flutter	less than 0.35% rms (JIS)
Recording system	DC Bias
Output Power	500mW
Speaker	3"
Power Source	AC Power 120V / 60Hz DC 6VUM-1 (DSize) x 4



CAUTION

RISK OF ELECTRIC SHOCK

DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE SCREWS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR

- MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

GRAPHICAL SYMBOLS WITH SUPPLEMENTARY MARKINGS ARE LOCATED ON BOTTOM OF THE UNIT

**IMPORTANT SAFEGUARDS FOR AUDIO PRODUCTS
PLEASE READ CAREFULLY ALL THE FOLLOWING
IMPORTANT SAFEGUARDS THAT ARE APPLICABLE
TO YOUR APPLIANCE**

1. All the safety and operating instructions should be read before the appliance is operated.
2. The safety and operating instructions should be retained for future reference.
3. All warning and cautions on the appliance and in the operating instructions should be adhered to.
4. All operating and use instructions should be followed.
5. The appliance should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
6. The appliance should be used only with a cart or stand that is recommended by the manufacturer.
7. The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. An outdoor antenna should be located away from power lines.
9. The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
10. The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliance (including amplifiers) that produce heat.
11. The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
12. Precautions should be taken so that grounding or polarization means of the appliance is not defeated.
13. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. The appliance should be cleaned only as recommended by the manufacturer.
15. The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
16. Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
17. The appliance should be serviced by qualified service personnel when:
 - a. The power supply cord or the plug has been damaged;
 - b. Objects have fallen, or liquid has been spilled into the appliance;
 - c. The appliance has been exposed to rain, or
 - b. The appliance does appear to operate normally or exhibits a marked change in performance or
18. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

" FOR ADDITIONAL SET UP OR OPERATING ASSISTANCE,
PLEASE CONTACT CUSTOMER SERVICE AT (954) 660-7100.
PLEASE KEEP ALL PACKAGING MATERIAL FOR AT LEAST
90 DAYS IN CASE YOU NEED TO RETURN THIS PRODUCT TO
PLACE OR PURCHASE, FOR PARTS AND ACCESSORIES,
CONTACT FOX INTERNATIONAL AT 1-800-521-6993"

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>