 


Nokia Bluetooth Stereo Headset BH-905i with active noise cancellation User Guide

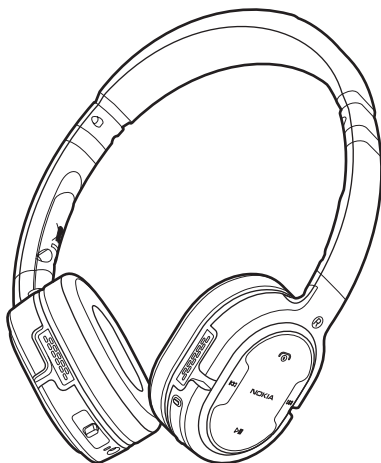

9222807
Issue 1 EN

DECLARATION OF CONFORMITY

Hereby, NOKIA CORPORATION declares that this BH-905i product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the Declaration of Conformity can be found at http://www.nokia.com/phones/declaration_of_conformity/.

CE 0197

© 2010 Nokia. All rights reserved.

Nokia, Nokia Connecting People and the Nokia Original Accessories logo are registered trademarks of Nokia Corporation. Nokia tune is a sound mark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or tradenames of their respective owners.

Reproduction, transfer, distribution, or storage of part or all of the contents in this document in any form without the prior written permission of Nokia is prohibited. Nokia operates a policy of continuous development. Nokia reserves the right to make changes and improvements to any of the products described in this document without prior notice.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

To the maximum extent permitted by applicable law, under no circumstances shall Nokia or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. Nokia reserves the right to revise this document or withdraw it at any time without prior notice.

The availability of products may vary by region. For more information, contact your Nokia dealer. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

9222807/Issue 1 EN

Contents

1. Introduction	4	Pair and connect the headset	
Bluetooth wireless technology	4	to a Bluetooth device	10
About active noise cancellation	5	Disconnect the headset	11
		Reconnect the headset	11
		Troubleshooting	11
2. Get started	6	3. Basic use	13
Keys and parts	6	Place the headset over the head	13
Connection method	6	Active noise cancellation	13
Connect using Bluetooth		Adjust the volume	13
connectivity	6	Calls	14
Connect using the audio		Listen to music	14
cables and adapters	7	Bass booster and stereo	
Charge the battery	8	widening	15
Operating time when using		Clear settings or reset	16
Bluetooth connectivity	8		
Operating time when using		4. Battery and charger	
the audio cable	9	information	17
Activate or deactivate		Take care of your device	18
Bluetooth connectivity	9		
Activate	9		
Deactivate	9		

1. Introduction

The Nokia Bluetooth Stereo Headset BH-905i with active noise cancellation allows you to handle calls hands-free with a compatible mobile device and listen to music from a compatible music player.

Active noise cancellation helps you to use the headset also in noisy environments.

You can connect the headset to a compatible device using Bluetooth wireless technology or the supplied audio cables.

Read this user guide carefully before using the headset. Also, read the user guide for the device that you connect to the headset. For more information, see www.nokia.com/support or your local Nokia website.

 
This product may contain small parts. Keep them out of the reach of small children.



Note: The surface of this device does not contain nickel in the platings. The surface of this device contains stainless steel.

■ Bluetooth wireless technology

Bluetooth wireless technology allows you to connect compatible devices without cables. The headset and the other device do not need to be in line of sight, but they should be within 10 metres (33 feet) of each other. The closer the headset and the other device are to each other, the better the performance. The optimal operating range is shown in dark grey in the picture. The connection is subject to interference from distance and obstructions (shown in light grey) or other electronic devices.

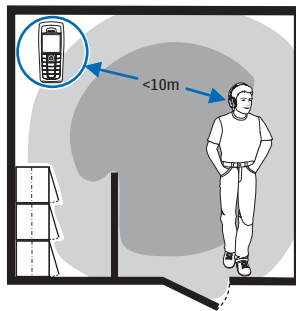

The headset is compliant with the Bluetooth Specification 2.1 + EDR supporting the following profiles: Headset Profile 1.1, Hands-Free

Profile (HFP) 1.5, Advanced Audio Distribution Profile (A2DP) 1.2, and Audio Video Remote Control Profile 1.0. Check with the manufacturers of other devices to determine their compatibility with this device.

■ About active noise cancellation

Wolfson AudioPlus™ Ambient Noise Cancellation technology uses patented signal processing technology and advanced acoustic design expertise to deliver class-leading active noise cancellation for stereo headsets and headphones.

 
This novel feed-forward technology cancels more decibels of noise across a wider frequency range than traditional feedback technologies, providing a peaceful and tranquil environment for users wherever they happen to be. As Wolfson's advanced technology does not process the playback audio stream, your music comes through in untouched hi-fi quality stereo.

2. Get started

■ Keys and parts

The headset contains the following parts:

1. Power key for active noise cancellation
2. Indicator light for charging and active noise cancellation
3. Charger connector
4. Volume keys
5. Rewind key
6. Connector for Nokia CA-143U or CA-182U audio cable
7. Bluetooth indicator light
8. Play/Pause key
9. Forward key
10. Multifunction key

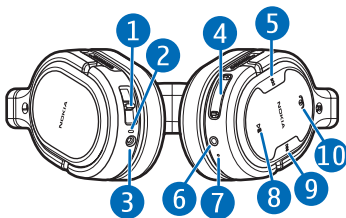

Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because information stored on them may be erased.

■ Connection method

You can connect the headset to compatible devices using Bluetooth wireless technology or the supplied audio cables.

Before you can connect the headset to a Bluetooth device or use active noise cancellation, you must charge the battery. See "Charge the battery", p. 8.

Connect using Bluetooth connectivity

To use the headset with a compatible Bluetooth device, activate Bluetooth connectivity (see "Activate", p. 9) and pair and connect the

headset to the device (see "Pair and connect the headset to a Bluetooth device", p. 10).

If you plug the CA-143U or CA-182U audio cable into the headset when the headset is connected to a Bluetooth device, the device is disconnected and Bluetooth connectivity is deactivated.

Connect using the audio cables and adapters

The headset is supplied with the Nokia CA-143U and CA-182U audio cables. The headset may also be supplied with adapters to connect the cable to different devices.

Audio cable CA-143U

To connect the headset to a compatible Nokia device that has the Nokia 3.5 mm AV connector, plug the CA-143U audio cable into the headset and the AV connector.

Audio cable CA-182U

To connect the headset to a compatible Nokia device, sold by a cellular service provider in North America, that has a 3.5 mm audio connector or to a device, produced by another manufacturer, that has a compatible 3.5 mm audio connector, plug the CA-182U audio cable into the headset and the connector.

When you connect the headset to a device by some other manufacturer, the headset keys cannot be used.

Extension cable and adapters

To extend the length of the audio cable, use the CA-144U extension cable.

To connect the headset to a device that has a standard 3.5 mm audio connector, plug the audio cable into the headset and the AD-63 adapter, and insert the adapter into the audio connector.

To connect the headset to a device that has the Nokia 2.5 mm AV connector, plug the audio cable into the headset and the AD-52 adapter, and insert the adapter into the AV connector.

To connect the headset to a home stereo system that has a standard 6.3 mm headphone connector, plug the audio cable into the headset

and the AD-70 adapter, and insert the adapter into the headphone connector.

To connect the headset to an airplane audio system that has a 3.5 mm headphone connector, plug the audio cable into the headset and the AD-71 adapter, and insert the adapter into the headphone connector.

To use the headset for internet (VoIP) calls, plug the CA-143U audio cable into the headset and the AD-77 adapter, and insert the adapter into the headphone and microphone connectors on your computer.

■ Charge the battery

Before you can connect the headset to a Bluetooth device or use active noise cancellation, you must charge the battery.

Before charging the battery, carefully read "Battery and charger information", p. 17.

1. Connect the charger to a wall outlet.
2. Connect the charger cable to the charger connector. The indicator light for charging and active noise cancellation is red during charging.

Charging the battery fully may take up to 2 hours.

3. When the battery is fully charged, the indicator light turns green. Disconnect the charger from the headset, then from the wall outlet.

When you unplug a charger, hold and pull the plug, not the cord.

When the battery charge is low and Bluetooth connectivity is activated, the headset beeps every 5 minutes and the indicator light for charging and active noise cancellation flashes red.

Operating time when using Bluetooth connectivity

When active noise cancellation is activated, the fully charged battery has power for up to 15 hours of talk time, up to 40 hours of standby time, or up to 16 hours of music playing time.

When active noise cancellation is deactivated, the fully charged battery has power for up to 24 hours of talk time, up to 600 hours of standby time, or up to 25 hours of music playing time.

Operating time when using the audio cable

The fully charged battery has power for up to 40 hours of active noise cancellation.

■ **Activate or deactivate Bluetooth connectivity**

When Bluetooth connectivity is activated, you can connect the headset to one or two compatible Bluetooth devices.

Even if Bluetooth connectivity is deactivated, you can use the headset for handling calls and listening to music through the supplied audio cables.

Activate

To activate Bluetooth connectivity, press and hold the multifunction key for about 2 seconds. The headset beeps, and the Bluetooth indicator light briefly flashes green.

The headset tries to connect to the last used mobile device that supports the HFP Bluetooth profile and the last used music player that supports the A2DP profile, if the same device does not support both profiles. When the headset is connected to the device and is ready for use, the Bluetooth indicator light flashes blue slowly.

If the headset has not been previously paired with any device, it automatically enters pairing mode. See also "Pair and connect the headset to a Bluetooth device", p. 10.

Deactivate

To deactivate Bluetooth connectivity, press and hold the multifunction key for about 5 seconds. The headset beeps, and the Bluetooth indicator light briefly flashes red.

If the headset is not connected to a Bluetooth device within about 30 minutes, the headset deactivates Bluetooth connectivity automatically. Bluetooth connectivity is also deactivated if you connect the CA-143U or CA-182U audio cable to the headset.

■ Pair and connect the headset to a Bluetooth device

If your mobile device supports the A2DP Bluetooth profile and has a music player feature, you can use the device to also play music through the headset.

If your mobile device does not support the A2DP profile, you can separately pair the headset with the mobile device and a music player that supports this profile. If you have paired and connected the headset with your mobile device, disconnect the headset from it before pairing the headset with the music player.

1. Ensure that your mobile device or music player is switched on.
2. To pair the headset if it has not been previously paired with a device, activate Bluetooth connectivity on the headset. The headset enters pairing mode, and the Bluetooth indicator light starts to flash blue quickly.

To pair the headset if it has been previously paired with a device, ensure that Bluetooth connectivity is deactivated on the headset, and press and hold the multifunction key (for about 5 seconds) until the blue indicator light starts to flash quickly.

3. Within about 3 minutes, activate Bluetooth connectivity on your mobile device or music player, and set it to search for Bluetooth devices. For instructions, see the user guide of your device .
4. Select the headset from the list of found devices on your mobile device or music player.
5. If necessary, enter the passcode **0000** to pair and connect the headset to your device. If your device does not have a keypad, it may use this passcode by default.

In some devices, you may need to make the connection separately after pairing. You only need to pair the headset with your device once.

If pairing is successful, the headset appears in the menu of your device where you can view the currently paired Bluetooth devices.

When the headset is connected to your device and is ready for use, the Bluetooth indicator light flashes blue slowly.

You can pair the headset with up to eight devices but connect it to only one device supporting the HFP Bluetooth profile and another device supporting the A2DP Bluetooth profile at a time.

Disconnect the headset

To disconnect the headset from your Bluetooth device, deactivate Bluetooth connectivity on the headset, or disconnect the headset in the Bluetooth menu of your device. If you disconnect the headset from a music player while listening to music, first press the play/pause key to pause playing.

You do not need to delete pairing with the headset to disconnect it.

Reconnect the headset

To manually connect the headset to the last used device that supports the A2DP Bluetooth profile, but not the HFP profile (for example, after connection loss), deactivate and activate Bluetooth connectivity on the headset, or press the play/pause key when Bluetooth connectivity is activated.

To manually connect the headset to the last used device that supports the HFP Bluetooth profile or the HFP and A2DP profiles, start the connection in the Bluetooth menu of your device, or press and hold the multifunction key for about 2 seconds.

You may be able to set your device so that the headset connects to it automatically. To activate this feature in a Nokia device, change the paired device settings in the Bluetooth menu.

■ Troubleshooting

If you cannot connect the headset to your compatible Bluetooth device, do the following:

- Ensure that the headset is charged.

- Ensure that Bluetooth connectivity is activated on the headset and the other device and the headset is paired with your device.
- Ensure that the CA-143U or CA-182U audio cable is not connected to the headset.
- Ensure that the headset is within 10 metres (33 feet) of your device and that there are no obstructions between the headset and the device, such as walls, or other electronic devices.

See also "Clear settings or reset", p. 16.

3. Basic use

■ Place the headset over the head

Turn the speaker pads towards each other, and place the headset over your head so that the pads rest comfortably on your ears.

Place the pad indicated with L on the left ear and the pad with R on the right ear. Adjust the headband length for the best fit.



Warning: When you use the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

When you stop using the headset, ensure that active noise cancellation is deactivated to save battery power.

■ Active noise cancellation

Active noise cancellation reduces ambient noise in noisy environments. You can also use active noise cancellation for noise reduction, for example, on an airplane when Bluetooth connectivity is deactivated and the CA-143U or CA-182U audio cable is not connected to the headset.

To activate active noise cancellation, slide the power key for active noise cancellation toward the charger connector. The indicator light for charging and active noise cancellation is displayed green.

To deactivate active noise cancellation, slide the power key away from the charger connector. The indicator light for charging and active noise cancellation turns off.

■ Adjust the volume

To adjust the headset volume, press the volume up or down key during a call or while listening to music. To adjust the volume quickly, press and hold either key.

You can also adjust the volume on the connected device if it supports this feature with the headset.

■ Calls

To make a call, use your mobile device in the normal way when the headset is connected to it.

To redial the number you last called (if your mobile device supports this feature with the headset), when no call or music playback is in progress, press the multifunction key twice.

To activate voice dialling (if your mobile device supports this feature with the headset), when no call is in progress, press and hold the multifunction key for about 2 seconds until the mobile device starts voice dialling, and proceed as described in the user guide of your mobile device.

To answer or end a call, press the multifunction key, or use the keys of the mobile device. To reject a call, press the multifunction key twice quickly.

To mute or unmute the microphone during a call when using Bluetooth connectivity, press and hold the play/pause key for about 2 seconds. When the microphone is muted, the Bluetooth indicator light flashes blue twice every 5 seconds.

To switch a call between the headset and your connected device when using Bluetooth connectivity, press and hold the multifunction key for about 2 seconds.

To switch a call from the headset to the connected device when using the audio cable, disconnect the CA-143U or CA-182U cable from the headset. To switch the call back to the headset, reconnect the cable.

■ Listen to music

To listen to music, connect the headset to a compatible music player using Bluetooth wireless technology or the CA-143U or CA-182U audio cable. If you connect the headset to a Bluetooth device, ensure that it supports the A2DP Bluetooth profile.

The available music functions depend on your music player.

If you receive or make a call while listening to music, the music is paused until you end the call.



Warning: Listen to the headset at a moderate level.

To play a song, select the song in the music player, and press the play/pause key.

To pause or resume playing, press the play/pause key when using Bluetooth connectivity, or press and hold the play/pause key when using the audio cable.

To stop playing when using Bluetooth connectivity, press and hold the play/pause key for about 2 seconds.

To select the next song during playback, press the forward key. To select the previous song, press the rewind key. To scroll through the current song quickly, press and hold either key.

■ Bass booster and stereo widening

You can activate the bass booster and stereo widening effects while you listen to music from a compatible music player using Bluetooth wireless technology.

The effects are available if your music player uses SBC encoding. If the music player uses MP3 or AAC direct streaming instead of SBC, the effects are not available. For more information, see the user guide of your music player.

To select the desired effect while listening:

- To activate the bass booster effect, press the multifunction key. The headset beeps once.
- To activate the stereo widening effect, after one second, press the multifunction key a second time. The headset beeps twice.
- To activate the bass booster and stereo widening effect, press the multifunction key a third time. The headset beeps three times.
- To deactivate the effects, press the multifunction key a fourth time. The headset plays a long beep.

The headset saves the selected setting for future use.

■ Clear settings or reset

To clear the volume and pairing settings from the headset, deactivate Bluetooth connectivity, and press and hold the multifunction key and the volume up key (for about 5 seconds) until the Bluetooth indicator light starts to alternate between red and green.

To reset the headset if it stops functioning, even though it is charged, press the volume down key, the multifunction key, and the rewind key at the same time. The reset does not clear the settings.

4. Battery and charger information

This device has an internal, nonremovable, rechargeable battery. Do not attempt to remove the battery from the device as you may damage the device. This device is intended for use when supplied with power from the following chargers: AC-3, AC-4, AC-5, AC-15, and DC-4. The exact charger model number may vary depending on the type of plug. The plug variant is identified by one of the following: E, X, AR, U, A, C, K, or B. The battery can be charged and discharged hundreds of times, but it will eventually wear out.

Operating times are estimates only. Actual times are affected by, for example, device settings, features being used, battery condition, and temperature.

If the battery has not been used for a long time, to begin charging, you may need to connect the charger, then disconnect and reconnect it.

If the battery is completely discharged, it may take several minutes before the charging indicator is displayed.

When your charger is not in use, unplug it from the electrical plug and the device. Do not leave a fully charged battery connected to a charger, as overcharging may shorten the battery's lifetime. If left unused, a fully charged battery will lose its charge over time.

Always keep the battery between 15°C and 25°C (59°F and 77°F). Extreme temperatures reduce the capacity and lifetime of the battery. A device with a hot or cold battery may not work temporarily.

Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations. Recycle when possible. Do not dispose as household waste.

Use the charger for its intended purpose only. Improper use or use of unapproved chargers may present a risk of fire, explosion, or other hazard, and may invalidate any approval or warranty. If you believe the charger is damaged, take it to a service centre for inspection before continuing to use it. Never use a damaged charger. Only use the charger indoors.

Take care of your device

Handle your device, charger and accessories with care. The following suggestions help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that corrode electronic circuits. If your device gets wet, allow it to dry completely.
- Do not use or store the device in dusty or dirty areas. Moving parts and electronic components can be damaged.
- Do not store the device in high temperatures. High temperatures can shorten the life of the device, damage the battery, and warp or melt plastics.
- Do not store the device in cold temperatures. When the device warms to its normal temperature, moisture can form inside the device and damage electronic circuits.
- Do not attempt to open the device.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and mechanics.
- Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.

Recycle

Always return your used electronic products, batteries, and packaging materials to dedicated collection points. This way you help prevent uncontrolled waste disposal and promote the recycling of materials. Check product environmental information and how to recycle your Nokia products at www.nokia.com/ werecycle, or with a mobile device, www.nokia.mobi/werecycle.



The crossed-out wheeled-bin symbol on your product, battery, literature, or packaging reminds you that all electrical and electronic products, batteries, and accumulators must be taken to separate collection at the end of their working life. This requirement applies in the European Union.

Do not dispose of these products as unsorted municipal waste. For more information on the environmental attributes of your device, see www.nokia.com/ecodeclaration.

Wolfson Microelectronics plc is a leading global provider for high performance, mixed signal semiconductors to the consumer electronics market.

Wolfson is renowned for its high performance audio and very low power consumption. Its devices are at the heart of many high profile consumer electronics products, including mobile phones, multimedia players, flat panel TVs and in-car infotainment systems. Wolfson technology enables exciting new end-user experiences by connecting the digital world to the human senses.

For more information about Wolfson Microelectronics, see www.wolfsonmicro.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>