

Welcome

Quick start guide



1 Connect

2 Install

3 Enjoy

PHILIPS

What's in the box



Handset

Base station for CD240
OR

CD245



Battery door

2 AAA rechargeable
batteries

Power supply



Line cord*



User manual



Guarantee



Quick Start Guide

*You may find in the box the line adaptor delivered separately from the line cable. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.


WARNING Always use the cables and batteries that came with your phone.

Download from Www.Somanuals.com. All Manuals Search And Download.

Connect

Connect the base station

- Place the base station in a central location near the telephone line socket and electricity socket.

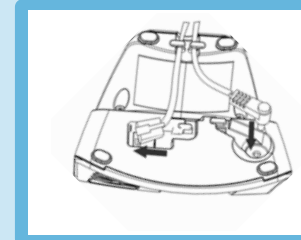


- Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
- Connect the other end of the line cord and power cable to their respective sockets.

2 Install

Insert rechargeable batteries and charge

Insert batteries

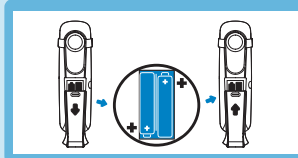

Charge handset for 24 hours



Configure your phone (if necessary)

After charging your phone for a few minutes, a Welcome screen may appear depending on the country where you live. If the Welcome screen appears:


- Press **menu** to display a list of countries.
- Scroll **up/down** to find your country.
- Press **menu** **OK** to confirm your selection.

Set date and time


- Press **menu** in idle mode, scroll **up/down** to **CLOCK/ALARM** and press **menu** **OK**, press **menu** **OK** to enter **DATE & TIME**.
- The last stored date is displayed. Enter the current date (DD/MM) and press **menu** **OK**.
- The last stored time is displayed. Enter the current time (HH:MM) and press **menu** **OK** to confirm. A validation tone is emitted and your phone is now ready for use.

3 Enjoy


Make a call

Dial the number (maximum 24 digits) and press  key.


OR

Press  key to take the line and dial the number (maximum 24 digits).


Answer a call

When the phone rings, press  key.







End a call


To end a conversation, press  key.


Adjust earpiece volume

During a call, press  to select from **VOLUME 1** to **VOLUME 3**.

Set the ring melody





1. Press  key in idle mode, scroll  to **PERSONAL SET** and press  **OK**, press  **OK** to enter **HANDSET TONE**, scroll  to **RING MELODY** and press  **OK**.

2. Scroll  to your desired melody to play the melody.


3. Press  **OK** to set the ring melody.


A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

1. Press  key in idle mode, scroll  to **PHONEBOOK** and press  **OK**, press  **OK** to enter **ADD NUMBER**.



2. **ENTER NAME** is displayed on the screen.


3. Enter the name of the contact (maximum 12 characters) and press  **OK**.

4. Enter the number (maximum 24 digits) and press  **OK**.


A validation tone is emitted.

Access the phonebook


1. Press  in idle mode and scroll  to browse the phonebook.

2. To view the details, press  key.


Switch the handset On/Off

Press and hold  key for more than 5 seconds to switch on/off the handset in idle mode.

Keypad lock/unlock


Press and hold  key for 1 second to lock and unlock the keypad in idle mode.

Paging


1. Press  key on the base station. All the registered handsets start to ring.


2. Once retrieved, press any key on the handset to end the paging.


Listen to messages recorded on the answering machine (for CD245 only)


Press  on the base station to turn on the answering machine (the LED is turned on).


Press  again to turn off the answering machine (the LED is turned off).


Press  on the base station to play phone messages (the first recorded message will be played first).

Press  to skip the current message and play the next message.

Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).

Press  to adjust speaker volume during message playback.

Press  to delete the current message.

Refer to your CD245 User Manual for details about the answering machine function.


Frequently asked questions

For more information, please refer to the User Manual that came with your phone.

Problem

• There's no dialling tone!

• Caller cannot hear me clearly!

• **SEARCHING...** is displayed on handset and  icon is blinking!

• Caller number is not displayed!

Solution

• Check the connections
• Charge the batteries
• Use the line cable provided

• Move closer to the base station
• Move the base station at least one metre away from any electrical appliances

• Move closer to the base station
• Reset your unit and restart the handset registration

• Check your subscription with your network operator

Need help?

User Manual

Refer to the User Manual that came with your CD240/245.

Online help

www.philips.com/support

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>