

Welcome

Quick start guide



1

Connect

2

Install

3

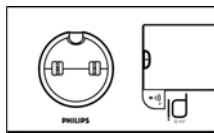 
Enjoy

PHILIPS

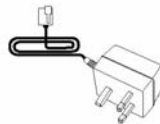 
What's in the box



Handset



Base station



Power supply for base station



Line cord



2 AAA rechargeable batteries



Splitter



User Guide



Quick Start Guide



Warranty card

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

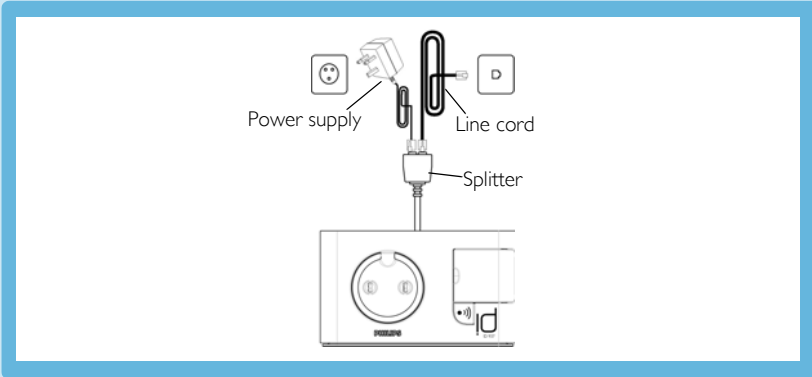 
In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the cables and batteries that came with your phone.

1 Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity sockets.



2. Connect the supplied splitter to the connector at the back of the base station and then plug the line cord and the power cable into the respective line jacks on the splitter.
3. Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

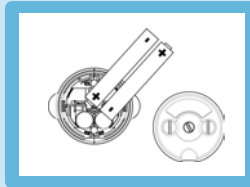 
2 Install

Insert batteries and charge

1. Use the coin or screwdriver to unlock the battery cover.



2. Place the batteries as indicated and replace the cover.



3. Charge handset for 24 hours




Set date and time

1. Press **MENU**.
2. Scroll **↑** to **Clock & Alarm** and press **SELECT**.
3. Press **SELECT** to enter **Set Date/Time**.
4. Enter current time (HH:MM) and current date (DD/MM/YY) and press **OK**.

 
Now, you are ready to use your phone.

3 Enjoy


Make a call

Enter the phone number and press .

 
OR

Press  and enter the phone number.


Answer a call

When the phone rings, press  key.

 


 
 
 

 
End a call

Press  key.

 

 
 

 
 


 
Adjust earpiece volume during a call

Press  to select from **Volume 1** to **Volume 5**.


 

 



Set the ring melody

1. Press  **MENU**, scroll  to **Personal Set** and press  **SELECT**, press  **SELECT** to enter **Handset Tones**, scroll  to **Ring Melody** and press  **SELECT**.
2. Scroll  to your desired melody to play the melody.
3. Press  **SELECT** to set the ring melody.
A validation tone is emitted and the screen returns to previous menu.


Store a contact in the phonebook


1. Press  **MENU**, scroll  to **Phonebook** and press  **SELECT**, press  **SELECT** to enter **New Entry**.
2. Enter the name of the contact (maximum 14 characters) and press  **OK**.
3. Enter the number (maximum 20 digits) and press  **OK**.
4. Enter the SMS Box number and press  **OK** (only for UK).
(The default SMS Box is 9. To modify, press  **CLEAR** and then enter the number (0 to 9).)
5. Scroll  to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press  **SELECT**.
A validation tone is emitted.

Access the phonebook


1. Press  in stand-by mode or press  **MENU**, scroll  to **Phonebook** and press  **SELECT**, scroll  to **List** and press  **SELECT**.
2. Press  to browse the phonebook.

Switch the handset On/Off


Press and hold  key for 3 seconds to switch off the handset in stand-by mode.

 






 


Short press  key to switch on the handset again.

Keypad lock/unlock

Press and hold  key for 2 seconds to lock or unlock keypad in stand-by mode.

Paging


1. Short press  key on the base. The handset starts to ring.
2. Once retrieved, press any key on the handset to end the paging.

Press	To
 (Left soft key)	Enter the main menu from stand-by mode. Select the function displayed on the handset screen directly above it. Activate mute function during a call. Switch on the backlight.
 (Right soft key)	Go to redial list from stand-by mode. Select the function displayed on the handset screen directly above it. Initiate a second call, consult phonebook, call transfer or activate/deactivate HD Sound mode during a call. Switch on the backlight.
	Answer an incoming external or internal call Insert R for operator services when on the line.
	Hang up a call. Return to stand-by mode. <i>Long press</i> in stand-by mode to switch off the handset, <i>short press</i> to switch on the handset again.
	Access call log from stand-by mode. Scroll up a menu list or go to the previous phonebook or call log record. Increase earpiece volume during a call. Go to the previous character in editing mode.
	Access phonebook from stand-by mode. Scroll down a menu list or go to the next phonebook or call log record. Decrease earpiece volume during a call. Go to the next character in editing mode.
	Initiate an internal call.
	Answer an incoming call in handsfree mode. Activate and deactivate the loudspeaker during a call.
	Dial # in stand-by mode. <i>Long press</i> to mute the ringer in stand-by mode. <i>Long press</i> to insert a pause in dialling mode. <i>Long press</i> to switch between upper and lower case in editing mode.
	Dial * in stand-by mode. <i>Long press</i> to activate and deactivate keypad lock.

Troubleshooting

For more information, please refer to page 58 of the user manual.

Problem

- No dialling tone
- Poor audio quality
- The  icon is blinking
- Caller Line Identification (CLI) service does not work

Solution

- Check the connections
- Charge the batteries for at least 24 hours
- Use the line cable provided
- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances
- Register the handset to the base station
- Move closer to the base station
- Check your subscription with your network operator

Need help?

User Manual

Refer to the User Manual that is supplied with your ID937.

Online Support

www.philips.com/support

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>