

Digital cordless phone
Digital cordless phone with answering machine

SE140
SE145

Welcome

Quick start guide




- 1 Connect
- 2 Install
- 3 Enjoy

PHILIPS


What's in the box?



SEI40/SEI45 handset

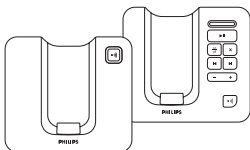

SEI40 or SEI45 base

 

Power adaptor



Line cord*



Battery door



2x AAA rechargeable
batteries



User manual



Quick start guide



Warranty information

⊖ Notes

- * The line adaptor may not be attached to the line cord. If this is the case, please connect the line cord to the line adaptor before plugging it into the line socket.
- If you have purchased a multipack you will have additional handsets, chargers, power adaptors and AAA rechargeable batteries.


⚠ Warning

Always use the cables and batteries supplied.

I

Connect

A Position the base

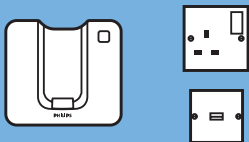


Place the base within reach of the telephone line and power sockets.

* Tip


Placing the base too close to large metal objects or electrical appliances can impair the range and sound quality. Thick walls may also impair transmission of signals to and from the base.

B Connect the cables

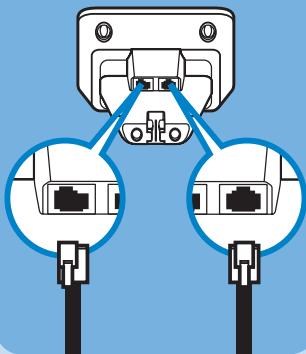

Plug the line cord and power cable into the sockets at the back of the base.

C Plug into the sockets

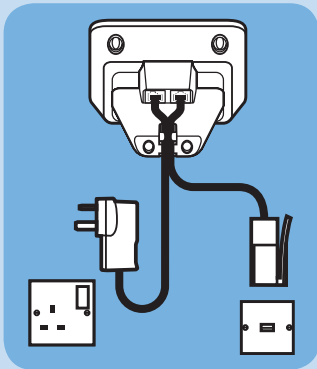

Plug the other end of the cables into the wall sockets.


2

Install

Warning


Leave the handset to charge for at least 24 hours before first use.

A Install the batteries

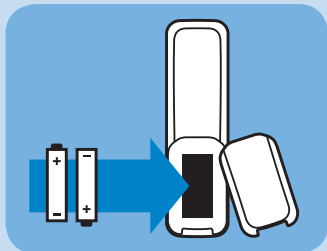

Insert the batteries and slide the battery door into place.

B Charge handset

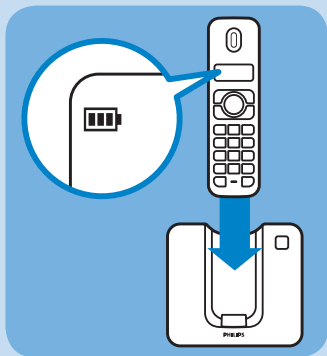




Place the handset on the base to charge the batteries. The battery icon is displayed.

C Set up your phone

If the display shows the standby screen, your phone is ready to use.

Or

If the display shows *CODE*: you must select the country code for your area. Please see page 15 in the main user guide for more information.

- Scroll  or  to display the correct code.
- Press  to confirm.

The handset and base will reset to load the correct settings and the standby screen is displayed.


SE140 – your phone is ready to use.


SE145 – your phone is ready to use. The answering machine is automatically set to On and ready to record messages.

3

Enjoy

Make a call





Enter the phone number and press .

- Enter the phone number, then press  to confirm.

Answer a call

When the phone rings, press .




Dial from the phonebook

- Press , then scroll  or  to the entry you want.
- Press  to dial.



End a call

Press .

Set date and time

- Press  twice.
- Enter the date (DD-MM) and time (HH:MM).
- Press  to confirm.
- Press  to return to standby.





Adjust earpiece volume

During a call, press  or .

Redial last number

Press  then .

Change the ringer volume and ringtone


- Press .
- Press  or  to adjust the ringer volume level (0=off).
- Press 0–9 to select the ringtone. A sample ringtone is played.
- Press  to save the settings.

SEI45 only


Switch the answering machine off and on

Press  at the base.



Listen to your messages

Press . Your new messages are played.

Or

Press and hold  to hear all messages stored on your machine.

Add entry to phonebook

- Press  then .
- Choose a position in the phonebook by entering a 2-digit number between 01–20.

Troubleshooting

For more solutions, see the full FAQs section in the main guide.

No dialling tone

- Check the connections.
Unplug your phone then plug back in the mains power.
- Batteries are empty – charge the batteries for at least 24 hours.
- You may be too far from the base – move closer.
- Use the line cable provided.

Poor sound quality

- Move closer to the base.
- Move the base at least one metre away from any electrical appliances.


The icon is blinking

- Move closer to the base.
- Register the handset to the base.

Caller Line Identification does not work

Check your subscription with your network operator.

No ring tone

If the  icon is displayed, the ringer is switched off. Increase the ringer volume. For details, see the main guide.

Need help?

See the user manual that came with your Philips SE140 or SE145.
Online help: www.philips.com/support

Copyright © 2007 Koninklijke Philips Electronics N.V. All rights reserved.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

Specifications are subject to change without notice.

Document order number: 3111 285 38011 (GB)

Printed in P.R.C.

Download from Www.Somanuals.com. All Manuals Search And Download.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>