



EN User manual



**Charge the handset(s) for 24 hours
before use !**


PHILIPS

Before using your CD 135, you need to configure it according to the country of use. Install the batteries. After a few minutes of charge, the Welcome screen appears.

1. Press .
2. Browse  through the different countries.
3. Press  to confirm the country that suits you.

Your phone is ready to be used.

If you need to re-configure your CD 135, see page 33.

Note: If  **BACK** is pressed, the handset will show the country selection screen again.

Welcome mode	2
Contents	3
Important information	4
What's in the box	5
Handset and base station	6
Icons on the handset display	9
Installing the base station	10
Using GAP standard compliance	11
Installing the batteries	11
Menu structure	13
Handset power OFF and ON	14
Keypad lock / unlock	14
Text or number entry	14
Call	15
Redial list	17
Phonebook	19
Call log	22
Using the Intercom	24
Other functions	25
Paging	25
Chain Dialing	25
Clock and Alarm Settings	25
Personal settings	26
To set the handset ringer volume or silence mode (Ringer OFF)	26
To select the handset ring melody	27
To activate / deactivate the key tone	27
To rename the handset	27
To activate / deactivate the auto answer mode	28
To change the display language	28
Advanced settings	28
To change the recall time	28
To change the dial mode	29
Local area code setting	29
To set or change Call Barring	29
To activate / deactivate Call Barring	30
To set or deactivate the prefix number	30
To set or change an SOS number	31
To register a handset	31
To unregister a handset	32
To change the PIN code	32
To reset to default settings (base station and handset)	32
Country selection	33
Default settings (after Reset Unit)	33
Answer machine	34
Troubleshooting	41
Information	43

For your safety

Before installing your CD 135, carefully read the following informations:

Power requirements

- > This product requires an electrical supply of 220-240 volts, alternating monophased power, excluding IT installations defined in standard EN 60950. In case of power failure, the communication can be lost.

Warning ! The electrical network is classified as hazardous according to criteria in the standard EN 60950. The only way to power down this product is to unplug the power supply unit from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

Telephone connection


- > Always use the line cable provided with the product otherwise you may not have a dialling tone.
- > If you have a broadband DSL Internet connection, please make sure you have one DSL filter plugged directly on each line socket used in the house and check the modem and the phone are plugged in the correct filter slot (one specific for each).

Need help ?

More troubleshooting and FAQ's :

Online help: www.p4c.philips.com

Troubleshooting : page 41 and page 42

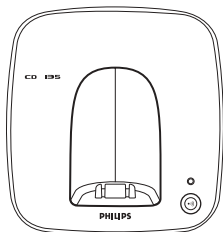


One CD 135 base station




One CD 135 handset



2 NiMH AAA
550 mAh rechargeable batteries

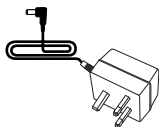

A power supply unit

 

A line cord*



One belt clip
(Country dependent)



User manual



Guarantee




Quick Start Guide

***Note :** You may find in the box the line adaptor delivered separately from the line cable. **In this case, please connect the line adaptor to the line cable before connecting it to the line socket.**

Note : In CD 135 multi handset packs, you will also find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

CD 135 Handset

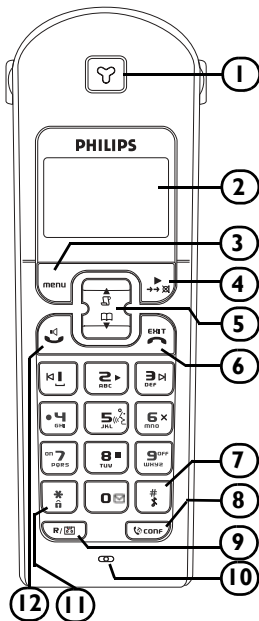

- 1 Earpiece**
- 2 Display**
Icons see page 9
- 3 Menu key & Softkey OK**
 - In idle mode, short press to access the main menu.
 - Short press to select next menu level.
 - In Edit & Phonebook mode, short press to confirm OK.
 - In Call log or Redial list to save the selected record in the phonebook.
- 4 Redial list, mute key & Softkey Back**
 - In idle mode, short press to access the Redial list.
 - In talk mode, to mute/ unmute the handset microphone.
 - In edit mode, to cancel last digit.
 - In phonebook mode, to view number and name.
 - In Call log to switch from name/number to time/date.
- 5 Navigation keys**
 - Scroll up/down to move to the next or previous record in the Call log, Redial list or Phonebook.
 - Scroll up to access the Call log from idle mode.
 - Scroll down to access the Phonebook from idle mode.
- 6 Hang-up key**
 - A short press to hang-up the line or to exit (return to idle mode).
 - A long press to power off the handset.
 - To exit Edit & Phonebook mode, Redial list & Call log.
- 7 Ringer ON/OFF & Insert #**
 - Short press to insert #.
 - Long press to insert a pause (P) when dialling.
 - Long press to turn the ringer ON/OFF.
- 8 Intercom**
 - Short press to initiate an internal call.

9 Recall key / Play new message(s) received on answer machine

- In idle mode, long press to switch from handset name display to Date/Time display.
- To insert R for operator services when on line.
- In idle mode, short press to play new message(s) received on answer machine.

10 Microphone**11 Keypad lock & insert ***

- Short press to insert *
- Long press to lock/unlock the keypad in idle mode.

12 Pick-up key

- In idle mode, press to take the line and answer a call.
- In Phonebook mode, Redial list and Call log press to dial the selected number.
- Handset loudspeaker* ON/OFF (press 2 times to activate the handsfree mode).

***Warning !** Handsfree activation could suddenly increase the volume in the loudspeaker to a very high level. Make sure the handset is not too close to your ear.

Answer machine functions**KEYS****FUNCTIONS**

Play new message(s) / Activate or deactivate answer machine mode. Always press this key before using one of the following answer machine functions :



Go back to the previous message.



Play all recorded messages (new and old) or play the current message again.



Skip forward to the next message.



Long press to record a new outgoing message after the beep.



Play the current outgoing message.



Delete the current message.



Turn ON the answer machine.



Stop message playback or stop outgoing message recording.




Turn OFF the answer machine.



Record a memo via the handset after the beep. Count as a new message after recording.

CD 135 base station

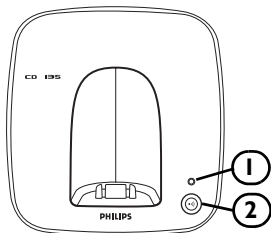**1 Answer machine indicator**

- LED ON : Answer machine activated.
- LED OFF : Answer machine deactivated.
- LED blinking : New message(s) or memo on answer machine.
- LED blinking fast : The answer machine memory is full.

2 Paging key

The paging key enables you to locate a missing handset if the handset is in range and has charged batteries. Press the key until the handset starts to ring. Once retrieved, press paging key again to end paging.

The display gives information about the operation of your telephone. Following icons can be shown in the headline of the display:



When being used for the first time, it is sometimes necessary to wait until the battery is sufficiently charged before the icons appear on the display.



When ON the battery is fully charged. **When blinking**, this symbol indicates that the battery needs to be charged.



An external call is in progress. **When blinking**, this symbol indicates that there is an internal call in progress or that the line is already busy.



New message(s) on your voice mailbox. **When blinking**, this symbol indicates that there is one or more new message(s) on the answer machine.



New Call log records or Call log records are being reviewed.



Phonebook is accessed.



The alarm clock is activated.



The handset loudspeaker is activated.



The ringtone is deactivated.



The handset is registered and in range of the base. **When blinking**, this symbol indicates that the handset is not registered to the base or out of range.

OK

Turn ON when entering Menu mode. In Phonebook mode to enter next menu level.

Back

Turn ON when entering Menu mode. In Phonebook mode to return to higher menu level. In editing mode to delete the last digit/character entered.



Indicates further options are available.

Installing the base station


Place your product close enough to the telephone and mains power sockets so that the cables will reach. To properly install the base station, plug the line cord and the power cable into the base station. Plug the cord and the cable into the wall. If you have a broadband DSL Internet connection, please make sure you have one DSL filter plugged directly on each line socket used in the house and check the modem and the phone are plugged in the correct filter slot (one specific for each).

 
Warning ! The electrical network is classified as hazardous according to criteria in the standard EN 60-950. The only way to power down this product is to unplug the power supply from the electrical outlet. Ensure the electrical outlet is located close to the apparatus and is always easily accessible.

Please take care that the power supply and telephone line are connected to the correct sockets as incorrect placement could damage your equipment.

Warning ! Always use the line cable provided with the product otherwise you may not have a dialling tone.

- 1 Connect the telephone line cord delivered with the product.
- 2 Connect the power supply.

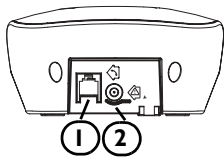



Installing and replacing the batteries in the handset

To insert the batteries, open the battery cover, place the batteries as indicated and then replace the battery cover. When the battery icon is blinking, charge is needed. Allow 24 hours for the batteries to fully charge. On first use it may be necessary to wait for a few minutes before seeing symbols on the display.

Warning : the base station must always be plugged into the mains when charging or when in use. Always use rechargeable batteries.



The warranty does not apply to the batteries and any other components which have a limited lifetime or are exposed to wear.

Warning ! Always use the line cable provided with the product otherwise you may not have a dialling tone.



Batteries should not be disposed of with general household waste.

Battery life and range

Optimal battery life is reached after 3 cycles of complete charging & discharging. When reaching the range limit and the conversation becomes crackly, move closer to the base. To reach optimal range, place the base station away from electrical appliances.

Battery life in talk time	Battery life in standby mode	Indoor range	Outdoor range
up to 12 hours	up to 150 hours	up to 50 metres	up to 300 metres

Using GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. Your CD 135 handset and base station are GAP compliant, which means the minimum guaranteed functions are : register a handset, take the line, receive a call and dial. The advanced features may not be available if you use another handset than a CD 135 with your base station.

To register and use your CD 135 handset with a GAP standard base station of a different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described on page 31.


To register a handset of another make to the CD135 base station, place the base station into registration mode (page 31), then follow the procedure in the manufacturer's instructions.

DECT™ is a Trade Mark of ETSI registered for the benefit of the implementers of the DECT technology.

 
Using the menus



From idle mode, press  to enter the menu. Use the


Navigation keys  to go up or down in the menu list.

Press **Softkey**  **OK** to confirm the selection.

Press **Softkey**  **BACK** to exit the menu or to go back to the previous menu level.

Menu structure

EN

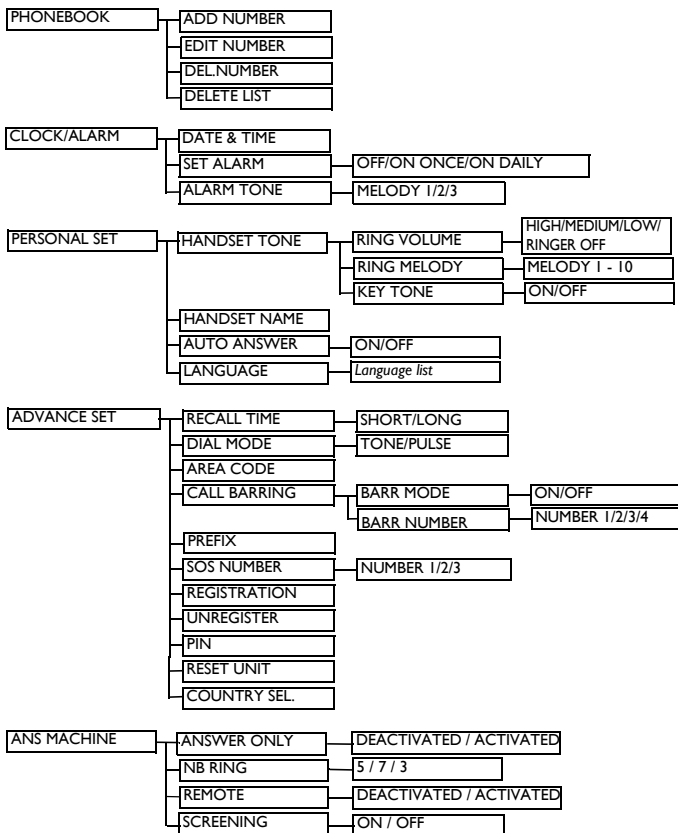

You can enter the names of your phonebook entries character by character, pressing the corresponding key as many times as necessary to reach the desired character.

Press  under the label **BACK** to delete a character.


Example to write "Peter"

Press  once : **P**

Press  twice : **PE**


Press  once : **PET**

Press  twice : **PETE**


Press  three times : **PETER**

Keypad Keys	Multi-tap Sequence
1	[space] _ < > *
2	A B C 2
3	D E F 3
4	G H I 4
5	J K L 5
6	M N O 6
7	P Q R S 7
8	T U V 8 ?
9	W X Y Z 9
0	0 - / \ # +


Handset power OFF and ON


To power the handset OFF or ON long press the  key.

Keypad lock / unlock

Long press the  key to lock/unlock the keypad in idle mode.
KEYS LOCKED is displayed on the screen.

Answering a call / Hanging up

1. When the phone rings, press  to answer the call.

 flashes on an incoming call.

2. To end the conversation, press  key or replace the handset on the base station.

Note: If you have activated the Auto Answer Mode (see page 28) simply lift-up the handset from the base or charger to answer a call.

WARNING : When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

Making a call

Calling directly


1. Press .

2. Dial the phone number .

Predialling the number before calling


1. Dial the phone number .

2. Press .

Note: To correct entries use .

Calling from the phonebook



1. Press Down .

2. Browse through the list  to select a name.

3. Press .


To switch the handset loudspeaker ON / OFF (call handsfree)

Note: 5 loudspeaker volumes are available.  indicates the loudspeaker is ON.

1. Press 2 times  to activate the handset loudspeaker.
2. Press  again to deactivate the loudspeaker.

Warning: Handsfree activation could suddenly increase the volume in the loudspeaker to a very high level. Make sure the handset is not too close to your ear.

Adjusting the earpiece and loudspeaker volume during a call

Press  (3 earpiece volumes and 5 loudspeaker volumes are available).

To mute the handset microphone during a call




Press  to mute/unmute the handset microphone.

Call duration counter




After you have taken the line (dial a number or answer a call) the call duration counter appears on the handset display (HH-MM-SS).

The redial list contains the 5 most recently dialed numbers.







Accessing / exiting the redial list

1. Press .
2. Scroll through the redial list .
3. Press  to exit.

Calling a number from the redial list








1. Press .
2. Scroll through the redial list .
3. Press .

Saving redial list numbers into the phonebook







1. Press  and scroll  to select an entry.
2. Press , **SAVE NUMBER** is shown.
3. Press , **ENTER NAME** is shown.
4. Enter the name  and press , **SAVED** is shown.

Note: To delete a character use . Text and number entry see page 14.





Editing a number from the redial list

1. Press  and scroll  to select an entry.
2. Press  and press Down  to reach **EDIT NUMBER**.
3. Press , modify the number  and press .

Deleting a number from the redial list








1. Press  and scroll  to select an entry.
2. Press  and press Down  to reach **DEL. NUMBER**.
3. Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.



Deleting all numbers from the redial list



1. Press , then  and press Down  to reach **DELETE LIST**.
2. Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.

30 names and numbers can be stored in the built-in phonebook of the handset. The names are stored in alphabetical order.











Adding a new entry

1. In idle mode, press , **PHONEBOOK** is shown.
2. Press , **ADD NUMBER** is shown.
3. Press , **ENTER NAME** is shown.
4. Enter the name  and press , **ENTER NUMBER** is shown.
5. Enter the number  and press  to confirm.




Note: To delete a character use . Press  for spacing. Text and number entry see page 14.

Note: Press  or  to return to idle mode. You can also create an entry from the redial list and the call log (subscription dependent).










Changing a phonebook name or number

1. In idle mode, press , **PHONEBOOK** is shown.
2. Press  and press Down  to reach **EDIT NUMBER**.
3. Press , scroll  to select an entry and press  to view the name.
4. Enter the new name  and press  to view the number.
5. Enter the new number  and press  to confirm.







Viewing the phonebook list

- In idle mode, press Down  and scroll  Up/Down in the list,
OR
Enter the first letter of the wanted name (e.g., 3 for "D" or 33 for "E"). The first entry starting with this letter is selected in the list.
- To view the details : Press .

Edit a number when browsing phonebook list

- In idle mode, press Down  and scroll  to select an entry.
- Press  and press Down  to reach **EDIT NUMBER**.
- Press  to view the current name and enter the new name .
- Press  to view the current number, enter the new number  and press  to confirm.








Delete an entry when browsing phonebook list

- In idle mode, press Down  and scroll  to select an entry.
- Press  and press Down  to reach **DEL. NUMBER**.
- Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.

Delete whole phonebook list when browsing phonebook list

- In idle mode, press Down  and press .
- Press Down  to reach **DELETE LIST**.
- Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.

Delete a phonebook entry when in idle mode

1. In idle mode, press , **PHONEBOOK** is shown.
2. Press  and press Down  to reach **DEL. NUMBER**.
3. Press  to view the list and scroll  to select an entry.
4. Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.

Delete whole phonebook list when in idle mode





1. In idle mode, press , **PHONEBOOK** is shown.
2. Press  and press Down  to reach **DELETE LIST**.
3. Press , **DELETE?** is shown, press  to confirm. You will hear a long confirmation beep tone.

This feature is available if you have registered to the caller identification service with your operator.

The call log stores the last 20 external calls received :

- network message service information (subject to a subscription with your operator).

Accessing / exiting the call log

1. Press Up  and scroll  to select an entry.
2. Press  to view the details.
3. Press  to exit the call log.

Consulting the call log

The screen can either display :

- the caller's number*
- the caller's name (if known in the phonebook)*
- **UNKNOWN CALL** if it is an unidentified call**

* Subject to a subscription with your operator.

** Unlisted numbers, withheld caller identification.

You can display, the phone number, the time and date of the call by pressing several time









. Time and date depends on the network.




 


Calling a number from the call log

1. Press Up  and scroll  to select an entry.
2. Press .





Saving a Call log number into the phonebook

1. Press Up  and scroll  to select an entry.
2. Press , **SAVE NUMBER** is shown.
3. Press , **ENTER NAME** is shown.
4. Enter the name  and press , **SAVED** is shown.

Deleting a Call log entry

1. Press Up  and scroll  to select an entry.
2. Press  and press Down  to reach **DEL NUMBER**.
3. Press , **DELETE?** is shown, press  to confirm.






Deleting all the Call log entries

1. Press Up  and press .
2. Press Down  to reach **DELETE LIST**.
3. Press  to confirm.

This function can only be used with a multi-handset configuration. It allows you to make free internal calls, transfer external calls from one handset to another and to use the conference option.

Note: Intercom & call transfer is only possible with handsets registered to the same base station.




Internal call

1. Press .
2. Enter the handset number  (up to 5 handsets can be registered to the same base station [handset number 1 - 5])
OR
press  to call all handsets.
3. Press  to answer and  to end an internal call.




Note: If the handset does not belong to the Philips CD 135 range, this function may not be available.

Call transfer to a specific handset when on line




During a call in progress you can transfer the external call to a specific handset :

1. Long press  and enter the handset number .
2. Press .

Switch between internal and external call


1. Long press  and enter the handset number .
2. Long press  to switch between internal/external call.

Conference call via the in-call options

1. Long press  and enter the handset number .
2. Long press , **CONFERENCE** is shown. The 3 people can share the conversation.






Paging

This feature allows you to locate the handset(s).

Press  on the base station. All the subscribed handsets ring. Press any key on the handset to stop ringing once relocated.










Chain Dialing

If you have entered in your phonebook for example only the main number of a company without the extension, this feature allows you to add the subnumber (extension) of a particular person and to dial out this number.

1. Take the line  and press  to open phonebook list.
2. Scroll  to select an entry and press  to dial first part.
3. Enter the extension , each digit blinks to indicate dialed out.





Clock and Alarm Settings



To set the Date and Time

1. Press  and press Down  to reach **CLOCK/ALARM**.
2. Press , **DATE & TIME** is shown.
3. Press  and enter the date .
4. Press , enter the time  and press  to confirm.
5. Long press  to display the date and time.

Note: If you are connected to an ISDN line, the date & time may be updated after each call. Please check the date & time settings in your ISDN system.



To set or change the alarm clock settings

1. Press  and press Down  to reach **CLOCK/ALARM**.
2. Press  and press Down  to reach **SET ALARM**.

3. Press , scroll  to select the appropriate setting (**OFF** or **ON ONCE** or **ON DAILY**).

4. Press  to confirm.

If you select **ON ONCE** or **ON DAILY** :

Enter the time  and press  to confirm.



The alarm rings for at most 1 minute and  is shown in idle mode.

Note: When the alarm rings, press any key to stop the alarm.

To set the alarm tone

1. Press  and press Down  to reach **CLOCK/ALARM**.

2. Press  and press Down  to reach **ALARM TONE**.



3. Press , scroll  to select the appropriate setting (**MELODY 1** or **MELODY 2** or **MELODY 3**).



4. Press  to confirm.

Personal settings

To set the handset ringer volume or silence mode (Ringer OFF)

1. Press  and press Down  to reach **PERSONAL SET**.









2. Press , **HANDSET TONE** is shown, press , **RING VOLUME** is shown.

3. Press , scroll  to select the appropriate setting (**HIGH** or **MEDIUM** or **LOW** or **RINGER OFF**). The current ring melody is played.





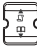



4. Press  to confirm.

WARNING : When the handset rings during an incoming call, please do not hold the handset too close to your ear as the volume of the ringing tone may damage your hearing.

To select the handset ring melody








1. Press  and press Down  to reach **PERSONAL SET.**
2. Press , **HANDSET TONE** is shown, press  and scroll Down  to reach **RING MELODY.**
3. Press , scroll  to select one of the available melodies 1- 10. The current ring melody is played.
4. Press  to confirm.

To activate / deactivate the key tone

1. Press  and press Down  to reach **PERSONAL SET.**
2. Press , **HANDSET TONE** is shown, press  and scroll Down  to reach **KEY TONE.**
3. Press , scroll  to select **ON** or **OFF** and press  to confirm.








To rename the handset

The default name is : **PHILIPS**. You can enter 10 characters for the handset name.








1. Press  and press Down  to reach **PERSONAL SET.**
2. Press , and press Down  to reach **HANDSET NAME.**
3. Press , enter the name  and press  to confirm.

To activate / deactivate the auto answer mode

If **ON** you take the line by lifting the handset from the charge cradle.

1. Press  and press Down  to reach **PERSONAL SET.**
2. Press  and press Down  to reach **AUTO ANSWER.**
3. Press , scroll  to select **ON** or **OFF** and press  to confirm.







To change the display language

1. Press  and press Down  to reach **PERSONAL SET.**
2. Press  and press Down  to reach **LANGUAGE.**
3. Press , scroll  to select your language and press  to confirm.

Advanced settings

To change the recall time








This option is helpful when using operator services. The default value of recall time that is preset in your CD 135 should be the best suited for your country network and therefore you should not need to change it.

1. Press  and press Down  to reach **ADVANCE SET.**
2. Press , **RECALL TIME** is shown.
3. Press , scroll  to select **SHORT** or **LONG** and press  to confirm.

To change the dial mode*

*Country dependent








The default value of dial mode that is preset in your CD 135 should be the best suited for your country network and therefore you should not need to change it.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **DIAL MODE**.
3. Press , scroll  to select **TONE** or **PULSE** and press  to confirm.

Local area code setting*










*Country dependent





If your local PSTN sends the CID with local area code attached, it is necessary to filter out the local area code when dial back from call log. The AREA CODE function allows you to remove the local area code from the call log entries. The local area code can be set from 1 to 4 digits. The default setting is blank.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **AREA CODE**.
3. Press  to view the current setting.
4. Enter the new area code  (the maximums for the area code is 4 digits) and press  to save.

To set or change Call Barring










This menu allows you to limit the use of your phone to specific calls by barring parts (prefix) of outgoing numbers. You can set 4 different barring numbers.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **CALL BARRING**.
3. Press  and enter the PIN code  (by default the PIN code is 0000).
4. Press , press Down  to reach **BARR NUMBER** and press .

5. Scroll  to select the barring number location **1**, **2**, **3** or **4** and press .
6. Enter the barring number  (the maximums for the barring number is 4 digits) and press  to confirm.







Note: For example if you want to bar international calls, enter the barring number 00.

To activate / deactivate Call Barring



1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **CALL BARRING**.
3. Press  and enter the PIN code  (by default the PIN code is 0000).
4. Press , scroll  to select **ON** or **OFF** and press  to confirm.

To set or deactivate the prefix number

This feature allows you to set the phone to use the cheapest operator prefix. The maximum length of the prefix is 5 digits. Once the prefix number is set, it is automatically inserted at the beginning of each number dialed out.





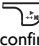






1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **PREFIX**.
3. **To set the prefix number :** Enter the prefix number  (max. 5 digits) and press  to confirm.

OR

To deactivate the prefix number : Delete the current prefix number by pressing  until „-----“ (blank prefix number) is shown on the screen and press  to confirm.

To set or change an SOS number

The SOS number feature allows you to enter 3 SOS phone numbers, which can be dialed out although the call barring is activated. The maximum length of an SOS number is 4 digits. The PIN code is required when modify the SOS number.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **SOS NUMBER**.
3. Press  and enter the PIN code  (by default the PIN code is 0000).
4. Press , scroll  to select the SOS number location **1**, **2** or **3** and press .
5. Enter the SOS number  (max. 4 digits) and press  to confirm.








To register a handset

Up to 5 handsets can be registered to the base station.

If you have inadvertently unregistered your handset, you can register it again. Additional handsets must be registered to the base before use.










Warning : If you wish to register non Philips handsets to the CD 135 base station, make sure that this handset is GAP compliant otherwise it will not operate properly (see page 11).

To register a handset, first press the paging key  on the base for approx. 5 seconds when the base is in idle mode. Then carry out the following steps on the handset within one minute :

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **REGISTRATION**.
3. Press , enter the PIN code  (by default the PIN code is 0000) and press  to confirm.

If the registration was successful, a long confirmation tone is heard and the handset number (1 to 5) will be assigned by the base automatically.










To unregister a handset

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **UNREGISTER**.
3. Press , enter the PIN code  (by default the PIN code is 0000) and press .
4. Scroll  to select the handset number and press . **UNREGISTERED** appears on the screen.

Note: If you have your handset serviced, please make sure it is unregistered from the base station before taking it back to the repair centre.







To change the PIN code

The default PIN code is "0000". We advise you to personalize it. The maximum length for the PIN code is 8 digits.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **PIN**.
3. Press , enter the current PIN code  and press .
4. Enter the new PIN code  and press  to confirm.

To reset to default settings (base station and handset)

You can reset your phone to the default settings (see page 33) at any time. Note that after a reset all your personal settings and call log entries will be deleted, however your phonebook remains unchanged.

1. Press  and press Down  to reach **ADVANCE SET**.
2. Press  and press Down  to reach **RESET UNIT**.
3. Press , **CONFIRM?** is shown. Press  to confirm.

Country selection

Use this feature if you need to re-configure your CD 135.

1. Press  and press Down  to reach **ADVANCE SET.**
2. Press  and press Down  to reach **COUNTRY SEL..**
3. Browse  through the different countries and press  to select the country that suits you.
4. **CONFIRM?** is shown, press  to confirm.

Default settings (after Reset Unit)

Handset Ringer volume :	MEDIUM
Handset Ringtone :	MELODY 1
Handset earpiece volume :	VOLUME 2
Handset speakerphone volume :	VOLUME 3
Handset key tone :	ON
Battery low tone :	ON
Menu language (Handset) :	Country dependent
Auto answer :	OFF
Handset name :	PHILIPS
Time/Date (Handset) :	00:00 01-01
Dialling mode :	Country dependent
Flash time :	Country dependent
PIN code :	0000
Alarm :	OFF
Alarm tone :	MELODY 1
Area code :	Empty
Call barring :	Empty
SOS number :	Empty
Redial list :	Empty
Phonebook memory :	Remain unchanged
Call log :	Empty
Prefix :	Empty
Answer machine :	Answer & record mode ON
Language default outgoing message :	Country dependent
Personal outgoing message :	Empty
Answer machine memory :	Empty (old and new messages deleted)

The CD 135 includes an answer machine that records unanswered calls when it is activated. The maximum recording time is 15 minutes, outgoing messages and memos included.

The answer machine is accessible via the handset that has a dedicated keypad allowing to access to the answer machine functions (by default handset 1). There is also a menu to set the answer machine options.

Handset keys for answer machine control

KEYS



FUNCTIONS

Play new message(s) / Activate or deactivate answer machine mode. Always press this key before using one of the following answer machine functions :

Skip back to the previous message.

Play all recorded messages (new and old and memo) or play the current message again.

Skip forward to the next message while listening.

Long press to record a new outgoing message after the beep.

Play the current outgoing message.

Delete the current message.

Turn ON the answer machine.

Stop message playback or stop outgoing message recording.

Turn OFF the answer machine.

Record a memo via the handset after the beep. Count as a new message after recording.

To switch the answer machine ON


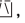
Press , then on the handset to switch the answer machine ON.

In answer machine mode, the handset screen shows on the left side : , when the answer machine is activated.

When the answer machine is ON, it will answer the call after a certain number of rings depending on the setting (see page 37). After answering the call, the answer machine will play your welcome message and record the message left by the caller, if any.


To switch the answer machine OFF



Press , then  on the handset to switch the answer machine OFF.

In answer machine mode, the handset screen shows on the left side : _, when the answer machine is deactivated.

Saved messages

To listen to new message(s)


When new messages are recorded on the answering machine, then the icon  is flashing on the handset display and the LED on the base blinks until the messages are played.

1. Press , the loudspeaker on the handset is automatically activated and the display shows under the icon  the number of new messages, i.e. **03** and the time when the last message has been recorded, i.e. **16:25**.
2. Then the newest message is played automatically on the speakerphone. During message playing the date and time of recording will be shown alternating on the handset display.

Note: Messages are always played in chronological order, the newest message first.


The message can be played back on the receiver instead of the speaker : Press



Once all the new messages have been played, the icon  stops blinking and stays steady indicating there are old messages not deleted on the answer machine. The message counter indicates the number of old messages on the answer machine and the time when the last one has been recorded.

Note: If there is no more memory left, the base LED is blinking very fast, the CD 135 will switch to „Answer only“ mode and no new message can be recorded. Delete old messages (see page 36) to free space for the new on.

Adjusting the loudspeaker volume during message playback

Press  (5 loudspeaker volumes are available).

Available functions during message playback :

KEYS

FUNCTIONS



Skip back to the previous message.



Play all recorded messages (new and old and memo) or play the current message again.



Skip forward to the next message while listening.



Delete the current message.



Stop message playback.

Delete current message

1. Press to enter answer machine mode.
2. Press to start message playback.
3. Press to delete the current message. A long beep confirms deletion of the message and the next message is played.
Repeat step 3. to delete further messages.

Note: Messages deleted can not be recovered.

Answer machine settings

Use the answer machine menu via the handset to change the settings of the answer machine.

To select the answer mode

By default the answer machine is set in „Answering & recording“ mode (messages can be left by the callers), this can be change in „Answer only“ (no messages can be left by the callers).

1. Press and press Down to reach **ANS MACHINE**.
2. Press , **ANSWER ONLY** is shown.
3. Press , scroll to select the appropriate setting (**ACTIVATED** or **DEACTIVATED**).
4. Press to confirm.








Note: When **ANSWER ONLY / ACTIVATED** is selected, then the associated outgoing message is automatically set, i.e. „This is an answering machine, please call back later“.

When **ANSWER ONLY / DEACTIVATED** is selected, then the associated outgoing message is automatically set, i.e. „This is an answering machine, please leave your message after the tone“.

The voice language for the default outgoing messages depends on the country selected in Welcome mode, see page 2.








To set the number of rings before answering

You can set the answer machine to start playing the outgoing message after a given number of rings (3, 5 (default setting) or 7).

1. Press  and press Down  to reach **ANS MACHINE**.
2. Press , **ANSWER ONLY** is shown, press Down  to reach **NB RINGS**.
3. Press , scroll  to select one of the available settings (**3, 5, or 7**).
4. Press  to confirm.

To activate / deactivate the remote control








By default the remote control of the answer machine is deactivated. You can activate this function, this allows you to remotely access your answer machine via any telephone and check your messages.

1. Press  and press Down  to reach **ANS MACHINE**.
2. Press , **ANSWER ONLY** is shown, press Down  to reach **REMOTE**.
3. Press , scroll  to select one of the available settings (**DEACTIVATED** or **ACTIVATED**).
4. Press  to confirm.

Note: To remotely control your answer machine, see page 40.

To activate / deactivate call screening






You can activate (default setting) or deactivate the call screening on the handset loudspeaker so that you can choose whether to hear or not the callers leaving a message and to decide whether or not to take the call.


1. Press  and press Down  to reach **ANS MACHINE**.
2. Press , **ANSWER ONLY** is shown, press Down  to reach **SCREENING**.
3. Press , scroll  to select one of the available settings (**ON** or **OFF**).
4. Press  to confirm.

Personal outgoing messages

You can record one personal outgoing message. This personal outgoing message will replace the default ones. Only if you delete your personalized welcome message the default welcome messages will automatically be restored. You do not need to delete your previously recorded welcome message to record a new one. Once you record a new welcome message, the old one will be overwritten.



To record your personal outgoing message

1. Press  on the handset to enter answer machine mode.
2. Long press  until you hear a beep.
Speak into the microphone of the handset after the beep.
3. Press  or  or  to stop recording.

Note: If you want to have the default outgoing message back, repeat steps 1 and 2 and press  within 1 second to stop recording. The answer machine will restore the default outgoing message.

To playback personal or default outgoing message

Depending on the answer mode setting „Answer & record“ or „Answer only“ (see page 37) the appropriate default outgoing message will be played. If you have recorded a personal outgoing message only this welcome message will be played.

1. Press  on the handset to enter answer machine mode.
2. Press  until outgoing message playback starts.






Note: If you are not satisfied with your personal outgoing message recorded, repeat the steps in section “To record your personal outgoing message”, page 38 and the old welcome message will be overwritten.

If you want to have the default outgoing message back perform a reset, see “To reset to default settings (base station and handset)”, page 32.



Record and listen to a memo

This feature allows you to leave vocal messages for your family on the answer machine. Memos are stored in the answer machine memory and affect the recording capacity.

To record a memo

1. Press  on the handset to enter answer machine mode.
2. Press , **RECORD MEMO** is shown on the handset screen. Speak into the handset microphone after the beep.
3. Press  or  to stop recording.
The LED on the base and the handset icon  blink to indicate that there is a new voice message.

To listen to a memo


1. Press , the loudspeaker on the handset is automatically activated and the display shows under the icon  the number of new messages, i.e. **03** and the time when the last message has been recorded, i.e. **16:25**.
2. Then the first new message is played automatically on the speakerphone. During message playing the date and time of recording will be shown alternating on the handset display.

Note: Messages are always played in chronological order, the newest message first.

The message can be played back on the receiver instead of the speaker : Press



. To delete old memos, see “Delete current message”, page 36.

Once all the new messages have been played, the icon  stops blinking and stays steady indicating there are old messages not deleted on the answer machine. The message counter indicates the number of old messages on the answer machine and the time when the last one has been recorded.

To remotely control your answer machine

WARNING : For security reasons the remote control of the answer machine is deactivated by default. You must activate this function on your CD 135 phone, see page 37, to be able to remotely access your answer machine.

You can access your answer machine when you are away by using any tone dialing phone.

To remotely access your answer machine

1. From another phone dial home.
2. If your answer machine is ON, during or after the outgoing message press the



key (#) on the external phone ;

OR

If your answer machine is OFF, you will hear a beep after 10 rings, then press the



key (#).

3. Enter your PIN code.
4. If you have new messages after the beep they will be automatically played.

The following table indicates the features available when remotely accessing the answer machine.

KEYS

FUNCTIONS

1

Go back to the previous message.

2

Play all recorded messages (new and old, included memos) or play the current message again.

3

Skip forward to the next message.

4

Press to record a new outgoing message after the beep.

5

Play the current outgoing message.

6

Delete the current message.

8

Stop message playback or stop outgoing message recording.

Telephone troubleshooting

PROBLEMS	CAUSES	SOLUTIONS
The battery icon is not blinking when the handset is placed on the base.	<ul style="list-style-type: none"> • Bad battery contact. • Dirty contact. • Batteries are full. 	<ul style="list-style-type: none"> • Move the handset slightly. • Clean the contact with a cloth moistened with alcohol. • No need to charge.
No dialling tone.	<ul style="list-style-type: none"> • No power. • Batteries are empty. • You are too far from the base station. • Wrong line cable. • Line adaptor (when needed) not connected to the line cord. 	<ul style="list-style-type: none"> • Check the connections. Reset the phone : unplug and plug back in the mains. • Charge the batteries at least 24 hours. • Move closer to the base station. • Always use the line cable provided. • Connect the line adaptor (when needed) to the line cord
No ring tone.	<ul style="list-style-type: none"> • The ring tone is deactivated. 	<ul style="list-style-type: none"> • Increase the volume (page 26)
The range icon does not appear.	<ul style="list-style-type: none"> • No mains power. • The handset is too far from the base station. 	<ul style="list-style-type: none"> • Check connections. • Move closer to the base station.
The range icon is blinking.	<ul style="list-style-type: none"> • Handset not registered to the base station. 	<ul style="list-style-type: none"> • Register the handset to the base (page 31).
Crackling on the line.	<ul style="list-style-type: none"> • You are too far from the base station. • The base station is too close to electrical appliances, reinforced concrete walls or metal doorframes. 	<ul style="list-style-type: none"> • Move closer to the base station. • Move the base station to find a better place (the higher the better).

PROBLEMS	CAUSES	SOLUTIONS
<p>The handset displays „not available“ :</p> <ul style="list-style-type: none"> • when attempting to add another handset to the base station, • when using a handset. 	<ul style="list-style-type: none"> • The procedure to add a handset has failed, try again. • Maximum number of handsets (5) has been reached. • Base station is already busy with another handset. 	<ul style="list-style-type: none"> • Disconnect and connect the base station power supply. • Remove and place back the handset batteries. • Follow the procedure to register a handset (page 31). • Unregister a handset. • Wait until it is available.
Noise interference on your radio or television	<ul style="list-style-type: none"> • The CD 135 base station or mains power pack are too close to electrical appliances. 	<ul style="list-style-type: none"> • Move the power pack or base station as far away as possible.
Caller Line Identification (CLI) service does not work.	<ul style="list-style-type: none"> • The service is not activated. 	<ul style="list-style-type: none"> • Check your subscription with your network operator.
A phonebook entry cannot be stored.	<ul style="list-style-type: none"> • The phonebook is full. 	<ul style="list-style-type: none"> • Delete an entry to free memory.

Answer machine troubleshooting

PROBLEMS	CAUSES	SOLUTIONS
The answer machine does not record messages.	<ul style="list-style-type: none"> • The memory is full. • The answer only mode is activated. 	<ul style="list-style-type: none"> • Delete messages. • Select the Answer&record mode (see page 36).
The remote control access does not work.	<ul style="list-style-type: none"> • The remote control access is not activated. 	<ul style="list-style-type: none"> • Activate the remote control (see page 37).
It is not possible to record an outgoing message.	<ul style="list-style-type: none"> • The memory is full. 	<ul style="list-style-type: none"> • Delete old messages (see page 36).
The CD 135 hangs up during remote access.	<ul style="list-style-type: none"> • Duration is too long. 	<ul style="list-style-type: none"> • Manage the remote control quicker.
The answer machine stops automatically.	<ul style="list-style-type: none"> • The memory is full. 	<ul style="list-style-type: none"> • Play and delete messages.

Safety information

This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

The default product PIN code is preset to 0000. If you change this PIN code, keep the PIN details in a safe place where you have easy access to them. Do not lose the PIN code.

Conformity

Hereby, Philips declares that the CD 135 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This product can only be connected to the analogue telephone networks of the countries mentioned on the packaging. The Declaration of conformity is available on www.p4c.philips.com.

Safety precautions

- Do not allow the handset to come into contact with water.
- Do not open the handset or the base station. You could be exposed to high voltages.
- Do not allow the charging contacts or the batteries to come into contact with conductive materials.
- Never use any battery type other than the one supplied : risk of explosion.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.

Environmental care

Please remember to observe the local regulations regarding the disposal of your packaging materials, exhausted batteries and old phone and, where possible, promote their recycling.

Recycling & disposal

Disposal instructions for old products :

The purpose of the WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) is to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high environmental protection.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Do not dispose of your old product in your general household waste bin.

Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol :



Use one of the following disposal options :

1. Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities.
2. If you purchase a replacement product, hand your complete old product back to the retailer. He should accept it as required by the WEEE directive.

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.



A financial contribution has been paid to the associated national recovery & recycling system.



The labelled packaging material is recyclable.



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2006 © Koninklijke Philips Electronics N.V. All rights reserved.

www.philips.com

3111 285 28303



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>