

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SE450  
SE455



# Quick start guide

 
- 1 Connect
- 2 Install
- 3 Enjoy

**PHILIPS**


# What's in the box



Handset with belt clip




Base station  
OR

 


Base station with  
answering machine



 
Battery door



2 AAA rechargeable  
batteries

 

Power supply

 

Line cord



 
User manual



Guarantee



Do Not Return  
leaflet



Quick Start Guide

In multihandset packs, you will find one or more additional handsets, battery doors, chargers with power supply units and additional rechargeable batteries.



**WARNING:** Always use the line cord, power supply and batteries that came with your phone.

## 1

# Connect

Connect the base station

1. Place the base station in a central location near the telephone line socket and electricity socket.

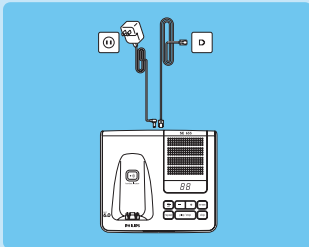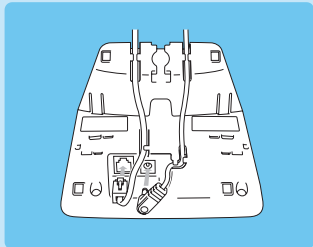

2. Connect the line cord and the power cable to their corresponding connectors at the back of the base station.
3. Connect the other end of the line cord and power cable to their respective sockets.


## 2

# Install

Insert rechargeable batteries and charge

A

Insert batteries

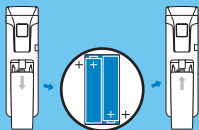

B



Charge handset for 24 hours





# 3

## Enjoy


### Make a call

Dial the number (maximum 24 digits) and press  or .

OR

Press  or  to take the line, and dial the number.


### Answer a call

When the phone rings, press  or .

### End a call

 



 




To end a conversation, press .

### Adjust earpiece or speaker volume

During a call, scroll  to select from **level 1** to **level 5**.

 


 

### Set the ring tone

There are 15 ring tones available on your handset.

1. Press , scroll  to **Personal Set**, and press  **Select**.
2. Scroll  to **Handset Tones** and press  **Select**, then scroll  to **Ring Tones** and press  **Select**.
3. Scroll  to your desired melody. The melodies will play as you scroll to them.
4. Press  **Select** to set the ring tone.

A validation tone is emitted and the screen returns to the previous menu.




### Store a contact in the phonebook

1. Press , **Phonebook** is highlighted; press  **Select**.
2. **New Entry** is highlighted; press  **Select**.
3. **Enter Name** is displayed. Enter the name of the contact (maximum 14 characters) and press  **OK**.
4. **Enter Number** is displayed. Enter the number (maximum 24 digits) and press  **OK**.  
A validation tone is emitted.


### Access phonebook

 
1. Press  and scroll  to browse the phonebook.
2. To view the details, press  **View**.


### Call from the phonebook


1. Press  in idle mode.
2. Scroll  to a phonebook entry.
3. Press .
  - The call is initiated.


### Listen to messages recorded on the answering machine (for SE455 only)


Press  on the base station to turn on the answering machine if it was off (the message counter is turned on). The outgoing message is played.


Press  on the base station to play phone messages (the first recorded message will be played first).

Press  to skip the current message and play the next message.

 
Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).

Press  to adjust speaker volume during message playback.

Press  to delete the current message.


Long press  to delete all old messages.

Press  again to turn off the answering machine (the message counter is turned off). Refer to your User Manual for details about the answering machine functions.

# Troubleshooting

For more information, please refer to the User Manual that came with your phone.

## Problem

- There's no dialling tone!
- Caller does not hear me clearly!
- **Searching...** is displayed on handset and  icon is blinking!
- Caller number is not displayed!

## Solution

- No power: Check the connections.
- Batteries are empty: Charge the batteries.
- Move closer to the base station.
- Wrong line cord used: Use the line cord provided.
- Move closer to the base station.
- Move the base station at least one metre (yard) away from any electronic appliances.
- Move closer to the base station.
- Make sure that your base station is on.
- Reset your unit and restart handset registration.
- Service is not activated: Check your subscription with your network operator.

# Welcome to Philips!

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

## Need help?

### User Manual

Refer to the User Manual that came with your phone.

### Online Help

[www.philips.com/support](http://www.philips.com/support)

©2008 Koninklijke Philips Electronics N.V.

All rights reserved

Reproduction in whole or in part is prohibited without

the written consent of the copyright owner.

3111 285 45772 (US-EN)

9CZ74978UJ10

Download from [www.Scribd.com](http://www.Scribd.com). All Manuals Search And Download.



Please Recycle  
Printed in China

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>