

Cat. No. 276-1326

VOICE RECORD/PLAYBACK MODULE

Your RadioShack Voice Record/Playback Module provides high-quality, record/playback for short (up to 20-second) messages. It uses the latest IC recording technology, and adds a microphone, speaker, two button switches, LED indicator, and a battery case for a complete, single-message record/playback system ready for installation in your own cabinet.

You can record a new message as many times as you like without having to wait for a tape to rewind. Record your voice and add a picture to make a special keepsake for a loved one, or record a message to remind yourself of things to do.

INSTALLING BATTERIES

Your Voice Record/Playback Module uses four AA batteries (not supplied) for power. For the best performance and longest life, we recommend alkaline batteries, such as RadioShack Cat. No. 23-552.

Caution: Always use fresh batteries of the required size and type.

Insert the batteries as indicated by the polarity symbols (+ and -) marked inside the battery case.

RECORDING

1. Hold the microphone about 2 inches (5 cm) from your mouth.
2. Press and hold the white RECORD button. The LED lights while you record the message.
3. Speak clearly into the microphone (for up to 20 seconds).

Note: The recording level depends on the loudness of your voice. Speak as loudly as you want into the microphone.

4. Release the RECORD button to stop recording. The LED turns off.

Note: A new recording replaces the previous one.

© 1996 Tandy Corporation.

All Rights Reserved.

RadioShack is a trademark used by Tandy Corporation.



PLAYBACK

Press the green PLAY button once. The Voice Record/Playback module plays back your recording and the LED flashes once when playback stops.

Note: When playback slows down, replace the batteries. The message is not erased when the batteries are removed.

SPECIFICATIONS

Record/Playback Module	128K Cell Non-Volatile Analog Storage Array
Standby Current	Below 5 μ A
Operating Current	
Recording	Below 26 mA
Playback	About 24 mA to 71 mA
Operating Voltage	4.5V to 6V
Power Source	Four AA Batteries (Cat. No. 23-552, not supplied)
Maximum Recording Time	20 Seconds

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

RadioShack Limited Warranty

This product is warranted against defects for 90 days from date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. Within this period, we will repair it without charge for parts and labor. Simply **bring your RadioShack sales slip** as proof of purchase date to any RadioShack store. Warranty does not cover transportation costs. Nor does it cover a product subjected to misuse or accidental damage.

EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

 
 
 
 
 
 
 
 
We Service What We Sell

 
10/95

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A6

Printed in China






RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

7A6

 Printed in China



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>