

RadioShack
Voice Recorder
 63-1137

Operation

Removing the Battery Insulation Strip

To prevent battery drainage during shipping, your recorder is shipped with an insulation strip that you must remove before use.

1. Press and rotate the battery compartment cover counterclockwise to remove it.
2. Remove the insulation strip.
3. Replace the cover and rotate it clockwise to secure it.

Recording a Message

You can record a message up to 10 seconds long. The message remains saved even if the recorder loses battery power.

1. Turn the recorder over and hold the microphone about two inches (5 cm) away from your mouth.
2. Hold down **REC**. The indicator lights and recording begins.
3. Speak into the microphone and release **REC** after you finish. The indicator flashes every three seconds to indicate a new message is recorded.

Note: If you do not release **REC**, the recording stops automatically after 10 seconds.


Playing a Message

Press the top cover of the recorder to play the message. The **REC** indicator turns off.

Using the Magnet

The magnet on the bottom of the recorder holds it against any metal surface, such as a refrigerator, oven or file cabinet. Simply place the recorder on a metal surface to mount it.

Thank you for purchasing the RadioShack Voice Recorder. It lets you record and play back up to 10 seconds of sound. You can record your own voice to leave yourself an important message, or one for your family or friends. With its integrated circuit recording technology, you can record a new message as many times as you like without having to wait for a tape to rewind.

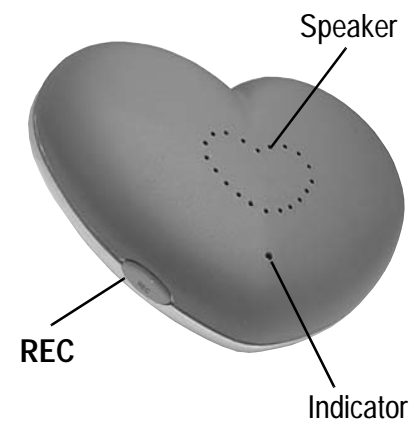


Replacing the Batteries

Your voice recorder comes with four 357A button-cell batteries installed. When the recording sound weakens, replace the batteries with the positive side up.

Notes:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- If you do not plan to use the recorder for a month or more, remove the batteries. Batteries can leak chemicals that may destroy electronic parts.

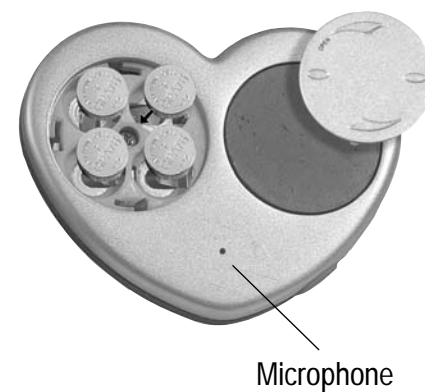

Specifications

Power Source.....	Four 357A Button-Cell Batteries
Recording Time.....	10 Seconds (maximum)
Battery Life (Continuous Play).....	About 60 Minutes
Operating Temperature.....	32° - 104° F (0-40° C)
Dimensions (HxWxD).....	2 3/8 x 2 15/16 x 3/4 Inches (60 x 75 x 18 mm)
Weight (Including Batteries).....	1.62 oz (4.6g)

Specifications are typical; individual units may vary. Specifications are subject to change or improvement without notice.

Care & Use

- Keep the recorder dry. If it gets wet, wipe it dry immediately.
- Use and store the recorder only in room temperature environments.
- Handle the recorder carefully; do not drop it.
- Keep the recorder away from dust and dirt.
- Wipe it with a damp cloth occasionally to keep it looking new.

Service

If your recorder is not performing as it should, take it to your local RadioShack store for assistance. To locate your nearest RadioShack, use the store locator feature on RadioShack's website (www.radioshack.com), or call 1-800-The Shack (843-7422) and follow the menu options. Modifying or tampering with the recorder's internal components can cause a malfunction and might invalidate its warranty.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lighting or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up, service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

12/99

©2003 RadioShack Corporation.
 All Rights Reserved.
 RadioShack and RadioShack.com are trademarks
 used by RadioShack Corporation.

63-1137
 Printed in China
 09A03

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>