 


# iMode<sup>SERIES</sup> **SYLVANIA**

MODEL NO. SIP3045

TRAVEL SPEAKER FOR iPhone

OWNER'S MANUAL

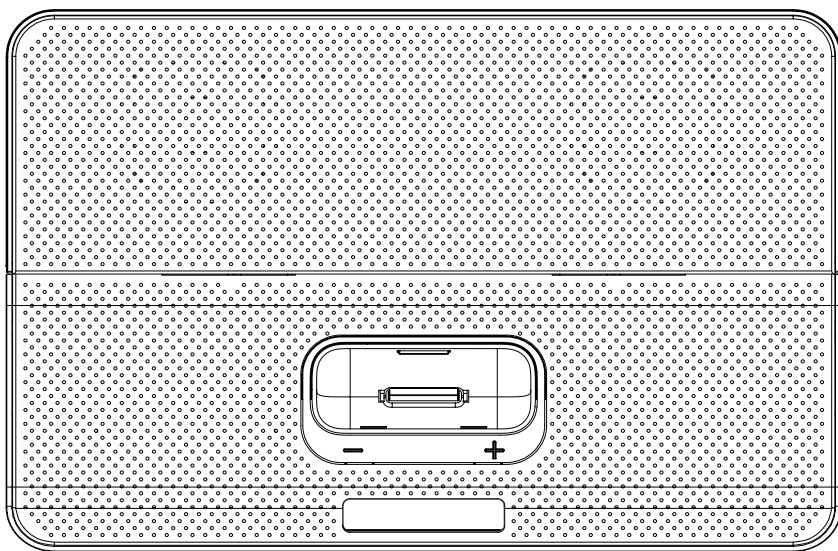

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

# Warnings and Precautions

---

**TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.**



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

**WARNING:** Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

**WARNING:** The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

**WARNING:** Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

: NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Important Safety Instructions

1. Read Instructions - All the safety and operating instruction should be read before the product is operated.

2. Retain Instructions - The safety and operating instruction should be retained for future reference.

3. Heed Warnings - All warning on the product and in the operating instructions should be adhered to.

4. Follow instructions - All operating and use instructions should be followed.

5. Cleaning - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

6. Attachments - Do not use attachments not recommended by the product manufacturer as they may cause hazards.

7. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like.

8. Accessories - Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

9. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



10. Ventilation - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction have been adhered to.

11. Power Sources - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.

12. Grounding or Polarization - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

 
Alternate Warnings - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

13. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and point where they exit from the product.

14. Protective Attachment Plug - The product is equipped with an attachment plug having overload protection. This is a safety device. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

15. Outdoor Antenna Grounding - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

See figure:

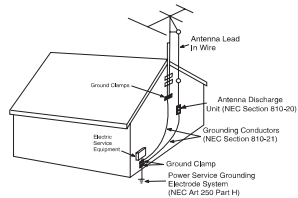

16. Lightning - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

17. Power Lines - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

18. Overloading - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

19. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

20. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21. Damage Requiring Service - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged,
- If liquid has been spilled, or objects have fallen into the product,
- If the product has been exposed to rain or water,
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way, and
- If the product exhibits a distinct change in performance - this indicates a need for service.

22. Replacement Parts - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

23. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.


24. Wall or Ceiling Mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

25. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## In the Box

 ---

- SIP3045
- Remote Control
- Instruction Manual
- iPod Adaptor x 5pcs
- AC Adaptor

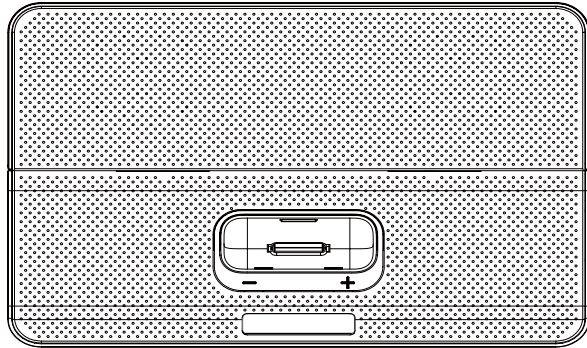

## Features

 
---

- Certified iPod Connector installed for iPod docking
- Recharge Battery for iPod/mini/nano/photo/video/touch/iPhone
- Backlit LCD Display
- Digital Clock
- Dual Speakers
- Line In Jacks
- Remote Control
- AC/DC-Powered

## Powering the Unit


---

Power the unit by connecting it to a standard AC outlet (120V ~ 60Hz) via the attached AC cord.

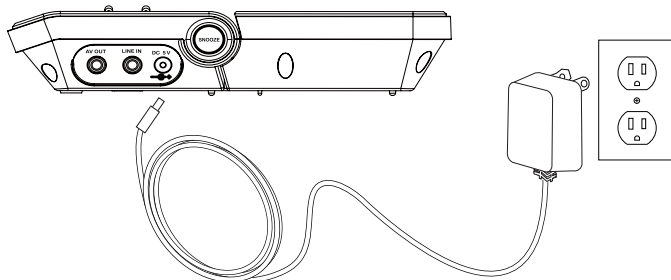


## Powering The Unit

 The unit requires 4 x 1.5V AA batteries, not included

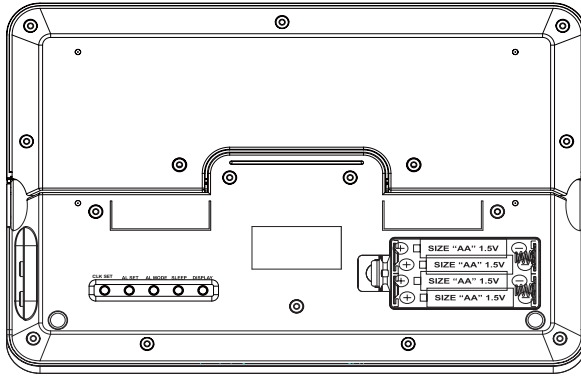

## Changing the Remote Battery

 
**WARNING:** Danger of explosion if the remote control's battery is incorrectly installed. Replace only with the same or equivalent battery.

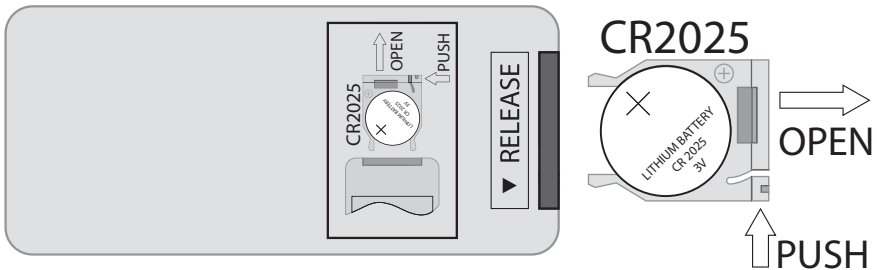

1. Push the Release Button and pull out the Battery Compartment to access the battery.
2. Replace the old battery with an equivalent new battery (CR2025).
3. The positive side of the battery, as indicated by a plus symbol, must be facing up when inserted into the remote.

## Locations of Controls

 ---

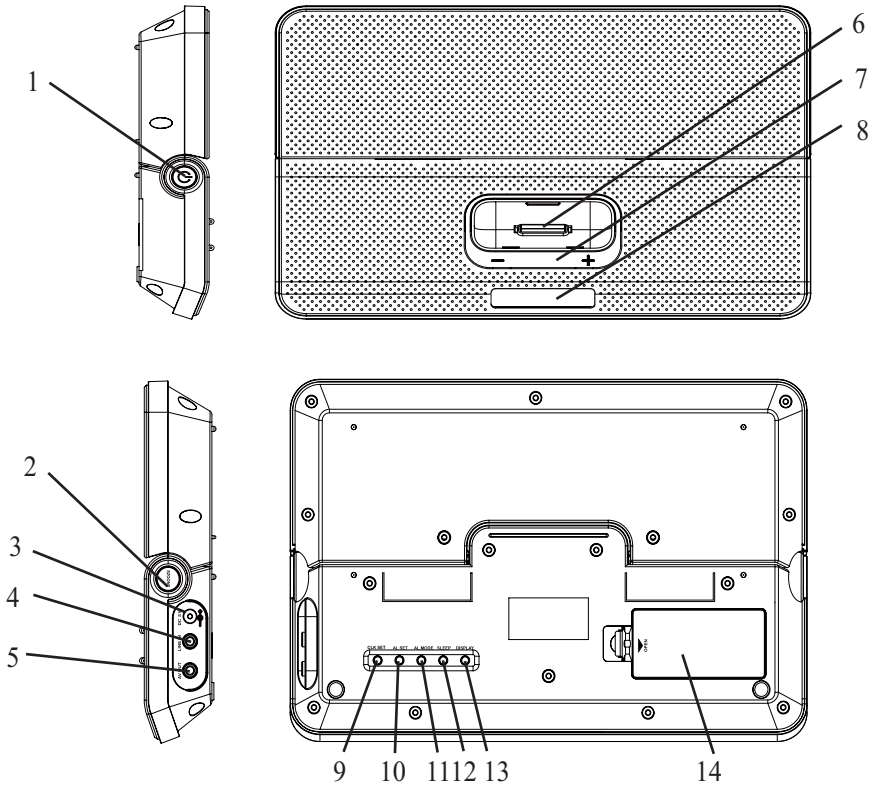

## Control Definitions

---

### 1. Power Button

Press the Power Button to turn the unit off and on.

### 2. Snooze Button

Press the Snooze Button to delay alarm for six minutes.

### 3. DC Jack

DC Jack for 5V adaptor +  -

### 4. LINE IN Jack

Use the Auxiliary Input to connect an external audio source to the unit.

### 5. AV Out Jack

AV Out for video out function from iPhone/iPod

## 6. iPod Dock

iPod Connector to dock iPhone/iPod

## 7. Volume Up/Down Button

Turn the Volume Button to adjust the volume of audio output from the unit.  
Also select up/down for alarm time and time setting

## 8. LCD Display

Use the LCD Display to view the time and current function of the unit.

## 9. Clk Set Button

Press and hold the Clk Set Button, with the unit powered off, to set the time.

## 10. AL Set Button

Press and hold the AL Set Button to set the alarm time.

## 11. AL Mode Button

Press the AL Mode Button to select alarm method (Buzzer or iPhone/iPod)

## 12. Sleep Button

 
Press the Sleep Button to trigger the unit switch off in 120mins, 90mins, 60mins, 30mins, 10mins, 5mins

## 13. Display Button

Press the Display Button to show the current time and the alarm time.

## 14. Battery Door

Press and open the battery door to open battery compartment.

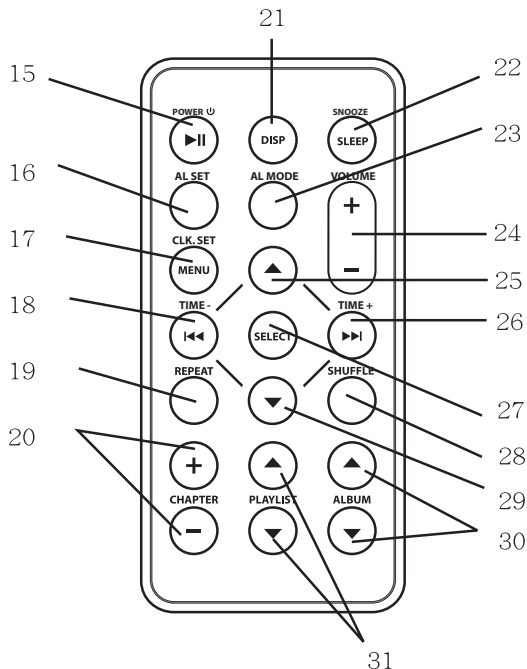

- 
15. POWER/PLAY/PAUSE BUTTON
  16. ALARM SET BUTTON
  17. CLOCK SET/MENU BUTTON
  18. SKIP/SEARCH/TIME - BUTTON
  19. REPEAT BUTTON
  20. CHAPTER UP/DOWN BUTTONS
  21. DISPLAY BUTTON
  22. SNOOZE/SLEEP BUTTON
  23. ALARM MODE BUTTON
  24. VOLUME UP/DOWN BUTTONS
  25. MENU UP BUTTON
  26. SKIP/SEARCH/TIME + BUTTON
  27. SELECT BUTTON
  28. SHUFFLE BUTTON
  29. MENU DOWN BUTTON
  30. ALBUM UP/DOWN BUTTONS
  31. PLAYLIST UP/DOWN BUTTONS

---

## Setting the Clock

---

1. Turn the unit off by holding the **Power Button**.
  2. Press and hold the **Clk Set Button** for 3 Sec. HRS on left side of the display will flash.
  3. Release the **Clk Set Button**, press +/- button on the unit to adjust the HR.
  4. Press and hold the **Clk Set Button** again, MIN. on right side of display will flash.
  5. Release the **Clk Set Button**, press +/- button to adjust the Min.
  6. Press the **Clk Set Button** to confirm your set time.
- 

---

## Connecting to an Audio Player using the Line In Jacks

---

1. Plug one end of a Stereo 3.5mm Cable (not included) into the **Line In Jacks** on the unit.
  2. Plug the other end of the Stereo Cable into the audio output/headphone output on an Mp3 Player or Other Audio Source.
  3. Press the **Power Button** to turn the unit on.
  4. Audio played from the connected Mp3 Player or Other Audio Source will now be heard on the unit.
- 

*If connecting to the headphone output of an audio source, the source's volume controls may need to be adjusted for optimal sound.*

---



---

## Playing an iPod

---




















1. Dock an iPod to the unit by following the “Docking an iPod” directions.
  2. Turn the unit on by pressing the **Power Button**.
  3. Press the **Play/Pause Button** on iPhone/iPod to play.
  4. Press the **Skip/Search Buttons** on iPhone/iPod to skip through tracks or search through individual tracks.
- 

## Setting up the alarm

---

1. Press once and hold the “**AL SET**” Button to setup the alarm.
  2. Press “+” / “-” to adjust the hour/minute
  3. Press the “**AL SET**” to confirm the alarm.
  4. Press the “**AL MODE**” to trigger alarm and select alarm method (Buzzer or iPhone/iPod)
-

# Compatibility Chart


iPod Model	Play & Charge Compatibility	Included Bracket	Video Out Compatibility
 <b>iPod mini</b> 4GB 6GB			
 <b>iPod</b> 4th generation 20GB	●	10	
 <b>iPod</b> 4th generation 40GB	●	10	
 <b>iPod</b> 4th generation (color display) 20GB 30GB	●	10	
 <b>iPod</b> 4th generation (color display) 40GB 60GB	●		
 <b>iPod shuffle</b> 1st generation 512MB 1GB			
 <b>iPod nano</b> 1st generation 1GB 2GB 4GB	●	8	
 <b>iPod</b> 5th generation (video) 30GB	●	10	●
 <b>iPod</b> 5th generation (video) 60GB 80GB	●	10	●
 <b>iPod nano</b> 2nd generation (aluminum) 2GB 4GB 8GB	●	8	
 <b>iPod shuffle</b> 2nd generation 1GB			
 <b>iPod classic</b> 80GB	●	10	●
 <b>iPod classic</b> 160GB	●	10	●
 <b>iPod nano</b> 3rd generation (video) 4GB 8GB	●	13	●
 <b>iPod touch</b> 1st generation 8GB 16GB 32GB	●	14	●
 <b>iPhone</b> 4GB 8GB 16GB	●	12	●
 <b>iPhone 3G</b> 8GB 16GB	●	12	●
 <b>iPod nano</b> 4th generation (video) 8GB 16GB	●	8	●
 <b>iPod touch</b> 2nd generation 8GB 16GB 32GB	●	14	●

# TROUBLE SHOOTING GUIDE

Symptom	Possible Cause	Solution
<b>iPod Player</b>		
Unit does not respond (no power)	AC plug had not inserted to wall outlet firmly.	Re-plug the AC plug to wall outlet firmly.
	Incorrect iPod adaptor is used.	Make sure the adaptor is proper fit for your iPod.
iPod does not dock properly	iPod did not install properly.	Remove the iPod from the docking and check the connections between the docking and iPod. Then insert the iPod to the docking again.
iPod does not respond to the unit	iPod is not installed properly.	Remove the iPod from the docking and check the connections between the docking and iPod. Then insert the iPod to the docking again.
	iPod is locked.	Please make sure your iPod is working properly before docking into the unit. Please refer to the iPod manual for details.
	The iPod may not support by the unit.	Connect your iPod to the unit via AUX IN jack on the rear of unit.
iPod did not charge up	iPod is not installed properly.	Remove the iPod from the docking and check the connections between the docking and iPod. Then insert the iPod to the docking again.
	iPod is locked.	Please make sure your iPod is working properly before docking into the unit. Please refer to your iPod manual for details.
	iPod battery malfunction.	

## General Specification:

Power Source: DC Battery 4 x 1.5V AA size

Power Source of Remote Control: DC  3V, 1 x "CR2025" size battery (Included)

Power Consumption: 14 Watt

Audio Output Power: 2 Watt/Channel

### Accessories:

1 x Instruction Manual

5 x iPod docking adaptors

1 x Remote Control (1 x CR 2025 button cell included)

Specifications are subject to change without notice.



## LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at [www.curtisint.com](http://www.curtisint.com) before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

### TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 90 days on parts and 90 days on labor. If you originally purchased your product more than 90 days ago, a repair fee may apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this product, whether due to any defect of the product, or its use, whether proper or improper.

### EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

### TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be mailed to:

**Canada**  
**C.I. Service Dept.**  
**315 Attwell Dr**

**Toronto, Ontario**

**M9W 5C1**

**U.S.A**  
**C.I. Service Dept.**  
**2215 Kenmore Avenue**

**Ste 100**  
**Buffalo, N.Y.**

**14207**

**For service assistance and product information, please call: 1-800-968-9853.**

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts which have become defective.

Model No. \_\_\_\_\_ Date Purchased \_\_\_\_\_ Serial No. \_\_\_\_\_

**SYLVANIA** is a registered trademark of OSRAM SYLVANIA Inc. used under licence.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>