

THE
SHARPER
IMAGE

ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for the life of the original purchaser from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

SI PRODUCTS Consumer Relations
Service Center Dept. 168
3000 Pontiac Trail
Commerce Township, MI 48390
No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resold products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: www.siproducts.com

For service or repair - do not return this unit to the retailer.

Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.

©The Sharper Image. All rights reserved. THE SHARPER IMAGE name and logo are registered trademarks.

©2009 THE SHARPER IMAGE and its affiliated companies, all rights reserved. THE SHARPER IMAGE is a registered trademark of THE SHARPER IMAGE and its affiliated companies.

All rights reserved.

Download from www.Somanuals.com. All Manuals Search And Download.

THE
SHARPER
IMAGE

Deluxe Nose/Ear Hair Trimmer



Instruction Manual and
Warranty Information

GR-T200

1 year
limited warranty

Grooming doesn't get easier than this.

Thank you for purchasing The Sharper Image® Deluxe Nose/Ear Hair Trimmer. This product, along with the entire The Sharper Image collection, connects innovation with cutting-edge design to provide you with years of dependability and enjoyment. Now you can groom on the go, or right at home, with the sleek simplicity of The Sharper Image Deluxe Nose/Ear Hair Trimmer.

IMPORTANT SAFETY INFORMATION:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

READ ALL INSTRUCTIONS BEFORE USING

SAFETY PRECAUTIONS

- This Deluxe Nose/Ear Hair Trimmer is for household use only.
- Children should be supervised to ensure that they do not play with the appliance.
- Use this appliance only for its intended use as described in this manual.
- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance in a moisture-free area. Do not store it in temperatures exceeding 140°F(60°C).
- Do not use this appliance with damaged or broken cutters, as injury may occur.

Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.

- Always remember to turn on the trimmer before you insert it into your nose or ear to avoid painfully snagging hairs.
- Never insert the more than 1/4" of tip of nose hair trimmer into nose or ear. Foreign objects should not come into contact with the ear drum.

Caution – Please read all instructions carefully before operating.

- Never leave the appliance unattended, especially if children are present.
- Never cover the appliance when it is in operation.
- This unit should not be used by children without adult supervision.
- Always keep the cord away from high temperature and fire.
- Do not lift, carry, hang, or pull the product by the power cord.
- If the adaptor sustains damage, you must stop using this product immediately and contact The Sharper Image Service Center. (See the warranty section for The Sharper Image address.)

SAVE THESE INSTRUCTIONS

Deluxe Nose/Ear Hair Trimmer

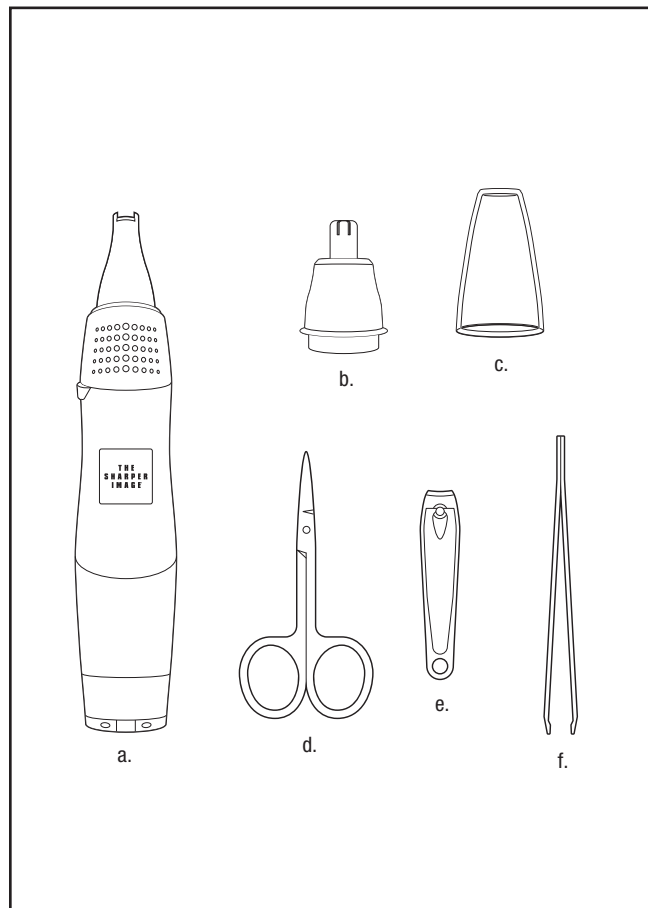 


Fig. 1

Main Features:

- Two interchangeable titanium-coated blades
- Built-in vacuum keeps you – and your countertop – clean
- Stores hairs directly into a nylon filter reservoir
- Handy flip-out mirror with integrated LED spotlight
- Rinses clean with water in seconds
- Zippered travel storage case included
- Complete with personal scissors, nail clipper & tweezers
- Handsome cobalt blue chrome finish
- Requires 1 (one) 'AA' alkaline battery

Contents:

- a) Trimmer with linear edging head
- b) Rotary head
- c) Removable protective cap
- d) Small scissors
- e) Clippers
- f) Tweezers

Getting Started

Battery Installation:

The trimmer requires 1 (one) 'AA' alkaline battery.

1. To open battery compartment, turn base of the unit approximately $\frac{1}{4}$ " inch counterclockwise and pull off.
2. Insert 1 (one) "AA" battery into unit, positive end in first.
3. Replace the base, and turn $\frac{1}{4}$ " inch clockwise to lock in place.
4. Dead batteries should be removed immediately and disposed of properly.
5. DO NOT use rechargeable batteries. The lower voltage in recharged batteries impairs performance.

Battery Cautions – PLEASE NOTE: The use of non-alkaline batteries will harm operating performance. Batteries should not be left in the unit – if the unit is not in use for long periods of time. To prevent battery corrosion, the unit should be kept in a dry environment. Do not use rechargeable batteries.

How to Use

- You can use the trimmer to trim nose and ear hair.
- Test trimmer on a small area of your arm or leg. If any sensitivity occurs, discontinue using immediately. Do not use trimmer on sensitive or irritated skin.
- Turn trimmer off before putting on or taking off attachments or cleaning.

Trimming Nose Hair

1. Make sure nasal passages are clean before trimming.
2. Remove the Protective Cap by pulling it off the trimmer (Fig. 2).
3. Turn trimmer ON by pressing the On/Off POWER button (Fig. 3).
4. Carefully insert the trimmer tip into one nostril.
CAUTION: DO NOT insert the tip more than ¼” into nostril.
5. Slowly move the trimmer tip in and out of each nostril to remove unwanted hair (Fig. 4).
6. For best results, make sure the side of the tip is held firmly against the skin. This will reduce the tickling effect that can occur.
7. Clean trimmer immediately after using.

Trimming Ear Hair

1. Clean outer area of ear and make sure it is free of wax.
2. Remove the Protective Cap by pulling it off the trimmer.
3. Turn the trimmer ON by pressing the On/Off POWER button.

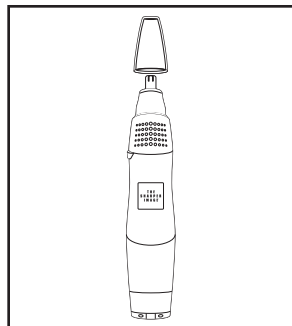 


Fig. 2

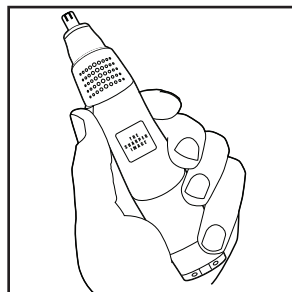 


Fig. 3

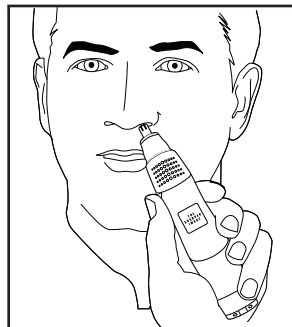 


Fig. 4

4. Pull ear flat to head with one hand and hold trimmer with the other hand (Fig. 5).
5. Move trimmer tip around edges of ear to remove hairs extending beyond the outer ear. Carefully insert trimmer tip into outer ear no more than ¼”.

CAUTION: To avoid injury do not put any part of the trimmer into the ear. Do not insert the trimmer further than ¼” into the ear as this could cause damage to the eardrum.

6. Clean trimmer immediately after using.

Changing Trimmer Heads

There are two interchangeable blade heads. The rotary head is recommended to trim nose hairs, and the linear head is designed especially for ear and eyebrow hairs.

1. First, turn the trimmer OFF.
2. Detach trimmer head by turning it counterclockwise to the unlocked position, then pull off.
3. Attach the other trimmer head by turning it clockwise into the locked position.

Cleaning Hair Reservoir

For easy cleaning, the nylon filter reservoir stores all the hair. This is possible by the powerful built-in vacuum.

1. First, turn the trimmer OFF.
2. Hold the trimmer upright for clean removal of hair reservoir.
3. Detach the nose head. Remove hair stored on the filter (Fig. 6).

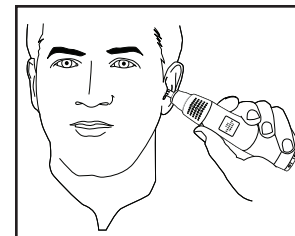 


Fig. 5

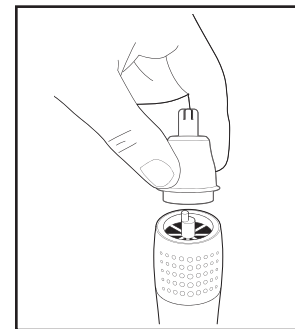 


Fig. 6

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>