

THE  
SHARPER  
IMAGE

## ONE YEAR LIMITED WARRANTY

SI PRODUCTS sells its products with the intent that they are free of defects in manufacture and workmanship for a period of one year from the date of original purchase, except as noted below. SI PRODUCTS warrants that its products will be free of defects in material and workmanship under normal use and service. This warranty extends only to consumers and does not extend to Retailers.

To obtain warranty service on your SI PRODUCTS product, mail the product and your dated sales receipt (as proof of purchase), postpaid, to the following address:

### SI PRODUCTS Consumer Relations

Service Center Dept. 168

3000 Pontiac Trail

Commerce Township, MI 48390

No COD's will be accepted.

SI PRODUCTS does not authorize anyone, including, but not limited to, Retailers, the subsequent consumer purchaser of the product from a Retailer or remote purchasers, to obligate SI PRODUCTS in any way beyond the terms set forth herein. This warranty does not cover damage caused by misuse or abuse; accident; the attachment of any unauthorized accessory; alteration to the product; improper installation; unauthorized repairs or modifications; improper use of electrical/power supply; loss of power; dropped product; malfunction or damage of an operating part from failure to provide manufacturer's recommended maintenance; transportation damage; theft; neglect; vandalism; or environmental conditions; loss of use during the period the product is at a repair facility or otherwise awaiting parts or repair; or any other conditions whatsoever that are beyond the control of SI PRODUCTS.

This warranty is effective only if the product is purchased and operated in the country in which the product is purchased. A product that requires modifications or adoption to enable it to operate in any other country than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications is not covered under this warranty.

THE WARRANTY PROVIDED HEREIN SHALL BE THE SOLE AND EXCLUSIVE WARRANTY. THERE SHALL BE NO OTHER WARRANTIES EXPRESS OR IMPLIED INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS OR ANY OTHER OBLIGATION ON THE PART OF THE COMPANY WITH RESPECT TO PRODUCTS COVERED BY THIS WARRANTY. SI PRODUCTS SHALL HAVE NO LIABILITY FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES. IN NO EVENT SHALL THIS WARRANTY REQUIRE MORE THAN THE REPAIR OR REPLACEMENT OF ANY PART OR PARTS WHICH ARE FOUND TO BE DEFECTIVE WITHIN THE EFFECTIVE PERIOD OF THE WARRANTY.

NO REFUNDS WILL BE GIVEN. IF REPLACEMENT PARTS FOR DEFECTIVE MATERIALS ARE NOT AVAILABLE, SI PRODUCTS RESERVES THE RIGHT TO MAKE PRODUCT SUBSTITUTIONS IN LIEU

OF REPAIR OR REPLACEMENT.

This warranty does not extend to the purchase of opened, used, repaired, repackaged and/or resealed products, including but not limited to sale of such products on Internet auction sites and/or sales of such products by surplus or bulk resellers. Any and all warranties or guarantees shall immediately cease and terminate as to any products or parts thereof which are repaired, replaced, altered, or modified, without the prior express and written consent of SI PRODUCTS.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you. For more information regarding our product line in the USA, please visit: [www.siprducts.com](http://www.siprducts.com)

THE  
SHARPER  
IMAGE

# Men's Personal Groomer



SI Products  
Service Center

1.888.856.6781  
8:30a.m. – 7:00p.m. (EST)  
M – F

Mail To: SI Products  
Consumer Relations  
Service Center Dept. 168  
3000 Pontiac Trail  
Commerce Township, MI  
48390

e-mail:  
[cservice@siprducts.com](mailto:cservice@siprducts.com)

THE SHARPER IMAGE ® name and logo are registered trademarks.  
Marketed and distributed by SI products under license. ©The Sharper Image.  
All rights reserved.

Download from [www.Manuals.com](http://www.Manuals.com). All Manuals Search And Download.

Instruction Manual and  
Warranty Information

GR-T250

1 year  
limited warranty

### The everyday personal groomer for men.

Thank you for purchasing The Sharper Image® Men's Personal Groomer.

This product, along with entire The Sharper Image collection, connects high-tech innovation with high-quality design to provide you with years of dependability and enjoyment. The all-in-one men's personal groomer kit ensures you'll have that neat, clean barber shop look everyday. Best of all, it comes with a handsome storage case so you can take it with you—so you'll always look your very best.

## IMPORTANT SAFEGUARDS:

**WHEN USING ELECTRICAL PRODUCTS, ESPECIALLY WHEN CHILDREN ARE PRESENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

### READ ALL INSTRUCTIONS BEFORE USING

## DANGER - To reduce the risk of electric shock:

- Always unplug the appliance from the electrical outlet immediately after using and before cleaning.
- DO NOT place in or drop into water or other liquid.
- DO NOT reach for an appliance that has fallen into water. Unplug it immediately.
- DO NOT use while bathing or in the shower.
- DO NOT place or store appliance where it can fall or be pulled into a tub or sink.
- Keep dry - DO NOT operate in a wet or moist condition.
- NEVER use pins or other metallic fasteners with this appliance.


**Caution: All servicing of this product must be performed by authorized SI Products Service Personnel only.**

## WARNING - To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use and before putting on or taking off parts or attachments.
- Close supervision is necessary when this appliance is used by, on or near children, invalids or disabled persons.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by The Sharper Image; specifically any attachments not provided with the unit.
- NEVER operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return it to SI Products Service Center for examination and repair.
- Keep cord away from heated surfaces.
- NEVER drop or insert objects into any opening.
- DO NOT operate where aerosol (spray) products are being used or where oxygen is being administered.
- DO NOT operate under a blanket or pillow. Excessive heating can occur and cause fire, electrocution or injury to persons.
- DO NOT carry this appliance by the power cord or use cord as handle.
- To disconnect, turn all controls to the "off" position, then remove plug from outlet.
- This appliance is designed for personal, non-professional use only.
- DO NOT use outdoors.

### SAVE THESE INSTRUCTIONS

## Kit Includes:

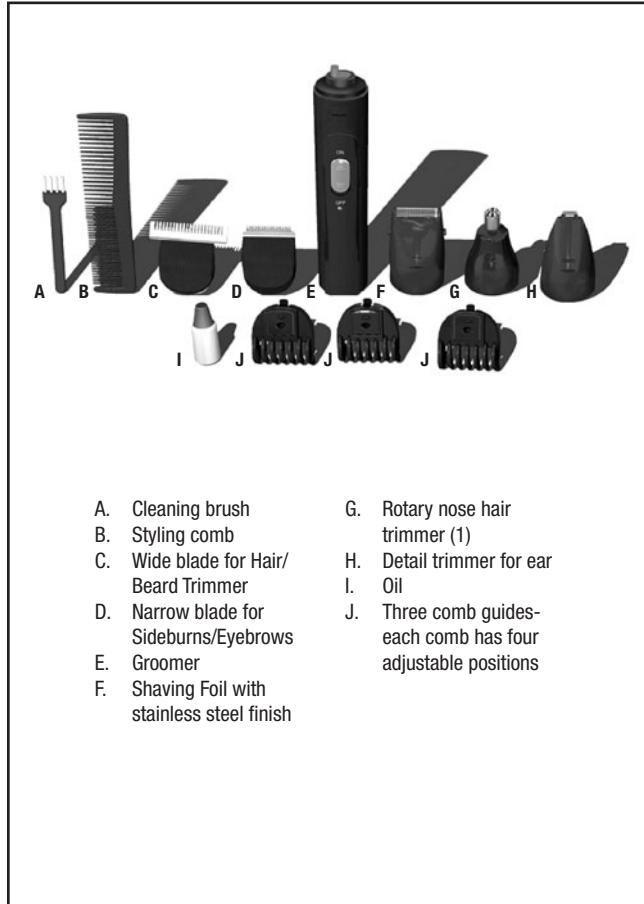

- A. Cleaning brush
- B. Styling comb
- C. Wide blade for Hair/  
Beard Trimmer
- D. Narrow blade for  
Sideburns/Eyebrows
- E. Groomer
- F. Shaving Foil with  
stainless steel finish
- G. Rotary nose hair  
trimmer (1)
- H. Detail trimmer for ear
- I. Oil
- J. Three comb guides-  
each comb has four  
adjustable positions

## AC Adaptor Specifications:

Input Voltage: 110V-60Hz

Output: DC 3V / 90mA

Meets CE and GS standards

## HOW TO USE

### 1) OIL

Before every use, check to be sure the blades are properly oiled.

- To maintain your clipper in good condition, the blades should be oiled every few haircuts.
- Only use supplied blade oil.
- Do not use hair oil, grease or oil mixed with kerosene, as it will evaporate and leave a thick solvent – slowing the blades motion.

**IMPORTANT: ALWAYS KEEP THE BLADES OILED. APPLY 1-2 DROPS TO THE CENTER OF THE BLADES IF BLADES ARE NOISY OR MOVE SLOWLY.**

### 2) OPERATION

#### Recharge the unit

- Turn the **ON/OFF** switch to **OFF** position
- Connect the groomer to the AC adaptor.
- Plug AC/DC adaptor into outlet.
- The green LED charging indicator should be illuminated.
- Standard recharging time: 6-8 hours
- After charging, unplug the adaptor from the main outlet and disconnect from the groomer.
- A fully charged groomer can operate continuously for 50-70 minutes.

**Note:** Do not over charge. Continuous recharging over 24 hours is not recommended.

### 3) INSTRUCTIONS FOR INTERCHANGEABLE BLADES

**Important – Never use the product to cut wet hair. It is designed to work on dry hair only.**

This unit has five interchangeable grooming attachments:

- Narrow blade for detail trimming - may be used with the 3 (three) adjustable length attachments for cutting hair
- Wide blade for hair and beard trimming
- Foil shaver for touch-up shaving
- Rotary nose/ear hair trimmer
- Linear nose/ear hair and detail trimmer

### CLEANING AND MAINTENANCE

- Disconnect the product from the AC/DC charger before cleaning.
- Switch groomer to off position.
- Clean with the supplied brush and a damp cloth. Do not use solvents or abrasive products to clean groomer.
- Remove clipper attachments and rinse under water.
- Always store the set in the bag and store in a dry place.

This warranty provides you with specific legal rights. You may have additional rights which may vary from state to state. Because of individual regulations, some of the above limitations and exclusions may not apply to you.

For more information regarding our product line in the USA, please visit: [www.sipproducts.com](http://www.sipproducts.com)

**For service or repair - do not return this unit to the retailer.  
Contact SI PRODUCTS Consumer Relations at 1-888-856-6781.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>