

Form 8603, Revised
(1036)
Printed in U. S. A.

LIST
OF
PARTS



MACHINES
Nos. 96-3, 96-10, 96-12
and 96-16

THE SINGER MANUFACTURING COMPANY

INSTRUCTIONS FOR OILING

To ensure easy running and prevent unnecessary wear of the parts which are in movable contact, the machine requires oiling and when in continuous use, it should be oiled at least twice each day with Singer Manufacturing Sewing Machine Oil (Cloth and Leather).

Copyright, U. S. A., 1913, 1917, 1919, 1923 and 1936
by The Singer Manufacturing Co.
All Rights Reserved for all Countries

INDEX

| | Page |
|------------------------------|------|
| Accessories..... | 32 |
| Bobbin Winders..... | 34 |
| Finger Guard..... | 32 |
| Foot Lifter Parts..... | 36 |
| Hemmers..... | 33 |
| Knee Lifter Parts..... | 37 |
| Machine Base..... | 32 |
| Machine No. 96-3..... | 5 |
| Machine No. 96-10..... | 10 |
| Machine No. 96-12..... | 18 |
| Machine No. 96-16..... | 25 |
| Obsolete Parts..... | 38 |
| Numerical List of Parts..... | 41 |
| Presser Feet..... | 34 |
| Thread Unwinder..... | 38 |

INSTRUCTIONS FOR ORDERING

In ordering from this list, use **ONLY** the part **NUMBER** in the **FIRST** column.

The number stamped on a Sewing Machine Part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the **SAME PART** in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

A-Hardened, Polished, Nickel Plated and Buffed

B-Polished, Nickel Plated and Buffed

C-Hardened Only

D-Polished Only

E-Soft, Not Polished

F-Hardened and Polished

F.J-Hardened, Polished and Nickel Plated

G-Bright Rumbled and Nickel Plated

H-Blued

J-Nickel Plated Only

K-Hardened and Nickel Plated

L-Brass Plated

M-Oxidized

N-Japanned, Dull

P-Japanned, Bright

R-Merlized

S-Cadmium Plating

T-Copper Plated

T.A-Hardened, Polished, Copper and Nickel Plated and Buffed

T.B-Copper and Nickel Plated and Polished

T.J-Copper and Nickel Plated Only

T.K-Hardened, Copper and Nickel Plated

T.M-Copper Plated and Oxidized

T.L-Copper and Brass Plated

U-Zinc Plated

V-Silver Plated

W-Polished and Nickel Plated

Y-Black Nickel Plated Only

Z-Chromium Plated

Z.B-Polished, Nickel Plated, Buffed and Chromium Plated

Z.J-Nickel and Chromium Plated

These letters **MUST BE USED** when they appear in the list; and **AFTER** the number as in the list.

In this series:

1 to 1500, 50001 to 51500 and 140001 to 142000 are Screw Numbers

1501 to 1800 and 51501 to 51800 are Nut Numbers

1901 to 2000 and 51901 to 52000 are Roller Numbers

2001 to 50000 and 52001 to 140000 and 142001 to

140000 are Sewing Machine Parts, 190001 and upward are numbers of Electrical Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are **NOT TO BE USED** in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE

FOR

MACHINE No. 96-3

FOR CLOAKS, CLOTHING AND OTHER WORK IN
CLOTH. DROP FEED. SPEED 3000 R. P. M.

| No. | Plate | Name |
|--------|-------|--|
| *52392 | ---- | Arm..... |
| 16532 | 5943 | " Dowel Pin..... |
| 24131 | 5900 | " Oil Tube with 52045, for oiling 127152 |
| 12454 | 5900 | " " " " 132590, for oiling 52024. |
| 11119 | 5900 | " " " " 52045, for oiling 52022. |
| 24131 | 5900 | " " " " 52045, for oiling 127156 for 52043..... |
| 52045 | 5898 | Arm Oil Tube Packing (cotton) for 11119 and 24131..... |
| 132590 | ---- | Arm Oil Tube Packing (wick) for 12454... |
| 118E | 5875 | " Screw (back)..... |
| 854E | 5942 | " " (front)..... |
| 52302 | 7690 | " Shaft..... |
| 43921 | 5896 | " " Flanged Bushing (back)..... |
| 448C | 5875 | " " " " " Set Screw |
| 52195 | ---- | " " " " " (front)..... |
| 52196 | ---- | " " " " " 52195 with 52193 and 52198..... |
| 52193 | ---- | Arm Shaft Flanged Bushing (front) Oil Pad (inside)..... |
| 52198 | ---- | Arm Shaft Flanged Bushing (front) Oil Pad (outside)..... |
| 435C | 7691 | Arm Shaft Flanged Bushing (front) Set Screw..... |
| 144D | 5875 | Arm Shaft Screw..... |
| 12480 | 5894 | " Side Cap..... |
| 219D | 5875 | " " " Screw..... |
| 12193 | 5894 | " " " Cover..... |
| 50053D | 7698 | " " " Thumb Screw..... |
| 12403 | 5900 | " Spool Pin and Thread Eyelet..... |
| 8879 | 5938 | " " " Washer (cloth)..... |
| 52042 | 5896 | " Top Cover..... |
| 52043 | 5896 | " " " 52042 with 12403 and 24131 |
| 180D | 5875 | " " " Screw..... |
| 52005 | 5893 | Balance Wheel (power) light rim, 2 3/16 in. pulley with two 448C..... |
| 24297 | 5896 | Balance Wheel Oil Cover..... |
| 210D | 5875 | " " " " " Screw..... |
| 448C | 5875 | " " " " " Set Screw..... |
| *52303 | ---- | Bed..... |


| No. | Plate | Name |
|--------|-------|--|
| 12431 | ---- | Bed Slide..... |
| 12432 | 5894 | Bed Slide complete,Nos.4307,12431 and two 725J..... |
| 4307 | 5894 | Bed Slide Spring..... |
| 725J | 5875 | " " " Screw..... |
| 52051 | ---- | Face Plate..... |
| 52052 | 5894 | Face Plate complete,Nos.52051,52053, 52170 and two 226J..... |
| 190J | 5875 | Face Plate Screw..... |
| 52053 | 5900 | " " Thread Guard (lower)..... |
| 226J | 5900 | " " " " " Screw... |
| 52170 | ---- | " " " " (upper)..... |
| 226J | 5900 | " " " " " Screw... |
| 50190D | 7691 | " " Thumb Screw..... |
| 52452 | 7694 | Feed Bar..... |
| 313C | 5875 | " " Screw Center..... |
| 1519J | 5942 | " " " " Nut..... |
| 3033 | 7695 | " Connecting Link..... |
| 375C | 7695 | " " " Hinge Screw..... |
| 1518J | 7695 | " " " " " Nut.... |
| 44136 | 5805 | " Dog..... |
| 50117E | 5875 | " " Screw..... |
| 20283 | 5947 | " and Feed Lifting Eccentric with 446C..... |
| 446C | 5942 | Feed and Feed Lifting Eccentric Set Screw..... |
| 127152 | ---- | Feed and Feed Lifting Eccentric Sleeve.. |
| 20284 | 5947 | " Forked Connection..... |
| 375C | 7695 | " " " Hinge Screw..... |
| 1518J | 7695 | " " " " " Nut.. |
| 44125 | 7690 | " Lifting Rock Shaft..... |
| 44126 | ---- | Feed Lifting Rock Shaft complete,Nos. 12376 and 44125..... |
| 127156 | ---- | Feed Lifting Rock Shaft Connecting Rod with two 966E..... |
| 966E | 7691 | Feed Lifting Rock Shaft Connecting Rod Cap Screw..... |
| 375C | 7695 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw..... |
| 1518J | 7695 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut..... |
| *52271 | ---- | Feed Lifting Rock Shaft Crank..... |
| 12376 | 7692 | " " " " " 52271 with 157J and 1813..... |
| 157J | 7692 | Feed Lifting Rock Shaft Crank Clamping Screw..... |
| 1813 | 7692 | Feed Lifting Rock Shaft Crank Roller and Stud..... |
| 307C | 5875 | Feed Lifting Rock Shaft Screw Center.... |
| 1513J | 5942 | " " " " " Nut |
| 3039 | 7698 | " Regulator..... |
| 1128E | 7695 | " " Hinge Screw..... |

| No. | Plate | Name |
|--------|-------|---|
| 818D | 5897 | Feed Regulator Thumb Screw..... |
| 52359 | 5948 | " " " " Stop..... |
| 12379 | 7690 | " Rock Shaft..... |
| 20333 | ---- | Feed Rock Shaft complete,Nos.12379 and 29633..... |
| 29633 | 7692 | Feed Rock Shaft Crank with 157J..... |
| 157J | 7692 | " " " " Clamping Screw.... |
| 307C | 5875 | " " " Screw Center..... |
| 1513J | 5942 | " " " " " Nut..... |
| 25878 | 6449 | Guide..... |
| 50190D | 7691 | " Thumb Screw..... |
| 52304 | 5948 | Needle Bar (hollow)..... |
| 52305 | 5948 | " " Bushing (lower) with 29532... |
| 1133E | 5948 | " " " " Set Screw.... |
| 52014 | 5948 | " " " (upper)..... |
| 1133E | 5948 | " " " " Set Screw.... |
| 24040 | 5948 | " " Connecting Link with 794E.... |
| 794E | 5948 | " " " " Adjusting Screw..... |
| 775E | 5948 | Needle Bar Connecting Link Cap Screw.... |
| 24041 | 5948 | " " " Stud with 207E.... |
| 207E | 5948 | " " " " Clamping Screw..... |
| 24052 | 7694 | Needle Bar Crank with 1036C,1037C and 1065C..... |
| 1065C | 5875 | Needle Bar Crank Position Screw..... |
| 29532 | 5948 | " " Oil Cup..... |
| 52306 | 5948 | " " Thread Guard..... |
| 229J | 5948 | " " " " Screw..... |
| 52307 | 5948 | " Clamp with 51460F..... |
| 51460F | ---- | " " Screw..... |
| 12391 | 5896 | Presser Bar (hollow)..... |
| 52338 | 5936 | " " Guide Bracket with 223C with 453C..... |
| 453C | 5936 | Presser Bar Guide Bracket Set Screw.... |
| 52016 | 5936 | " " Lifter..... |
| 689C | 5936 | " " " Screw..... |
| 1520J | 5936 | " " " Nut..... |
| 12327 | 5936 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 5896 | Presser Bar Spring..... |
| 11170 | 5936 | " " " Washer..... |
| 29534 | 7698 | " Foot..... |
| 190J | 5875 | " " Screw..... |
| 688J | 5875 | Pressure Regulating Thumb Screw..... |
| 52121 | ---- | Rotating Hook with three 1253C..... |
| 52123 | ---- | " " 52121 with 52090 and four 1053E..... |
| 127060 | ---- | Rotating Hook 52123 with 40274,127100 and three 1367E..... |
| 52478 | ---- | Rotating Hook 127060 with 52473..... |
| 52089 | 5898 | " " 52123 with 40274 and three 1367E (For Agents Only)..... |

| No. | Plate | Name |
|--------|-------|--|
| 40258 | 5935 | Rotating Hook Belt..... |
| 52037 | 5935 | " " " Guard..... |
| 181D | 5875 | " " " " Screw..... |
| 52048 | 5888 | " " " Pulley (lower) steel, with two 1147C and sixteen 52049... |
| 1147C | 7698 | Rotating Hook Belt Pulley (lower) Set Screw..... |
| 52049 | 5888 | Rotating Hook Belt Pulley (lower) Stud.. |
| 52050 | 5888 | " " " " (upper) with 1362C and thirty 40263..... |
| 1362C | 5942 | Rotating Hook Belt Pulley (upper) Set Screw..... |
| 40263 | 7698 | Rotating Hook Belt Pulley (upper) Stud.. |
| 40264 | 5869 | " " Bobbin..... |
| 52472 | ---- | " " " Case..... |
| 52481 | ---- | " " " " 52472 with 591F, 1380E and 40394..... |
| 40392 | 5869 | Rotating Hook Bobbin Case Latch..... |
| 125320 | ---- | " " " " " Lever... |
| 2974 | 5869 | " " " " " " " |
| | | Fulcrum Pin..... |
| 2975 | 5869 | Rotating Hook Bobbin Case Latch Spring.. |
| 592E | 5869 | " " " " " Stop Screw..... |
| 40393 | ---- | Rotating Hook Bobbin Case Hinge, Nos. 2974, 40392 and 125320..... |
| 591F | 5869 | Rotating Hook Bobbin Case Tension Regu- lating Screw..... |
| 40394 | 5869 | Rotating Hook Bobbin Case Tension Spring |
| 1380E | 5869 | " " " " " " |
| 52473 | ---- | Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 52481..... |
| 127099 | ---- | Rotating Hook Bobbin Case 52473 with 127100 (For Agents Only)..... |
| 127100 | ---- | Rotating Hook Bobbin Case Holder with 52475 and two 52476..... |
| 52018 | 5869 | Rotating Hook Bobbin Case Holder Posi- tion Bracket..... |
| 704J | 5869 | Rotating Hook Bobbin Case Holder Posi- tion Bracket Screw..... |
| *52475 | ---- | Rotating Hook Bobbin Case Locating Plate |
| *52476 | ---- | " " " " " " |
| | | Rivet..... |
| 40274 | 5869 | Rotating Hook Section..... |
| 1367E | 5869 | " " " Screw..... |
| 1253C | 5869 | " " Set Screw..... |
| 52308 | 5935 | " " Shaft..... |
| 52044 | 7698 | " " " Bushing (back)..... |
| 52045 | 5898 | " " " " " Packing (cotton)..... |
| 447C | 5898 | Rotating Hook Shaft Bushing (back) Set Screw..... |

| No. | Plate | Name |
|--------|-------|---|
| 52039 | 7698 | Rotating Hook Shaft Bushing (front)..... |
| 52045 | 5898 | " " " " " Pack- ing (cotton)..... |
| 50145E | 7698 | Rotating Hook Shaft Bushing (front) Position Screw..... |
| 52090 | 5898 | Rotating Hook Thread Guard..... |
| 1053E | 5869 | " " " " Screw..... |
| 52337 | 5938 | Slack Thread Regulator..... |
| 223C | 5938 | " " " Set Screw..... |
| 2102 | 7692 | Tension Disc..... |
| 1580C | 7692 | " Regulating Thumb Nut..... |
| 32572 | 7692 | " Releasing Disc..... |
| 43944 | 5936 | " " Lever..... |
| 12398 | 5936 | " " " Hinge Pin..... |
| 12329 | 5938 | " " " Spring..... |
| 32574 | 7692 | " " Pin..... |
| 2103 | 7692 | " Spring..... |
| 50304C | 7692 | " Stud..... |
| 52098 | ---- | " " 50304C with 1580C..... |
| 50305C | 7692 | " " Set Screw..... |
| 52397 | ---- | Tension complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102..... |
| 52027 | 7692 | Thread Guard (side of arm)..... |
| 52454 | 7698 | " Retainer..... |
| 460C | 7691 | " " Set Screw..... |
| 52021 | 5948 | " Take-up Crank..... |
| 1037C | 5948 | " " " Position Screw..... |
| 1038C | 5948 | " " " Set Screw..... |
| 52022 | 5948 | " " Lever with 52130..... |
| 52023 | 5948 | " " " Hinge Pin..... |
| 52024 | 5948 | " " " Link..... |
| 11204 | 5948 | " " " " Hinge Pin..... |
| 435C | 7691 | " " " " " " Set Screw..... |
| 52130 | ---- | Thread Take-up Lever Thread Eyelet Bush- ing..... |
| 52025 | ---- | Thread Take-up Lever complete, Nos. 52022 to 52024..... |
| 52394 | 5948 | Thread Take-up Spring..... |
| 52083 | 7692 | " " " Regulator with 50305C..... |
| 448C | 5875 | Thread Take-up Spring Regulator Set Screw..... |
| 44137 | 5805 | Throat Plate, large needle hole, for 44136..... |
| 691F | 5875 | Throat Plate Screw..... |
| 44212 | ---- | Drip Pan with four 1 in. wire nails..... |
| *15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " Rivet..... |

LIST OF PARTS COMPLETE
FOR

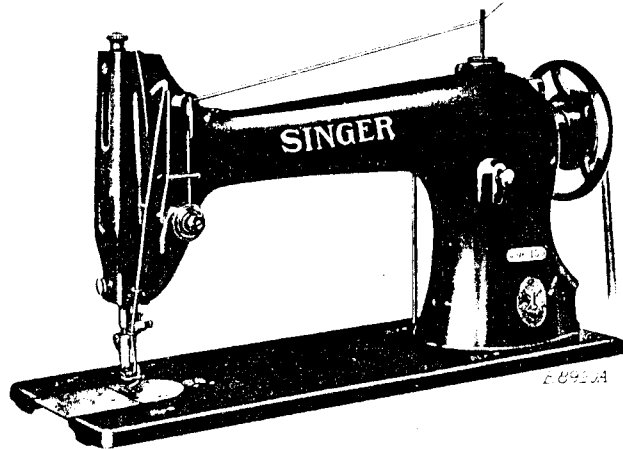

MACHINE No. 96-10

FOR CLOAKS, CLOTHING AND OTHER WORK IN
CLOTH. DROP FEED. SPEED 3200 R. P. M.

| No. | Plate | Name |
|--------|-------|--|
| *52381 | ---- | Arm with two 56015..... |
| 16532 | 5943 | " Dowel Pin..... |
| 24131 | 5900 | " Oil Tube with 52045, for oiling 127152..... |
| 52084 | 5900 | Arm Oil Tube with 52045, for oiling 24040 |
| 11119 | 5900 | " " " " 52045, for oiling 52022 |
| 24131 | 5900 | " " " " 52045, for oiling 127156, for 52043..... |
| 52045 | 5898 | Arm Oil Tube Packing (cotton) for 11119 and 24131..... |
| 116E | 5875 | Arm Screw (back)..... |
| 854E | 5942 | " " (front)..... |
| 52382 | 5946 | " Shaft (horizontal)..... |
| 52191 | ---- | " " " Flanged Bushing (back)..... |
| 52192 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) 52191 with 52193 and 52194.. |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (inside) braided cotton..... |
| 52194 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (outside) felt..... |

| No. | Plate | Name |
|--------|-------|---|
| 448C | 5875 | Arm Shaft (horizontal) Flanged Bushing (back) Set Screw..... |
| 52195 | ---- | Arm Shaft (horizontal) Flanged Bushing (front)..... |
| 52196 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) 52195 with 52193 and 52198. |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (inside)..... |
| 52198 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (outside)..... |
| 435C | 7691 | Arm Shaft (horizontal) Flanged Bushing (front) Set Screw..... |
| 54897 | 5900 | Arm Shaft (horizontal) Front Bearing Oil Cup..... |
| 52060 | 5898 | Arm Shaft (horizontal) Gear with two 1036C..... |
| 52071 | 5894 | Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234E..... |
| 50234E | 7691 | Arm Shaft (horizontal) Gear Case Plug Screw..... |
| 121E | 7691 | Arm Shaft (horizontal) Gear Case Screw... |
| 1036C | 5948 | " " " " Set Screw... |
| 144D | 5875 | " " " " Screw..... |
| 52062 | 5898 | " " (upright)..... |
| 56099 | 5898 | " " " Bushing (lower)..... |
| 432C | 5898 | " " " " " Set Screw..... |
| 56100 | 5898 | Arm Shaft (upright) Bushing (upper)..... |
| 1149C | 5875 | " " " " " Set Screw..... |
| 56013 | 5898 | Arm Shaft (upright) Gear (lower) with two 1253C..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (lower) Set Screw..... |
| 56101 | 5898 | Arm Shaft (upright) Gear (upper) with two 1253C..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (upper) Set Screw..... |
| 58015 | 5900 | Arm Shaft (upright) Oil Tube (lower).... |
| 56015 | 5900 | " " " " (upper).... |
| 12480 | 5894 | " Side Cap..... |
| 219D | 5875 | " " " Screw..... |
| 12193 | 5894 | " " " Cover..... |
| 50053D | 7698 | " " " Thumb Screw..... |
| 12403 | 5900 | " Spool Pin and Thread Eyelet..... |
| 8879 | 5936 | " " " Washer (cloth)..... |
| 52042 | 5896 | " Top Cover..... |
| 52043 | 5896 | " " " 52042 with 12403 and 24131 |
| 180D | 5875 | " " " Screw..... |
| 52005 | 5893 | Balance Wheel (power) light rim, 2 3/16 in. pulley with two 448C..... |
| 52081 | 5893 | Balance Wheel (stand) heavy rim, 2 11/16 in. pulley with two 448C..... |

| No. | Plate | Name |
|--------|-------|--|
| 52063 | 5894 | Balance Wheel Oil Cover..... |
| 210D | 5875 | " " " " Screw..... |
| 448C | 5875 | " " " " Set Screw..... |
| *52383 | ---- | Bed..... |
| 12431 | ---- | " Slide..... |
| 12432 | 5894 | Bed Slide complete, Nos. 4307, 12431 and two 725J..... |
| 4307 | 5894 | Bed Slide Spring..... |
| 725J | 5875 | " " " " Screw..... |
| 52051 | ---- | Face Plate..... |
| 52052 | 5894 | Face Plate complete, Nos. 52051, 52053, 52170 and two 226J..... |
| 190J | 5875 | Face Plate Screw..... |
| 52053 | 5900 | " " " " Thread Guard (lower)..... |
| 226J | 5900 | " " " " " " Screw.... |
| 52170 | ---- | " " " " " " (upper)..... |
| 226J | 5900 | " " " " " " " " Screw.... |
| 50190D | 7691 | " " " " Thumb Screw..... |
| 52452 | 7694 | Feed Bar..... |
| 313C | 5875 | " " " " Screw Center..... |
| 1519J | 5942 | " " " " " " Nut..... |
| 3033 | 7695 | " " " " " " Connecting Link..... |
| 375C | 7695 | " " " " " " Hinge Screw..... |
| 1518J | 7695 | " " " " " " " " Nut.... |
| 52073 | 5897 | " " " " " " Stud..... |
| 50083C | 5897 | " " " " " " " " Set Screw |
| 44136 | 5805 | " " " " " " Dog..... |
| 12370 | 778 | " " " " " " " " for cloth, 15 teeth (16 teeth to the inch)..... |
| 12425 | 5932 | Feed Dog, for cloth..... |
| 12450 | 5933 | " " " " " " 11 teeth (18 teeth to the inch)..... |
| 20348 | 5933 | Feed Dog, for chiffon, 22 teeth (36 teeth to the inch)..... |
| 20106 | 1259 | Feed Dog, for cloth..... |
| 20119 | 1259 | " " " " " " heavy work on duck, overalls, etc..... |
| 20158 | 1262 | Feed Dog, for shirt work, 17 teeth (16 teeth to the inch)..... |
| 20151 | 1262 | Feed Dog, for shirt work, beveled for hemmer, 13 teeth (14 teeth to the inch)..... |
| 20117 | 5933 | Feed Dog, for shirt work, beveled for hemmer, 16 teeth (16 teeth to the inch)..... |
| 20138 | 1263 | Feed Dog, for shirt work, beveled for hemmer, 13 teeth (12 teeth to the inch)..... |
| 20162 | 1263 | Feed Dog, for shirt work, beveled for hemmer, 17 teeth (16 teeth to the inch)..... |
| 20147 | 5933 | Feed Dog, 12 teeth (14 teeth to the inch) |

| No. | Plate | Name |
|--------|-------|--|
| 12481 | 778 | Feed Dog, for general work, 18 teeth (16 teeth to the inch)..... |
| 50117E | 5875 | Feed Dog Screw..... |
| 20283 | 5947 | " " " " " " and Feed Lifting Eccentric with 448C..... |
| 448C | 5942 | Feed and Feed Lifting Eccentric Set Screw..... |
| 127152 | ---- | Feed and Feed Lifting Eccentric Sleeve.. |
| 20284 | 5947 | " " " " " " Forked Connection..... |
| 375C | 7695 | " " " " " " Hinge Screw..... |
| 1518J | 7695 | " " " " " " Connecting Link Hinge Screw Nut.... |
| 52384 | 5948 | " " " " " " Lifting Rock Shaft..... |
| 52385 | ---- | Feed Lifting Rock Shaft complete, Nos. 12376 and 52384..... |
| 127156 | ---- | Feed Lifting Rock Shaft Connecting Rod with two 966E..... |
| 966E | 7691 | Feed Lifting Rock Shaft Connecting Rod Cap Screw..... |
| 375C | 7695 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw..... |
| 1518J | 5897 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut..... |
| *52271 | ---- | Feed Lifting Rock Shaft Crank..... |
| 12376 | 7692 | " " " " " " " " 52271 with 157J and 1813..... |
| 157J | 5897 | Feed Lifting Rock Shaft Crank Clamping Screw..... |
| 1813 | 7692 | Feed Lifting Rock Shaft Crank Roller and Stud..... |
| 50191C | 7691 | Feed Lifting Rock Shaft Screw Center.... |
| 1513J | 5942 | " " " " " " " " Nut |
| 52074 | 5897 | " " " " " " Regulator with 50083C..... |
| 1128E | 5897 | " " " " " " Hinge Screw..... |
| 818D | 5897 | " " " " " " Thumb Screw..... |
| 52359 | 5948 | " " " " " " " " Stop..... |
| 52386 | 5948 | " " " " " " Rock Shaft..... |
| 52387 | ---- | Feed Rock Shaft complete, Nos. 29633 and 52386..... |
| 29633 | 5897 | Feed Rock Shaft Crank with 157J..... |
| 157J | 5897 | " " " " " " Clamping Screw.... |
| 50191C | 7691 | " " " " " " Screw Center..... |
| 1513J | 5942 | " " " " " " " " Nut..... |
| 25866 | 6449 | Guide..... |
| 732D | 5875 | " " " " " " Thumb Screw..... |
| 52455 | 7698 | Needle Bar (hollow)..... |
| 52305 | 5948 | " " " " " " Bushing (lower) with 29533... |
| 1133E | 5948 | " " " " " " " " Set Screw.... |
| 52014 | 5948 | " " " " " " " " (upper)..... |
| 1133E | 5948 | " " " " " " " " Set Screw.... |
| 24040 | 5948 | " " " " " " Connecting Link with 794E.... |
| 794E | 5948 | " " " " " " " " Adjusting Screw..... |


| No. | Plate | Name |
|--------|-------|--|
| 775E | 5948 | Needle Bar Connecting Link Cap Screw... |
| 24041 | 5948 | " " " Stud with 207E... |
| 207E | 5948 | " " " Clamping Screw..... |
| 24052 | 7694 | Needle Bar Crank with 1036C, 1037C and 1065C..... |
| 1065C | 5875 | Needle Bar Crank Position Screw..... |
| 29532 | 5948 | " " Oil Cup..... |
| 52306 | 5948 | " " Thread Guard..... |
| 229J | 5948 | " " " Screw..... |
| 52307 | 5948 | " Clamp with 51460F..... |
| 51460F | ---- | " " Screw..... |
| 12391 | 5896 | Presser Bar (hollow)..... |
| 52338 | 5936 | " " Guide Bracket with 223C and 453C..... |
| 453C | 5936 | Presser Bar Guide Bracket Set Screw.... |
| 52016 | 5936 | " " Lifter..... |
| 689C | 5936 | " " " Screw..... |
| 1520J | 5936 | " " " Nut..... |
| 12327 | 5936 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 5896 | Presser Bar Spring..... |
| 11170 | 5936 | " " " Washer..... |
| 20458 | 5949 | " Foot for 44136..... |
| 12143 | 5864 | " " " 20106..... |
| 12335 | 5949 | " " (narrow) for 20106..... |
| 12258 | 5949 | " " (wide) for 20106..... |
| 12142 | 5949 | " " for 12370..... |
| 12259 | 5949 | " " " 12425..... |
| 12144 | 5864 | " " " 20117, 20138, 20147, 20151, 20158 and 20162..... |
| 12260 | 5864 | Presser Foot for 12450, 20147 and 20348. |
| 12474 | 5949 | " " " 20138 and 20162..... |
| 20342 | 5949 | " " " 12450 and 20348..... |
| 20343 | 5949 | " " with guide on bottom to the right of needle hole, for 12450, and 20348..... |
| 12261 | 5864 | Presser Foot for 12481..... |
| 62527 | 7698 | " " Hinge Pin..... |
| 24544 | ---- | " " Plate..... |
| 24982 | ---- | " " Shank..... |
| 26231 | 5900 | " " Spring..... |
| 24983 | 5867 | Presser Foot (spring hinged) complete for 12425 and 20119, Nos. 24544, 24982, 26231 and 62527..... |
| 7298 | 5900 | Presser Foot Hinge Pin..... |
| 19334 | ---- | " " Plate..... |
| 19335 | ---- | " " Shank..... |
| 19336 | 5938 | Presser Foot (hinged) complete for 12370, Nos. 7298, 19334 and 19335. |
| 7298 | 5900 | Presser Foot Hinge Pin..... |
| 20268 | ---- | " " Plate..... |

| No. | Plate | Name |
|--------|-------|--|
| 20269 | ---- | Presser Foot Shank..... |
| 20270 | 5938 | Presser Foot (hinged) complete for 20106 Nos. 7298, 20268 and 20269..... |
| 62527 | 7698 | Presser Foot Hinge Pin..... |
| 20310 | ---- | " " Plate..... |
| 19223 | ---- | " " Shank..... |
| 20311 | 5949 | Presser Foot (hinged) complete for 20117 20138, 20147, 20151, 20158 and 20162, Nos. 19223, 20310 and 62527..... |
| 62527 | 7698 | Presser Foot Hinge Pin..... |
| 20344 | ---- | " " Plate..... |
| 20345 | ---- | " " Shank..... |
| 26231 | 5900 | " " Spring..... |
| 20346 | 5949 | Presser Foot (spring hinged) complete for 20117, 20138, 20147, 20151, 20158 and 20162, Nos. 20344, 20345, 26231 and 62527..... |
| 190J | 5875 | Presser Foot Screw..... |
| 688J | 5875 | Pressure Regulating Thumb Screw..... |
| 52121 | ---- | Rotating Hook with three 1253C..... |
| 52123 | ---- | " " 52121 with 52090 and four 1053E..... |
| 127060 | ---- | Rotating Hook 52123 with 40274, 127100 and three 1367E..... |
| 52478 | ---- | Rotating Hook 127060 with 52473..... |
| 52089 | 5898 | " " 52123 with 40274 and three 1367E (For Agents Only)..... |
| 40264 | 5869 | Rotating Hook Bobbin..... |
| 52472 | ---- | " " " Case..... |
| 52481 | ---- | " " " " 52472 with 591F, 1380E and 40394..... |
| 40392 | 5869 | Rotating Hook Bobbin Case Latch..... |
| 125320 | ---- | " " " " " Lever... |
| 2974 | 5869 | " " " " " " Fulcrum Pin..... |
| 2975 | 5869 | Rotating Hook Bobbin Case Latch Spring.. |
| 592E | 5869 | " " " " " " Stop Screw..... |
| 40393 | ---- | Rotating Hook Bobbin Case Hinge, Nos. 2974, 40392 and 125320..... |
| 591F | 5869 | Rotating Hook Bobbin Case Tension Regulating Screw..... |
| 40394 | 5869 | Rotating Hook Bobbin Case Tension Spring |
| 1380E | 5869 | " " " " " " Screw..... |
| 52473 | ---- | Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 52481..... |
| 127099 | ---- | Rotating Hook Bobbin Case 52473 with 127100 (For Agents Only)..... |
| 127100 | ---- | Rotating Hook Bobbin Case Holder with 52475 and two 52476..... |

| No. | Plate | Name |
|---------|-------|--|
| 52018 | 5869 | Rotating Hook Bobbin Case Holder Position Bracket..... |
| 704J | 5869 | Rotating Hook Bobbin Case Holder Position Bracket Screw..... |
| *52475 | ---- | Rotating Hook Bobbin Case Locating Plate |
| *52476 | ---- | " " " " " " Rivet..... |
| 40274 | 5869 | Rotating Hook Section..... |
| 1367E | 5869 | " " " Screw..... |
| 1253C | 5869 | " " " Set Screw..... |
| 52388 | 5946 | " " " Shaft..... |
| 56106 | 5898 | " " " Bushing (back)..... |
| 52045 | 5898 | " " " " " Packing (cotton)..... |
| 1143C | 7697 | Rotating Hook Shaft Bushing (back) Set Screw..... |
| 58107 | 5898 | Rotating Hook Shaft Bushing (front)..... |
| 52045 | 5898 | " " " " " Packing (cotton)..... |
| 1148C | 5898 | Rotating Hook Shaft Bushing (front) Set Screw..... |
| 58013 | 5898 | Rotating Hook Shaft Gear with two 1253C. |
| 52072 | 5894 | " " " " Case (two pieces) with 121E and 50234E..... |
| 50234E | 7691 | Rotating Hook Shaft Gear Case Plug Screw |
| 121E | 7691 | " " " " " Screw..... |
| 1253C | 5869 | " " " " " Set Screw..... |
| 52090 | 5898 | " " " Thread Guard..... |
| 1053E | 5869 | " " " " " Screw..... |
| 52337 | 5936 | Slack Thread Regulator..... |
| 223C | 5936 | " " " " " Set Screw..... |
| 52046 | 5947 | Spool Holder Base..... |
| 389D | 5942 | " " " " " Screw..... |
| 204296 | 5947 | " " " " " Wire..... |
| 200079H | 5942 | " " " " " Hinge Screw..... |
| 52047 | 5947 | Spool Holder complete, Nos. 52046, 200079H and 204296..... |
| 2102 | 7692 | Tension Disc..... |
| 1560C | 7692 | " " " " " Regulating Thumb Nut..... |
| 32572 | 7692 | " " " " " Releasing Disc..... |
| 43944 | 5936 | " " " " " Lever..... |
| 12393 | 5936 | " " " " " Hinge Pin..... |
| 12329 | 5936 | " " " " " Spring..... |
| 32574 | 7692 | " " " " " Pin..... |
| 2103 | 7692 | " " " " " Spring..... |
| 50304C | 7692 | " " " " " Stud..... |
| 52098 | ---- | " " " 50304C with 1560C..... |
| 50305C | 7692 | " " " " " Set Screw..... |
| 52397 | ---- | Tension complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102..... |
| 52027 | 7692 | Thread Guard (side of arm)..... |
| 52454 | 7698 | " " " " " Retainer..... |
| 460C | 7691 | " " " " " Set Screw..... |

| No. | Plate | Name |
|--------|-------|---|
| 52021 | 5948 | Thread Take-up Crank..... |
| 1037C | 5948 | " " " " " Position Screw..... |
| 1036C | 5948 | " " " " " Set Screw..... |
| 52022 | 5948 | " " " " " Lever with 52130..... |
| 52023 | 5948 | " " " " " Hinge Pin..... |
| 52024 | 5948 | " " " " " Link..... |
| 11204 | 5948 | " " " " " Hinge Pin..... |
| 435C | 7691 | " " " " " " " " Set Screw..... |
| 5213C | ---- | Thread Take-up Lever Thread Eyelet Bushing..... |
| 52025 | ---- | Thread Take-up Lever complete, Nos. 52022 to 52024..... |
| 52394 | 5948 | Thread Take-up Spring..... |
| 52083 | 7692 | " " " " " Regulator with 50305C..... |
| 443C | 5875 | Thread Take-up Spring Regulator Set Screw..... |
| 44137 | 5805 | Throat Plate, large needle hole, for 44138 |
| 44138 | ---- | " " " " " small needle hole, for 44138 |
| 12412 | 778 | " " " " " large needle hole, for 12370 |
| 12426 | 5932 | " " " " " " " " 12425 |
| 12466 | ---- | " " " " " small needle hole, for 12425 |
| 12464 | 5933 | " " " " " large needle hole, for 12450 and 20348..... |
| 12451 | ---- | Throat Plate, small needle hole, for 12450 and 20348..... |
| 20315 | ---- | Throat Plate, large needle hole, for 20106 |
| 20107 | 1259 | " " " " " small needle hole, for 20106 |
| 20120 | 1259 | " " " " " large oblong needle hole, for 20119..... |
| 20187 | ---- | Throat Plate, small oblong needle hole, for 20119..... |
| 19497 | 5933 | Throat Plate, large needle hole, for 20117 |
| 19405 | ---- | " " " " " small needle hole, for 20117 |
| 19409 | ---- | " " " " " large needle hole, for 20138 and 20162..... |
| 19410 | 1263 | Throat Plate, small needle hole, for 20138 and 20162..... |
| 19415 | 1262 | Throat Plate, large needle hole, for 20151 |
| 19416 | ---- | " " " " " small needle hole, for 20151 |
| 19413 | 1262 | " " " " " large needle hole, for 20158 |
| 19419 | ---- | " " " " " small needle hole, for 20158 |
| 19412 | 5933 | " " " " " large needle hole, for 20147 |
| 19413 | ---- | " " " " " small needle hole, for 20147 |
| 12482 | ---- | " " " " " large needle hole, for 12481 |
| 12483 | 778 | " " " " " small needle hole, for 12481 |
| 691F | 5875 | " " " " " Screw..... |
| 44212 | ---- | Drip Pan with four 1 in. wire nails..... |
| *15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " " " " Rivet..... |

LIST OF PARTS COMPLETE
FOR

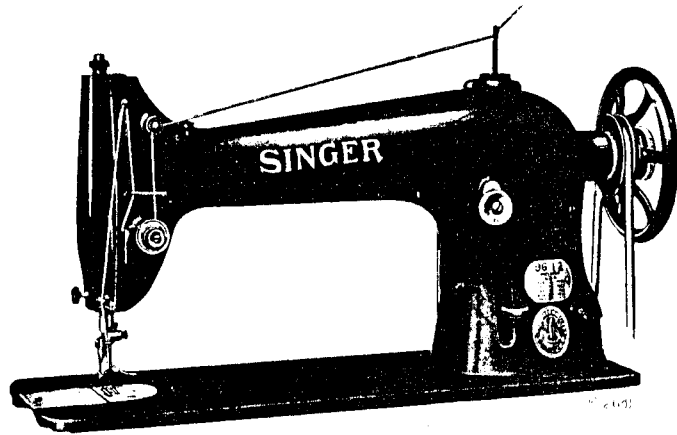

MACHINE No. 96-12

FOR CLOAKS, CLOTHING, OVERALLS AND OTHER
WORK IN CLOTH. HAS REVERSIBLE FEED MECHANISM.
SPEED 3200 R. P. M.

| No. | Plate | Name |
|--------|-------|---|
| *52432 | ---- | Arm with two 56015..... |
| 16532 | 5943 | " Dowel Pin..... |
| 24131 | 5900 | " Oil Tube with 52045, for oiling 127152..... |
| 11119 | 5900 | Arm Oil Tube with 52045, for oiling 52022 |
| 12454 | 5900 | " " " " 132590, for oiling 52024 |
| 24131 | 5900 | " " " " 52045, for oiling 127156, for 52043..... |
| 52045 | 5898 | Arm Oil Tube Packing (cotton) for 11119 and 24131..... |
| 132590 | ---- | Arm Oil Tube Packing (w/ick) for 12454... |
| 116E | 5875 | " Screw (back)..... |
| 854E | 5942 | " " (front)..... |
| 52382 | 5946 | " Shaft (horizontal) for 52005 and 52081..... |
| 52400 | 7690 | Arm Shaft (horizontal) for 52405..... |
| 52191 | ---- | " " " Flanged Bushing (back)..... |
| 52192 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) 52191 with 52193 and 52194.. |
| 52401 | 7694 | Arm Shaft (horizontal) Flanged Bushing (back) for 52405..... |

| No. | Plate | Name |
|--------|--------|--|
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (inside) braided cotton..... |
| 52194 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (outside) felt..... |
| 448C | 5875 | Arm Shaft (horizontal) Flanged Bushing (back) Set Screw..... |
| 52195 | ---- | Arm Shaft (horizontal) Flanged Bushing (front)..... |
| 52196 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) 52195 with 52193 and 52198. |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (inside)..... |
| 52198 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (outside)..... |
| 435C | 7691 | Arm Shaft (horizontal) Flanged Bushing (front) Set Screw..... |
| 54897 | 5900 | Arm Shaft (horizontal) Front Bearing Oil Cup..... |
| 52060 | 5898 | Arm Shaft (horizontal) Gear with two 1036C..... |
| 52071 | 5894 | Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234E..... |
| 50234E | 7691 | Arm Shaft (horizontal) Gear Case Plug Screw..... |
| | 121E | 7691 Arm Shaft (horizontal) Gear Case Screw.. |
| | 1036C | 5948 " " " " Set Screw... |
| | 144D | 5875 " " " " Screw..... |
| | 52062 | 5898 " " (upright)..... |
| | 56099 | 5898 " " " " Bushing (lower)..... |
| | 432C | 5898 " " " " " Set Screw..... |
| | 56100 | 5898 Arm Shaft (upright) Bushing (upper)..... |
| | 1149C | 5875 " " " " " Set Screw..... |
| | 56013 | 5898 Arm Shaft (upright) Gear (lower) with two 1253C..... |
| | 1253C | 5869 Arm Shaft (upright) Gear (lower) Set Screw..... |
| | 56101 | 5898 Arm Shaft (upright) Gear (upper) with two 1253C..... |
| | 1253C | 5869 Arm Shaft (upright) Gear (upper) Set Screw..... |
| | 56015 | 5900 Arm Shaft (upright) Oil Tube (lower).... |
| | 56015 | 5900 " " " " " (upper).... |
| | 12480 | 5894 " Side Cap..... |
| | 219D | 5875 " " " Screw..... |
| | 12193 | 5894 " " Cover..... |
| | 51224W | ---- " " " Thumb Screw..... |
| | 12403 | 5900 " Spool Pin and Thread Eyelet..... |
| | 8879 | 5936 " " " Washer (cloth)..... |
| | 52042 | 5896 " Top Cover..... |
| | 52043 | 5896 " " " 52042 with 12403 and 24131. |

| | Name |
|-----------|---------------------------------|
| Feed Fork | d Connection Hinge Screw..... |
| " " | " " " Nut.. |
| " Lift | ing Rock Shaft..... |
| Feed Lift | ing Rock Shaft complete, Nos. |
| 1237 | and 52384..... |
| Feed Lift | ing Rock Shaft Connecting Rod |
| with | two 966E..... |
| Feed Lift | ing Rock Shaft Connecting Rod |
| Cap | Screw..... |
| Feed Lift | ing Rock Shaft Connecting Rod |
| Hing | Screw..... |
| Feed Lift | ing Rock Shaft Connecting Rod |
| Hing | Screw Nut..... |
| Feed Lift | ing Rock Shaft Crank..... |
| " " | " " " 52271 with |
| 157J | and 1813..... |
| Feed Lift | ing Rock Shaft Crank Clamping |
| Scre | W..... |
| Feed Lift | ing Rock Shaft Crank Roller and |
| Stud | |
| Feed Lift | ing Rock Shaft Screw Center.... |
| " " | " " " " Nut |
| " Regu | lating Stud..... |
| " | " " Head with 56033.... |
| " | " " " Cap Screw.... |
| " | " " " Stop Pin..... |
| " | " " " Lock Pin..... |
| " | " " " " Spring.... |
| " Regu | lator with 50083C..... |
| " Reve | " Hinge Screw..... |
| " | rse Lever with 158E and 51846.. |
| " | " " Hinge Screw..... |
| " | " " " " Clamping |
| Scre | W..... |
| Feed Reve | rse Lever Hinge Screw Friction |
| Wash | er..... |
| Feed Reve | rse Lever Roller and Stud..... |
| " Rock | Shaft..... |
| Feed Rock | Shaft complete, Nos. 29633 and |
| 523E | 6..... |
| Feed Rock | Shaft Crank with 157J..... |
| " " | " " Clamping Screw.... |
| " " | " Screw Center..... |
| " " | " " " Nut..... |
| Guide... | |
| " Thu | mb Screw..... |
| Needle Be | r (hollow)..... |
| " " | Bushing (lower) with 29532... |
| " " | " " Set Screw.... |
| " " | " (upper)..... |
| " " | " Set Screw.... |
| " " | Connecting Link with 794E.... |

| No. | Plate | Name |
|--------|-------|--|
| 794E | 5948 | Needle Bar Connecting Link Adjusting Screw..... |
| 775E | 5948 | Needle Bar Connecting Link Cap Screw.... |
| 24041 | 5948 | " " " Stud with 207E.... |
| 207E | 5948 | " " " " Clamping Screw |
| 24052 | 7894 | " " Crank with 1036C 1037C and 1065C..... |
| 1065C | 5875 | Needle Bar Crank Position Screw..... |
| 29532 | 5948 | " " Oil Cup..... |
| 52306 | 5948 | " " Thread Guard..... |
| 229J | 5948 | " " " " Screw..... |
| 52307 | 5948 | " Clamp with 51460F..... |
| 51460F | ---- | " " Screw..... |
| 12391 | 5896 | Presser Bar (hollow)..... |
| 52338 | 5936 | " " Guide Bracket with 223C and 453C..... |
| 453C | 5936 | Presser Bar Guide Bracket Set Screw.... |
| 52016 | 5936 | " " Lifter..... |
| 689C | 5936 | " " " Screw..... |
| 1520J | 5936 | " " " Nut..... |
| 12327 | 5936 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 5896 | Presser Bar Spring..... |
| 11170 | 5936 | " " " Washer..... |
| 82527 | 7698 | " Foot Hinge Pin..... |
| 52426 | ---- | " " Plate..... |
| 52390 | ---- | " " Shank..... |
| 26231 | 5900 | " " Spring..... |
| 52427 | 7696 | Presser Foot (spring hinged) complete, Nos.26231,52390,52426 and 62527.... |
| 190J | 5875 | Presser Foot Screw..... |
| 688J | 5875 | Pressure Regulating Thumb Screw..... |
| 52121 | ---- | Rotating Hook with three 1253C..... |
| 52123 | ---- | " " 52121 with 52090 and four 1053E..... |
| 127060 | ---- | Rotating Hook 52123 with 40274,127100 and three 1367E..... |
| 52478 | ---- | Rotating Hook 127060 with 52473..... |
| 52089 | 5898 | " " 52123 with 40274 and three 1367E (For Agents Only)..... |
| 40264 | 5869 | Rotating Hook Bobbin..... |
| 52472 | ---- | " " " Case..... |
| 52481 | ---- | " " " " 52472 with 591F,1380E and 40394..... |
| 40392 | 5869 | Rotating Hook Bobbin Case Latch..... |
| 125320 | ---- | " " " " " Lever... |
| 2974 | 5869 | " " " " " " Fulcrum Pin..... |
| 2975 | 5869 | Rotating Hook Bobbin Case Latch Spring.. |
| 592E | 5869 | " " " " " " Stop Screw..... |
| 40393 | ---- | Rotating Hook Bobbin Case Hinge, Nos 2974,40392 and 125320..... |


| No. | Plate | Name |
|--------|-------|--|
| 591F | 5869 | Rotating Hook Bobbin Case Tension Regulating Screw..... |
| 40394 | 5869 | Rotating Hook Bobbin Case Tension Spring..... |
| 1380E | 5869 | Rotating Hook Bobbin Case Tension Spring Screw..... |
| 52473 | ---- | Rotating Hook Bobbin Case complete,Nos. 592E,2975,40393 and 52481..... |
| 127099 | ---- | Rotating Hook Bobbin Case 52473 with 127100 (For Agents Only)..... |
| 127100 | ---- | Rotating Hook Bobbin Case Holder with 52475 and two 52476..... |
| 52018 | 5869 | Rotating Hook Bobbin Case Holder Position Bracket..... |
| 704J | 5869 | Rotating Hook Bobbin Case Holder Position Bracket Screw..... |
| *52475 | ---- | Rotating Hook Bobbin Case Locating Plate..... |
| *52476 | ---- | Rotating Hook Bobbin Case Locating Plate Rivet..... |
| 40274 | 5869 | Rotating Hook Section..... |
| 1367E | 5869 | " " " Screw..... |
| 1253C | 5869 | " " Set Screw..... |
| 52388 | 5946 | " " Shaft..... |
| 56106 | 5898 | " " " Bushing (back).... |
| 52045 | 5898 | " " " " " Pack- ing (cotton)..... |
| 1143C | 7697 | Rotating Hook Shaft Bushing (back) Set Screw..... |
| 56107 | 5898 | Rotating Hook Shaft Bushing (front).... |
| 52045 | 5898 | " " " " " Pack- ing (cotton)..... |
| 1148C | 5898 | Rotating Hook Shaft Bushing (front) Set Screw..... |
| 56013 | 5898 | Rotating Hook Shaft Gear with two 1253C |
| 52072 | 5894 | " " " " Case (two pieces) with 121E and 50234E..... |
| 50234E | 7691 | Rotating Hook Shaft Gear Case Plug Screw..... |
| 121E | 7691 | Rotating Hook Shaft Gear Case Screw.... |
| 1253C | 5869 | " " " " Set Screw.... |
| 52090 | 5898 | " " Thread Guard..... |
| 1053E | 5869 | " " " " Screw..... |
| 52337 | 5936 | Slack Thread Regulator..... |
| 223C | 5936 | " " " Set Screw..... |
| 2102 | 7692 | Tension Disc..... |
| 1560C | 7692 | " Regulating Thumb Nut..... |
| 32572 | 7692 | " Releasing Disc..... |
| 43944 | 5936 | " " Lever..... |
| 12398 | 5936 | " " " Hinge Pin..... |
| 12329 | 5936 | " " " Spring..... |
| 32574 | 7692 | " " Pin..... |
| 2103 | 7692 | " Spring..... |

| No. | Plate | Name |
|--------|-------|---|
| 50304C | 7692 | Tension Stud..... |
| 52098 | ---- | " " 50304C with 1560C..... |
| 50305C | 7692 | " " Set Screw..... |
| 52397 | ---- | Tension complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102..... |
| 52027 | 7692 | Thread Guard (side of arm)..... |
| 52454 | 7698 | " Retainer..... |
| 460C | 7691 | " " Set Screw..... |
| 52021 | 5948 | " Take-up Crank..... |
| 1037C | 5948 | " " " Position Screw..... |
| 1036C | 5948 | " " " Set Screw..... |
| 52022 | 5948 | " " Lever with 52130..... |
| 52023 | 5948 | " " " Hinge Pin..... |
| 52024 | 5948 | " " " Link..... |
| 11204 | 5948 | " " " Hinge Pin..... |
| 435C | 7631 | " " " " " " Set Screw..... |
| 52130 | ---- | Thread Take-up Lever Thread Eyelet Bush- ing..... |
| 52025 | ---- | Thread Take-up Lever complete, Nos. 52022 to 52024..... |
| 52394 | 5948 | Thread Take-up Spring..... |
| 52083 | 7692 | " " " Regulator with 50305C..... |
| 448C | 5875 | Thread Take-up Spring Regulator Set Screw..... |
| 26605 | 769E | Throat Plate, large needle hole, for 26603 28360 and 120001..... |
| 26606 | ---- | Throat Plate, small needle hole, for 26603 28360 and 120001..... |
| 691F | 5875 | Throat Plate Screw..... |
| 44212 | ---- | Drip Pan with four 1 in. wire nails..... |
| 15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " Rivet..... |

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

LIST OF PARTS COMPLETE
FOR

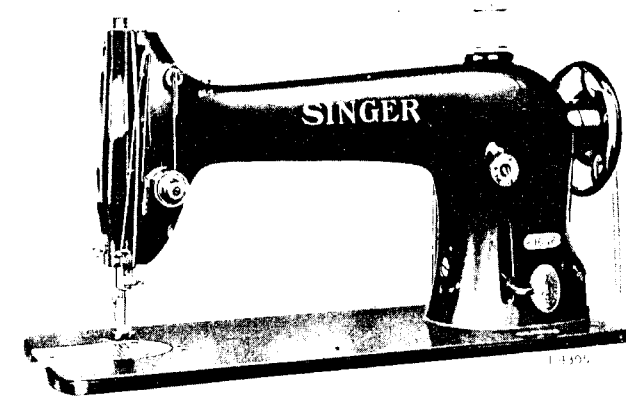

MACHINE No. 96-16

FOR WORK ON OVERALLS, HEAVY OVERCOATS,
KHAKI AND OTHER HEAVY MATERIALS. HAS REVERSI-
BLE FEED MECHANISM. LIFT OF PRESSER FOOT 7/16
INCH. SPEED 3200 R. P. M.

| No. | Plate | Name |
|--------|-------|---|
| *52432 | ---- | Arm with two 56015..... |
| 16532 | 5943 | " Dowel Pin..... |
| 24131 | 5900 | " Oil Tube with 52045, for oiling 127152..... |
| 11119 | 5900 | Arm Oil Tube with 52045, for oiling 52022 |
| 12454 | 5900 | " " " " 132590, for oiling 52024 |
| 24131 | 5900 | " " " " 52045, for oiling 127156, for 52042..... |
| 52045 | 5898 | Arm Oil Tube Packing (cotton) for 11119 and 24131..... |
| 132590 | ---- | Arm Oil Tube Packing (wick) for 12454... |
| 116E | 5875 | " Screw (back)..... |
| 854E | 5942 | " " (front)..... |
| 52382 | 5946 | " Shaft (horizontal)..... |
| 52191 | ---- | " " " Flanged Bushing (back)..... |
| 52192 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) 52191 with 52193 and 52194.. |

| No. | Plate | Name |
|--------|-------|--|
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (inside) braided cotton..... |
| 52194 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (outside) felt..... |
| 448C | 5875 | Arm Shaft (horizontal) Flanged Bushing (back) Set Screw..... |
| 52195 | ---- | Arm Shaft (horizontal) Flanged Bushing (front)..... |
| 52196 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) 52195 with 52193 and 52198. |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (inside)..... |
| 52198 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (outside)..... |
| 435C | 7891 | Arm Shaft (horizontal) Flanged Bushing (front) Set Screw..... |
| 54897 | 5900 | Arm Shaft (horizontal) Front Bearing Oil Cup..... |
| 52060 | 5898 | Arm Shaft (horizontal) Gear with two 1036C..... |
| 52071 | 5894 | Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234E..... |
| 50234E | 7891 | Arm Shaft (horizontal) Gear Case Plug Screw..... |
| 121E | 7891 | Arm Shaft (horizontal) Gear Case Screw.. |
| 1036C | 5948 | " " " " Set Screw... |
| 144D | 5875 | " " " " Screw..... |
| 52062 | 5898 | " " (upright)..... |
| 56099 | 5898 | " " " " Bushing (lower).... |
| 432C | 5898 | " " " " " " Set Screw..... |
| 56100 | 5898 | Arm Shaft (upright) Bushing (upper).... |
| 1143C | 5875 | " " " " " " Set Screw..... |
| 56013 | 5898 | Arm Shaft (upright) Gear (lower) with two 1253C..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (lower) Set Screw..... |
| 56101 | 5898 | Arm Shaft (upright) Gear (upper) with two 1253C..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (upper) Set Screw..... |
| 56015 | 5900 | Arm Shaft (upright) Oil Tube (lower).... |
| 56015 | 5900 | " " " " " " (upper).... |
| 12480 | 5894 | " Side Cap..... |
| 219D | 5875 | " " " " Screw..... |
| 12193 | 5894 | " " " " Cover..... |
| 51224W | ---- | " " " " Thumb Screw..... |
| 12403 | 5900 | " Spool Pin and Thread Eyelet..... |
| 8879 | 5836 | " " " " Washer (cloth)..... |
| 52042 | 5896 | " Top Cover..... |
| 52043 | 5896 | " " " " 52042 with 12403 and 24131. |

| No. | Plate | Name |
|--------|-------|--|
| 180D | 5875 | Arm Top Cover Screw..... |
| 52005 | 5893 | Balance Wheel (power) light rim, 2 3/16 in. pulley, with two 448C..... |
| 52063 | 5894 | Balance Wheel Oil Cover..... |
| 210D | 5875 | " " " " Screw..... |
| 448C | 5875 | " " " " Set Screw..... |
| *52383 | ---- | Bed..... |
| 12431 | ---- | " Slide..... |
| 12432 | 5894 | Bed Slide complete, Nos. 4307, 12431 and two 725J..... |
| 4307 | 5894 | Bed Slide Spring..... |
| 725J | 5875 | " " " " Screw..... |
| 52051 | ---- | Face Plate..... |
| 52052 | 5894 | Face Plate complete, Nos. 52051, 52053, 52170 and two 226J..... |
| 190J | 5875 | Face Plate Screw..... |
| 52053 | 5900 | " " " " Thread Guard (lower)..... |
| 226J | 5900 | " " " " " " Screw... |
| 52170 | ---- | " " " " " " (upper)..... |
| 226J | 5900 | " " " " " " Screw... |
| 50190D | 7891 | " " " " Thumb Screw..... |
| 52452 | 7894 | Feed Bar..... |
| 313C | 5875 | " " " " Screw Center..... |
| 1519J | 5942 | " " " " " " Nut..... |
| 3033 | 7895 | " " " " " " Connecting Link..... |
| 375C | 7895 | " " " " " " Hinge Screw..... |
| 1513J | 7895 | " " " " " " Nut.... |
| 52073 | 7895 | " " " " " " Stud..... |
| 50083C | 5897 | " " " " " " Set Screw |
| 120001 | 7896 | " Dog (spiked teeth)..... |
| 50117E | 5875 | " " " " " " Screw..... |
| 52406 | 7894 | " " " " " " and Feed Lifting Eccentric with 448C..... |
| 448C | 5875 | Feed and Feed Lifting Eccentric Set Screw..... |
| 127152 | ---- | Feed and Feed Lifting Eccentric Sleeve.. |
| 52407 | 7894 | " Forked Connection..... |
| 375C | 7895 | " " " " " " Hinge Screw..... |
| 1518J | 7895 | " " " " " " Nut... |
| 52384 | 5846 | " Lifting Rock Shaft..... |
| 52433 | ---- | Feed Lifting Rock Shaft complete, Nos. 52384 and 52434..... |
| 127156 | ---- | Feed Lifting Rock Shaft Connecting Rod with two 966E..... |
| 966E | 7891 | Feed Lifting Rock Shaft Connecting Rod Cap Screw..... |
| 375C | 7895 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw..... |
| 1518J | 7895 | Feed Lifting Rock Shaft Connecting Rod Hinge Screw Nut..... |
| 52434 | 7897 | Feed Lifting Rock Shaft Crank with 157J and 1813..... |

| No. | Plate | Name |
|--------|-------|---|
| 157J | 7892 | Feed Lifting Rock Shaft Crank Clamping Screw..... |
| 1813 | 7892 | Feed Lifting Rock Shaft Crank Roller and Stud..... |
| 50191C | 7891 | Feed Lifting Rock Shaft Screw Center.... |
| 1513J | 5942 | " " " " " " Nut |
| 50338E | 7895 | " Regulating Stud..... |
| 58032 | 7895 | " " " Head with 56033.... |
| 50193J | 7895 | " " " Cap Screw..... |
| 58033 | 7895 | " " " Stop Pin..... |
| 58034 | 7895 | " " " Lock Pin..... |
| 56035 | 7895 | " " " " " Spring.... |
| 52408 | 7895 | " Regulator with 50083C..... |
| 1128E | 7895 | " " Hinge Screw..... |
| 52409 | 7895 | " Reverse Lever with 158E and 51846.. |
| 50339D | 7895 | " " " Hinge Screw..... |
| 158E | 5943 | " " " " " Clamping Screw..... |
| 52410 | 7895 | Feed Reverse Lever Hinge Screw Friction Washer..... |
| 51846 | ---- | Feed Reverse Lever Roller and Stud..... |
| 52386 | 5946 | " Rock Shaft..... |
| 52387 | ---- | Feed Rock Shaft complete, Nos. 29633 and 52388..... |
| 29633 | 7892 | Feed Rock Shaft Crank with 157J..... |
| 157J | 7892 | " " " " Clamping Screw.... |
| 50191C | 7891 | " " " " Screw Center..... |
| 1513J | 5942 | " " " " " Nut..... |
| 25866 | 6449 | Guide..... |
| 50190D | 7691 | " Thumb Screw..... |
| 52455 | 7698 | Needle Bar (hollow)..... |
| 52305 | 5948 | " " Bushing (lower) with 29532... |
| 1133E | 5948 | " " " " Set Screw.... |
| 52448 | 7697 | " " " (upper)..... |
| 1133E | 5948 | " " " " Set Screw.... |
| 24040 | 5948 | " " Connecting Link with 794E.... |
| 794E | 5948 | " " " " Adjusting Screw..... |
| 775E | 5948 | Needle Bar Connecting Link Cap Screw.... |
| 24041 | 5948 | " " " Stud with 207E.... |
| 207E | 5948 | " " " " Clamping Screw..... |
| 127222 | ---- | Needle Bar Crank with 1036C, 1037C and 1065C..... |
| 1065C | 5875 | Needle Bar Crank Position Screw..... |
| 29532 | 5948 | " " Oil Cup..... |
| 52306 | 5948 | " " Thread Guard..... |
| 229J | 5948 | " " " " Screw..... |
| 52307 | 5948 | " Clamp with 51460F..... |
| 51460F | ---- | " " Screw..... |
| 12391 | 5896 | Presser Bar (hollow)..... |
| 52338 | 5936 | " " Guide Bracket with 223C and 453C..... |

| No. | Plate | Name |
|--------|-------|--|
| 453C | 5936 | Presser Bar Guide Bracket Set Screw..... |
| 5990 | 7697 | " " Lifter..... |
| 689C | 5936 | " " " Screw..... |
| 1520J | 5936 | " " " " Nut..... |
| 12327 | 5936 | " " Lifting and Releasing Lever Bracket..... |
| 11167 | 5896 | Presser Bar Spring..... |
| 11170 | 5936 | " " " Washer..... |
| 7298 | 5900 | " Foot Hinge Pin..... |
| 52437 | ---- | " " Plate..... |
| 52438 | ---- | " " Shank..... |
| 26231 | 5900 | " " Spring..... |
| 52439 | 7697 | Presser Foot (spring hinged) complete, Nos. 7298, 26231, 52437 and 52438.... |
| 190J | 5875 | Presser Foot Screw..... |
| 688J | 5875 | Pressure Regulating Thumb Screw..... |
| 52121 | ---- | Rotating Hook with three 1253C..... |
| 52123 | ---- | " " 52121 with 52090 and four 1053E..... |
| 52440 | 7697 | Rotating Hook 52123 with 52444 and three 1367E (For Agents Only)..... |
| 52480 | ---- | Rotating Hook 52440 with 127099..... |
| 40264 | 5869 | " " Bobbin..... |
| 52472 | ---- | " " " Case..... |
| 52481 | ---- | " " " " 52472 with 591F, 1330E and 40394..... |
| 40392 | 5869 | Rotating Hook Bobbin Case Latch..... |
| 125320 | ---- | " " " " " Lever... |
| 2974 | 5869 | " " " " " Fulcrum Pin..... |
| 2975 | 5869 | Rotating Hook Bobbin Case Latch Spring.. |
| 592E | 5869 | " " " " " Stop Screw..... |
| 40393 | ---- | Rotating Hook Bobbin Case Hinge, Nos. 2974 40392 and 125320..... |
| 591F | 5869 | Rotating Hook Bobbin Case Tension Regulating Screw..... |
| 40394 | 5869 | Rotating Hook Bobbin Case Tension Spring |
| 1380E | 5869 | " " " " " " Screw..... |
| 52473 | ---- | Rotating Hook Bobbin Case complete, Nos. 592E, 2975, 40393 and 52481..... |
| 127099 | ---- | Rotating Hook Bobbin Case 52473 with 127100 (For Agents Only)..... |
| 127100 | ---- | Rotating Hook Bobbin Case Holder with 52475 and two 52476..... |
| 52018 | 5869 | Rotating Hook Bobbin Case Holder Position Bracket..... |
| 704J | 5869 | Rotating Hook Bobbin Case Holder Position Bracket Screw..... |
| *52475 | ---- | Rotating Hook Bobbin Case Locating Plate |

| No. | Plate | Name |
|--------|-------|---|
| *52476 | ---- | Rotating Hook Bobbin Case Locating Plate Rivet..... |
| 52444 | 7697 | Rotating Hook Section..... |
| 1367E | 5869 | " " " Screw..... |
| 1253C | 5869 | " " Set Screw..... |
| 52388 | 5948 | " " Shaft..... |
| 56106 | 5898 | " " " Bushing (back)..... |
| 52045 | 5898 | " " " " " Packing (cotton)..... |
| 1143C | 7697 | Rotating Hook Shaft Bushing (back) Set Screw..... |
| 56107 | 5898 | Rotating Hook Shaft Bushing (front).... |
| 52045 | 5898 | " " " " " Packing (cotton)..... |
| 1148C | 5898 | Rotating Hook Shaft Bushing (front) Set Screw..... |
| 56013 | 5898 | Rotating Hook Shaft Gear with two 1253C. |
| 52072 | 5894 | " " " " " Case (two pieces) with 121E and 50234E..... |
| 50234E | 7691 | Rotating Hook Shaft Gear Case Plug Screw |
| 121E | 7691 | " " " " " Screw..... |
| 1253C | 5869 | " " " " " Set Screw..... |
| 52090 | 5898 | " " Thread Guard..... |
| 1053E | 5869 | " " " " " Screw..... |
| 52337 | 5938 | Slack Thread Regulator..... |
| 223C | 5938 | " " " " " Set Screw..... |
| 2102 | 7692 | Tension Disc..... |
| 1560C | 7692 | " Regulating Thumb Nut..... |
| 32572 | 7692 | " Releasing Disc..... |
| 52445 | 7697 | " " Lever..... |
| 12398 | 5936 | " " " Hinge Pin..... |
| 12329 | 5936 | " " " Spring..... |
| 32574 | 7692 | " " " Pin..... |
| 2103 | 7692 | " Spring..... |
| 50304C | 7692 | " Stud..... |
| 52098 | ---- | " " 50304C with 1560C..... |
| 50305C | 7692 | " " Set Screw..... |
| 52397 | ---- | Tension complete, Nos. 2103, 32572, 32574, 52083, 52098, 52394 and two 2102..... |
| 52454 | 7698 | Thread Retainer..... |
| 460C | 7691 | " " " " " Set Screw..... |
| 52446 | 7697 | " " " " " Take-up Crank..... |
| 1037C | 5948 | " " " " " Position Screw..... |
| 1036C | 5948 | " " " " " Set Screw..... |
| 52022 | 5948 | " " " " " Lever with 52130..... |
| 52023 | 5948 | " " " " " Hinge Pin..... |
| 52024 | 5948 | " " " " " Link..... |
| 11204 | 5948 | " " " " " Hinge Pin..... |
| 435C | 7691 | " " " " " " " Set Screw..... |
| 5213C | ---- | Thread Take-up Lever Thread Eyelet Bush- ing..... |

| No. | Plate | Name |
|--------|-------|--|
| 52025 | ---- | Thread Take-up Lever complete, Nos. 52022 to 52024..... |
| 52394 | 5948 | Thread Take-up Spring..... |
| 52083 | 7692 | " " " " " Regulator with 50305C..... |
| 448C | 5875 | Thread Take-up Spring Regulator Set Screw..... |
| 26605 | 7698 | Throat Plate, large needle hole, for 120001..... |
| 26606 | ---- | Throat Plate, small needle hole, for 120001..... |
| 691F | 5875 | Throat Plate Screw..... |
| 44212 | ---- | Drip Pan with four 1 in. wire nails..... |
| *15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " Rivet..... |

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

MACHINE BASE

| No. | Plate | Name |
|-------|-------|---|
| 19219 | 5943 | Bed Frame Cushion (leather)..... |
| 158C | 5943 | " " " Screw..... |
| 19220 | 5943 | " " " Spring..... |
| 19226 | 5943 | " " Hinge Connection..... |
| 19398 | ---- | " " " " 19226 with 211E and 19397..... |
| 19397 | 5943 | Bed Frame Hinge Connection Cap..... |
| 211E | 5943 | " " " " " Screw.... |
| 16555 | 5943 | " " " Plate..... |
| 1401C | 5943 | " " " Rivet..... |
| 20067 | 819 | Bed Frame with two each 16555,19398, four each 19219,19220, six each 1401C, wood screws 1 1/4 in. No. 12 and eight 158C..... |

ACCESSORIES

| No. | Plate | Name |
|--------|-------|--|
| 12361 | 5943 | Machine Hinge Connection..... |
| 44139 | 5943 | " " Plate..... |
| 44140 | ---- | Machine Hinge complete, Nos. 12361, 44139 and wood screw 1 1/4 in. No. 14.... |
| 12405 | 5943 | Machine Rest (felt)..... |
| 120342 | ---- | Ciler with 120343..... |
| 120343 | ---- | " Spout, 3 1/2 in. long..... |
| 26026 | 5901 | Screw Driver (large)..... |
| 26485 | 5901 | " " (small)..... |
| 8909 | 5901 | Wrench for 1513 and 1518..... |
| 8908 | 5901 | " " 1519 and 1520..... |

FINGER GUARD

| No. | Plate | Name |
|--------|-------|---|
| 36818 | 5945 | Finger Guard..... |
| 36819 | 5945 | " " Friction Washer..... |
| 50316J | 5945 | " " Hinge Screw..... |
| 36820 | 5945 | " " Holder with 196J..... |
| 196J | 5945 | " " Clamping Screw..... |
| 36821 | 5945 | Finger Guard complete, Nos. 36818 to 36820 and 50316J..... |

HEMMERS

| No. | Plate | Name |
|--------|-------|---------------------------------|
| 120938 | ---- | Hemmer (foot) 3/32 in. hem..... |
| 120803 | ---- | " " 1/8 in. hem..... |
| 120804 | ---- | " " 5/32 in. hem..... |
| 120805 | ---- | " " 3/16 in. hem..... |
| 36122 | ---- | " " 7/32 in. hem..... |
| 120806 | ---- | " " 1/4 in. hem..... |
| 6267 | 5900 | " Folder..... |
| 25888 | 5900 | " Tongue..... |

Note: When ordering Nos. 6267 or 25888 state width of hem and No. of hemmer for which it is required.

| | | |
|-------|------|--|
| 20117 | 5933 | Feed Dog..... |
| 19497 | 5933 | Throat Plate, large needle hole, for 20117 |
| 19405 | ---- | " " small needle hole, for 20117 |
| 35710 | 1252 | Hemmer (foot) 3/32 in. hem, with guide on bottom to the right of needle hole. |
| 35682 | ---- | Hemmer (foot) 1/8 in. hem, with guide on bottom to the right of needle hole. |
| 36524 | ---- | Hemmer (foot) 5/32 in. hem, with guide on bottom to the right of needle hole. |
| 35997 | ---- | Hemmer (foot) 3/16 in. hem, with guide on bottom to the right of needle hole. |
| 36309 | ---- | Hemmer (foot) 7/32 in. hem, with guide on bottom to the right of needle hole. |
| 36072 | ---- | Hemmer (foot) 1/4 in. hem, with guide on bottom to the right of needle hole. |
| 35711 | 1252 | Feed Dog for 35682, 35710, 35997, 36072, 36309 and 36524..... |
| 35712 | 1252 | Throat Plate, small needle hole, for 35711 |

Note: When ordering No. 35712 state width of hem for which it is required.

| | | |
|--------|------|---|
| 36162 | ---- | Hemmer (foot) 3/32 in. hem, for China silk etc..... |
| 120898 | ---- | Hemmer (foot) 1/16 in. to 1/8 in. hem, for China silk, etc..... |
| 120911 | ---- | Hemmer (foot) 5/32 in. to 1/4 in. hem, for China silk, etc..... |
| 36434 | ---- | Hemmer (foot) 3/16 in. hem, for China silk etc..... |
| 20158 | 1262 | Feed Dog, for shirt work, for 36162, 36434, 120898 and 120911..... |
| 19418 | 1262 | Throat Plate, large needle hole, for 20158 |
| 19419 | ---- | " " small needle hole, for 20158 |
| 36413 | ---- | Hemmer (foot) plain bottom, 1/16 in. hem. |
| 36414 | ---- | " " " " 3/32 in. hem. |
| 120837 | ---- | " " " " 1/8 in. hem, slotted for lace..... |
| 36480 | ---- | Hemmer (foot) plain bottom, 5/32 in. hem. |
| 36416 | ---- | " " " " 3/16 in. hem. |

PRESSER FEET

| No. | Plate | Name |
|--|-------|--|
| 36464 | 5892 | Presser Foot Spring Guide..... |
| 665J | 5892 | " " " " Screw..... |
| 36465 | 5892 | Presser Foot (right hand, spring guide) with 665J and 36464, for 1/32 in. to 5/16 in. gauge..... |
| Note: When ordering Nos. 36464 or 36465 state re- quired distance from edge of goods to seam. | | |
| 36574 | 5945 | Presser Foot..... |
| 36575 | 5945 | " " 36574 with 36576 and two 50202J..... |
| 36576 | 5945 | Presser Foot Finger Guard..... |
| 50202J | 5945 | " " " " Screw..... |

BOBBIN WINDERS

BOBBIN WINDER

(SWINGING AUTOMATIC, LEFT HAND)

| No. | Plate | Name |
|-------|-------|---|
| 41913 | 5902 | Bracket with 457C..... |
| 41583 | 5902 | Frame with 457C..... |
| 34105 | 5902 | " Hinge Pin..... |
| 457C | 5942 | " " " " Set Screw..... |
| 41914 | 5902 | " Spring..... |
| 41585 | 5902 | Pulley with 171D..... |
| 171D | 5942 | " Set Screw..... |
| 41586 | 5902 | Spindle..... |
| 41587 | 5902 | Stop Latch..... |
| 42614 | 5902 | " " Hinge Stud..... |
| 457C | 5942 | " " " " Set Screw..... |
| 7958 | 7697 | " " Stop Pin..... |
| 41588 | 5902 | " " Tripping Arm with 185H..... |
| 185H | 5942 | " " " " Clamping Screw.. |
| 41591 | 5902 | Tension Bracket with 460C..... |
| 41592 | 5902 | Tension Bracket complete, Nos. 12403, 24131 41591, 41593 to 41595 and two 2455.. |
| 24131 | 5900 | Tension Bracket Oil Tube with 52045..... |
| 52045 | 5898 | " " " " Packing (cotton) |
| 180D | 5875 | " " Screw..... |
| 12403 | 5900 | " " Spool Pin and Thread Eyelet..... |
| 8879 | 5936 | Tension Bracket Spool Pin Washer (cloth) |
| 2455 | 2834 | " Disc..... |
| 41593 | 5936 | " Spring..... |

| No. | Plate | Name |
|-------|-------|--|
| 41594 | 5936 | Tension Stud..... |
| 460C | 7691 | " " Set Screw..... |
| 41595 | 5936 | " Thread Guide..... |
| 60845 | ---- | Bobbin Winder, Nos. 7958, 34105, 41583, 41585 to 41588, 41913, 41914 and 42614..... |
| 41915 | 5902 | Bobbin Winder 60845 with 880E and 25446. |
| 41916 | ---- | Bobbin Winder (swinging automatic, left hand) complete, Nos. 41592 and 41915. |
| 880E | 7697 | Bobbin Winder Screw..... |
| 25446 | 5900 | " " " Washer..... |

BOBBIN WINDER

(SWINGING AUTOMATIC, RIGHT HAND)

| No. | Plate | Name |
|-------|-------|--|
| 52042 | 5896 | Arm Top Cover..... |
| 52043 | 5896 | " " " 52042 with 12403 and 24131 |
| 24131 | 5900 | " " " Oil Tube with 52045..... |
| 52045 | 5898 | " " " " Packing (cotton). |
| 180D | 5875 | " " " Screw..... |
| 12403 | 5900 | " " " Spool Pin and Thread Eye- let..... |
| 8879 | 5936 | Arm Top Cover Spool Pin Washer (cloth).. |
| 41339 | 2833 | Base..... |
| 41340 | 2833 | Frame..... |
| 1429D | 2834 | " Hinge Screw..... |
| 41341 | 2833 | " Spring..... |
| 207D | 2834 | " " Screw..... |
| 41342 | 2833 | Pulley with 200F..... |
| 200F | 2834 | " Set Screw..... |
| 41343 | 2834 | Spindle..... |
| 27306 | 2834 | Spool Pin..... |
| 27307 | 2833 | " Stand..... |
| 27308 | 2833 | Spool Stand complete, Nos. 418E, 1562J, 2106 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 11241 | 2833 | Spool Washer (cloth)..... |
| 41344 | 2834 | Stop Latch..... |
| 41345 | 2834 | " " Finger..... |
| 152F | 2834 | " " " Screw..... |
| 1430D | 2834 | " " Hinge Screw..... |
| 1550H | 2834 | " " " " Nut..... |
| 41346 | 2834 | " " Lever..... |
| 1430D | 2834 | " " " Hinge Screw..... |
| 2455 | 2834 | Tension Disc..... |
| 1562J | 2834 | " Regulating Thumb Nut..... |
| 418E | 2834 | " Screw Stud..... |

| No. | Plate | Name |
|-------|-------|---|
| 10141 | 2834 | Tension Spring..... |
| 2106 | 2834 | " Thread Guide..... |
| 60456 | ---- | Bobbin Winder,Nos.152F,207D,1429D,1550H, 41339 to 41346 and three 1430D.... |
| 41347 | 2833 | Bobbin Winder,Nos.60456 and two each 9331 and wood screws 1 in.No.10 R.H.B..... |
| 41348 | ---- | Bobbin Winder (swinging automatic, right hand) complete,Nos.27308 and 41347. |
| 9331 | 2834 | Bobbin Winder Washer..... |

FOOT LIFTER PARTS

| No. | Plate | Name |
|--|-------|--|
| 5596 | 7694 | Bell Crank..... |
| 56848 | ---- | " " 5596 with 5599 and 5601..... |
| 5599 | 7694 | " " Bracket..... |
| 178E | 5875 | " " " Screw..... |
| 5601 | 5943 | " " Hinge Pin..... |
| 5735 | 5943 | " " Spring..... |
| 5598 | 7694 | Bell Crank complete,Nos.5735 and 56848.. |
| 5670 | ---- | Chain,length 26 in.to 35 in.with 56864 and 56865..... |
| Note: When ordering No. 5670 state length required | | |
| 4879 | 7694 | Chain Connecting Link..... |
| 56864 | ---- | " Hook (large)..... |
| 56865 | ---- | " " (small)..... |
| 12237 | 5946 | Lifting Lever with 448C..... |
| 52028 | 7694 | " " Connecting Rod..... |
| 12416 | 5936 | " " " " Joint..... |
| 76D | 5875 | " " " " " Hinge Screw..... |
| 1521J | 5942 | Lifting Lever Connecting Rod Lock Nut... |
| 802D | 5875 | " " Hinge Screw..... |
| 12241 | 5936 | " " Link..... |
| 766D | 5875 | " " " Hinge Screw..... |
| 12240 | 5936 | " " Pin..... |
| 448C | 5875 | " " " Set Screw..... |
| 2763 | 819 | Rock Shaft..... |
| 12242 | 819 | " " Hanger with two wood screws 1 in. No. 10..... |
| 6337 | 819 | Rock Shaft Lifting Bracket with two 356C |
| 12243 | 819 | " " " " Hook..... |
| 7125 | 819 | " " " " Hook..... |
| 356C | 5875 | " " " " " Set Screw |
| 356C | 5875 | " " " " " Set Screw.... |
| 2770 | 819 | " " Stop Dog with 356C..... |
| 356C | 5875 | " " " " Set Screw..... |
| 4880 | 819 | Rock Shaft complete,Nos.2763,2770,7125, 12243 and two each 6337 and 12242.. |

| No. | Plate | Name |
|-------|-------|---|
| 4881 | 819 | Treadle..... |
| 4882 | 7694 | " Shaft..... |
| 4883 | 7694 | " Spring..... |
| 4884 | 819 | " Stand..... |
| 4885 | 819 | Treadle complete,Nos.4879,4881 to 4884 and two wood screws 1 in. No. 16... |
| 52319 | ---- | Foot Lifter complete,Nos.76D,766D,802D, 1521J,4880,4885,5598,5670,12237, 12240,12241,12416,52028 and two 178E..... |

KNEE LIFTER PARTS

| No. | Plate | Name |
|-------|-------|--|
| 5596 | 7694 | Bell Crank..... |
| 56848 | ---- | " " 5596 with 5599 and 5601..... |
| 5599 | 7694 | " " Bracket..... |
| 178E | 5875 | " " " Screw..... |
| 5601 | 5943 | " " Hinge Pin..... |
| 5735 | 5943 | " " Spring..... |
| 5598 | 7694 | Bell Crank complete,Nos.5735 and 56848.. |
| 12237 | 5946 | Lifting Lever with 448C..... |
| 52028 | 7694 | " " Connecting Rod..... |
| 12416 | 5936 | " " " " " Joint..... |
| 76D | 5875 | " " " " " Hinge Screw..... |
| 1521J | 5942 | Lifting Lever Connecting Rod Lock Nut... |
| 802D | 5875 | " " Hinge Screw..... |
| 12241 | 5936 | " " Link..... |
| 766D | 5875 | " " " Hinge Screw..... |
| 12240 | 5936 | " " Pin..... |
| 448C | 5875 | " " " Set Screw..... |
| 2763 | 5235 | Rock Shaft..... |
| 7539 | ---- | " " Hanger with two wood screws 1 in. No. 10..... |
| 2765 | 5235 | Rock Shaft Knee Arm..... |
| 2766 | 5235 | " " " " Hub with 356C..... |
| 356C | 5875 | " " " " " Set Screw..... |
| 2768 | ---- | Rock Shaft Knee Arm complete,Nos.2765 to 2767..... |
| 2767 | 5235 | Rock Shaft Knee Plate with 356C..... |
| 356C | 5875 | " " " " " Set Screw..... |
| 6337 | 819 | " " Lifting Bracket with two 356C |
| 2778 | 5235 | " " " " Hook..... |
| 356C | 5875 | " " " " " Set Screw |
| 356C | 5875 | " " " " " Set Screw.... |
| 2770 | 5235 | " " Stop Dog with 356C..... |
| 356C | 5875 | " " " " Set Screw..... |
| 12250 | ---- | Rock Shaft complete,Nos.2763,2768,2778, 6337 and two each 2770 and 7539.... |

| No. | Plate | Name |
|-------|-------|--|
| 52320 | ---- | Knee Lifter complete (power table) Nos. 78D, 786D, 802D, 1521J, 5598, 12237, 12240, 12241, 12250, 12416, 52028 and two 178E..... |

THREAD UNWINDER

FOR TWO SPOOLS OR TWO LARGE CONES OF THREAD

| No. | Plate | Name |
|---------|-------|---|
| 225257 | ---- | Spool Rest with 201018C..... |
| 150203 | ---- | " " Cushion (felt)..... |
| 225388 | ---- | " " Rod..... |
| 200383C | ---- | " " Set Screw..... |
| 201018C | ---- | " " Set Screw..... |
| 202490 | ---- | " Stand with 200383C..... |
| 225391 | ---- | Thread Guide..... |
| 201696J | ---- | " " Lock Nut..... |
| 225326 | ---- | " " Position Cup..... |
| 225324 | ---- | " " Rod with 208E and 225322.. |
| 208E | 5942 | " " Screw..... |
| 225322 | ---- | " " Washer..... |
| 225258 | ---- | Thread Unwinder complete, Nos. 201696J, 202490, 225257, 225324, 225326, 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12..... |
| 27739 | ---- | Thread Cone (wood) for large cones, for 225258..... |
| 225390 | ---- | Thread Cone Holder, for inverted cones, for 225258..... |

Note: Nos. 27739 and 225390 are used with, but not included in 225258.

OBSOLETE PARTS

| No. | Plate | Name |
|--------|-------|--|
| *52399 | ---- | Arm with two 4448, for 96-12 and 96-16 Machines, use 52432..... |
| 52078 | 5894 | Arm Shaft Flanged Bushing (front) for 96-3 Machine, use 52196..... |
| 52059 | 5894 | Arm Shaft (horizontal) Flanged Bushing (back) for 96-10, 96-12 and 96-16 Machines, use 52191..... |
| 52078 | 5894 | Arm Shaft (horizontal) Flanged Bushing (front) for 96-10, 96-12 and 96-16 Machines, use 52196..... |

| No. | Plate | Name |
|--------|-------|---|
| 4448 | 7692 | Arm Shaft (upright) Oil Tube (lower) for 52399..... |
| 4448 | 7692 | Arm Shaft (upright) Oil Tube (upper) for 52399..... |
| 286D | 5875 | Arm Side Cover Thumb Screw, for 96-12 and 96-16 Machines, use 51224W..... |
| *52402 | ---- | Bed, for 96-12 and 96-16 Machines, use 52383..... |
| 20021 | 5235 | Drip Pan with four 1 in. wire nails, use 44212..... |
| 56086 | 5900 | Face Plate Thread Guard (upper) use 52170..... |
| 52011 | 5896 | Feed Bar, for 96-3, 96-10 and 96-12 Machines, use 52452..... |
| 50200C | 7695 | Feed Connecting Link Hinge Stud Set Screw, use 50083..... |
| 12369 | 5932 | Feed Dog, for cloth, 12 teeth (12 teeth to the inch) for 96-10 Machine..... |
| 12457 | 5932 | Feed Dog, for cloth, 16 teeth (16 teeth to the inch) for 96-10 Machine..... |
| 24036 | 5896 | Feed and Feed Lifting Eccentric Sleeve, use 127152..... |
| 12430 | 5896 | Feed Lifting Rock Shaft Connecting Rod with two 966E, use 127156..... |
| 1811 | 7695 | Feed Reverse Lever Roller and Stud, for 52409, use 51846..... |
| 36118 | ---- | Hemmer (foot) 3/32 in. hem, use 120938... |
| 36119 | 5881 | " " 1/8 in. hem, use 120803... |
| 36120 | ---- | " " 5/32 in. hem, use 120804... |
| 36121 | ---- | " " 3/16 in. hem, use 120805... |
| 36749 | ---- | " " 1/4 in. hem, use 120806... |
| 36432 | 5881 | " " 1/8 in. hem, for China silk, etc., use 120898..... |
| 36433 | ---- | Hemmer (foot) 5/32 in. hem, for China silk etc., use 120911..... |
| 36415 | 5881 | Hemmer (foot) plain bottom 1/8 in. hem, use 120803..... |
| 36471 | 5881 | Hemmer (foot) plain bottom 1/8 in. hem, slotted for lace, use 120837..... |
| 52436 | 7694 | Needle Bar Crank with 858C, 1036C, 1037C and 1065C, use 127222..... |
| 858C | 5875 | Needle Bar Crank Set Screw, for 24052 and 52436..... |
| 808F | 5948 | " Clamp Screw, use 51460F..... |
| 52078 | 5889 | Rotating Hook with 40274, 40398, two 1253C and three each 1053E and 1367E, use 52089..... |
| *52091 | ---- | Rotating Hook 52089 with 40408..... |
| 52124 | ---- | " " 52089 with 52442, for 96-3, 96-10 and 96-12 Machines, use 52478. |
| *52441 | ---- | Rotating Hook 52440 with 52442, use 52480 |
| 2777 | 5235 | Rock Shaft complete for 52320, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242.. |

| No. | Plate | Name |
|--------|-------|---|
| 40431 | ---- | Rotating Hook Bobbin Case for 40395, use 52472..... |
| 40395 | 5889 | Rotating Hook Bobbin Case complete for 40408 and 52442, Nos. 591F, 592E, 1380E 2975, 40393, 40394 and 40431, use 52473..... |
| 40408 | ---- | Rotating Hook Bobbin Case 40395 with 40396..... |
| 52442 | ---- | Rotating Hook Bobbin Case 40395 with 52443, for 52124 and 52441, use 127099..... |
| 40398 | 5869 | Rotating Hook Bobbin Case Holder, for 40408..... |
| 52443 | 7697 | Rotating Hook Bobbin Case Holder, for 52442, use 127100..... |
| 40409 | 5869 | Rotating Hook Bobbin Case Latch Lever, for 40393, use 125320..... |
| 40398 | 5869 | Rotating Hook Thread Guard, for 52078... |
| 210958 | 5900 | Thread Retaining Collar, for 52379..... |
| 210993 | 5900 | " " Sleeve, for 52379..... |
| 52398 | 5900 | " " Spring, for 52379..... |
| 52378 | 5900 | " " Stud, for 52379..... |
| 52379 | ---- | Thread Retainer complete, Nos. 52378, 52398 210958 and 210993..... |
| 12411 | 5932 | Throat Plate, large needle hole, for 12389 and 12457, for 96-10 Machine..... |
| 12449 | ---- | Throat Plate, small needle hole, for 12389 and 12457, for 96-10 Machine..... |

Genuine Singer Needles should be used in Singer Machines.
These Needles and their Containers are marked with the Company's Trade Mark "SIMANCO." 1

Needles in Containers marked "For Singer Machines" are not Singer made needles. 2

NUMERICAL
LIST
OF PARTS

NUMERICAL LIST OF PARTS

| No. | Plate | Name |
|------|-------|--|
| 76D | 5875 | Lifting Lever Connecting Rod Joint Hinge Screw, for 52319 and 52320..... |
| 116E | 5875 | Arm Screw (back)..... |
| 121E | 7691 | " Shaft (horizontal) Gear Case Screw, for 52071..... |
| 121E | 7691 | Rotating Hook Shaft Gear Case Screw, for 52072..... |
| 144D | 5875 | Arm Shaft Screw, for 96-3 Machine..... |
| 144D | 5875 | " " (horizontal) Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 152F | 2834 | Bobbin Winder Stop Latch Finger Screw, for 60456..... |
| 157J | 7692 | Feed Lifting Rock Shaft Crank Clamping Screw, for 12376 and 52434..... |
| 157J | 7692 | Feed Rock Shaft Crank Clamping Screw, for 29633..... |
| 158C | 5943 | Bed Frame Cushion Screw, for 20067..... |
| 158E | 5943 | Feed Reverse Lever Hinge Screw Clamping Screw, for 52409..... |
| 171D | 5942 | Bobbin Winder Pulley Set Screw, for 41585 |
| 178E | 5875 | Bell Crank Bracket Screw, for 52319 and 52320..... |
| 180D | 5875 | Arm Top Cover Screw..... |
| 180D | 5875 | Bobbin Winder Arm Top Cover Screw, for 41348..... |
| 180D | 5875 | Bobbin Winder Tension Bracket Screw, for 41916..... |
| 181D | 5875 | Rotating Hook Belt Guard Screw, for 96-3 Machine..... |
| 185H | 5942 | Bobbin Winder Stop Latch Tripping Arm Clamping Screw, for 41588..... |
| 190J | 5875 | Face Plate Screw..... |
| 190J | 5875 | Presser Foot Screw..... |
| 196J | 5945 | Finger Guard Clamping Screw, for 36820.. |
| 200F | 2834 | Bobbin Winder Pulley Set Screw, for 41342 |
| 207D | 2834 | " " Frame Spring Screw, for 60456..... |
| 207E | 5948 | Needle Bar Connecting Stud Clamping Screw, for 24041..... |
| 208E | 5942 | Thread Unwinder Thread Guide Rod Screw, for 225324..... |
| 210D | 5875 | Balance Wheel Oil Cover Screw..... |
| 211E | 5943 | Bed Frame Hinge Connection Cap Screw, for 19398..... |
| 219D | 5875 | Arm Side Cap Screw..... |
| 223C | 5936 | Slack Thread Regulator Set Screw, for 52338..... |
| 226J | 5900 | Face Plate Thread Guard (lower) Screw, for 52052..... |

| No. | Plate | Name |
|------|-------|--|
| 226J | 5900 | Face Plate Thread Guard (upper) Screw, for 52052..... |
| 229J | 5948 | Needle Bar Thread Guard Screw..... |
| 248A | 7691 | Clamp Stop Motion Clamp Stop Screw, for 52405..... |
| 256J | 7694 | Clamp Stop Motion Clamp Screw, for 52405. |
| 286D | 5875 | Arm Side Cover Thumb Screw, for 96-12 and 96-16 Machines, obsolete, use 51224W. |
| 307C | 5875 | Feed Lifting Rock Shaft Screw Center, for 96-3 Machine..... |
| 307C | 5875 | Feed Rock Shaft Screw Center, for 96-3 Machine..... |
| 313C | 5875 | Feed Bar Screw Center..... |
| 356C | 5875 | Rock Shaft Knee Arm Hub Set Screw, for 2766..... |
| 356C | 5875 | Rock Shaft Knee Plate Set Screw, for 2767 |
| 356C | 5875 | " " Lifting Bracket Hook Set Screw, for 6337..... |
| 356C | 5875 | Rock Shaft Lifting Bracket Set Screw, for 6337..... |
| 356C | 5875 | Rock Shaft Stop Dog Set Screw, for 2770.. |
| 375C | 7695 | Feed Connecting Link Hinge Screw..... |
| 375C | 7695 | " Forked Connection Hinge Screw..... |
| 375C | 7695 | " Lifting Rock Shaft Connecting Rod Hinge Screw..... |
| 389D | 5942 | Spool Holder Base Screw, for 96-10 Machine..... |
| 418E | 2834 | Bobbin Winder Tension Screw Stud, for 27303..... |
| 432C | 5898 | Arm Shaft (upright) Bushing (lower) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 435C | 7691 | Arm Shaft Flanged Bushing (front) Set Screw, for 96-3 Machine..... |
| 435C | 7691 | Arm Shaft (horizontal) Flanged Bushing (front) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 435C | 7691 | Thread Take-up Lever Link Hinge Pin Set Screw..... |
| 446C | 5942 | Feed and Feed Lifting Eccentric Set Screw, for 20233..... |
| 447C | 5898 | Rotating Hook Shaft Bushing (back) Set Screw, for 96-3 Machine..... |
| 448C | 5875 | Arm Shaft Flanged Bushing (back) Set Screw, for 96-3 Machine..... |
| 448C | 5875 | Arm Shaft (horizontal) Flanged Bushing (back) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 448C | 5875 | Balance Wheel Set Screw, for 52005 and 52081..... |
| 448C | 5875 | Feed and Feed Lifting Eccentric Set Screw, for 52406..... |

| No. | Plate | Name |
|-------|-------|---|
| 448C | 5875 | Lifting Lever Pin Set Screw, for 12237.. |
| 448C | 5875 | Thread Take-up Spring Regulator Set Screw..... |
| 453C | 5936 | Presser Bar Guide Bracket Set Screw, for 52338..... |
| 457C | 5942 | Bobbin Winder Frame Hinge Pin Set Screw, for 41583..... |
| 457C | 5942 | Bobbin Winder Stop Latch Hinge Stud Set Screw, for 41913..... |
| 460C | 7691 | Bobbin Winder Tension Stud Set Screw, for 41591..... |
| 460C | 7691 | Thread Retainer Set Screw..... |
| 591F | 5869 | Rotating Hook Bobbin Case Tension Regulating Screw, for 40395 and 52481... |
| 592E | 5869 | Rotating Hook Bobbin Case Latch Stop Screw, for 40395 and 52473..... |
| 665J | 5892 | Presser Foot Spring Guide Screw, for 36465..... |
| 698J | 5875 | Pressure Regulating Thumb Screw..... |
| 689C | 5836 | Presser Bar Lifter Screw..... |
| 691F | 5875 | Throat Plate Screw..... |
| 704J | 5869 | Rotating Hook Bobbin Case Holder Position Bracket Screw..... |
| 725J | 5875 | Bed Slide Spring Screw, for 12432..... |
| 732D | 5875 | Guide Thumb Screw, for 96-10 Machine.... |
| 766D | 5875 | Lifting Lever Link Hinge Screw, for 52319 and 52320..... |
| 775E | 5948 | Needle Bar Connecting Link Cap Screw... |
| 794E | 5948 | " " " " Adjusting Screw, for 24040..... |
| 802D | 5875 | Lifting Lever Hinge Screw, for 52319 and 52320..... |
| 808F | 5948 | Needle Clamp Screw, obsolete, use 51460F.. |
| 818D | 5897 | Feed Regulator Thumb Screw, for 96-3 and 96-10 Machines..... |
| 854E | 5942 | Arm Screw (front)..... |
| 853C | 5875 | Needle Bar Crank Set Screw, for 24052 and 52436, obsolete..... |
| 880E | 7697 | Bobbin Winder Screw, for 41915..... |
| 966E | 7691 | Feed Lifting Rock Shaft Connecting Rod Cap Screw, for 12430 and 127156..... |
| 1036C | 5948 | Arm Shaft (horizontal) Gear Set Screw, for 52060..... |
| 1036C | 5948 | Thread Take-up Crank Set Screw, for 24052 52436 and 127222..... |
| 1037C | 5948 | Thread Take-up Crank Position Screw, for 24052, 52436 and 127222..... |
| 1053E | 5869 | Rotating Hook Thread Guard Screw, for 52076 and 52123..... |
| 1065C | 5875 | Needle Bar Crank Position Screw, for 24052, 52436 and 127222..... |
| 1128E | 7695 | Feed Regulator Hinge Screw..... |

| No. | Plate | Name |
|-------|-------|---|
| 1133E | 5948 | Needle Bar Bushing (lower) Set Screw... |
| 1133E | 5948 | " " " (upper) Set Screw... |
| 1143C | 7697 | Rotating Hook Shaft Bushing (back) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 1147C | 7698 | Rotating Hook Belt Pulley (lower) Set Screw, for 52048..... |
| 1148C | 5898 | Rotating Hook Shaft Bushing (front) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 1149C | 5875 | Arm Shaft (upright) Bushing (upper) Set Screw, for 96-10, 96-12 and 96-16 Machines..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (lower) Set Screw, for 56013..... |
| 1253C | 5869 | Arm Shaft (upright) Gear (upper) Set Screw, for 56101..... |
| 1253C | 5869 | Rotating Hook Set Screw, for 52076 and 52121..... |
| 1253C | 5869 | Rotating Hook Shaft Gear Set Screw, for 56013..... |
| 1362C | 5942 | Rotating Hook Belt Pulley (upper) Set Screw, for 52050..... |
| 1367E | 5869 | Rotating Hook Section Screw, for 52076, 52089, 52440 and 127060..... |
| 1380E | 5869 | Rotating Hook Bobbin Case Tension Spring Screw, for 40395 and 52481.. |
| 1429D | 2834 | Bobbin Winder Frame Hinge Screw, for 60456..... |
| 1430D | 2834 | Bobbin Winder Stop Latch Hinge Screw, for 60456..... |
| 1430D | 2834 | Bobbin Winder Stop Latch Lever Hinge Screw, for 60456..... |
| 1513J | 5942 | Feed Lifting Rock Shaft Screw Center Nut..... |
| 1513J | 5942 | Feed Rock Shaft Screw Center Nut..... |
| 1518J | 7695 | " Connecting Link Hinge Screw Nut... |
| 1518J | 7695 | " Forked Connection Hinge Screw Nut. |
| 1518J | 7695 | " Lifting Rock Shaft Connecting Rod Hinge Screw Nut..... |
| 1519J | 5942 | Feed Bar Screw Center Nut..... |
| 1520J | 5936 | Presser Bar Lifter Screw Nut..... |
| 1521J | 5942 | Lifting Lever Connecting Rod Lock Nut, for 52319 and 52320..... |
| 1550H | 2834 | Bobbin Winder Stop Latch Hinge Screw Nut, for 60456..... |
| 1560C | 7692 | Tension Regulating Thumb Nut, for 52098. |
| 1562J | 2834 | Bobbin Winder Tension Regulating Thumb Nut, for 27308..... |
| 1811 | 7695 | Feed Reverse Lever Roller and Stud, for 52409, obsolete, use 51846..... |
| 1813 | 7692 | Feed Lifting Rock Shaft Crank Roller and Stud, for 12376 and 52434..... |

| No. | Plate | Name |
|------|-------|---|
| 2020 | 7694 | Clamp Stop Motion Clamp Washer, for 52405 |
| 2022 | 7692 | " " " Flanged Bushing Pin, for 96-12 Machine..... |
| 2102 | 7692 | Tension Disc, for 52397..... |
| 2103 | 7692 | " Spring, for 52397..... |
| 2106 | 2834 | Bobbin Winder Tension Thread Guide, for 27308..... |
| 2455 | 2834 | Bobbin Winder Tension Disc, for 27308 and 41592..... |
| 2763 | 819 | Rock Shaft, for 2777, 4880 and 12250,.... Nos. 2765 to 2767, for 2768 |
| 2765 | 5235 | Rock Shaft Knee Arm..... |
| 2766 | 5235 | " " " " Hub with 356C..... |
| 2767 | 5235 | " " " " Plate with 356C..... |
| 2768 | ---- | Rock Shaft Knee Arm complete for 2777 and 12250, Nos. 2765 to 2767..... |
| 2770 | 819 | Rock Shaft Stop Dog with 356C, for 2777, 4880 and 12250..... |
| 2777 | 5235 | Rock Shaft complete for 52320, Nos. 2763, 2768, 2770, 2778, 6337 and two 12242, obsolete..... |
| 2778 | 5235 | Rock Shaft Lifting Bracket Hook, for 2777 and 12250..... |
| 2974 | 5869 | Rotating Hook Bobbin Case Latch Lever Fulcrum Pin, for 40393..... |
| 2975 | 5869 | Rotating Hook Bobbin Case Latch Spring, for 40395 and 52473..... |
| 3033 | 7695 | Feed Connecting Link..... |
| 3039 | 7698 | " Regulator, for 96-3 Machine..... |
| 4307 | 5894 | Bed Slide Spring, for 12432..... |
| 4448 | 7692 | Arm Shaft (upright) Oil Tube (lower) for 52399, obsolete..... |
| 4448 | 7692 | Arm Shaft (upright) Oil Tube (upper) for 52399, obsolete..... |
| 4879 | 7694 | Chain Connecting Link, for 4885..... |
| 4680 | 819 | Rock Shaft complete for 52319, Nos. 2763, 2770, 7125, 12243 and two each 6337 and 12242..... |
| | | Nos. 4881 to 4884, for 4885 |
| 4881 | 819 | Treadle..... |
| 4882 | 7694 | " Shaft..... |
| 4883 | 7694 | " Spring..... |
| 4884 | 819 | " Stand..... |
| 4885 | 819 | Treadle complete for 52319, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16..... |
| 5596 | 7694 | Bell Crank, for 56848..... |
| 5598 | 7694 | Bell Crank complete for 52319 and 52320, Nos. 5735 and 56848..... |
| 5599 | 7694 | Bell Crank Bracket, for 56848..... |
| 5601 | 5943 | " " Hinge Pin, for 56848..... |
| 5670 | ---- | Chain, length 26 in. to 35 in., with 56864 and 56865, for 52319..... |

| No. | Plate | Name |
|--|-------|--|
| 5735 | 5943 | Bell Crank Spring, for 5598..... |
| 5990 | 7697 | Presser Bar Lifter, for 96-16 Machine.. |
| 6267 | 5900 | Hemmer Folder..... |
| 6337 | 819 | Rock Shaft Lifting Bracket with two 356C, for 2777, 4880 and 12250..... |
| 7125 | 819 | Rock Shaft Lifting Bracket Hook, for 4880..... |
| 7298 | 5900 | Presser Foot Hinge Pin, for 19336, 20270 and 52439..... |
| 7539 | ---- | Rock Shaft Hanger with two wood screws 1 in. No. 10, for 12250..... |
| 7958 | 7697 | Bobbin Winder Stop Latch Stop Pin, for 60845..... |
| 8879 | 5936 | Arm Spool Pin Washer (cloth)..... |
| 8879 | 5936 | Bobbin Winder Arm Top Cover Spool Pin Washer (cloth) for 41348..... |
| 8879 | 5936 | Bobbin Winder Tension Bracket Spool Pin Washer (cloth) for 41916..... |
| 8908 | 5901 | Wrench for 1519 and 1520 (Accessories). |
| 8909 | 5901 | " " 1513 and 1518 (Accessories). |
| 9331 | 2834 | Bobbin Winder Washer, for 41347..... |
| 10141 | 2834 | " " Tension Spring, for 27308. |
| 11119 | 5900 | Arm Oil Tube with 52045, for oiling 52022..... |
| 11167 | 5896 | Presser Bar Spring..... |
| 11170 | 5936 | " " " Washer..... |
| 11204 | 5943 | Thread Take-up Lever Link Hinge Pin.... |
| 11241 | 2833 | Bobbin Winder Spool Washer (cloth) for 27308..... |
| Nos. 12142 to 12144, for 96-10 Machine | | |
| 12142 | 5949 | Presser Foot, for 12370..... |
| 12143 | 5864 | " " " 20106..... |
| 12144 | 5864 | " " " 20117, 20138, 20147, 20151, 20158 and 20162..... |
| 12193 | 5894 | Arm Side Cover..... |
| 12237 | 5946 | Lifting Lever with 448C, for 52319 and 52320..... |
| 12240 | 5936 | Lifting Lever Pin, for 52319 and 52320.. |
| 12241 | 5936 | " " Link, for 52319 and 52320. |
| 12242 | 819 | Rock Shaft Hanger with two wood screws 1 in. No. 10, for 2777 and 4880..... |
| 12243 | 819 | Rock Shaft Lifting Bracket Hook, for 4880..... |
| 12250 | ---- | Rock Shaft complete for 52320, Nos. 2763, 2768, 2778, 6337 and two each 2770 and 7539..... |
| Nos. 12258 to 12261, for 96-10 Machine | | |
| 12258 | 5949 | Presser Foot (wide) for 20106..... |
| 12259 | 5949 | " " for 12425..... |
| 12260 | 5864 | " " " 12450, 20147 and 20348. |
| 12261 | 5864 | " " " 12481..... |
| 12327 | 5936 | " Bar Lifting and Releasing Lever Bracket..... |

| No. | Plate | Name |
|-------|-------|--|
| 12326 | 5936 | Tension Releasing Lever Spring..... |
| 12335 | 5949 | Presser Foot (narrow) for 20106, for 96-10 Machine..... |
| 12361 | 5943 | Machine Hinge Connection, for 44140..... |
| 12369 | 5932 | Feed Dog, for cloth, 12 teeth (12 teeth to the inch) for 96-10 Machine, obso- lete..... |
| 12370 | 778 | Feed Dog, for cloth, 15 teeth (16 teeth to the inch) for 96-10 Machine..... |
| 12376 | 7692 | Feed Lifting Rock Shaft Crank 52271 with 157J and 1813, for 44126 and 52385.. |
| 12379 | 7690 | Feed Rock Shaft, for 20333..... |
| 12391 | 5896 | Presser Bar (hollow)..... |
| 12398 | 5936 | Tension Releasing Lever Hinge Pin..... |
| 12403 | 5900 | Arm Spool Pin and Thread Eyelet, for 52043..... |
| 12403 | 5900 | Bobbin Winder Arm Top Cover Spool Pin and Thread Eyelet, for 52043..... |
| 12403 | 5900 | Bobbin Winder Tension Bracket Spool Pin and Thread Eyelet, for 41592..... |
| 12405 | 5943 | Machine Rest, felt (Accessories)..... |
| 12411 | 5932 | Throat Plate, large needle hole, for 12369 and 12457, for 96-10 Machine, obso- lete..... |
| 12412 | 778 | Throat Plate, large needle hole, for 12370 for 96-10 Machine..... |
| 12416 | 5936 | Lifting Lever Connecting Rod Joint, for 52319 and 52320..... |
| 12425 | 5932 | Feed Dog, for cloth, for 96-10 Machine.... |
| 12426 | 5932 | Throat Plate, large needle hole, for 12425 for 96-10 Machine..... |
| 12430 | 5896 | Feed Lifting Rock Shaft Connecting Rod with two 966E, obsolete, use 127156.. |
| 12431 | ---- | Bed Slide, for 12432..... |
| 12432 | 5894 | Bed Slide complete, Nos. 4307, 12431 and two 725J..... |
| 12449 | ---- | Throat Plate, small needle hole, for 12369 and 12457, for 96-10 Machine, obso- lete..... |
| 12450 | 5933 | Feed Dog, for cloth, 11 teeth (18 teeth to the inch) for 96-10 Machine..... |
| 12451 | ---- | Throat Plate, small needle hole, for 12450 and 20348, for 96-10 Machine..... |
| 12454 | 5900 | Arm Oil Tube with 132590, for oiling 52024, for 96-3, 96-12 and 96-16 Ma- chines..... |
| 12457 | 5932 | Feed Dog, for cloth, 16 teeth (16 teeth to the inch) for 96-10 Machine, obso- lete..... |
| 12464 | 5933 | Throat Plate, large needle hole, for 12450 and 20348, for 96-10 Machine..... |
| 12466 | ---- | Throat Plate, small needle hole, for 12425 for 96-10 Machine..... |

| No. | Plate | Name |
|-------|-------|--|
| 12474 | 5949 | Presser Foot, for 20138 and 20162, for 96-10 Machine..... |
| 12480 | 5894 | Arm Side Cap..... |
| 12481 | 778 | Feed Dog, for general work, 18 teeth (16 teeth to the inch) for 96-10 Machine..... |
| 12482 | ---- | Throat Plate, large needle hole, for 12481 for 96-10 Machine..... |
| 12483 | 778 | Throat Plate, small needle hole, for 12481 for 96-10 Machine..... |
| 14010 | 5943 | Bed Frame Hinge Plate Rivet, for 20067... |
| 15404 | ---- | Trade Mark..... |
| 15405 | ---- | " " Rivet..... |
| 16532 | 5943 | Arm Dowel Pin..... |
| 16555 | 5943 | Bed Frame Hinge Plate, for 20067..... |
| 19219 | 5943 | " " Cushion (leather) for 20067... |
| 19220 | 5943 | " " " Spring, for 20067..... |
| 19223 | ---- | Presser Foot Shank, for 20311..... |
| 19226 | 5943 | Bed Frame Hinge Connection, for 19398... |
| 19334 | ---- | Presser Foot Plate, for 19336..... |
| 19335 | ---- | " " Shank, for 19336..... |
| 19336 | 5938 | Presser Foot (hinged) complete for 12370 for 96-10 Machine, Nos. 7298, 19334 and 19335..... |
| 19397 | 5943 | Bed Frame Hinge Connection Cap, for 19398 |
| 19398 | ---- | " " " " 19226 with 211E and 19397, for 20067..... |
| 19405 | ---- | Throat Plate, small needle hole, for 20117 |
| 19409 | ---- | " " large needle hole, for 20138 and 20162, for 96-10 Machine..... |
| 19410 | 1263 | Throat Plate, small needle hole, for 20138 and 20162, for 96-10 Machine..... |
| 19412 | 5933 | Throat Plate, large needle hole, for 20147 for 96-10 Machine..... |
| 19413 | ---- | Throat Plate, small needle hole, for 20147 for 96-10 Machine..... |
| 19415 | 1262 | Throat Plate, large needle hole, for 20151 for 96-10 Machine..... |
| 19416 | ---- | Throat Plate, small needle hole, for 20151 for 96-10 Machine..... |
| 19418 | 1262 | Throat Plate, large needle hole, for 20158 |
| 19419 | ---- | " " small needle hole, for 20158 |
| 19497 | 5933 | " " large needle hole, for 20117 |
| 20021 | 5235 | Drip Pan with four 1 in. wire nails, obsolete, use 44212..... |
| 20067 | 819 | Bed Frame with two each 16555, 19398, four each 19219, 19220, six each 14010, wood screws 1 1/4 in. No. 12 and eight 158C..... |
| 20106 | 1259 | Feed Dog, for cloth, for 96-10 Machine.... |
| 20107 | 1259 | Throat Plate, small needle hole, for 20106 for 96-10 Machine..... |

| No. | Plate | Name |
|-------|-------|---|
| 20117 | 5933 | Feed Dog, for shirt work, beveled for hammer, 18 teeth (16 teeth to the inch) for 96-10 Machine..... |
| 20119 | 1259 | Feed Dog, for heavy work on duck overalls etc., for 96-10 Machine..... |
| 20120 | 1259 | Throat Plate, large oblong needle hole, for 20119, for 96-10 Machine..... |
| 20138 | 1263 | Feed Dog, for shirt work, beveled for hammer, 13 teeth (12 teeth to the inch) for 96-10 Machine..... |
| 20147 | 5933 | Feed Dog, 12 teeth (14 teeth to the inch) for 96-10 Machine..... |
| 20151 | 1262 | Feed Dog, for shirt work, beveled for hammer, 13 teeth (14 teeth to the inch) for 96-10 Machine..... |
| 20158 | 1262 | Feed Dog, for shirt work, 17 teeth (16 teeth to the inch) for 36162, 36434, 120898 and 120911, for 96-10 Machine |
| 20162 | 1263 | Feed Dog, for shirt work, beveled for hammer, 17 teeth (18 teeth to the inch) for 96-10 Machine..... |
| 20187 | ---- | Throat Plate, small oblong needle hole, for 20119, for 96-10 Machine..... |
| 20268 | ---- | Presser Foot Plate, for 20270..... |
| 20269 | ---- | " " Shank, for 20270..... |
| 20270 | 5938 | Presser Foot (hinged) complete for 20106 for 96-10 Machine, Nos. 7298, 20268 and 20269..... |
| 20283 | 5947 | Feed and Feed Lifting Eccentric with 446C, for 96-3 and 96-10 Machines... |
| 20284 | 5947 | Feed Forked Connection, for 96-3 and 96-10 Machines..... |
| 20310 | ---- | Presser Foot Plate, for 20311..... |
| 20311 | 5949 | Presser Foot (hinged) complete for 20117 20138, 20147, 20151, 20158 and 20162, for 96-10 Machine, Nos. 19223, 20310 and 62527..... |
| 20315 | ---- | Throat Plate, large needle hole, for 20106 for 96-10 Machine..... |
| 20333 | ---- | Feed Rock Shaft complete, for 96-3 Machine, Nos. 12379 and 29633..... |
| 20342 | 5949 | Presser Foot, for 12450 and 20348, for 96-10 Machine..... |
| 20343 | 5949 | Presser Foot with guide on bottom to the right of needle hole, for 12450 and 20348, for 96-10 Machine..... |
| 20344 | ---- | Presser Foot Plate, for 20346..... |
| 20345 | ---- | " " Shank, for 20346..... |
| 20346 | 5949 | Presser Foot (spring hinged) complete for 20117, 20138, 20147, 20151, 20158 and 20162, for 96-10 Machine, Nos. 20344, 20345, 26231 and 62527..... |

| No. | Plate | Name |
|-------|-------|--|
| 20348 | 5933 | Feed Dog, for chiffon, 22 teeth (36 teeth to the inch) for 96-10 Machine..... |
| 20458 | 5949 | Presser Foot, for 44136, for 96-10 Machine |
| 24036 | 5896 | Feed and Feed Lifting Eccentric Sleeve, obsolete, use 127152..... |
| 24040 | 5948 | Needle Bar Connecting Link with 794E.... |
| 24041 | 5948 | " " " Stud with 207E.... |
| 24052 | 7694 | " " Crank with 1036C, 1037C and 1065C, for 96-3, 96-10 and 96-12 Machines..... |
| 24131 | 5900 | Arm Oil Tube with 52045, for oiling 127152..... |
| 24131 | 5900 | Arm Oil Tube with 52045, for oiling 127156, for 52043..... |
| 24131 | 5900 | Bobbin Winder Arm Top Cover Oil Tube with 52045, for 52043..... |
| 24131 | 5900 | Bobbin Winder Tension Bracket Oil Tube with 52045, for 41592..... |
| 24297 | 5896 | Balance Wheel Oil Cover, for 96-3 Machine |
| 24544 | ---- | Presser Foot Plate, for 24983..... |
| 24982 | ---- | " " Shank, for 24983..... |
| 24983 | 5867 | Presser Foot (spring hinged) complete, for 12425 and 20119, for 96-10 Machine, Nos. 24544, 24982, 26231 and 62527..... |
| 25446 | 5900 | Bobbin Winder Screw Washer, for 41915.... |
| 25866 | 6449 | Guide, for 96-10, 96-12 and 96-16 Machines |
| 25878 | 6449 | " " 96-3 Machine..... |
| 25888 | 5900 | Hemmer Tongue..... |
| 26026 | 5901 | Screw Driver, large (Accessories)..... |
| 26231 | 5900 | Presser Foot Spring, for 20346, 24983, 52427 and 52439..... |
| 26485 | 5901 | Screw Driver, small (Accessories)..... |
| 26603 | 7696 | Feed Dog, for 96-12 Machine..... |
| 26605 | 7696 | Throat Plate, large needle hole, for 26603 28360 and 120001, for 96-12 and 96-16 Machines..... |
| 26606 | ---- | Throat Plate, small needle hole, for 26603 28360 and 120001, for 96-12 and 96-16 Machines..... |
| 27306 | 2834 | Bobbin Winder Spool Pin, for 27308..... |
| 27307 | 2833 | " " " Stand, for 27308.... |
| 27308 | 2833 | Bobbin Winder Spool Stand complete for 41348, Nos. 418E, 1562J, 2106, 10141, 11241, 27306, 27307 and two each 2455 and wood screws 1 in. No. 10..... |
| 27739 | ---- | Thread Unwinder Thread Cone (wood) for large cones, for 225258..... |
| 28360 | 7696 | Feed Dog (15 conical teeth) for 96-12 Machine..... |
| 29532 | 5948 | Needle Bar Oil Cup, for 52305 and 52435.. |
| 29534 | 7698 | Presser Foot, for 96-3 Machine..... |

| No. | Plate | Name |
|-------|-------|---|
| 29633 | 7692 | Feed Rock Shaft Crank with 157J, for 20333 and 52387..... |
| 32572 | 7692 | Tension Releasing Disc, for 52397..... |
| 32574 | 7692 | " " Pin, for 52397..... |
| 34105 | 5902 | Bobbin Winder Frame Hinge Pin, for 60845. |
| 35682 | ---- | Hemmer (foot) 1/8 in. hem, with guide on bottom to the right of needle hole. |
| 35710 | 1252 | Hemmer (foot) 3/32 in. hem, with guide on bottom to the right of needle hole. |
| 35711 | 1252 | Feed Dog, for 35682, 35710, 35997, 36072, 36309 and 36524..... |
| 35712 | 1252 | Throat Plate, small needle hole, for 35711 |
| 35997 | ---- | Hemmer (foot) 3/16 in. hem, with guide on bottom to the right of needle hole. |
| 36072 | ---- | Hemmer (foot) 1/4 in. hem, with guide on bottom to the right of needle hole. |
| 36118 | ---- | Hemmer (foot) 3/32 in. hem, obsolete, use 120938..... |
| 36119 | 5881 | Hemmer (foot) 1/8 in. hem, obsolete, use 120803..... |
| 36120 | ---- | Hemmer (foot) 5/32 in. hem, obsolete, use 120804..... |
| 36121 | ---- | Hemmer (foot) 3/16 in. hem, obsolete, use 120805..... |
| 36122 | ---- | Hemmer (foot) 7/32 in. hem..... |
| 36162 | ---- | " " 3/32 in. hem, for China silk, etc..... |
| 36309 | ---- | Hemmer (foot) 7/32 in. hem, with guide on bottom to the right of needle hole. |
| 36413 | ---- | Hemmer (foot) plain bottom, 1/16 in. hem. |
| 36414 | ---- | " " " " 3/32 in. hem. |
| 36415 | 5881 | " " " " 1/8 in. hem, obsolete, use 120803..... |
| 36416 | ---- | Hemmer (foot) plain bottom, 3/16 in. hem. |
| 36432 | 5861 | " " 1/8 in. hem, for China silk, etc., obsolete, use 120898..... |
| 36433 | ---- | Hemmer (foot) 5/32 in. hem, for China silk etc., obsolete, use 120911..... |
| 36434 | ---- | Hemmer (foot) 3/16 in. hem, for China silk etc..... |
| 36464 | 5892 | Presser Foot Spring Guide, for 36465.... |
| 36465 | 5892 | " " (right hand, spring guide) with 665J and 36464, for 1/32 in. to 5/16 in. gauge..... |
| 36471 | 5881 | Hemmer (foot) plain bottom, 1/8 in. hem, slotted for lace, obsolete, use 120837..... |
| 36480 | ---- | Hemmer (foot) plain bottom, 5/32 in. hem. |
| 36524 | ---- | " " 5/32 in. hem, with guide on bottom to the right of needle hole. |
| 36574 | 5945 | Presser Foot, for 36575..... |
| 36575 | 5945 | " " 36574 with 36576 and two 50202J..... |

| No. | Plate | Name |
|-------|-------|---|
| 36576 | 5945 | Presser Foot Finger Guard, for 36575.... |
| 36749 | ---- | Henner (foot) 1/4 in. hem, obsolete, use 120806..... |
| | Nos. | 36818 to 36820, for 36821 |
| 36818 | 5945 | Finger Guard..... |
| 36819 | 5945 | " " Friction Washer..... |
| 36820 | 5945 | " " Holder with 196J..... |
| 36821 | 5945 | Finger Guard complete, Nos. 36818 to 36820 and 50316J..... |
| 40258 | 5935 | Rotating Hook Belt, for 96-3 Machine.... |
| 40263 | 7698 | " " " Pulley (upper) Stud, for 52050..... |
| 40264 | 5869 | Rotating Hook Bobbin..... |
| 40274 | 5869 | " " Section, for 52076, 52089 and 127060..... |
| 40392 | 5869 | Rotating Hook Bobbin Case Latch, for 40393..... |
| 40393 | ---- | Rotating Hook Bobbin Case Hinge, for 40395 and 52473, Nos. 2974, 40392 and 125320..... |
| 40394 | 5869 | Rotating Hook Bobbin Case Tension Spring for 40395 and 52481..... |
| 40395 | 5869 | Rotating Hook Bobbin Case complete for 40408 and 52442, Nos. 591F, 592E, 1380E 2975, 40393, 40394 and 40431, obsolete use 52473..... |
| 40396 | 5869 | Rotating Hook Bobbin Case Holder, for 40408, obsolete..... |
| 40398 | 5869 | Rotating Hook Thread Guard, for 52076, ob- solete..... |
| 40408 | ---- | Rotating Hook Bobbin Case 40395 with 40396, for 52091, obsolete..... |
| 40409 | 5869 | Rotating Hook Bobbin Case Latch Lever, for 40393, obsolete, use 125320.... |
| 40431 | ---- | Rotating Hook Bobbin Case, for 40395, ob- solete, use 52472..... |
| 41339 | 2833 | Bobbin Winder Base, for 60456..... |
| 41340 | 2833 | " " Frame, for 60456..... |
| 41341 | 2833 | " " " Spring, for 60456.... |
| 41342 | 2833 | " " Pulley with 200F, for 60456 |
| 41343 | 2834 | " " Spindle, for 60456..... |
| 41344 | 2834 | " " Stop Latch, for 60456..... |
| 41345 | 2834 | " " " " Finger, for 60456..... |
| 41346 | 2834 | Bobbin Winder Stop Latch Lever, for 60456..... |
| 41347 | 2833 | Bobbin Winder for 41348, Nos. 60456 and two each 9331 and wood screws 1 in. No. 10 R.H.B..... |
| 41348 | ---- | Bobbin Winder (swinging automatic, right hand) complete, Nos. 27308 and 41347. |
| 41583 | 5902 | Bobbin Winder Frame with 457C, for 60845. |

| No. | Plate | Name |
|--------|-------|--|
| 41585 | 5902 | Bobbin Winder Pulley with 171D, for 60845 |
| 41586 | 5902 | " " Spindle, for 60845..... |
| 41587 | 5902 | " " Stop Latch, for 60845..... |
| 41588 | 5902 | " " " " Tripping Arm with 185H, for 60845..... |
| 41591 | 5902 | Bobbin Winder Tension Bracket with 460C, for 41592..... |
| 41592 | 5902 | Bobbin Winder Tension Bracket complete for 41916, Nos. 12403, 24131, 41591, 41593 to 41595 and two 2455..... |
| | Nos. | 41593 to 41595, for 41592 |
| 41593 | 5936 | Bobbin Winder Tension Spring..... |
| 41594 | 5936 | " " " Stud..... |
| 41595 | 5936 | " " " Thread Guide..... |
| 41913 | 5902 | " " Bracket with 457C, for 60845..... |
| 41914 | 5902 | Bobbin Winder Frame Spring, for 60845.... |
| 41915 | 5902 | " " 60845 with 880E and 25446, for 41916..... |
| 41916 | ---- | Bobbin Winder (swinging automatic, left hand) complete, Nos. 41592 and 41915. |
| 42614 | 5902 | Bobbin Winder Stop Latch Hinge Stud, for 60845..... |
| 43921 | 5896 | Arm Shaft Flanged Bushing (back) for 96-3 Machine..... |
| 43944 | 5936 | Tension Releasing Lever, for 96-3, 96-10 and 96-12 Machines..... |
| 44125 | 7690 | Feed Lifting Rock Shaft, for 44126..... |
| 44126 | ---- | Feed Lifting Rock Shaft complete, for 96-3 Machine, Nos. 12376 and 44125. |
| 44136 | 5805 | Feed Dog, for 96-3 and 96-10 Machines... |
| 44137 | 5805 | Throat Plate, large needle hole, for 44136 for 96-3 and 96-10 Machines..... |
| 44138 | ---- | Throat Plate, small needle hole, for 44136 for 96-10 Machine..... |
| 44139 | 5943 | Machine Hinge Plate, for 44140..... |
| 44140 | ---- | Machine Hinge complete, Nos. 12361, 44139 and wood screw 1 1/4 in. No. 14 (Ac- cessories)..... |
| 44212 | ---- | Drip Pan with four 1 in. wire nails..... |
| 50053D | 7698 | Arm Side Cover Thumb Screw, for 96-3 and 96-10 Machines..... |
| 50083C | 5897 | Feed Connecting Link Hinge Stud Set Screw, for 52074 and 52408..... |
| 50117E | 5875 | Feed Dog Screw..... |
| 50145E | 7698 | Rotating Hook Shaft Bushing (front) Position Screw, for 96-3 Machine... |
| 50190D | 7691 | Face Plate Thumb Screw..... |
| 50190D | 7691 | Guide Thumb Screw, for 96-3, 96-12 and 96-16 Machines..... |
| 50191C | 7691 | Feed Lifting Rock Shaft Screw Center, for 96-10, 96-12 and 96-16 Machines..... |

| No. | Plate | Name |
|--------|-------|--|
| 50191C | 7691 | Feed Rock Shaft Screw Center, for 96-10, 96-12 and 96-16 Machines..... |
| 50193J | 7695 | Feed Regulating Stud Head Cap Screw, for 96-12 and 96-16 Machines..... |
| 50200C | 7695 | Feed Connecting Link Hinge Stud Set Screw, obsolete, use 50083C..... |
| 50202J | 5945 | Presser Foot Finger Guard Screw, for 36575..... |
| 50234E | 7691 | Arm Shaft (horizontal) Gear Case Plug Screw, for 52071..... |
| 50234E | 7691 | Rotating Hook Shaft Gear Case Plug Screw for 52072..... |
| 50304C | 7692 | Tension Stud, for 52098..... |
| 50305C | 7692 | " " Set Screw, for 52083..... |
| 50311C | 7691 | Clamp Stop Motion Flanged Bushing Set Screw, for 52404..... |
| 50316J | 5945 | Finger Guard Hinge Screw, for 36821..... |
| 50338E | 7695 | Feed Regulating Stud, for 96-12 and 96-16 Machines..... |
| 50339D | 7695 | Feed Reverse Lever Hinge Screw, for 96-12 and 96-16 Machines..... |
| 51224W | ---- | Arm Side Cover Thumb Screw, for 96-12 and 96-16 Machines..... |
| 51460F | ---- | Needle Clamp Screw, for 52307..... |
| 51846 | ---- | Feed Reverse Lever Roller and Stud, for 52409..... |
| 52005 | 5893 | Balance Wheel (power) light rim, 2 3/16 in. pulley, with two 448C..... |
| 52011 | 5896 | Feed Bar, for 96-3, 96-10 and 96-12 Machines, obsolete, use 52452..... |
| 52014 | 5948 | Needle Bar Bushing (upper) for 96-3, 96-10 and 96-12 Machines..... |
| 52016 | 5936 | Presser Bar Lifter, for 96-3, 96-10 and 96-12 Machines..... |
| 52018 | 5869 | Rotating Hook Bobbin Case Holder Position Bracket..... |
| 52021 | 5948 | Thread Take-up Crank, for 96-3, 96-10 and 96-12 Machines..... |
| | | Nos. 52022 to 52024, for 52025 |
| 52022 | 5948 | Thread Take-up Lever with 52130..... |
| 52023 | 5948 | " " " Hinge Pin..... |
| 52024 | 5948 | " " " Link..... |
| 52025 | ---- | Thread Take-up Lever complete, Nos. 52022 to 52024..... |
| 52027 | 7692 | Thread Guard (side of arm) for 96-3, 96-10 and 96-12 Machines..... |
| 52028 | 7694 | Lifting Lever Connecting Rod, for 52319 and 52320..... |
| 52037 | 5935 | Rotating Hook Belt Guard, for 96-3 Machine..... |
| 52039 | 7698 | Rotating Hook Shaft Bushing (front) for 96-3 Machine..... |

| No. | Plate | Name |
|-------|-------|--|
| 52042 | 5896 | Arm Top Cover, for 52043..... |
| 52042 | 5896 | Bobbin Winder Arm Top Cover, for 52043.. |
| 52043 | 5896 | Arm Top Cover 52042 with 12403 and 24131 |
| 52043 | 5896 | Bobbin Winder Arm Top Cover 52042 with 12403 and 24131, for 41348..... |
| 52044 | 7698 | Rotating Hook Shaft Bushing (back) for 96-3 Machine..... |
| 52045 | 5898 | Arm Oil Tube Packing (cotton) for 11119, 24131 and 52084..... |
| 52045 | 5898 | Bobbin Winder Tension Bracket Oil Tube Packing (cotton) for 24131..... |
| 52045 | 5898 | Rotating Hook Shaft Bushing (back) Packing (cotton)..... |
| 52045 | 5898 | Rotating Hook Shaft Bushing (front) Packing (cotton)..... |
| 52046 | 5947 | Spool Holder Base, for 52047..... |
| 52047 | 5947 | Spool Holder complete, for 96-10 Machine, Nos. 52046, 200079H and 204296..... |
| 52048 | 5888 | Rotating Hook Belt Pulley (lower) steel, with two 1147C and sixteen 52049, for 96-3 Machine..... |
| 52049 | 5888 | Rotating Hook Belt Pulley (lower) Stud for 52048..... |
| 52050 | 5888 | Rotating Hook Belt Pulley (upper) with 1362C and thirty 40263, for 96-3 Machine..... |
| 52051 | ---- | Face Plate, for 52052..... |
| 52052 | 5894 | Face Plate complete, Nos. 52051, 52053, 52170 and two 226J..... |
| 52053 | 5900 | Face Plate Thread Guard (lower) for 52052..... |
| 52059 | 5894 | Arm Shaft (horizontal) Flanged Bushing (back) for 96-10, 96-12 and 96-16 Machines, obsolete, use 52191..... |
| 52060 | 5898 | Arm Shaft (horizontal) Gear with two 1036C, for 96-10, 96-12 and 96-16 Machines..... |
| 52062 | 5898 | Arm Shaft (upright) for 96-10, 96-12 and 96-16 Machines..... |
| 52063 | 5894 | Balance Wheel Oil Cover, for 96-10, 96-12 and 96-16 Machines..... |
| 52071 | 5894 | Arm Shaft (horizontal) Gear Case (two pieces) with 121E and 50234E, for 96-10, 96-12 and 96-16 Machines..... |
| 52072 | 5894 | Rotating Hook Shaft Gear Case (two pieces) with 121E and 50234E, for 96-10, 96-12 and 96-16 Machines..... |
| 52073 | 5897 | Feed Connecting Link Hinge Stud, for 96-10, 96-12 and 96-16 Machines..... |
| 52074 | 5897 | Feed Regulator with 50083C, for 96-10 Machine..... |

| No. | Plate | Name |
|--------|-------|--|
| 52076 | 5869 | Rotating Hook with 40274,40398,two 1253C and three each 1053E and 1367E, obsolete, use 52089..... |
| 52078 | 5894 | Arm Shaft Flanged Bushing (front) for 96-3 Machine, obsolete, use 52196.. |
| 52078 | 5894 | Arm Shaft (horizontal) Flanged Bushing (front) for 96-10,96-12 and 96-16 Machines,obsolete,use 52196..... |
| 52081 | 5893 | Balance Wheel (stand) heavy rim, 2 11/16 in. pulley, with two 448C,for 52382 for 96-10 and 96-12 Machines..... |
| 52083 | 7692 | Thread Take-up Spring Regulator with 50305C, for 52397..... |
| 52084 | 5900 | Arm Oil Tube with 52045, for oiling 24040 for 96-10 Machine..... |
| 52089 | 5898 | Rotating Hook 52123 with 40274 and three 1367E,for 52091 and 52124 (For Agents Only)..... |
| 52090 | 5898 | Rotating Hook Thread Guard, for 52123... |
| *52091 | ---- | " " 52089 with 40408,obsolete. |
| 52098 | ---- | Tension Stud 50304C with 1560C,for 52397 |
| 52121 | ---- | Rotating Hook with three 1253C,for 52123 |
| 52123 | ---- | " " 52121 with 52090 and four 1053E,for 52089,52440 and 127060... |
| 52124 | ---- | Rotating Hook 52089 with 52442,for 96-3, 96-10 and 96-12 Machines, obsolete, use 52478..... |
| 52130 | ---- | Thread Take-up Lever Thread Eyelet Bushing, for 52022..... |
| 52170 | ---- | Face Plate Thread Guard (upper) for 52052..... |
| 52191 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) for 52192..... |
| 52192 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) 52191 with 52193 and 52194, for 96-10, 96-12 and 96-16 Machine. |
| 52193 | ---- | Arm Shaft Flanged Bushing (front) Oil Pad (inside) for 52196..... |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (inside) braided cotton, for 52192..... |
| 52193 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (inside) for 52196. |
| 52194 | ---- | Arm Shaft (horizontal) Flanged Bushing (back) Oil Pad (outside) felt, for 52192..... |
| 52195 | ---- | Arm Shaft Flanged Bushing (front) for 52196..... |
| 52195 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) for 52196..... |
| 52196 | ---- | Arm Shaft Flanged Bushing (front) 52195 with 52193 and 52198, for 96-3 Machine..... |

| No. | Plate | Name |
|--------|-------|---|
| 52196 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) 52195 with 52193 and 52198, for 96-10,96-12 and 96-16 Machines. |
| 52198 | ---- | Arm Shaft Flanged Bushing (front) Oil Pad (outside) for 52196..... |
| 52198 | ---- | Arm Shaft (horizontal) Flanged Bushing (front) Oil Pad (outside) for 52196 |
| *52271 | ---- | Feed Lifting Rock Shaft Crank,for 12376. |
| 52302 | 7690 | Arm Shaft, for 96-3 Machine..... |
| *52303 | ---- | Bed, for 96-3 Machine..... |
| 52304 | 5948 | Needle Bar (hollow) for 96-3 Machine.... |
| 52305 | 5948 | " " Bushing (lower) with 29532, for 96-3,96-10 and 96-12 Machines.. |
| 52306 | 5948 | Needle Bar Thread Guard..... |
| 52307 | 5948 | " Clamp with 51460F..... |
| 52308 | 5935 | Rotating Hook Shaft,for 96-3 Machine.... |
| 52319 | ---- | Foot Lifter complete,Nos.76D,766D,802D, 1521J,4880,4885,5598,5670,12237, 12240,12241,12416,52028 and two 178E..... |
| 52320 | ---- | Knee Lifter complete (power table) Nos. 76D,766D,802D,1521J,5598,12237, 12240,12241,12250,12416,52028 and two 178E..... |
| 52337 | 5936 | Slack Thread Regulator..... |
| 52338 | 5936 | Presser Bar Guide Bracket with 223C and 453C..... |
| 52359 | 5948 | Feed Regulator Thumb Screw Stop,for 96-3 and 96-10 Machines..... |
| 52378 | 5900 | Thread Retaining Stud,for 52379,obsolete |
| 52379 | ---- | Thread Retainer complete,Nos.52378,52398 21C958 and 210993,obsolete..... |
| *52381 | ---- | Arm with two 58015,for 96-10 Machine.... |
| 52382 | 5946 | " Shaft (horizontal) for 96-10,96-12 and 96-16 Machines..... |
| *52383 | ---- | Bed,for 96-10,96-12 and 96-16 Machines.. |
| 52384 | 5946 | Feed Lifting Rock Shaft,for 52385 and 52433..... |
| 52385 | ---- | Feed Lifting Rock Shaft complete,for 96-10 and 96-12 Machines,Nos.12376 and 52384..... |
| 52386 | 5946 | Feed Rock Shaft,for 52387..... |
| 52387 | ---- | Feed Rock Shaft complete,for 96-10,96-12 and 96-16 Machines,Nos.29633 and 52386..... |
| 52388 | 5946 | Rotating Hook Shaft,for 96-10,96-12 and 96-16 Machines..... |
| 52390 | ---- | Presser Foot Shank, for 52427..... |
| *52392 | ---- | Arm, for 96-3 Machine..... |
| 52394 | 5948 | Thread Take-up Spring, for 52397..... |
| 52397 | ---- | Tension complete,Nos.2103,32572,32574, 52083,52098,52394 and two 2102..... |

| No. | Plate | Name |
|---|-------|--|
| 52398 | 5900 | Thread Retaining Spring, for 52379, obsolete..... |
| *52399 | ---- | Arm with two 4448, for 96-12 and 96-16 Machines, obsolete, use 52432..... |
| 52400 | 7690 | Arm Shaft (horizontal) for 52405, for 96-12 Machine..... |
| 52401 | 7694 | Arm Shaft (horizontal) Flanged Bushing (back) for 52405, for 96-12 Machine. |
| *52402 | ---- | Bed, for 96-12 and 96-16 Machines, obsolete, use 52383..... |
| *52403 | ---- | Clamp Stop Motion Flanged Bushing, for 52404..... |
| 52404 | 7694 | Clamp Stop Motion Flanged Bushing 52403 with two 50311C, for 52405..... |
| 52405 | ---- | Clamp Stop Motion complete, for 96-12 Machine, Nos. 248A, 256J, 2020 and 52404. |
| Nos. 52406 to 52410, for 96-12 and 96-16 Machines | | |
| 52406 | 7694 | Feed and Feed Lifting Eccentric with 448C..... |
| 52407 | 7694 | Feed Forked Connection..... |
| 52408 | 7695 | " Regulator with 50083C..... |
| 52409 | 7695 | " Reverse Lever with 158E and 51846.. |
| 52410 | 7695 | " " " Hinge Screw Friction Washer..... |
| 52426 | ---- | Presser Foot Plate, for 52427..... |
| 52427 | 7696 | Presser Foot (spring hinged) complete for 96-12 Machine, Nos. 26231, 52390, 52426 and 62527..... |
| *52432 | ---- | Arm with two 56015, for 96-12 and 96-16 Machines..... |
| Nos. 52433 to 52441, for 96-16 Machine | | |
| 52433 | ---- | Feed Lifting Rock Shaft complete, Nos. 52384 and 52434..... |
| 52434 | 7697 | Feed Lifting Rock Shaft Crank with 157J and 1813, for 52433..... |
| 52435 | 7697 | Needle Bar Bushing (lower) with 29532... |
| 52436 | 7694 | " " Crank with 858C, 1036C, 1037C and 1065C, obsolete, use 127222..... |
| 52437 | ---- | Presser Foot Plate, for 52439..... |
| 52438 | ---- | " " Shank, for 52439..... |
| 52439 | 7697 | Presser Foot (spring hinged) complete, Nos. 7298, 26231, 52437 and 52438..... |
| 52440 | 7697 | Rotating Hook 52123 with 52444 and three 1367E, for 52480 (For Agents Only).. |
| *52441 | ---- | Rotating Hook 52440 with 52442, obsolete use 52480..... |
| 52442 | ---- | Rotating Hook Bobbin Case 40395 with 52443, for 52124 and 52441, obsolete use 127099..... |
| 52443 | 7697 | Rotating Hook Bobbin Case Holder, for 52442, obsolete, use 127100..... |
| 52444 | 7697 | Rotating Hook Section, for 52440..... |

| No. | Plate | Name |
|---|-------|--|
| 52445 | 7697 | Tension Releasing Lever, for 96-16 Machine..... |
| 52446 | 7697 | Thread Take-up Crank, for 96-16 Machine.. |
| 52448 | 7697 | Needle Bar Bushing (upper) for 96-16 Machine..... |
| 52452 | 7694 | Feed Bar..... |
| 52454 | 7698 | Thread Retainer..... |
| 52455 | 7698 | Needle Bar (hollow) for 96-10, 96-12 and 96-16 Machines..... |
| 52472 | ---- | Rotating Hook Bobbin Case, for 52481.... |
| 52473 | ---- | Rotating Hook Bobbin Case complete for 52478 and 127099, Nos. 592E, 2975, 40393 and 52481..... |
| *52475 | ---- | Rotating Hook Bobbin Case Locating Plate for 127100..... |
| *52476 | ---- | Rotating Hook Bobbin Case Locating Plate Rivet, for 127100..... |
| 52478 | ---- | Rotating Hook 127060 with 52473, for 96-3 96-10 and 96-12 Machines..... |
| 52480 | ---- | Rotating Hook 52440 with 127099..... |
| 52481 | ---- | " " Bobbin Case 52472 with 591F, 1380E and 40394, for 52473.... |
| 54897 | 5900 | Arm Shaft (horizontal) Front Bearing Oil Cup, for 96-10, 96-12 and 96-16 Machines..... |
| 56013 | 5898 | Arm Shaft (upright) Gear (lower) with two 1253C, for 96-10, 96-12 and 96-16 Machines..... |
| 56013 | 5898 | Rotating Hook Shaft Gear with two 1253C, for 96-10, 96-12 and 96-16 Machines. |
| 56015 | 5900 | Arm Shaft (upright) Oil Tube (lower) for 52381 and 52432..... |
| 56015 | 5900 | Arm Shaft (upright) Oil Tube (upper) for 52381 and 52432..... |
| 56017 | 7693 | Balance Wheel, 2 1/4 in. pulley, for 52405, for 96-12 Machine..... |
| Nos. 56032 to 56035, for 96-12 and 96-16 Machines | | |
| 56032 | 7695 | Feed Regulating Stud Head with 56033.... |
| 56033 | 7695 | " " " " Stop Pin, for 56032..... |
| 56034 | 7695 | Feed Regulating Stud Lock Pin..... |
| 56035 | 7695 | " " " " " Spring... |
| 56086 | 5900 | Face Plate Thread Guard (upper) obsolete use 52170..... |
| 56099 | 5898 | Arm Shaft (upright) Bushing (lower) for 96-10, 96-12 and 96-16 Machines..... |
| 56100 | 5898 | Arm Shaft (upright) Bushing (upper) for 96-10, 96-12 and 96-16 Machines..... |
| 56101 | 5898 | Arm Shaft (upright) Gear (upper) with two 1253C, for 96-10, 96-12 and 96-16 Machines..... |
| 56108 | 5898 | Rotating Hook Shaft Bushing (back) for 96-10, 96-12 and 96-16 Machines..... |

| No. | Plate | Name |
|---------|-------|--|
| 56107 | 5898 | Rotating Hook Shaft Bushing (front) for 96-10, 96-12 and 96-16 Machines..... |
| 56848 | ---- | Bell Crank 5596 with 5599 and 5601, for 5598..... |
| 56864 | ---- | Chain Hook (large) for 5670..... |
| 56885 | ---- | " " (small) for 5670..... |
| 60456 | ---- | Bobbin Winder, Nos. 152F, 207D, 1429D, 1550H, 41339 to 41346 and three 1430D, for 41347..... |
| 60845 | ---- | Bobbin Winder, Nos. 7958, 34105, 41583, 41585 to 41588, 41913, 41914 and 42614, for 41915..... |
| 62527 | 7698 | Presser Foot Hinge Pin, for 20311, 20346, 24983 and 52427..... |
| 120001 | 7696 | Feed Dog (spiked teeth) for 96-12 and 96-16 Machines..... |
| 120342 | ---- | Oiler with 120343 (Accessories)..... |
| 120343 | ---- | " Spout, 3 1/2 in. long, for 120342 (Accessories)..... |
| 120803 | ---- | Hemmer (foot) 1/8 in. hem..... |
| 120804 | ---- | " " 5/32 in. hem..... |
| 120805 | ---- | " " 3/16 in. hem..... |
| 120806 | ---- | " " 1/4 in. hem..... |
| 120837 | ---- | " " plain bottom, 1/8 in. hem, slotted for lace..... |
| 120898 | ---- | Hemmer (foot) 1/16 in. to 1/8 in. hem, for China silk, etc..... |
| 120911 | ---- | Hemmer (foot) 5/32 in. to 1/4 in. hem, for China silk, etc..... |
| 120938 | ---- | Hemmer (foot) 3/32 in. hem..... |
| 125320 | ---- | Rotating Hook Bobbin Case Latch Lever, for 40393..... |
| 127060 | ---- | Rotating Hook 52123 with 40274, 127100 and three 1367E, for 52478..... |
| 127099 | ---- | Rotating Hook Bobbin Case 52473 with 127100, for 52480 (For Agents Only) |
| 127100 | ---- | Rotating Hook Bobbin Case Holder with 52475 and two 52476, for 127060 and 127099..... |
| 127152 | ---- | Feed and Feed Lifting Eccentric Sleeve.. |
| 127158 | ---- | " Lifting Rock Shaft Connecting Rod with two 966E..... |
| 127222 | ---- | Needle Bar Crank with 1036C, 1037C and 1065C, for 96-16 Machine..... |
| 132590 | ---- | Arm Oil Tube Packing (wick) for 12454... |
| 150203 | ---- | Thread Unwinder Spool Rest Cushion (felt) for 225258..... |
| 200079H | 5942 | Spool Holder Base Wire Hinge Screw, for 52047..... |
| 200383C | ---- | Thread Unwinder Spool Rest Rod Set Screw for 202490..... |
| 201018C | ---- | Thread Unwinder Spool Rest Set Screw, for 225257..... |

| No. | Plate | Name |
|---------|-------|---|
| 201696J | ---- | Thread Unwinder Thread Guide Lock Nut, for 225258..... |
| 202490 | ---- | Thread Unwinder Spool Stand with 200383C for 225258..... |
| 204296 | 5947 | Spool Holder Base Wire, for 52047..... |
| 210958 | 5900 | Thread Retaining Collar, for 52379, obsolete..... |
| 210993 | 5900 | Thread Retaining Sleeve, for 52379, obsolete..... |
| 225257 | ---- | Thread Unwinder Spool Rest with 201018C, for 225258..... |
| 225258 | ---- | Thread Unwinder complete, for two spools or two large cones of thread, Nos. 201696J, 202490, 225257, 225324, 225326 225388, two each 150203, 225391 and three wood screws 7/8 in. No. 12... |
| 225322 | ---- | Thread Unwinder Thread Guide Rod Washer, for 225324..... |
| 225324 | ---- | Thread Unwinder Thread Guide Rod with 208E and 225322, for 225258..... |
| 225326 | ---- | Thread Unwinder Thread Guide Position Cup, for 225258..... |
| 225388 | ---- | Thread Unwinder Spool Rest Rod, for 225258..... |
| 225390 | ---- | Thread Unwinder Thread Cone Holder, for inverted cones, for 225258..... |
| 225391 | ---- | Thread Unwinder Thread Guide, for 225258. |

Genuine Singer Needles should be used
in Singer Machines.
These Needles and their Containers
are marked with the
Company's Trade Mark "SIMANCO." 1

Needles in Containers marked
"For Singer Machines"
are not Singer made needles. 2

ILLUSTRATIONS
OF
PARTS

PLATE 778—FULL SIZE

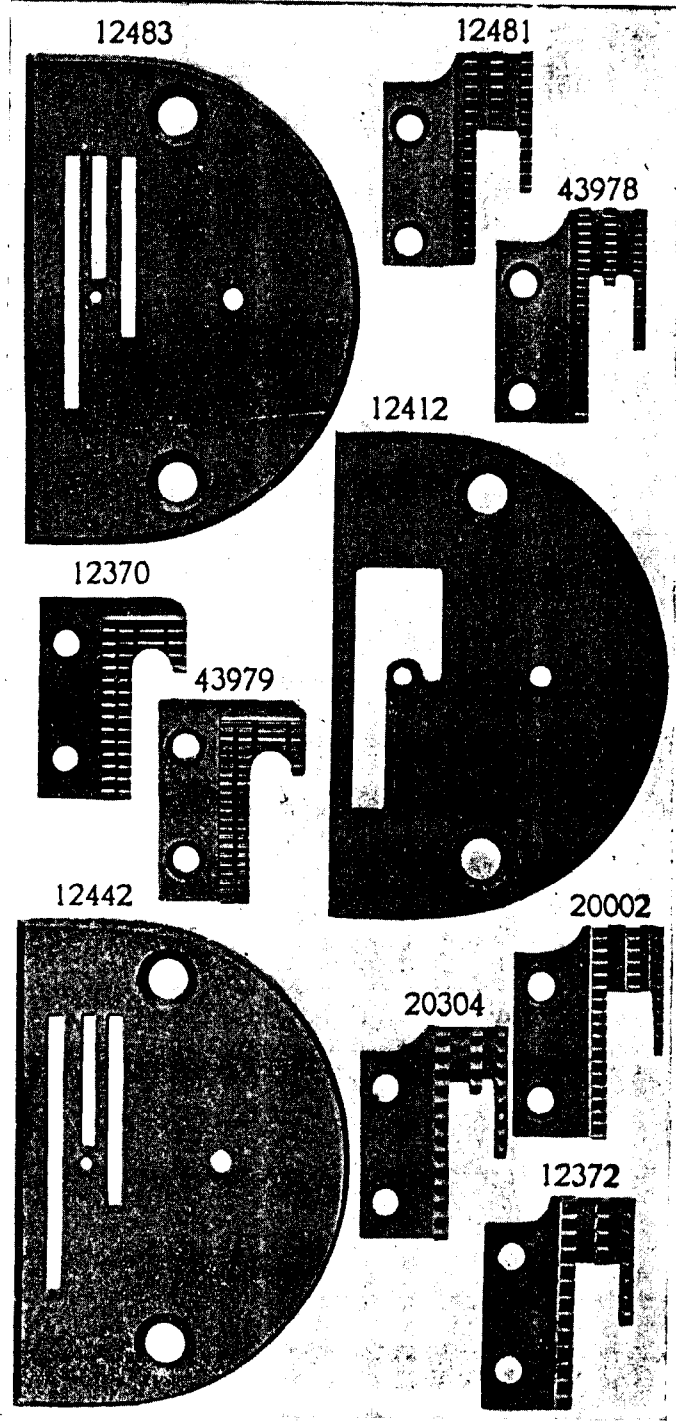


PLATE 819—ONE-FOURTH SIZE

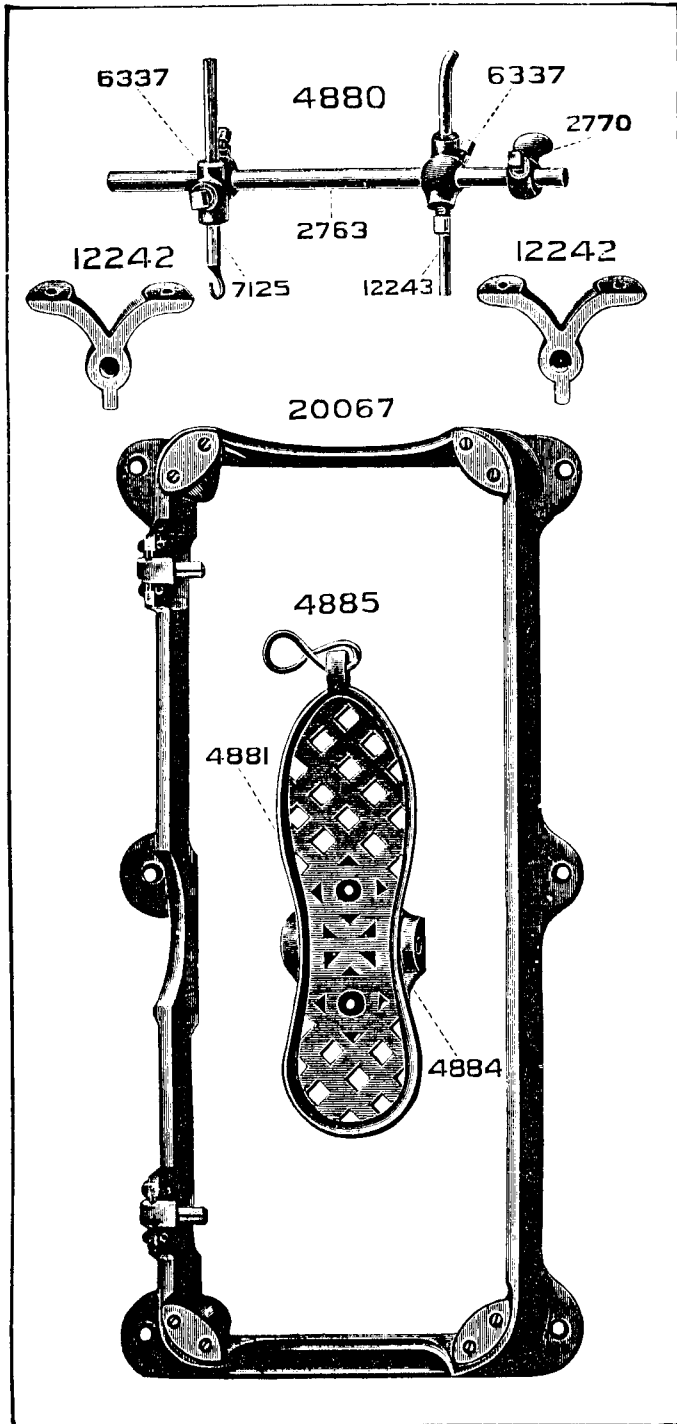


PLATE 1252—FULL SIZE

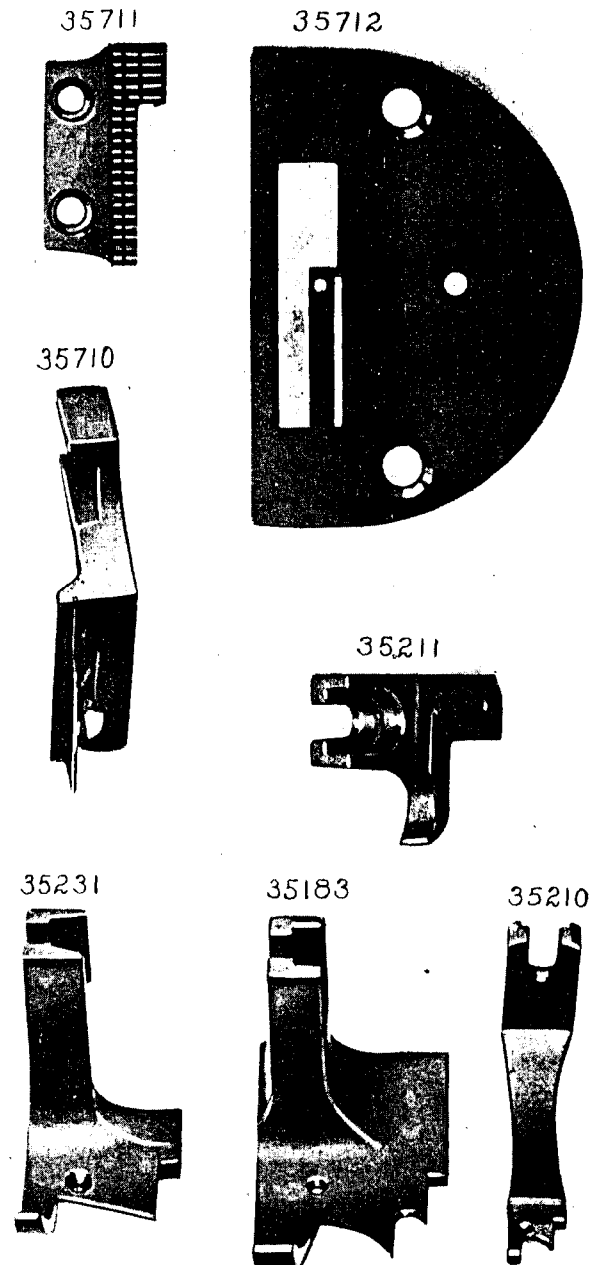


PLATE 1259—FULL SIZE

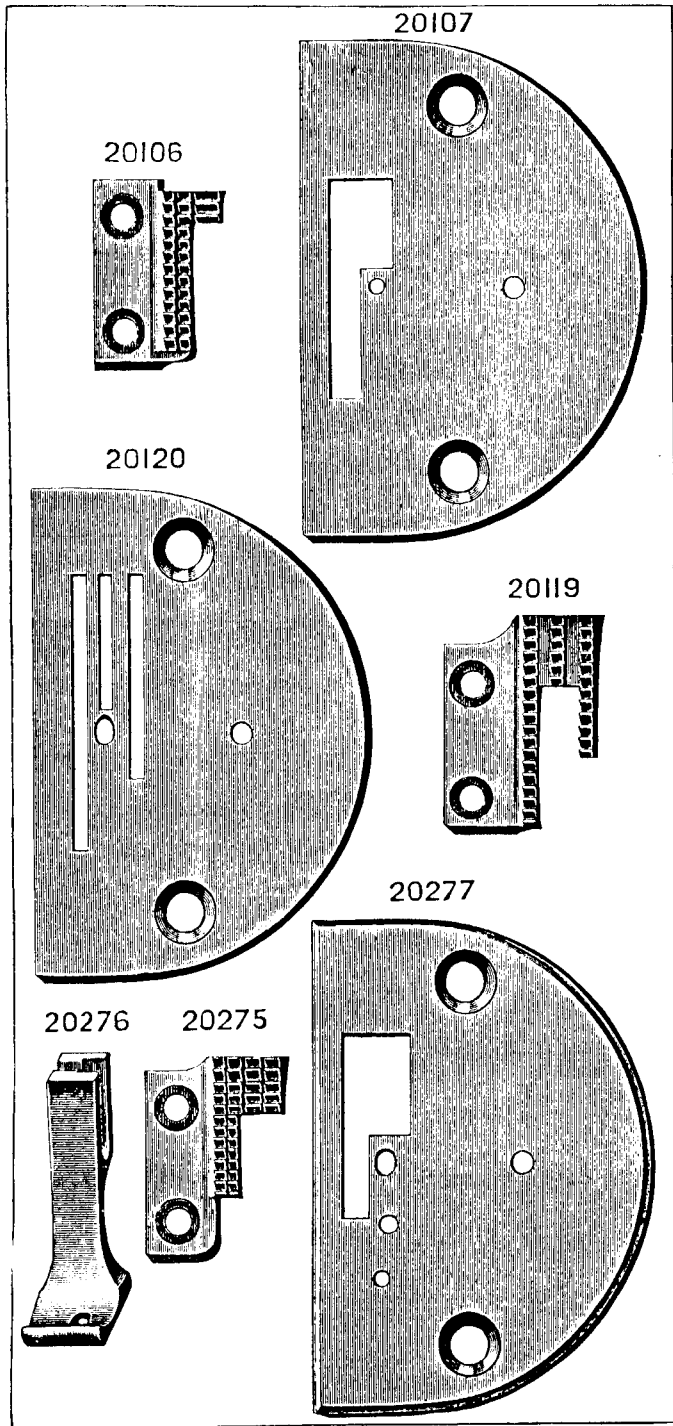


PLATE 1262—FULL SIZE

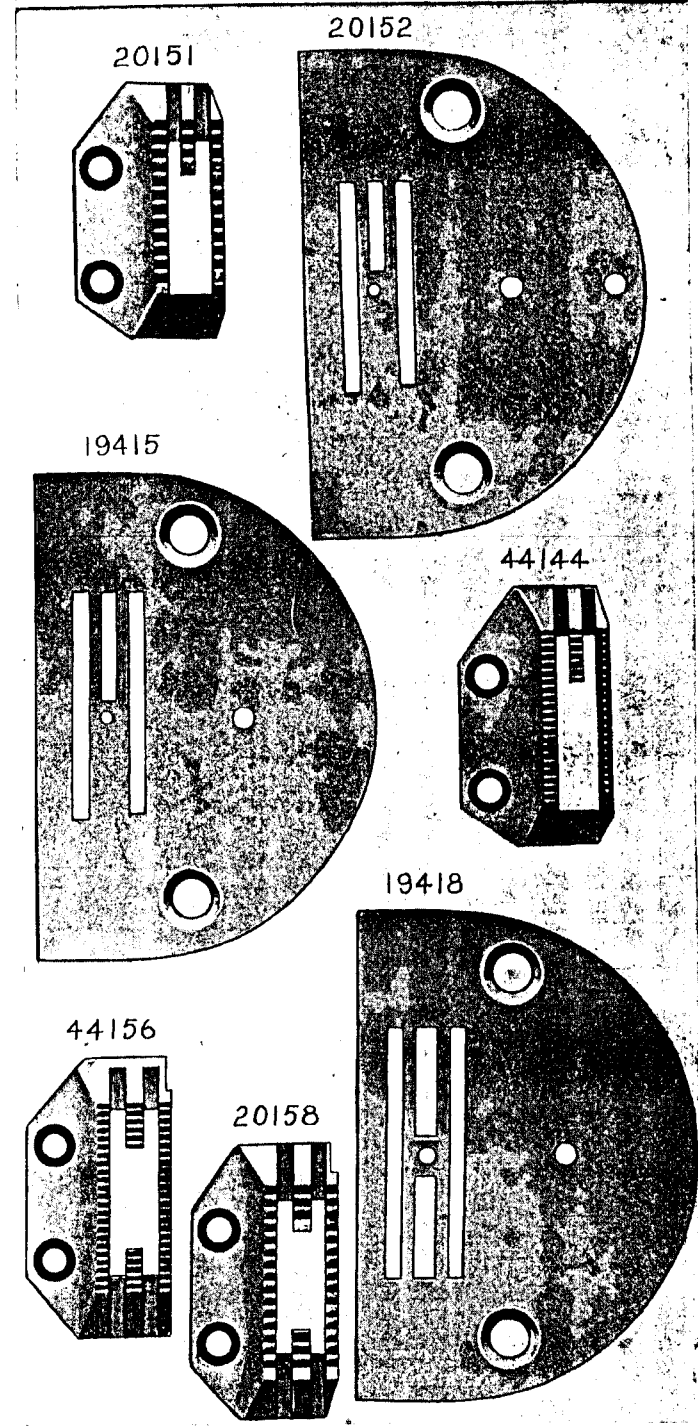


PLATE 1263—FULL SIZE

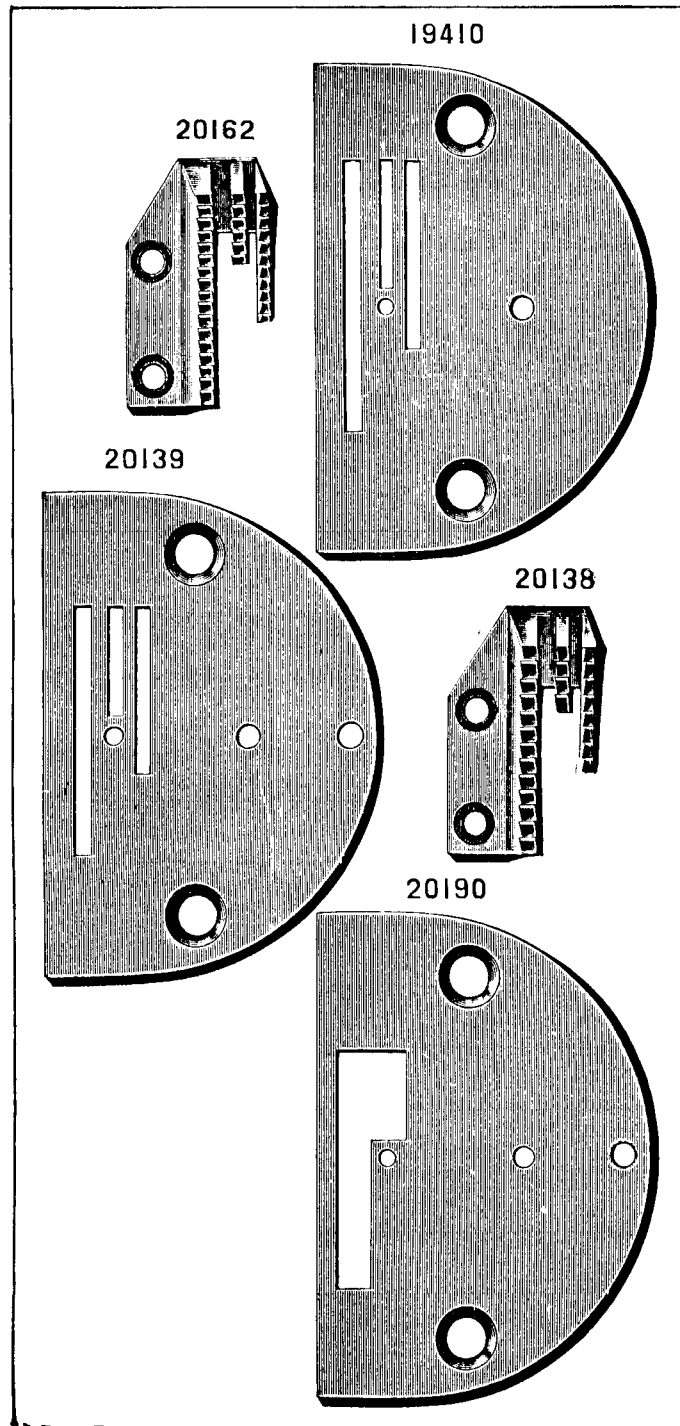


PLATE 2833—ONE-HALF SIZE

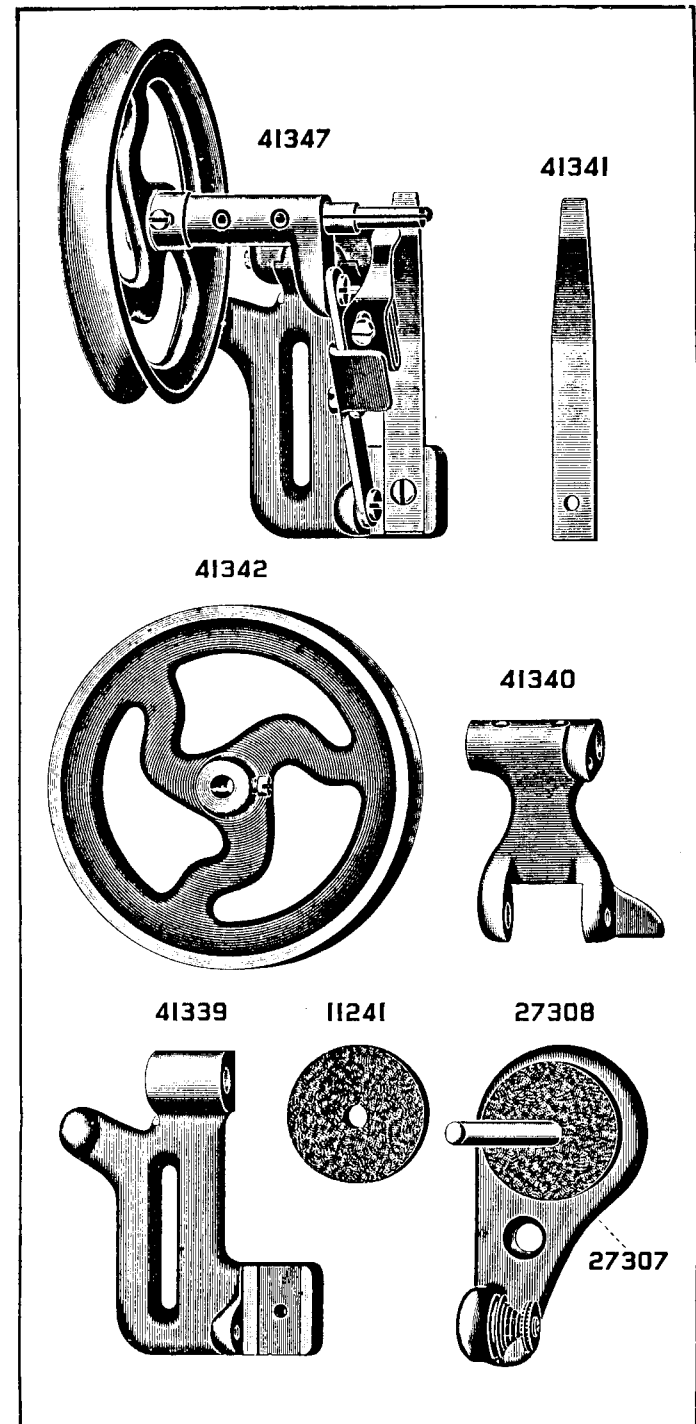


PLATE 2834—FULL SIZE

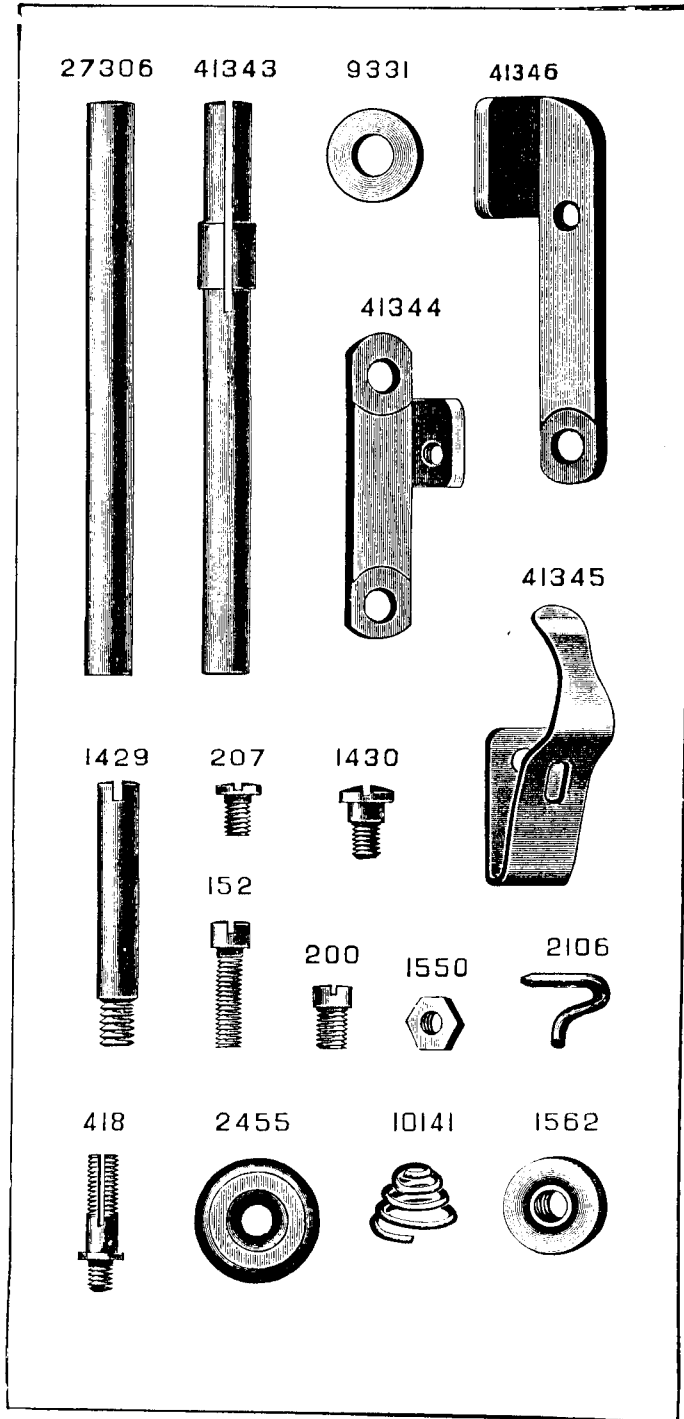


PLATE 5235—ONE-FOURTH SIZE

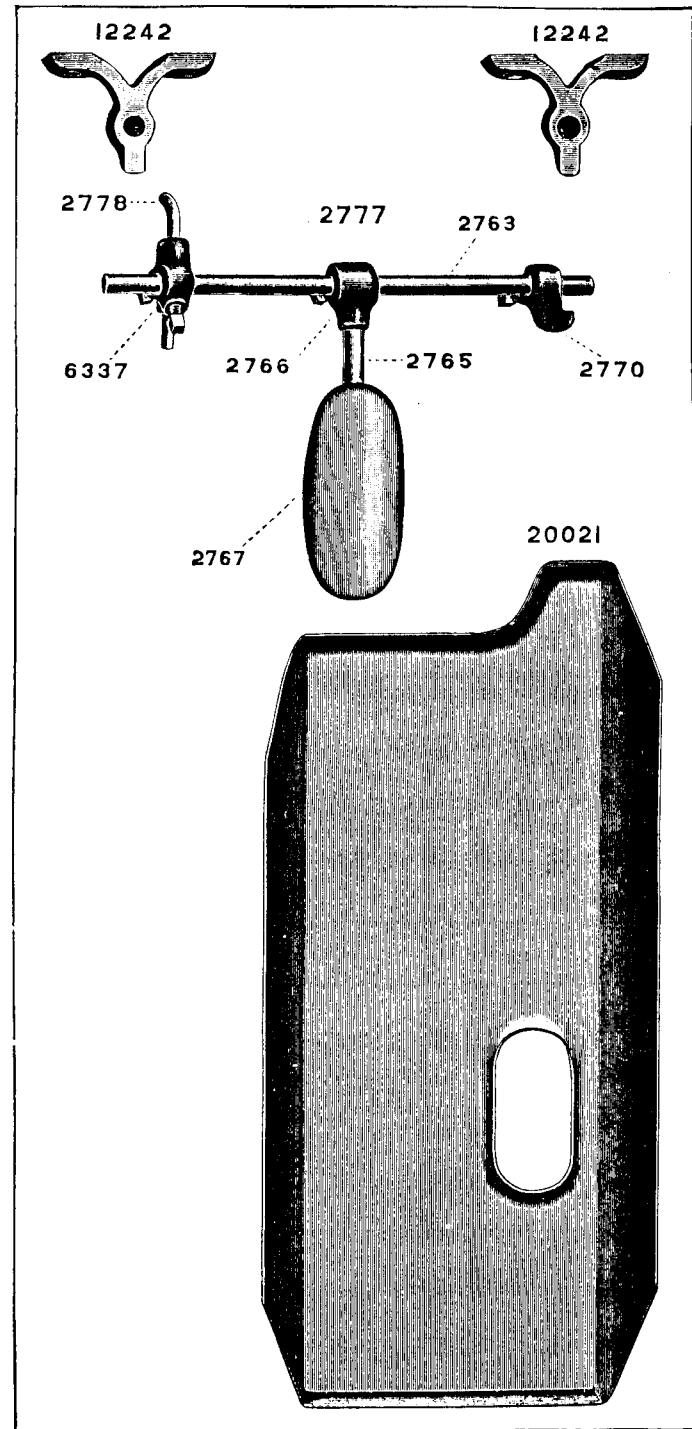


PLATE 5805—FULL SIZE

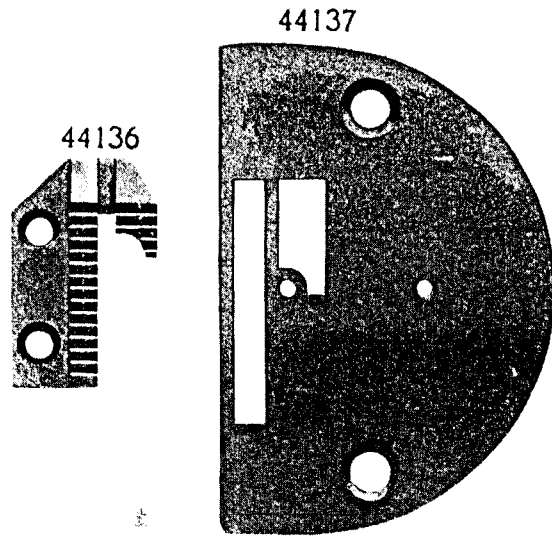


PLATE 5864—FULL SIZE


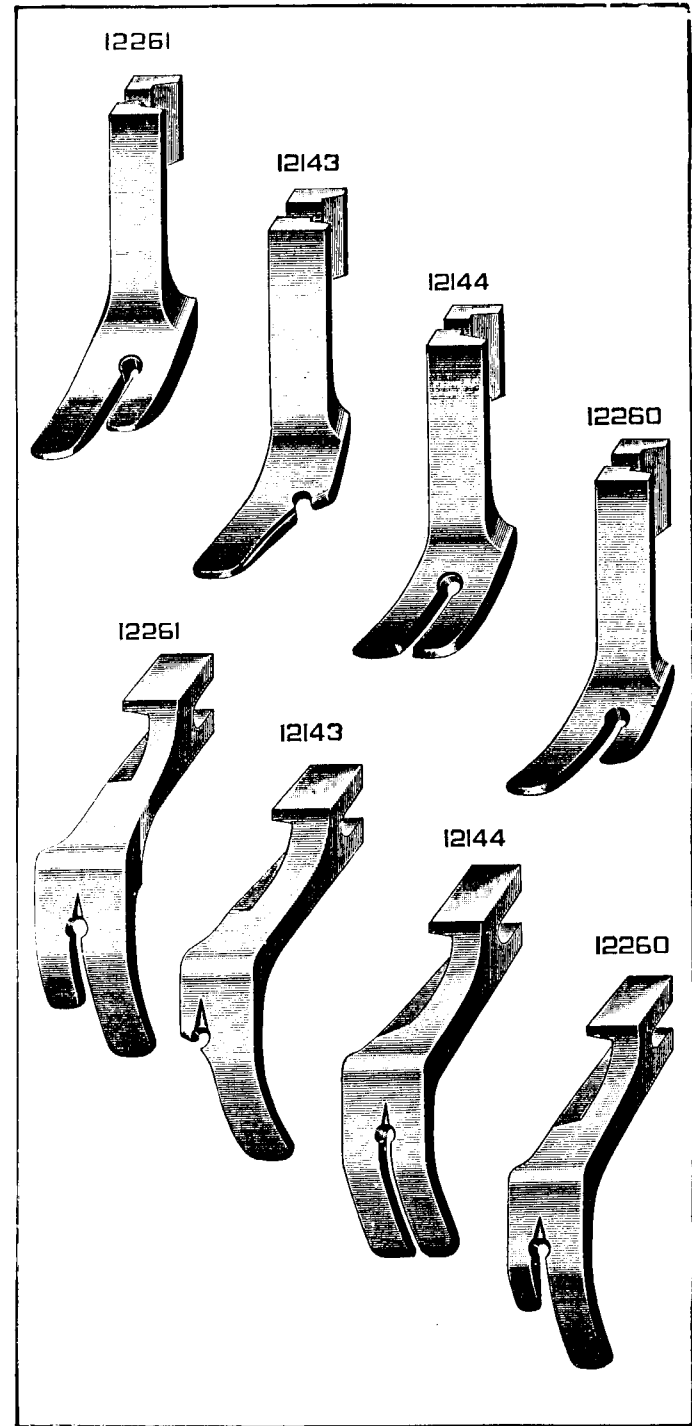


PLATE 5867—FULL SIZE

 24983




24983




PLATE 5869—FULL SIZE


52076

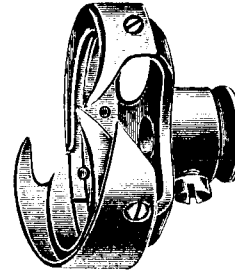


40396

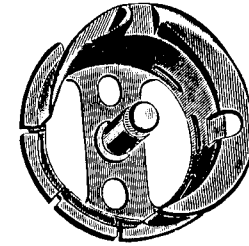


40395

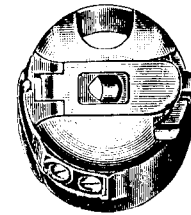

40264

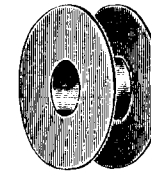

40274

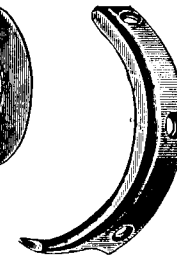

40392



40409



2974



2975




592



1367



40398

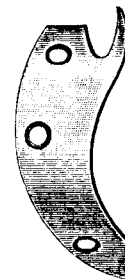

1053



40394



591




1380



1253



52018

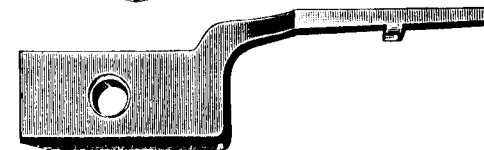

704



PLATE 5875—FULL SIZE

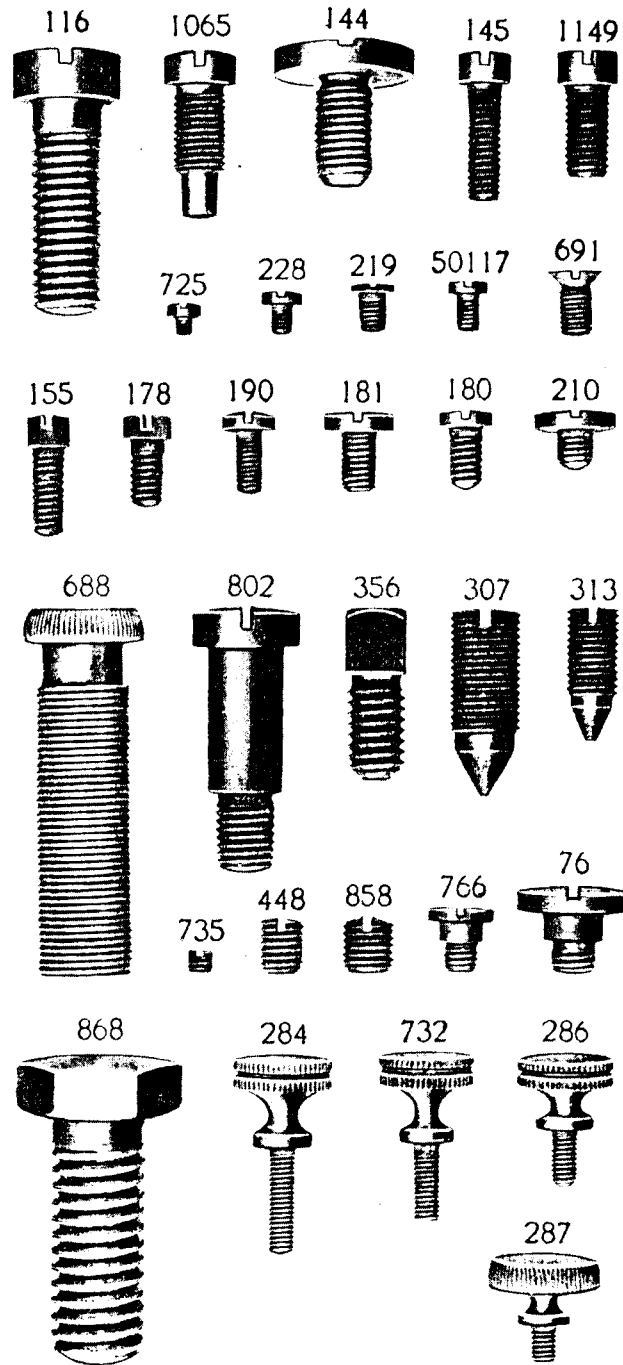


PLATE 5881—FULL SIZE

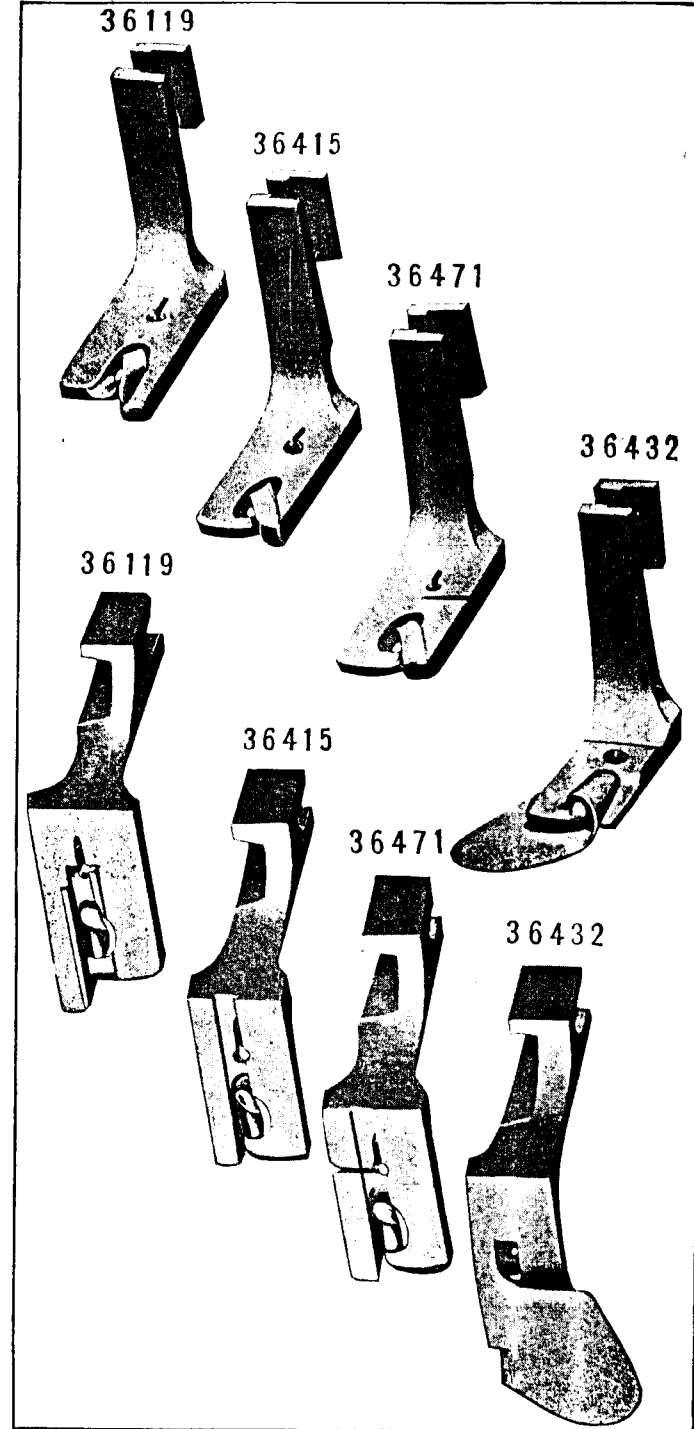


PLATE 5888—FULL SIZE

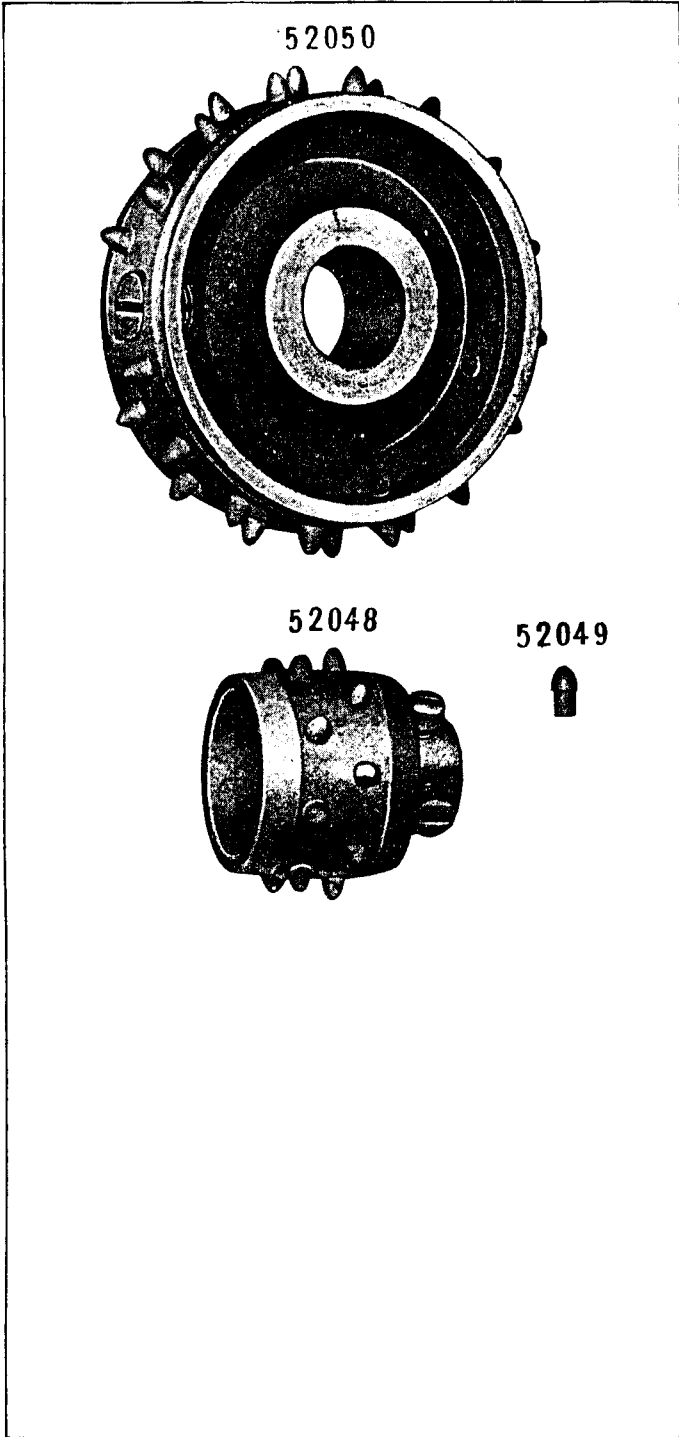


PLATE 5892—FULL SIZE


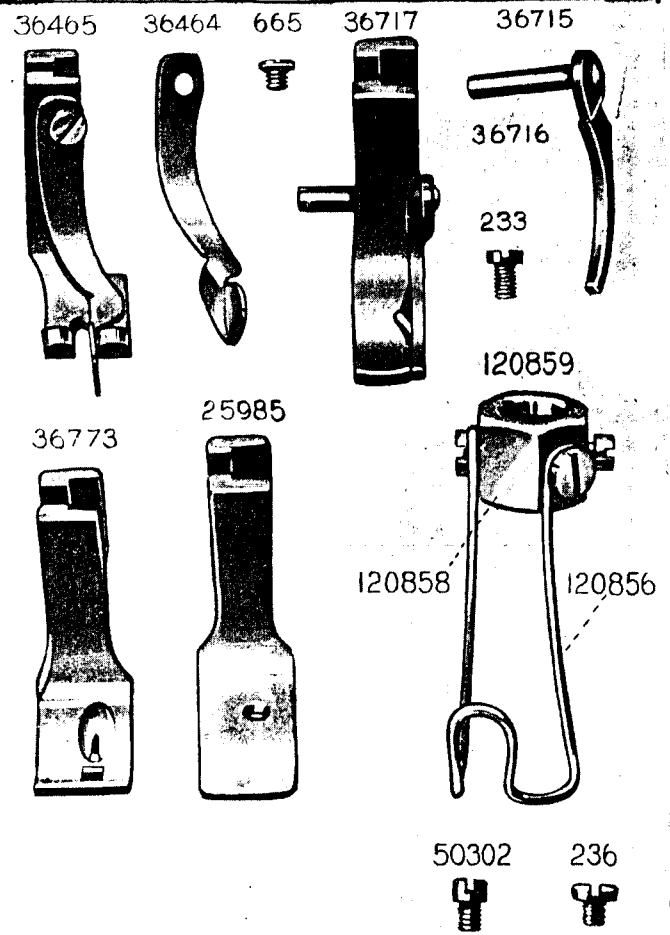


PLATE 5893—ONE-HALF SIZE

52005

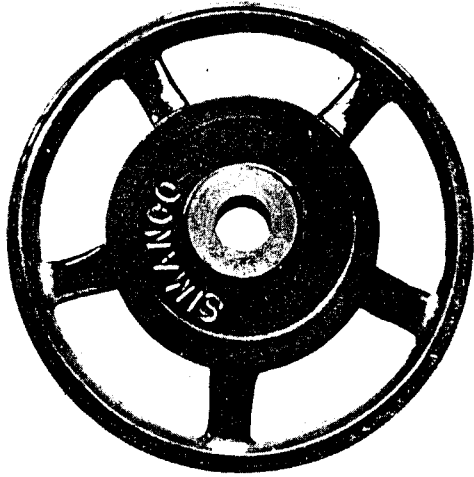

52081



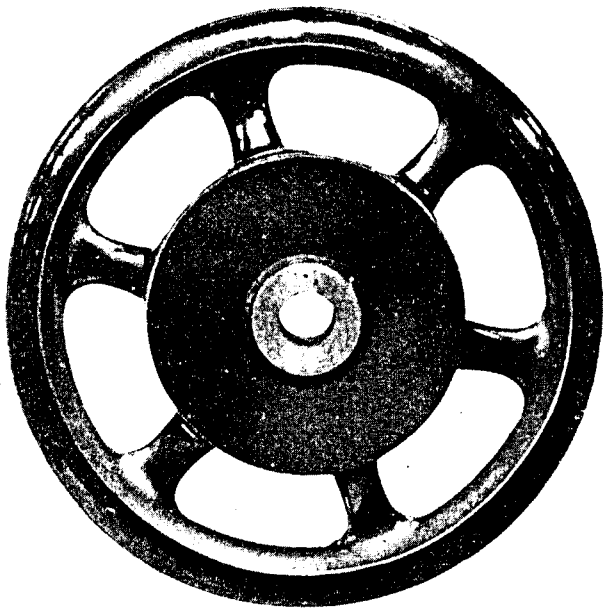


PLATE 5894—ONE-HALF SIZE

52052

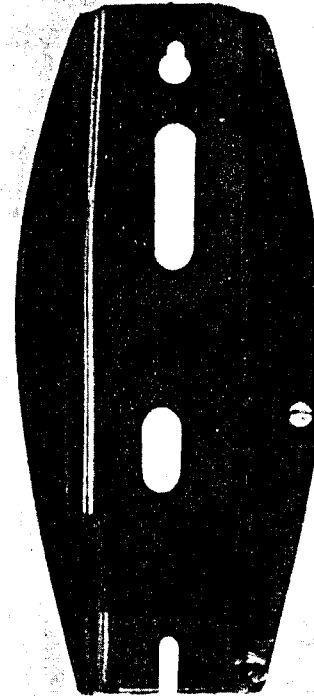


12193

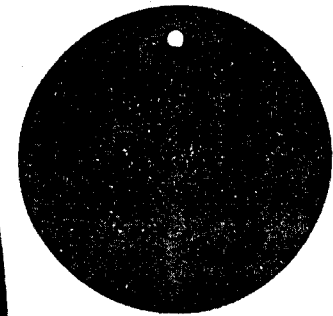


4307



12432

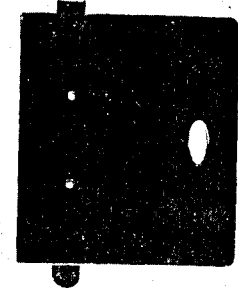


52059

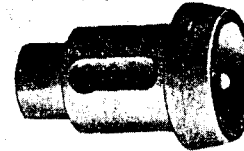

52063




52078

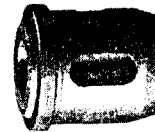

12480



52072

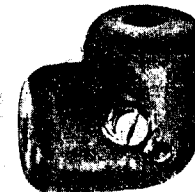

52071

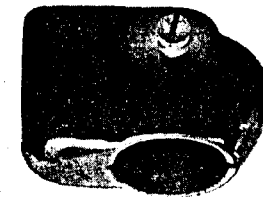


PLATE 5896—ONE-HALF SIZE

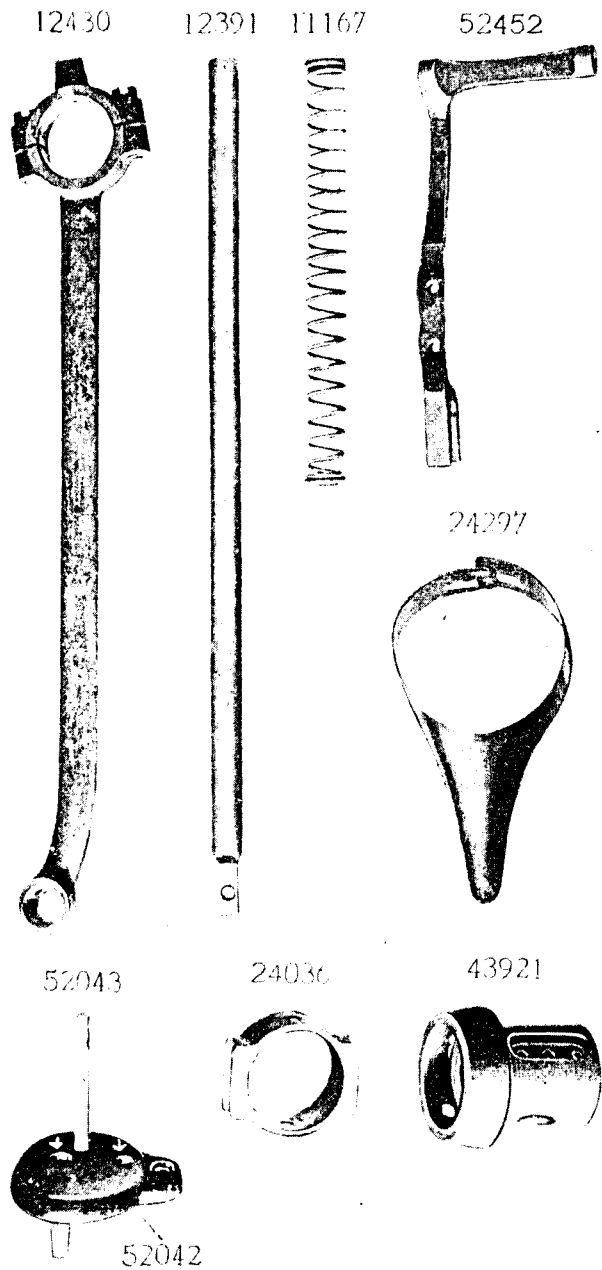


PLATE 5897—FULL SIZE


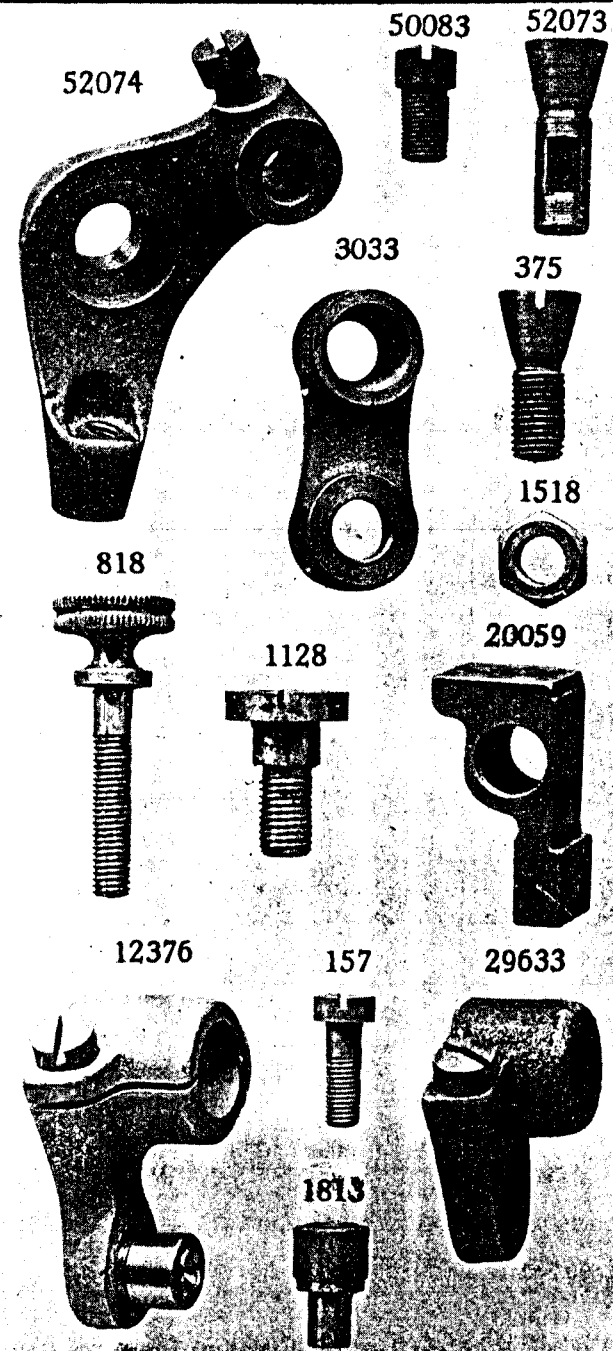


PLATE 5898—FULL SIZE

52062



56101

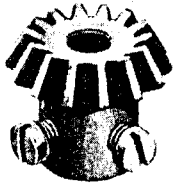

56100



447



432

1148




56099



56013




52060

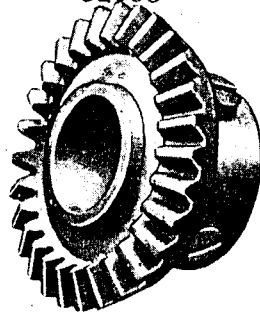

56106



 
56107



52045



52089

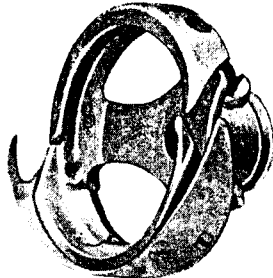

52090

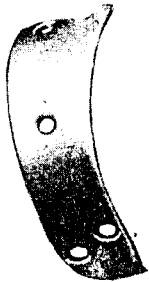


PLATE 5900—FULL SIZE

52084



12403



56006



54897



56015



2532



52378



226

29599



26231



12454



7298



52398



6267

25446



18130



16532



210993



24131



 
52053



11119



41515



210958



56086



36807



52454

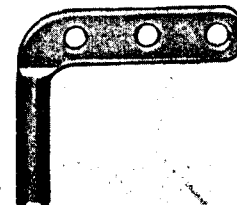


PLATE 5901—ONE-HALF SIZE

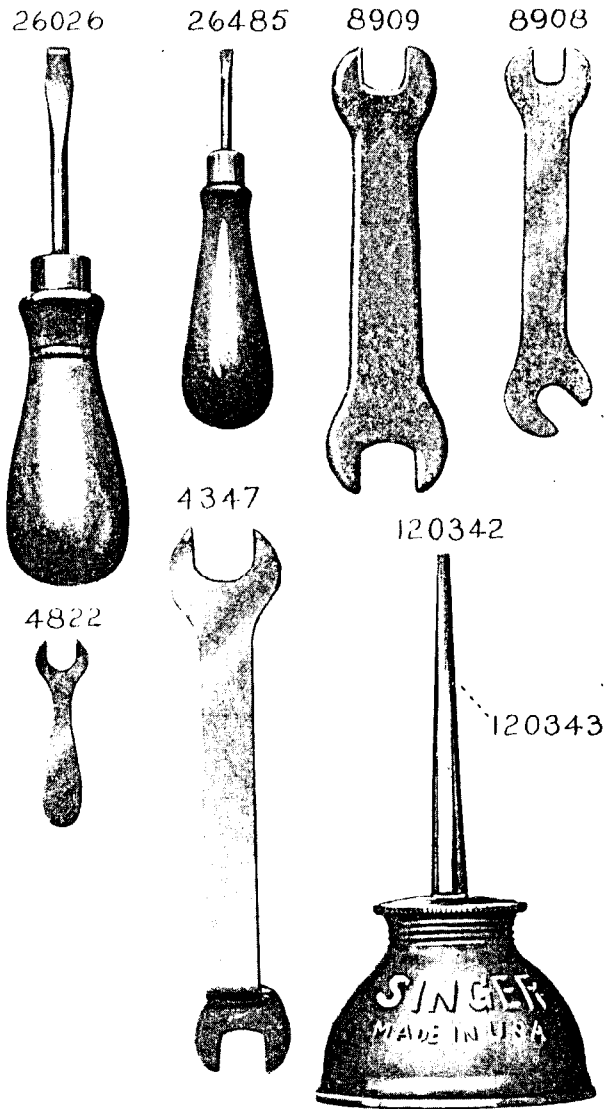


PLATE 5902—ONE-HALF SIZE

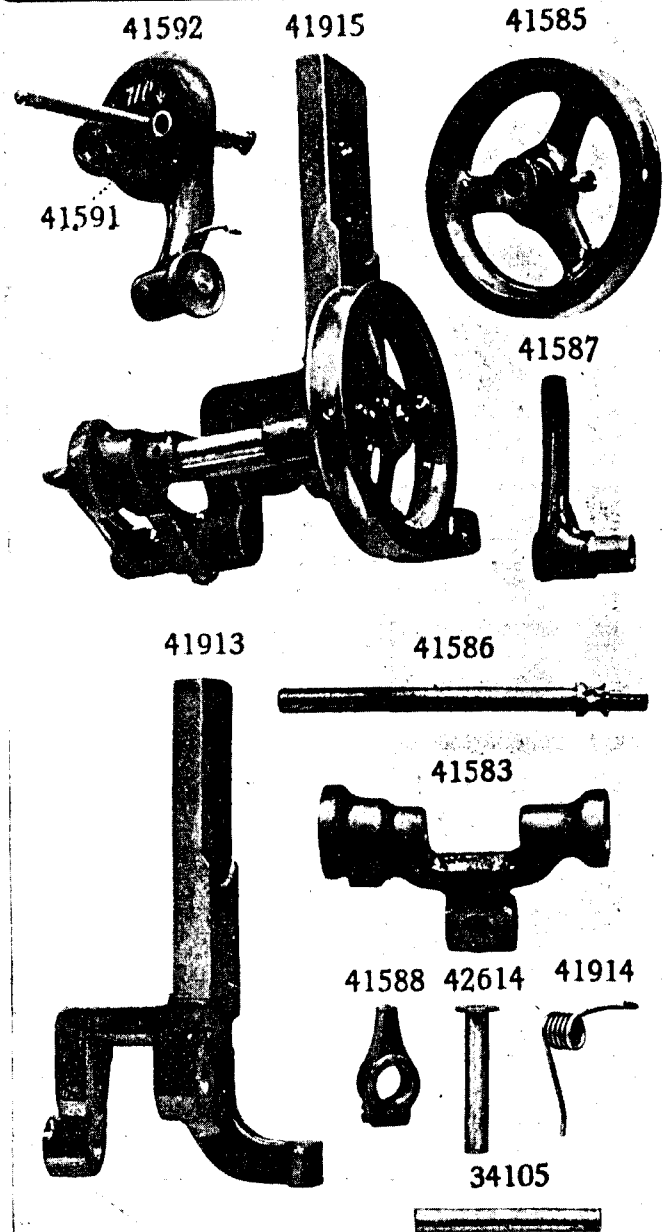


PLATE 5932—FULL SIZE

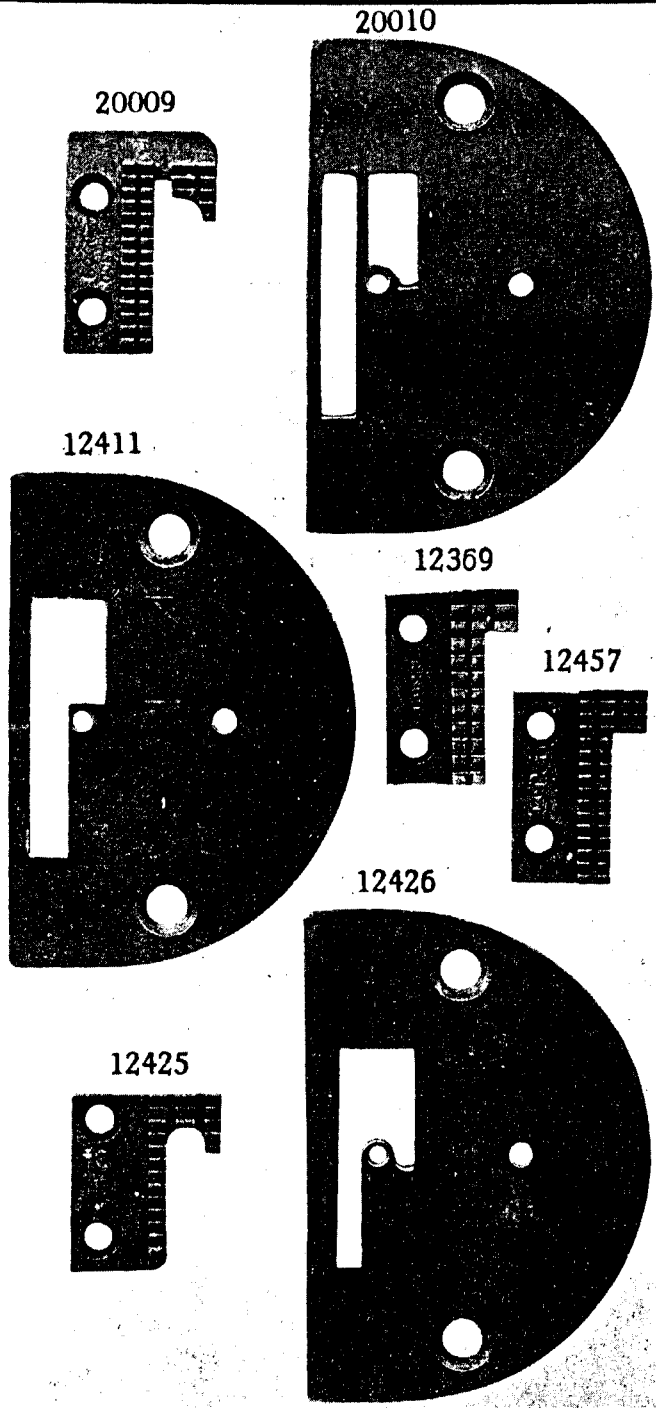


PLATE 5933—FULL SIZE

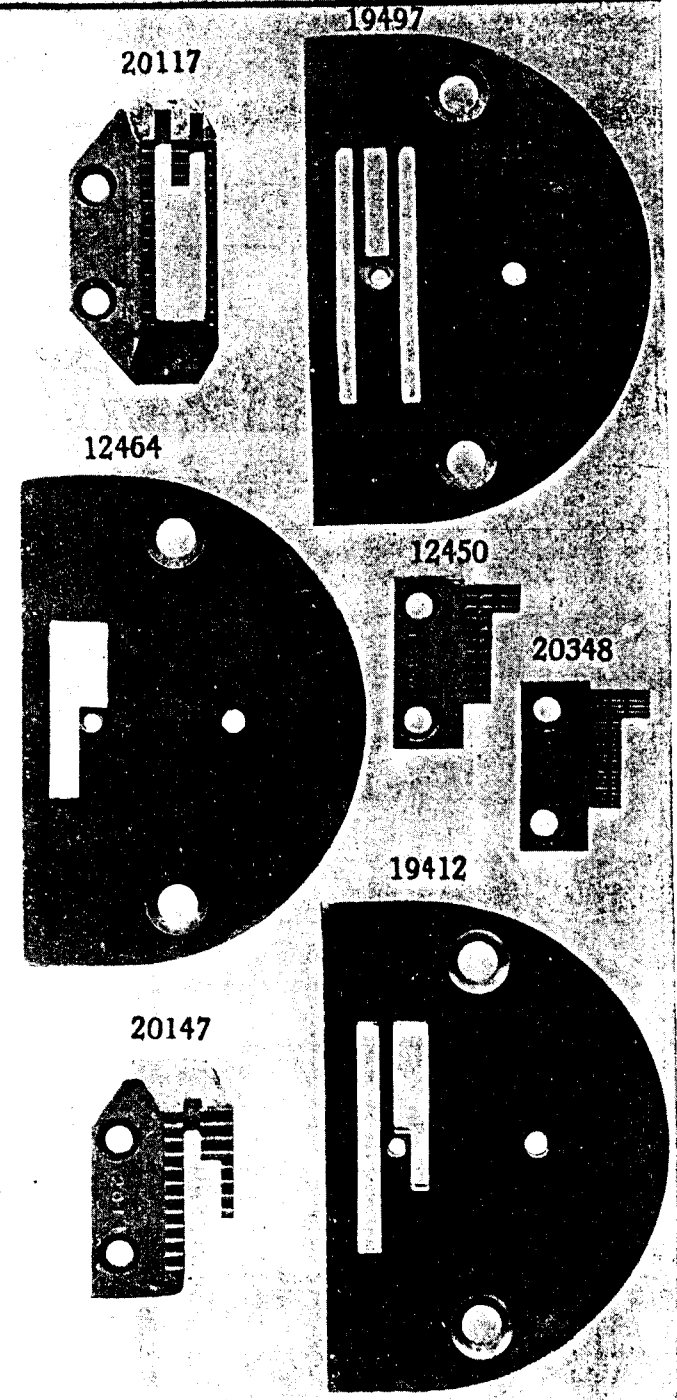


PLATE 5935—ONE-HALF SIZE

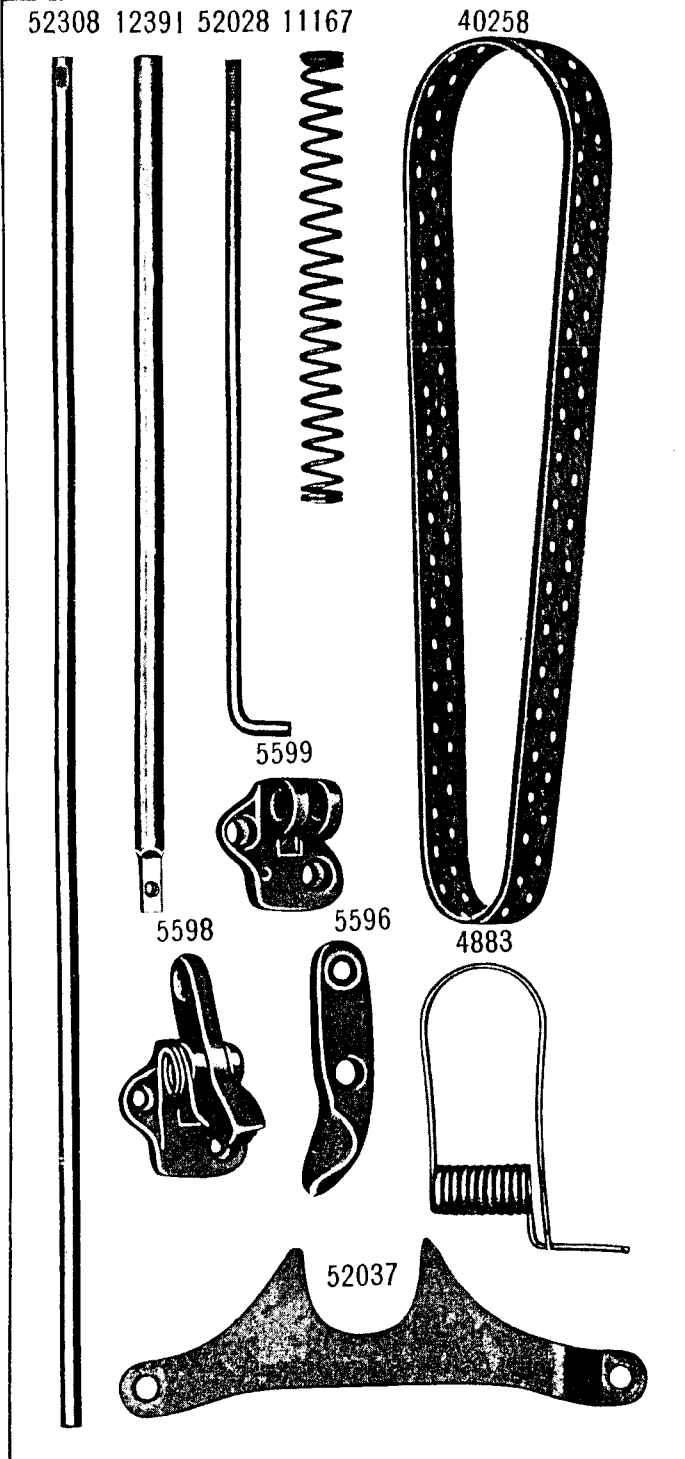


PLATE 5936—FULL SIZE

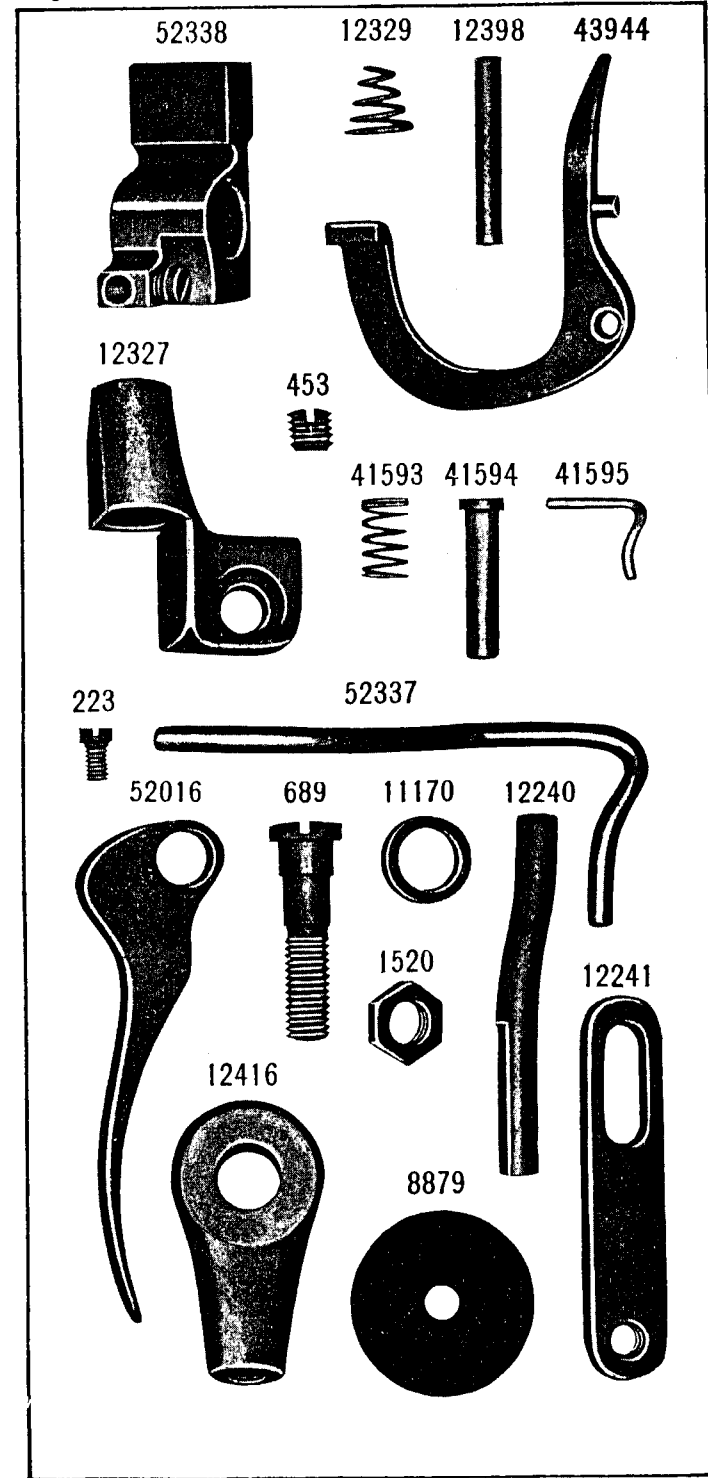


PLATE 5938—FULL SIZE

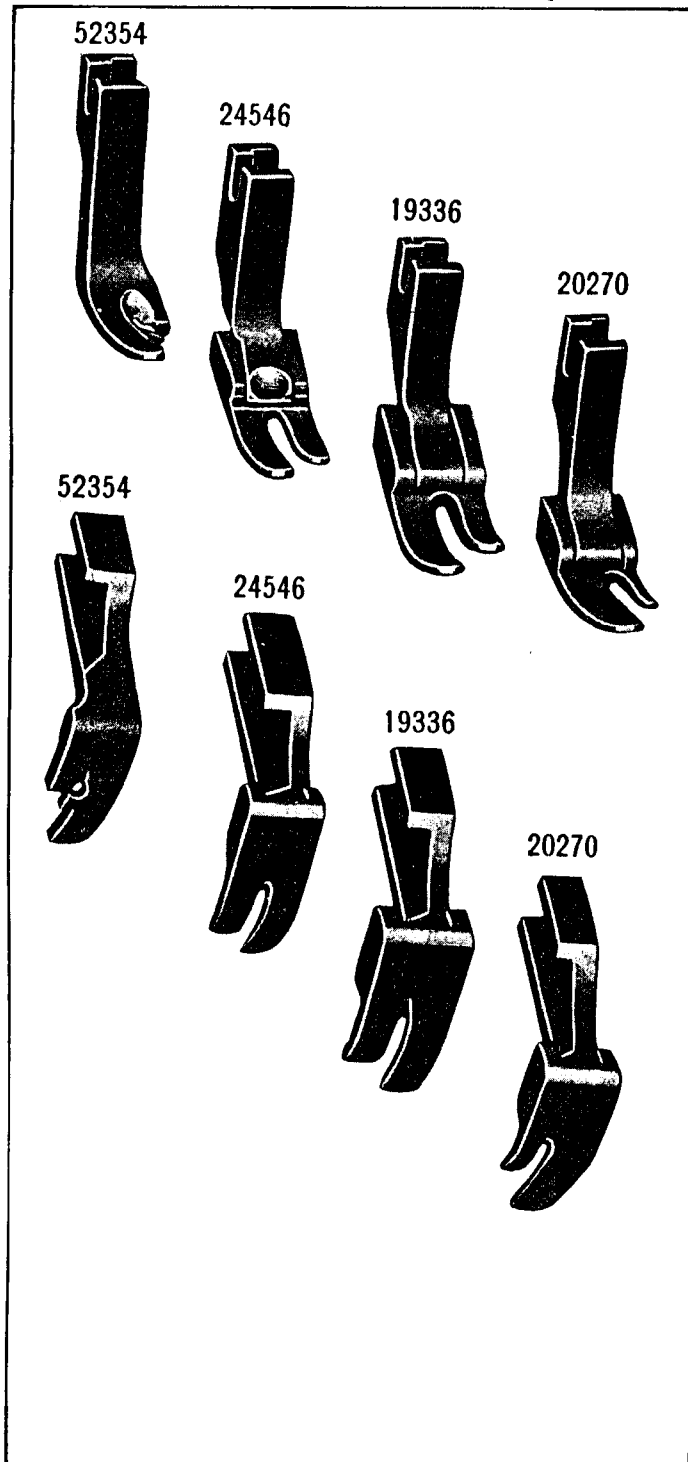


PLATE 5942—FULL SIZE

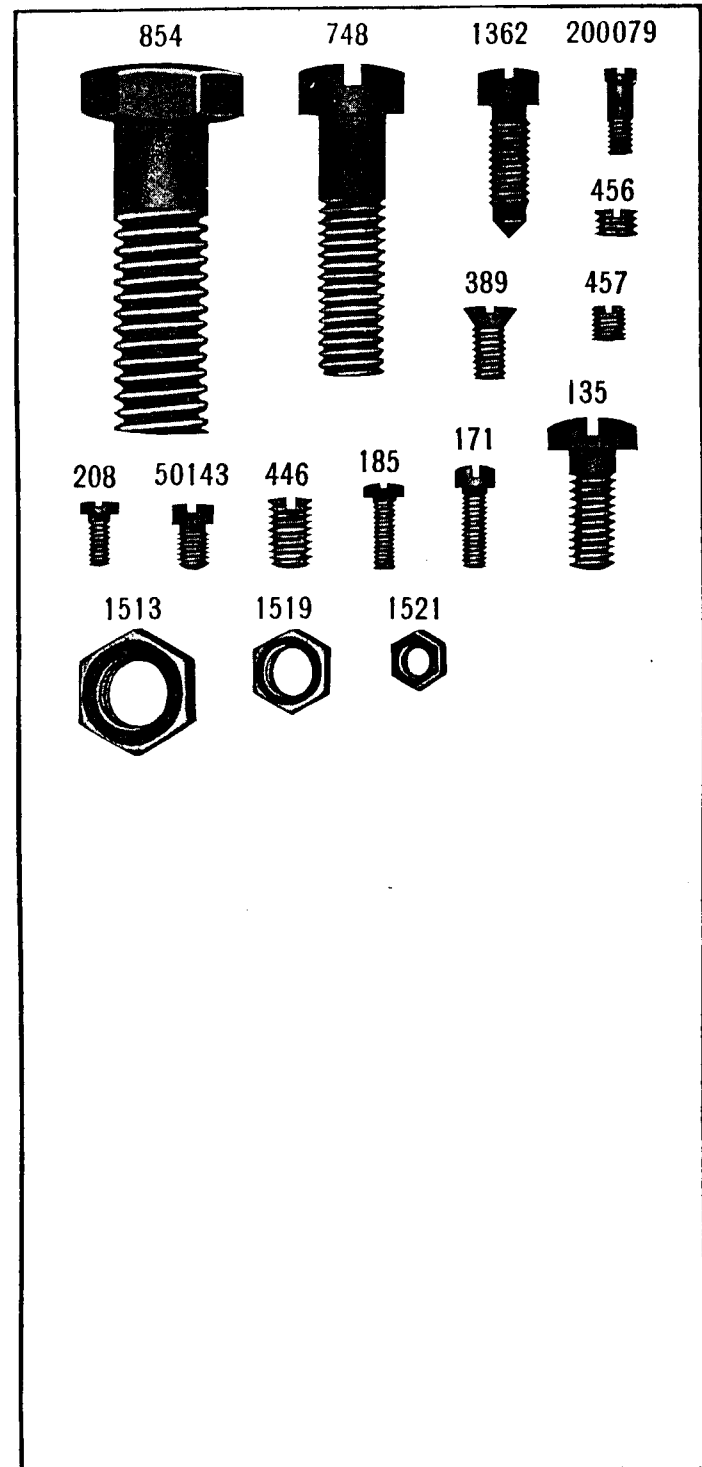


PLATE 5943—FULL SIZE

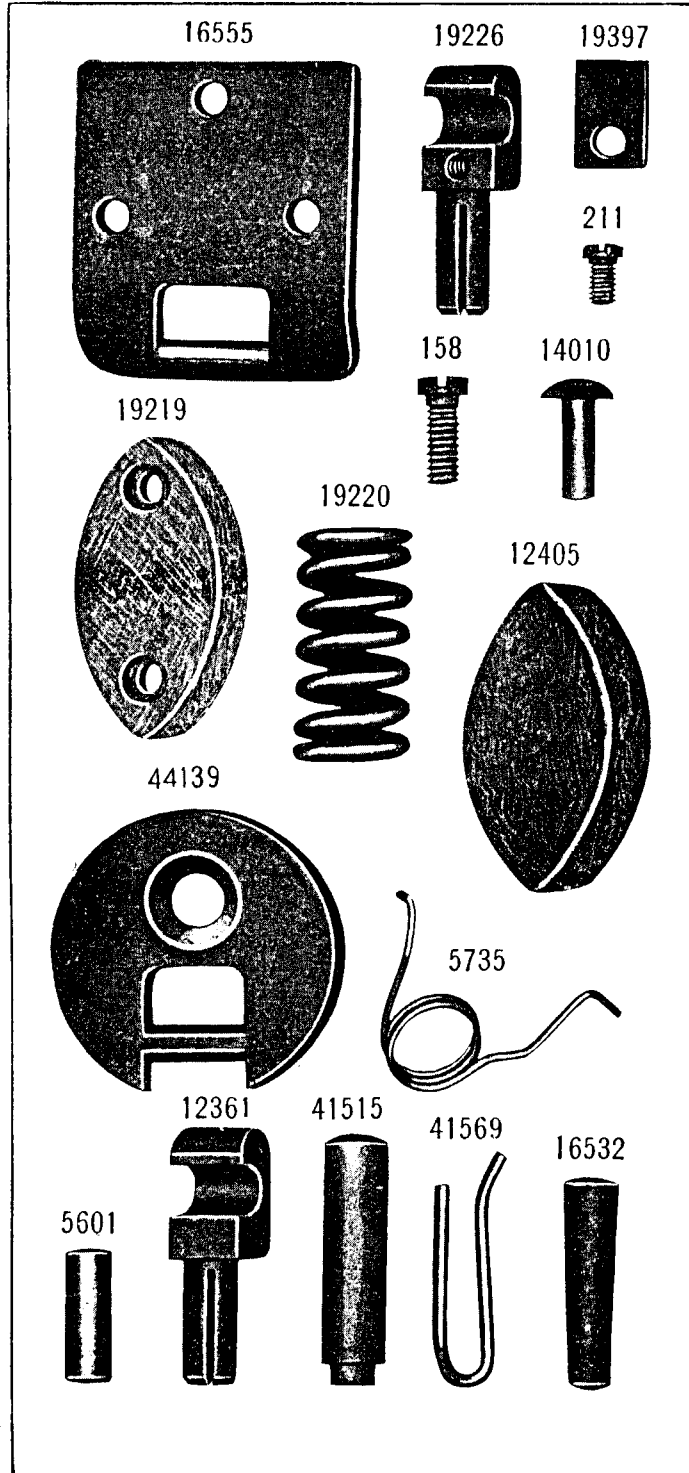


PLATE 5945—FULL SIZE

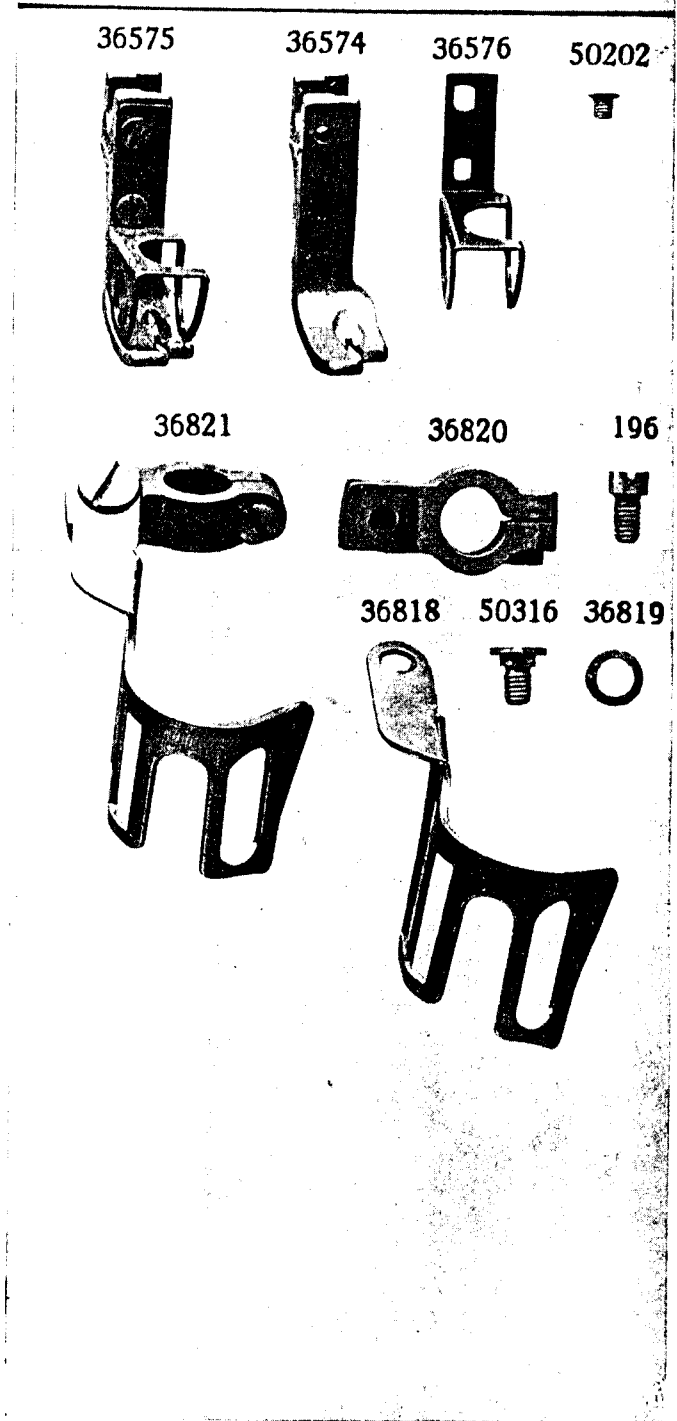


PLATE 5946 ONE-FOURTH SIZE

52382 52386 52384 52388 12237

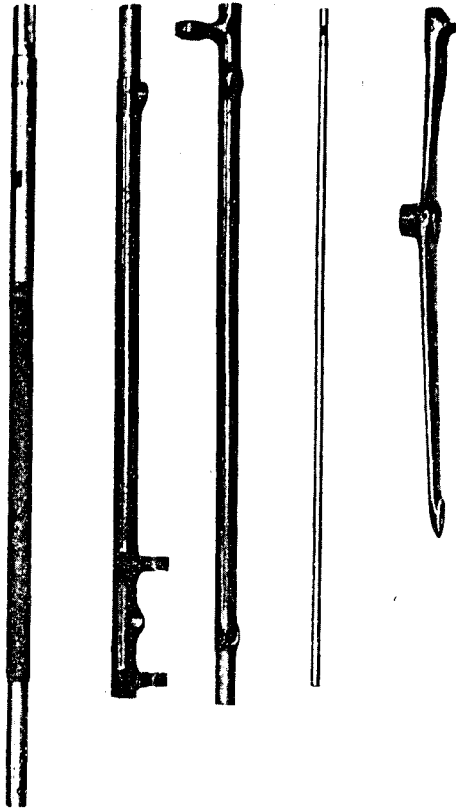


PLATE 5947—ONE-HALF SIZE

20284 24052 20283

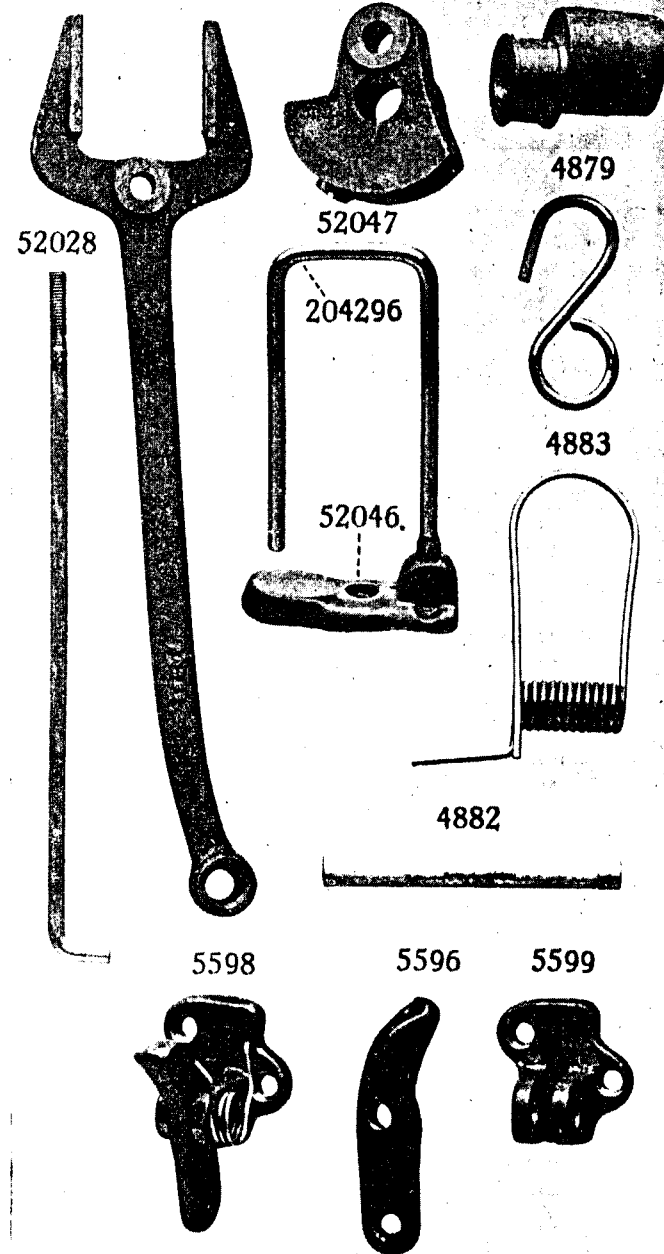


PLATE 5948—FULL SIZE

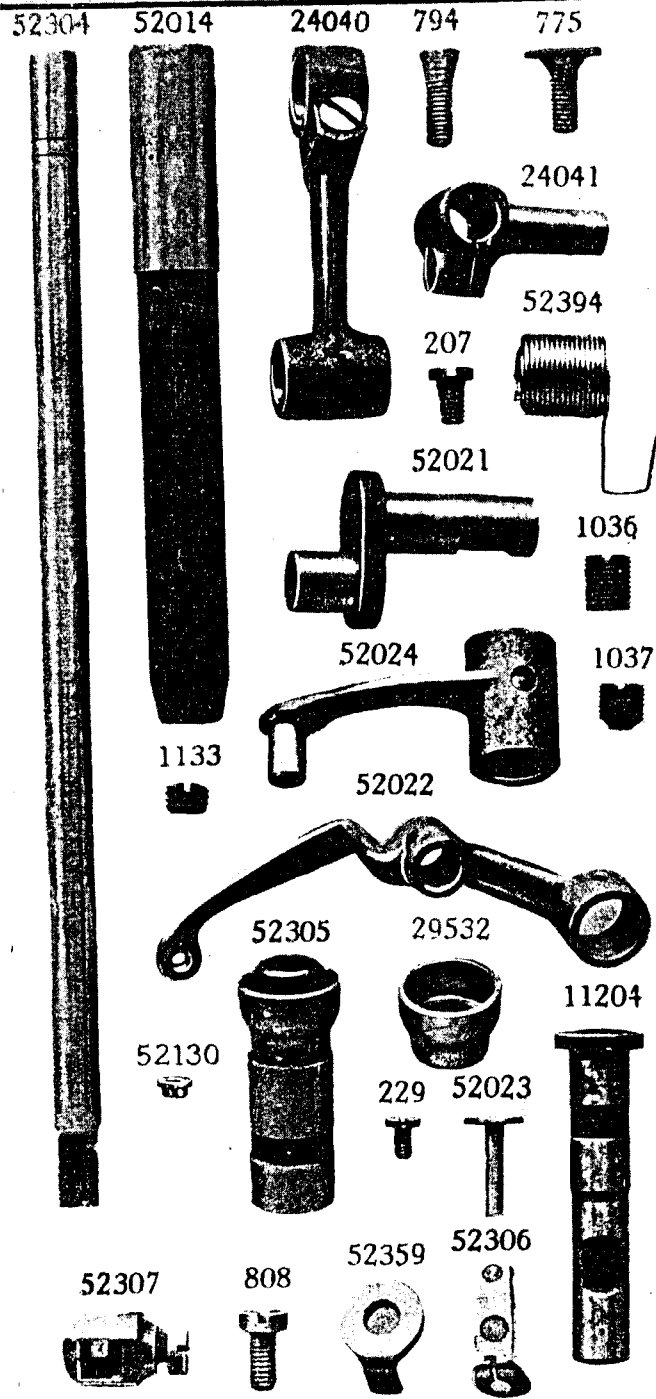


PLATE 5949—FULL SIZE

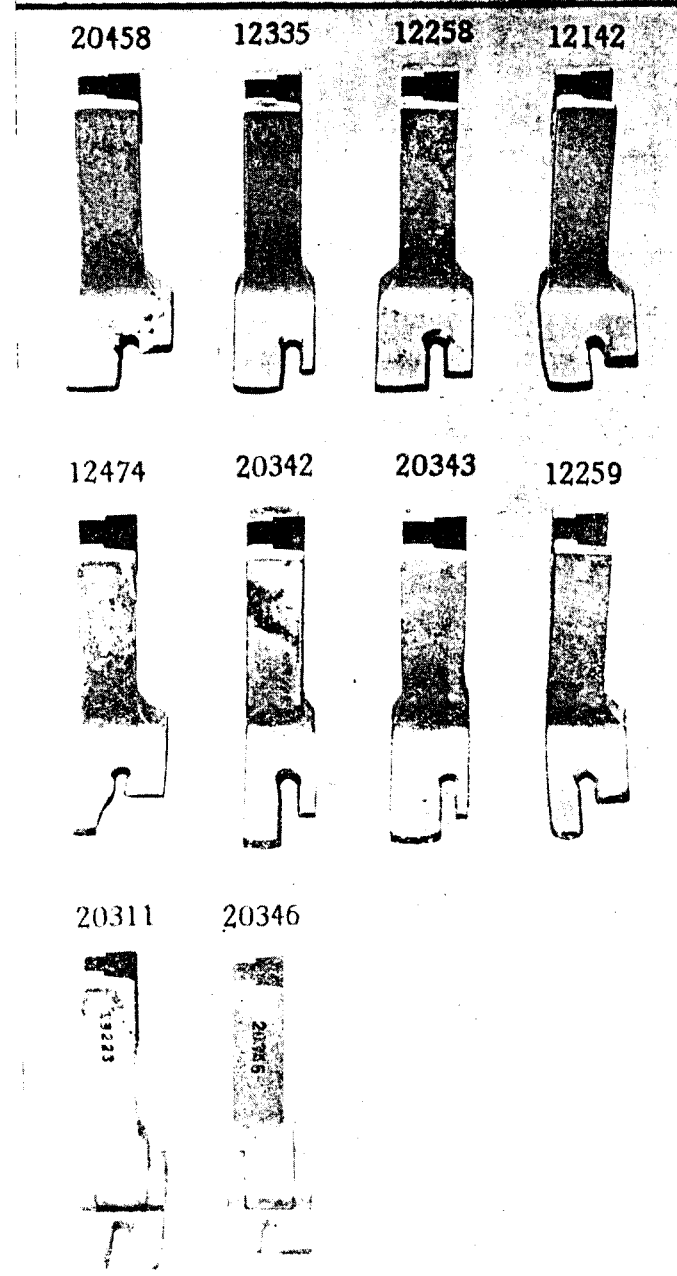


PLATE 6449—FULL SIZE

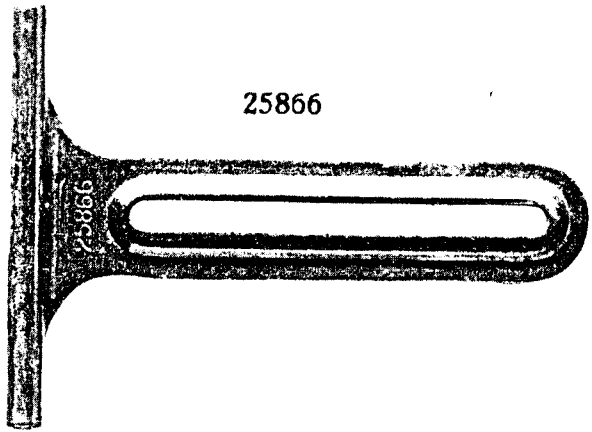
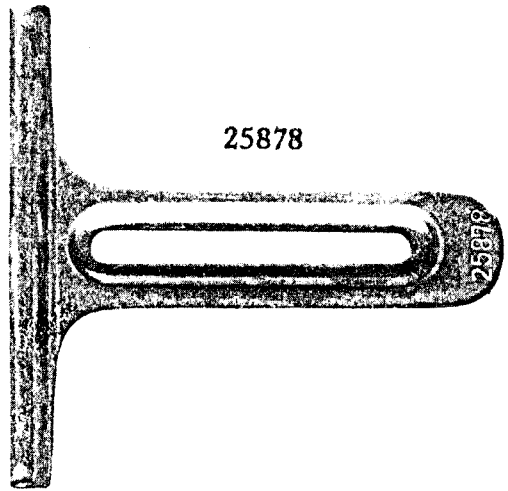


PLATE 7690—ONE-FOURTH SIZE

52302 52400 44125 12379



PLATE 7691—FULL SIZE

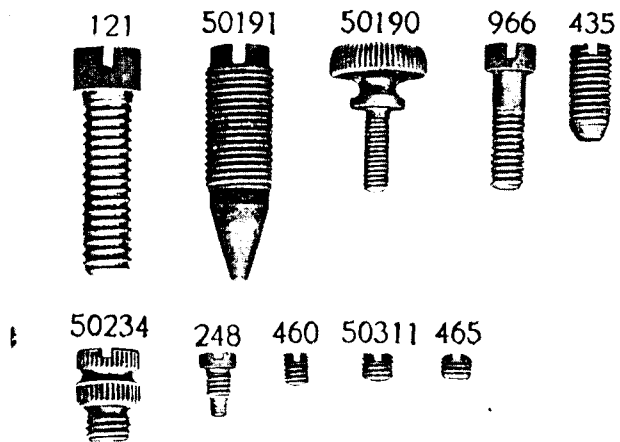


PLATE 7692—FULL SIZE

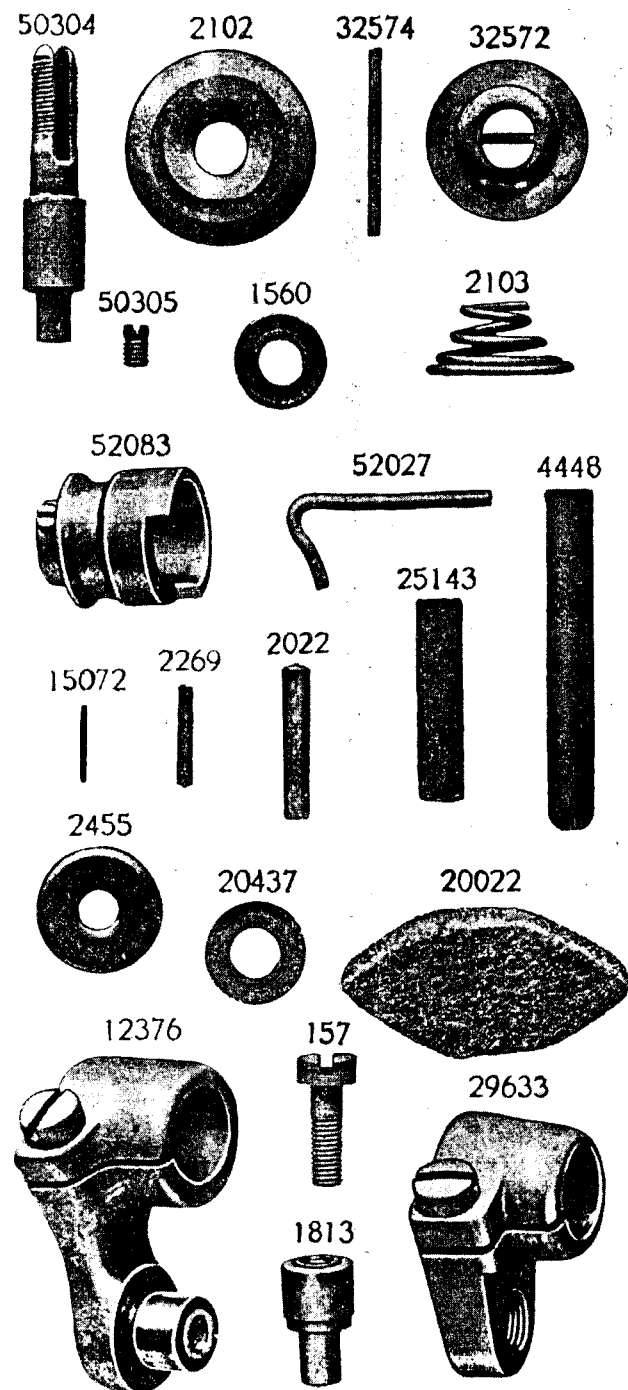


PLATE 7693—ONE-HALF SIZE

56017

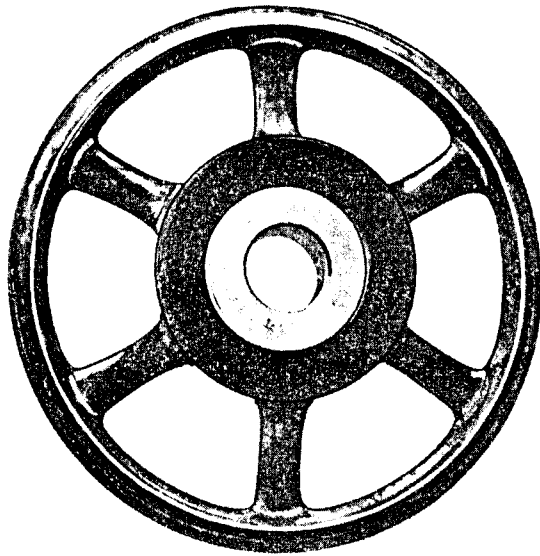


PLATE 7694—ONE-HALF SIZE

52028

52407

52406

24052

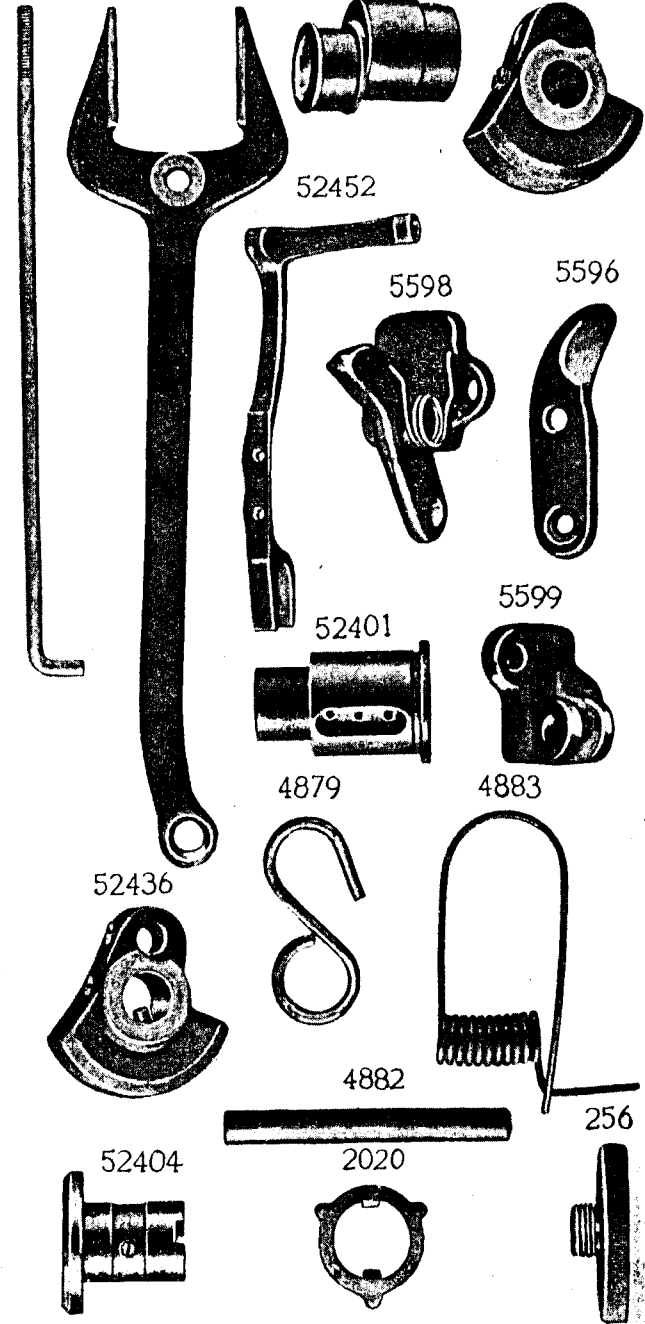


PLATE 7695—FULL SIZE

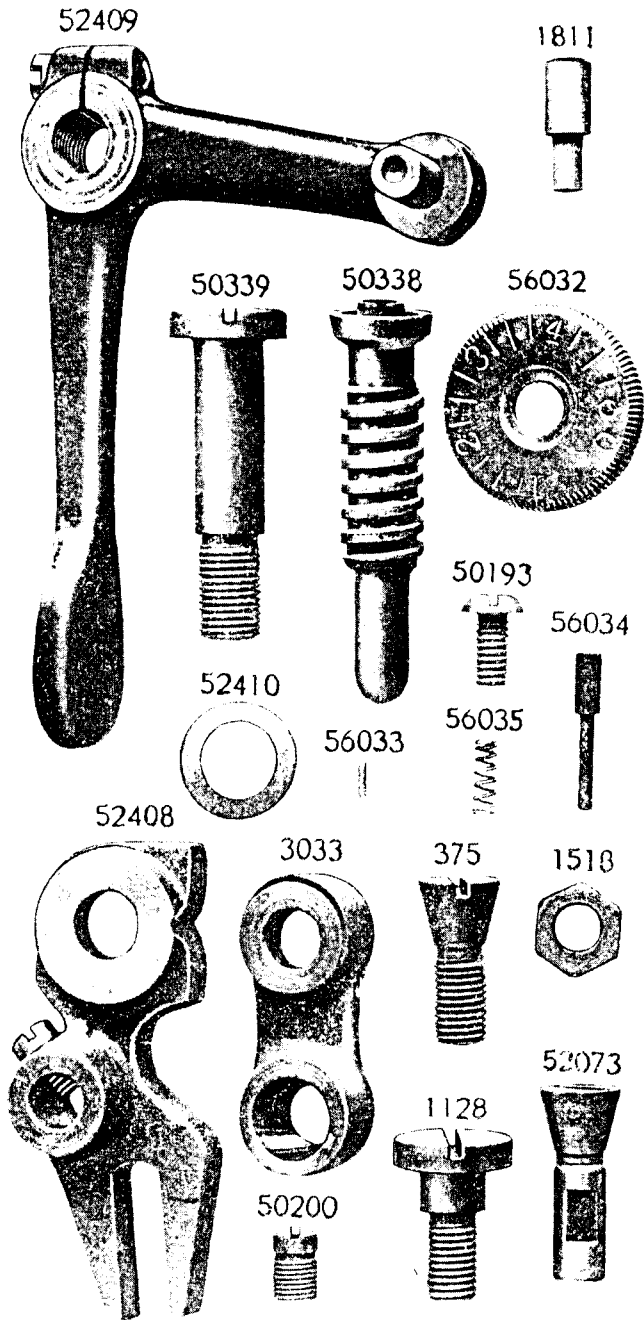


PLATE 7696—FULL SIZE


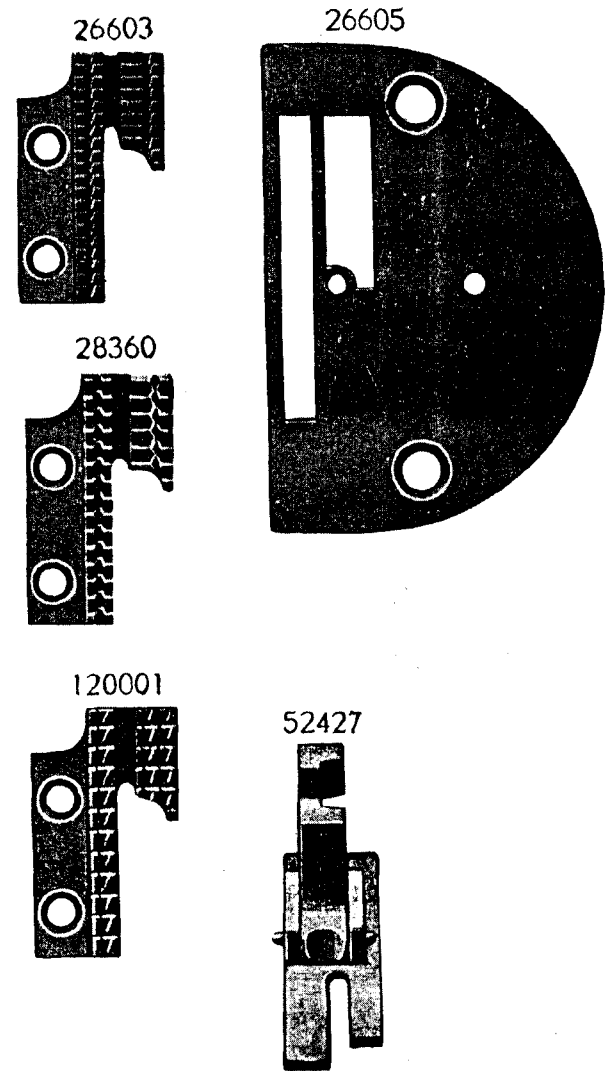


PLATE 7697—FULL SIZE


52448




52440

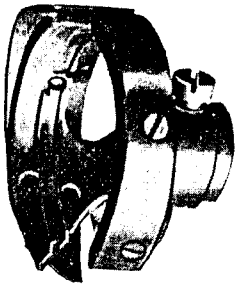

52434

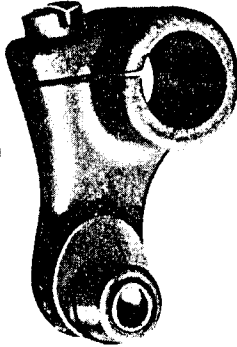


52443

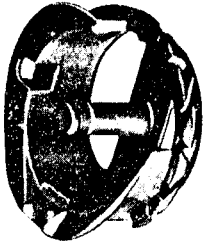

7958



 
52439



52435




5990

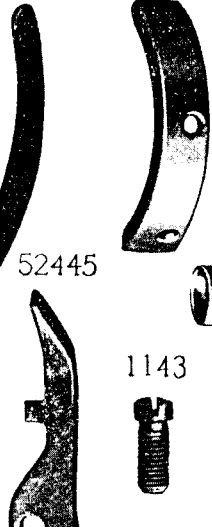

52444




52445

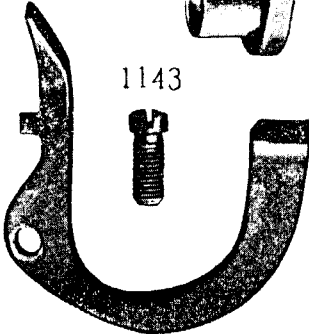

1143



52446

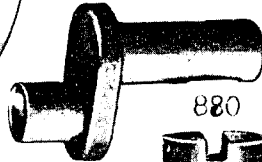

880

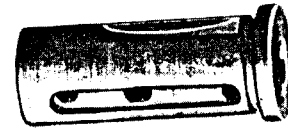


PLATE 7698—FULL SIZE

52455



 
52039



50145




52044



1147



52454

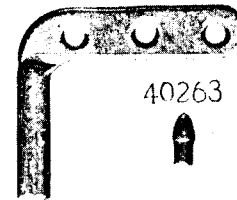

50053



40263




3039

29534



62527

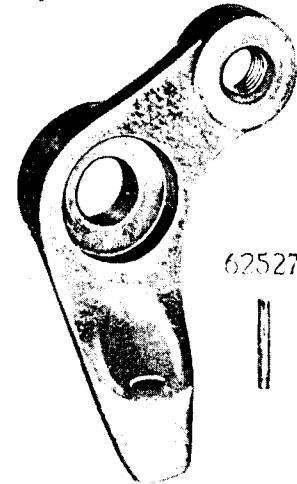

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>