

Pop & Clean Can Opener

Easy to Clean
Just press the button!
Dishwasher safe

Easy to Use
Large handle
design with
Soft-Touch Start

Model No. 3112



Sunbeam®

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put can opener, cord, or plug in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts.
6. Do not open pressurized (aerosol-type) cans.
7. Do not open cans of flammable liquids such as lighter fluids.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to the authorized service facility for examination, repair, or electrical or mechanical adjustment.
9. The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock, or injury.
10. Do not use outdoors.
11. Do not let cord hang over the edge of the table or counter, or touch hot surfaces.
12. Do not leave can opener unattended while it is operating.
13. Do not operate this appliance in the presence of explosive and/or flammable fumes.

SAVE THESE INSTRUCTIONS

FORHOUSEHOLDUSEONLY

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat the safety features. And Download.

TO USE THE CAN OPENER**OPENING CANS**

 
 
 
1. Plug electrical cord into 120 volt, 60 cycle AC outlet.
2. Place can against front of drive wheel with top edge of can touching guide pin.
(See diagram A)
3. Push handle down and hold until the can lid is automatically pierced and the cutting action begins. (See diagram B)
4. It is not necessary to hold the can opener handle down during the cutting cycle.
5. When can is fully opened, the cutting action will automatically stop. The can will remain in position until the handle is raised. To release the can, grip the can firmly in one hand and raise the handle with the other hand. (See diagram C) The magnet will retain the lid.

Dented Cans

Occasionally, badly dented cans will cause the can opener to stall. If this happens, grasp the dented can and guide it through the cutting action manually, until the damaged areas are passed.

Jammed Cans

To open a can that has become jammed, raise the can opener lever and release the can. Begin the cutting action again in a new place on the can lip.

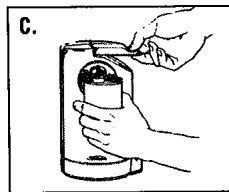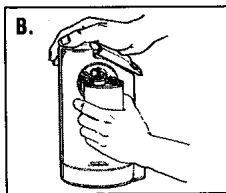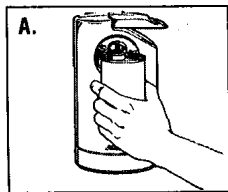



CLEANING

Before cleaning UNPLUG THE CORD FROM OUTLET. To insure proper sanitation, the Pop & Clean™ module should be detached and cleaned thoroughly in the dishwasher or in warm, sudsy water at regular intervals. The motor housing wipes easily using a damp cloth. NEVER IMMERSE THE MOTOR HOUSING IN WATER.

REMOVING THE POP & CLEAN MODULE

MAKE SURE THE HANDLE IS IN THE UPRIGHT POSITION. Unplug the can opener. Hold the can opener with both hands and firmly press down on the eject button. (see Diagram A) Pull the module out using the magnetic arm.

  To replace the POP & CLEAN™ Module grip the unit with both hands and firmly push the module with magnet side facing out into the unit. (See diagram B)

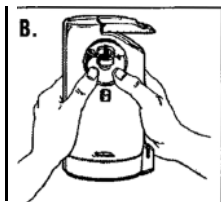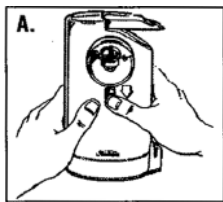

Cord Storage

A cord storage area is located on the bottom of the unit to store excess cord. Pull out as much cord as required to reach the outlet.

Maintenance

The motor and internal gears of your can opener unit are permanently lubricated at the factory for lifetime service and require no further attention. The cutting blade is made of hardened steel and is a special design. It will last for years under normal use. DO NOT attempt to sharpen and any other maintenance should be performed by an authorized service representative.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

NOTES/NOTAS



NOTES/NOTAS



NOTES/NOTAS



Statement of Warranty

2 YEAR LIMITED WARRANTY

Sunbeam-Oster Household Products warrants that, for a period of two years from date of purchase, this product shall be free of mechanical and electrical defects in material and workmanship. Our obligation hereunder is limited to repair or replacement, at our option, of this product during the warranty period, provided the product is sent postage prepaid directly to our factory service center:

SUNBEAM-OSTER HOUSEHOLD PRODUCTS
APPLIANCE SERVICE STATION
117 Industrial Central Row
Purvis, MS 39475

DO NOT RETURN THIS PRODUCT TO THE PLACE OF PURCHASE; ACTING OTHERWISE MAY DELAY THE PROCESSING OF YOUR WARRANTY CLAIM. This warranty does not cover normal wear of parts, damage resulting from any of the following: negligent use or use of the product, use on improper voltage or current, use contrary to operating instructions, or disassembly, repair, or alteration by any person other than our factory service center. Product repair or replacement as provided under the above warranty is your exclusive remedy. Sunbeam Corporation (of which Sunbeam-Oster Household Products is a division), shall not be liable for any incidental or consequential damages for breach of any express or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of the above warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

01994 Sunbeam-Oster Company, Inc. or its affiliated companies. All rights reserved.

Sunbeam and Oster are registered trademarks of Sunbeam-Oster Company, Inc. or its affiliated companies.

P.N. 66071

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>