

Sunbeam

Cafe Creamy™

Automatic Milk Frother

Instruction and Recipe Booklet
EM0180

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your Cafe Creamy™	2
Using your Cafe Creamy™	4
Preparing Hot Milk with Foam	4
Preparing Hot Milk Beverages	5
Preparing Cold Milk Beverages	6
Care and Cleaning of your Cafe Creamy™	7

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM CAFE CREAMY™.

- Do not touch the heating element surface during or after operation as this may result in burning.
- Always use the handle on the milk jug when using this appliance.
- Do not insert foreign objects such as knives or forks into the milk jug while in operation.
- Always secure the milk jug lid before operation, as hot contents may be ejected during use.
- Only operate when the milk jug is filled above the 'min' indication. Do not use when empty.
- Never fill the jug above the 'max' indication as hot contents may be ejected.
- After foaming and heating milk the empty appliance needs approximately 4 minutes to cool down. The appliance can only be operated again after cooling.
- Intended for heating, foaming and blending milk only.
- Only operate the appliance when the milk jug is correctly attached.
- The milk frother is only intended for use with the jug provided.

Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your Sunbeam Cafe Creamy™

Plastic Lid

Ensures no spillage while heating, foaming or blending milk.

Foam Blender Attachment (Labelled 'FOAM')

Create hot, foamed milk for your coffee.

Jug Handle

 
Allows easy handling before and after operation, and while milk jug is hot.

 
Milk Jug

250mL capacity is large enough to create frothy milk for two standard coffees.
Easily removed for cleaning.

Push Button Control Panel

Easy to use control panel delivers cold milk, hot milk or foamed milk.

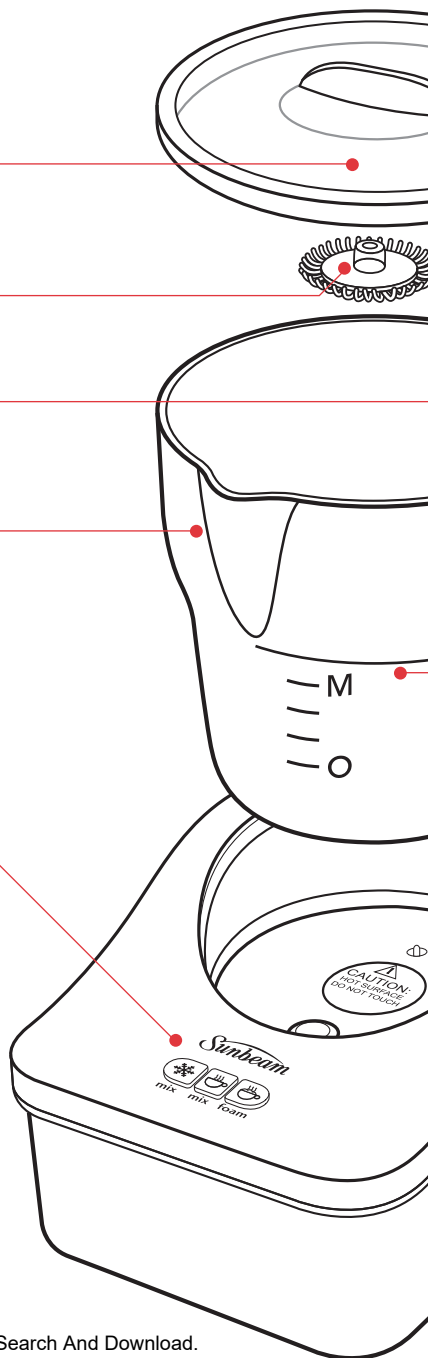

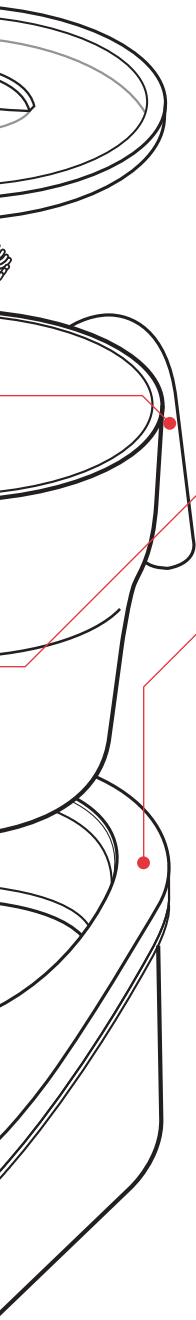

Filling level indicators

With 'max' and 'min' level indication marks

Power base

With a powerful 650W element for heating, foaming and blending milk quickly.

Automatic Temperature Control

Ensures milk does not burn during heating and foaming process.

Accessory Storage

Blending attachments can be stored easily underneath the power base, clipping into place using magnets.

Accessories

Milk Mixing Attachment (Labelled 'MIX')

Blends chocolate powder with milk to create either hot chocolate or cold chocolate drinks.

Foam Blender Attachment (Labelled 'FOAM')

Create hot, foamed milk for your coffee.

Cord Storage

Non-slip rubber feet

Makes the unit sturdy, preventing it from slipping or scratching the bench top.

Using your Cafe Creamy™ Automatic Milk Frother

Before using your Cafe Creamy™ Automatic Milk Frother for the first time, wash the milk jug and plastic lid in warm, soapy water. Rinse and dry thoroughly. Repeat with the foam and milk mixing attachments located underneath the power base.

Note: Do not immerse the power base in water or any other liquid, or allow moisture to come into contact with these parts. See Figure 1.

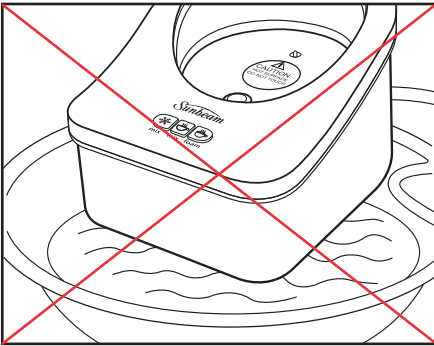 


Figure 1

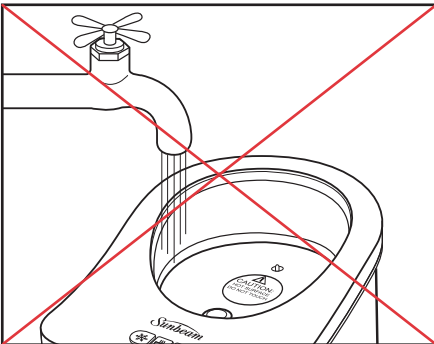 


Figure 2

Note: Do not place any part of the appliance in the dishwasher.

Note: To stop the appliance at any time, press the button on the control panel originally activated again.

Preparing Hot Milk Beverage with Foam

1. Remove the milk jug from the power base.
2. Open the lid of the milk jug and insert the foam blender attachment into the base of the milk jug.
3. Pour milk into the milk jug, to a maximum of 250mL, the level that is marked with 'M' for max. See Figure 3.

Tip: To create a frothy hot chocolate, simply add 1-2 tablespoons of chocolate powder.

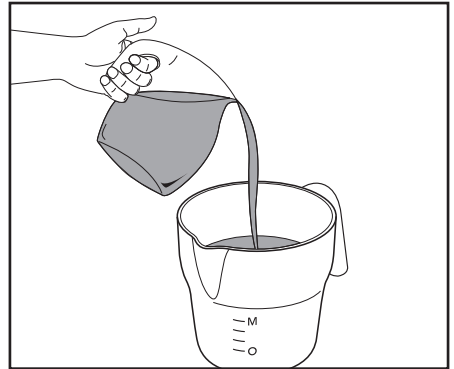 


Figure 3


Note: If you fill the milk jug above the maximum level, hot milk may be ejected during operation.

Note: The milk jug must also be filled above the minimum level, as indicated by 'O' symbol, to operate properly.

4. Secure the lid onto the milk jug
5. Plug the power cord into a 230-240V AC power outlet and switch the power on and place the milk jug on the heating element on the power base.

Note: The appliance does not have an on/off button. Functions are activated through pressing feature buttons located on the control panel.

Using your Cafe Creamy™ Automatic Milk Frother (continued)

6. Press the  foam milk button to begin the milk foaming function. In approximately 1 to 2 minutes, dependent on the volume of milk, the appliance will automatically switch off and you will be left with hot, foamed milk in the milk jug.

Note: The foam milk button selected will remain illuminated during operation, and will turn off automatically when the milk foaming is complete.

Note: Only remove the milk jug from the power base to pour using the jug handle, as the milk jug body may be hot. Do not drink directly out of the milk jug.

Note: Flashing control panel lights indicate the appliance is cooling down. Please wait approximately 4 minutes before restarting the appliance.

7. Follow cleaning instructions in the 'Care and Cleaning Instructions' section of this manual found on page 7, after use to ensure long life.

Preparing Hot Milk Beverages


1. Remove the milk jug from the power base.
2. Open the lid of the milk jug and insert the milk mixing attachment into the base of the milk jug.
3. Pour milk into the milk jug, to a maximum of 250mL, the level that is marked with 'M' for max. See Figure 3.

Note: If you fill the milk jug above the maximum level, hot milk may be ejected during operation.

Note: The milk jug must also be filled above the minimum level, as indicated by 'O' symbol, to operate properly.

4. Add 1-2 tablespoons of chocolate powder or an espresso shot and secure the lid onto the milk jug
5. Plug the power cord into a 230-240V AC power outlet and switch the power on and place the milk jug on the heating element on the power base.

Note: This appliance does not have an on/off button. Functions are activated through pressing feature buttons located on the control panel.

6. Press the  mix hot milk button to begin the milk blending function. In approximately 1 to 2 minutes, dependent on the volume of milk, the appliance will automatically switch off and you will be left with a hot milk beverage in the milk jug.

Note: The blend milk button selected will remain illuminated during operation, and will turn off automatically when the milk blending and heating is complete.

Note: Only remove the milk jug from the power base to pour using the jug handle, as the milk jug body may be hot. Do not drink directly out of the milk jug.

Using your Cafe Creamy™ Automatic Milk Frother (continued)

Note: Flashing control panel lights indicate the appliance is cooling down. Please wait approximately 4 minutes before restarting the appliance.

7. Follow cleaning instructions in the 'Care and Cleaning Instructions' section of this manual found on page 7, after use to ensure long life.

Note: The blend cold milk button selected will remain illuminated during operation, and will turn off automatically when the milk blending and heating is complete.

7. Follow cleaning instructions in the 'Care and Cleaning Instructions' section of this manual found on page 7, after use to ensure long life.

Preparing Cold Milk Beverages


1. Remove the milk jug from the power base.
2. Open the lid of the milk jug and insert the milk mixing attachment into the base of the milk jug.
3. Pour ice-cold milk into the milk jug, to a maximum of 250mL, the level that is marked with 'M' for max. See Figure 3.

Note: If you fill the milk jug above the maximum level, milk may be ejected during operation.

Note: The milk jug must also be filled above the minimum level, as indicated by 'O' symbol, to operate properly.

4. Add 1-2 tablespoons of chocolate powder, instant coffee or an espresso shot.
5. Plug the power cord into a 230-240V AC power outlet and switch the power on and place the milk jug on the heating element on the power base.

Note: The appliance does not have an on/off power button. Functions are activated through pressing feature buttons located on the control.

6. Press the  mix cold milk button to begin the cold milk blending function. In approximately 3 minutes, the appliance will automatically switch off and you will be left with cold milk beverage in the milk jug. Pour into a glass filled with ice to keep cool.

Care and Cleaning Instructions

Always disconnect the Cafe Creamy™ from the power outlet before cleaning any parts.

Note: Before cleaning after use, wait for the appliance to cool down.

Note: Do not immerse the power base in water or any other liquid, or allow moisture to come into contact with these parts.

See Figure 1.

Note: Do not place any part of the appliance in the dishwasher.

Preparing for use

Before using your Cafe Creamy™ Automatic Milk Frother for the first time, wash the milk jug and plastic lid in warm, soapy water. Rinse and dry thoroughly. Repeat with the foam blender and milk mixing attachments located underneath the power base.

Cleaning the Milk Jug and Blending Attachment after use

After removing the milk jug from the power base and emptying its contents, wait for the milk jug to cool down. Then remove the blender attachment from the base of the milk jug. When cleaning the inside of the milk jug and blending attachment, hand-wash only using a sponge or a soft brush together with normal dish washing liquid. Be careful when cleaning the base of the milk jug where the heating element has contact, as it must not be scratched.

Cleaning the power base in case of spillage

If milk spills onto the power base, switch off the power outlet immediately and remove the plug. Using a damp cloth gently wipe spillage from power base. Ensure appliance is dry before plugging into power outlet.

Note: Do not use any solvents or abrasive agents for cleaning. Do not use and sharp or hard instruments such as steel wool for cleaning.

Notes

12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington
Auckland, New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered trademark.

'Cafe Creamy™' is a trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2010.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

Unit 3, Building D
26 Vestey Drive
Mt Wellington Auckland
New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>