

BRITA Kettle

Instruction Booklet

This book covers the use and care of the following Sunbeam Kettles:

KE5300 BRITA Select – Illuminated cordless filter kettle

KE5800 BRITA Stainless – Illuminated stainless steel filter kettle

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	5
Features of your BRITA Kettle	6
Using your BRITA Kettle	8
Sunbeam's 3-Way Safety System	9
Preparing the filter cartridge for use	10
Using the Memo function	11
Care and Cleaning	12

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşılığundan emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM KETTLE

- Always operate the kettle on a flat, level surface.
- Boiling water will scald. Do not leave a boiling or hot kettle near or where children may touch it.
- Do not leave the power cord near the edge of a bench top where children may touch or pull it.
- Always store excess cord in the storage facility underneath the power base.
- Always ensure the lid is securely closed to ensure correct operation of the kettle.
- Always ensure that the filter funnel is positioned securely in the funnel guide.
- Always beware of steam being emitted from the spout or lid especially during refilling.
- Boiling water may be ejected if overfilled.
- Do not operate the kettle without water.
- Do not use the kettle to heat anything other than water.
- Never attempt to filter untreated, raw water or water of unknown quality. The filter must only be used with locally treated tap water.
- Never filter any hot or boiling water.
- Never fill above the 'max' indication as hot water may be ejected.
- Do not move the kettle while switched on.
- Always turn the power off and unplug the cord while the kettle is NOT in use.
- This kettle must only be used with the power base supplied.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

Features of your BRITA Kettle

3-Way Safety System

- 1 – Automatically switches the kettle off after boiling.
- 2 – Cuts out for boil-dry protection.
- 3 – Shuts down in case of overheating.



2400 watt concealed element

 
The fast boil 2400 watt element is concealed in the base of the kettle for longer element life. The smooth stainless floor reduces scale build up and allows for easy cleaning.

 
360 degree cordless power base

Designed to allow you to place the kettle on the base in any direction.

Cord storage facility

Excess cord can be wound around the cord storage facility underneath the power base.

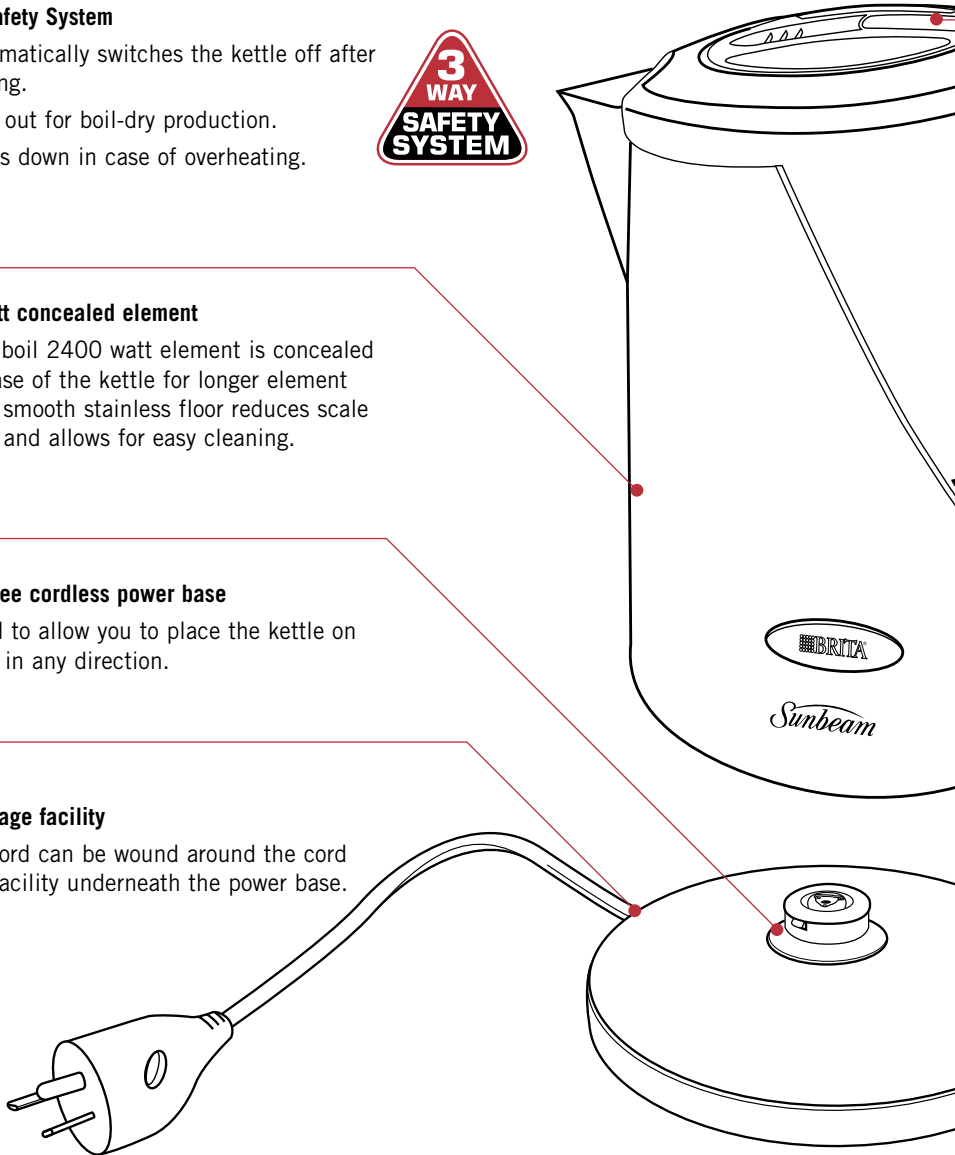

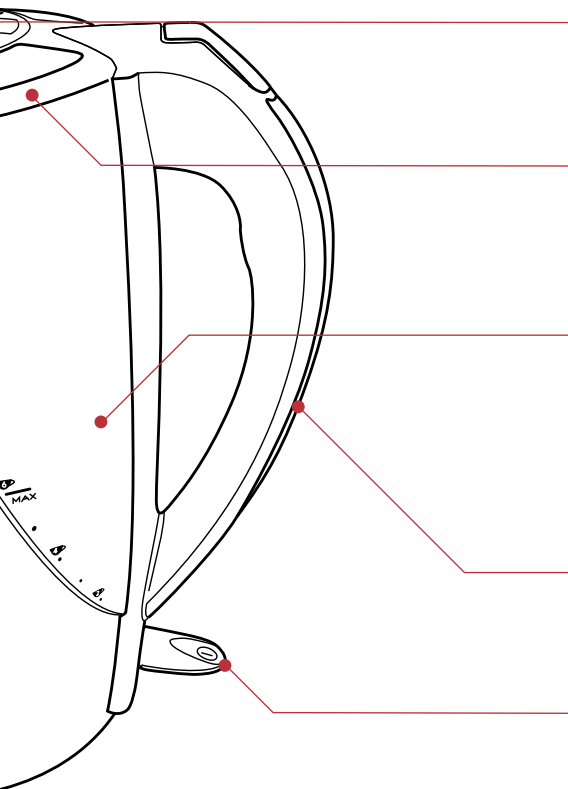

Memo display

The electronic cartridge exchange indicator automatically reminds you to replace the filter cartridge every 8 weeks.

Hinged locking lid

Opens at the push of a button for one-handed use and for safety, locks shut to reduce the chance of accidental scalding.

 
Water window

With power ON illumination, indicates the volume of water in the kettle. Maximum capacity when using the BRITA filter is 1.25 litres and with the BRITA filter and filter funnel removed is 1.7 litres.

Soft grip handle

Contoured design for easy handling and pouring.


**BRITA filter funnel
with mesh filter**

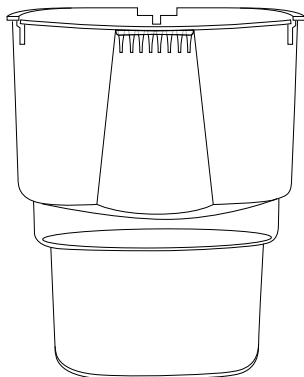

ON/OFF Switch

The translucent water window illuminates to indicate that the kettle is on and heating and switches the kettle off automatically after boiling.

 BRITA Maxtra filter cartridge

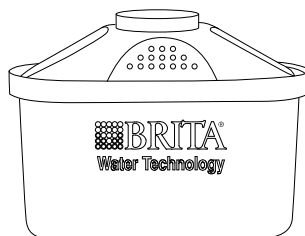

Using your BRITA Kettle

Before using your kettle

- Remove any packaging or promotional material from the kettle.
- Remove the filter cartridge from the filter assembly and keep in a safe place.
- Remove the filter assembly, wash in warm, soapy water, rinse and wipe dry.
- Position the kettle on a dry, level, secure bench top.

Using your kettle

Important: Prior to using your kettle see sections 'Preparing the filter cartridge for use' and 'Using the Memo function'.

1. To fill the kettle, remove it from the power base and lift the lid, by pressing the button on the top of the handle.

Note: Do not fill the kettle through the spout.

2. Fill the kettle with the desired amount of water. Always fill the kettle between the minimum and maximum marks. Too little water will result in the kettle switching off before the water has boiled.

Note: Do not fill the kettle over the maximum level, as water may spill out of the spout when boiling. When using the kettle with the BRITA filter the maximum capacity is 1.25 litres.

With the BRITA filter and filter funnel removed the maximum capacity is 1.7 litres.

3. Push the lid closed firmly until it locks into position.

4. Place the kettle on the power base and connect the plug into a 230/240 Volt AC power outlet. Turn the power ON.

Important: The kettle is designed to boil and filter water at the same time, however some water does need to filter through to avoid the kettle boiling dry. Therefore if the kettle is empty prior to filling, before switching the kettle on wait a moment after adding the water to allow some water to pass through the filter first.

5. Press the ON/OFF switch. The internal water chamber illuminates and this is visible through the water windows. The kettle will switch off automatically once the water has boiled.

Note: Ensure that the ON/OFF switch is clear of obstructions and the lid is firmly closed. The kettle will not turn off if the ON/OFF switch is constrained or if the lid is left open. Do not remove the kettle from the power base while in use.

6. Lift the kettle from the power base and pour the water.

Note: Use caution when pouring the water from your kettle, as boiling water will scald.

 
7. The kettle may be stored on the power base while not in use. The kettle will not re-boil until the ON/OFF switch is pressed downward.

Note: Ensure the power is turned off at the power outlet when the kettle is not in use.

Should you accidentally allow the kettle to operate without water, boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

Cord storage facility

Excess cord can be stored by winding the cord around the storage facility underneath the power base.

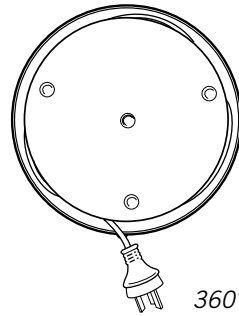

360° power base

Sunbeam's 3-Way Safety System



Safety is a major consideration in the design of a Sunbeam kettle. This is why we have developed our 3-Way Safety System, which ensures that your kettle will:

1. Automatically switch off after boiling

For convenience, safety and energy efficiency, your Sunbeam kettle features an auto cut-out device.

2. Cut-out for boil-dry protection

If the kettle is operated without water, it will automatically cut-out, preventing any damage to the element.

3. Shut-down in case of overheating

In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to a Sunbeam Service Centre or Appointed Service Agent.

Preparing the filter cartridge for use

1. Remove the cartridge from its wrapping (it is normal for the cartridge to appear moist during storage).
2. Immerse the cartridge in cold water and agitate gently to remove any air bubbles. See figure 1.

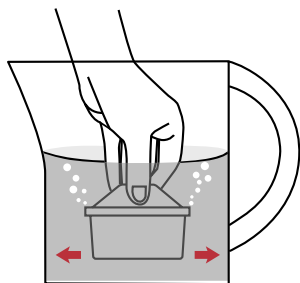 


Figure 1

Note: There is no need to presoak this cartridge before use.

3. Insert the cartridge into the filter funnel assembly and push it firmly into place. When correctly fitted, the cartridge should remain in place when the funnel is turned upside-down. See figure 2.

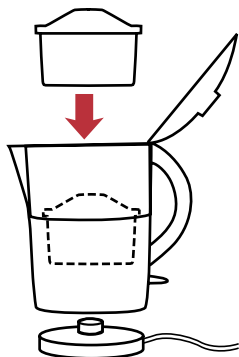 


Figure 2

4. Fill the filter funnel with cold water and allow it to filter through, and then discard the water. Repeat this process, again discarding the water. See figure 3.

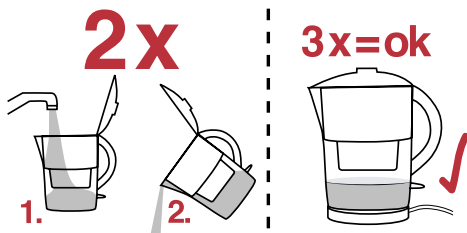 


Figure 3

5. Refill the filter funnel with water, the filter is now ready for use. See figure 3.

Note: You do not need to keep the filter cartridge immersed in water.

Removing the filter cartridge

- When it is time to replace the cartridge after 8 weeks use, simply lift the handle on top of the cartridge to remove. See figure 4. The cartridge may be disposed of in household waste or contact the BRITA Care Team for advice on recycling schemes.

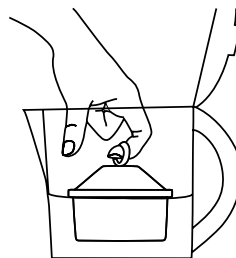 


Figure 4

- Always ensure that you have spare cartridges available.
- Repeat steps 1-5 with a new cartridge.

Using the Memo function

It is important to change your filter cartridge regularly to enjoy the benefits of filtered water and keep your kettle scale free.

The BRITA Memo system automatically reminds you when your filter cartridge needs to be changed.

When you have fitted and prepared your filter cartridge, start the Memo system as follows:

- Press and hold the Start button until 4 bars appear on the display and flash twice. The Memo is now set. The flashing dot in the corner of the display indicates that the Memo is working. See figure 5.

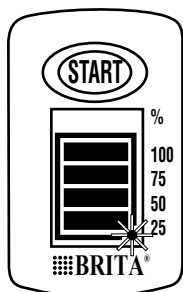 


Figure 5

It is important to change your filter cartridge regularly to enjoy the benefits of filtered water and keep your kettle scale free.

The BRITA Memo system automatically reminds you when your filter cartridge needs to be changed.

When you have fitted and prepared your filter cartridge, start the Memo system as follows:

- Press and hold the Start button until 4 bars appear on the display and flash twice. The Memo is now set. The flashing dot in the corner of the display indicates that the Memo is working. See figure 5.

- At the end of every two weeks, one bar will disappear to indicate the remaining cartridge life. When only one bar is showing, check that you have a replacement filter cartridge available. See figure 6.

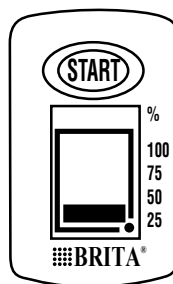 


Figure 6

- After 8 weeks, all four bars will disappear and a flashing arrow will appear to indicate that the cartridge should be replaced. See figure 7.

Wash and dry the filter funnel, insert a new cartridge (see 'Preparing the filter cartridge for use') and restart the Memo as described above.

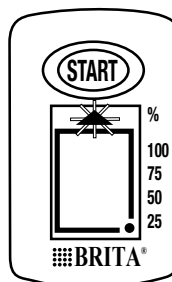 


Figure 7

Note: The Memo system is only intended to be used with BRITA filter cartridges.

Care and Cleaning

Always disconnect the kettle from the power outlet before cleaning.

Never immerse the kettle switch area, cord or power base in water, or allow moisture to come into contact with these parts.

Removal of mineral deposits

The BRITA Maxtra filter cartridge will continuously reduce the limescale content in the water, however over time mineral deposits in tap water may cause the interior of the kettle to discolour.

To remove this build-up, use Sunbeam Liquid Descaler, a simple to use, non-toxic cleaner available from Sunbeam Appointed Service Agents.

Note: Should the kettle require descaling, always remove the BRITA Maxtra filter cartridge from the filter funnel.

Alternatively:

1. Fill the kettle with 3 cups of white vinegar and the remainder with water and allow to stand overnight. DO NOT BOIL.

2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

To clean the exterior surface

The surface may be wiped over with a damp cloth and polished with a soft dry cloth.

CAUTION: Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle, as these will scratch the surface.

Cleaning the concealed heating element

This kettle features a non-corrosive stainless steel heating element. Over time, scale may build up on the concealed element inside the kettle, causing discolouration that may have the appearance of rust. Be assured this is not rust. If this occurs clean with a green Scotchbrite® scourer or similar and a suitable abrasive cleaning cream. Rinse and clean thoroughly with tap water before using your kettle again.

For BRITA filter cartridge and Memo queries, contact BRITA Consumer Care.

Australia
1300 557 762

New Zealand
0800 427 482

Notes

'Sunbeam', is a registered trademark of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2005.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand 0800 786 232.

07/05



Consumer Hotline

Australia

1800 025 059

New Zealand

0800 786 232

www.sunbeam.com.au


BRITA Consumer Care

Australia

1300 557 762

New Zealand

0800 427 482

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2005.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>