

*Sunbeam*

# Food Scales

Electronic kitchen scales with 5kg capacity

Instruction Booklet

FS7500

Please read these instructions carefully  
and retain for future reference.



# Contents

<b>Sunbeam's Safety Precautions</b>	<b>1</b>
<b>Features of your Food Scales</b>	<b>2</b>
<b>Using your Food Scales</b>	<b>4</b>
<b>Care and Cleaning</b>	<b>5</b>

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenli̇k önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM FOOD SCALES.

- Always lift your kitchen scales from the base.
- Always operate on a flat level surface.
- Use a 9V Alkaline battery (not included).
- Do not place objects on top of the scales when not in use or in storage.
- Remove the battery if the scales are not being used for a prolonged period.

 
---

**Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off when not in use and before cleaning.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Young children or infirm persons should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or in a heated oven. Do not place on top of any other appliance.
- Do not immerse in water.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof means as specified by S.A.A. (Standards Association of Australia). Such appliances should always be returned to the nearest Service Centre for adjustment or repair if required.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

# Features of your Food Scales

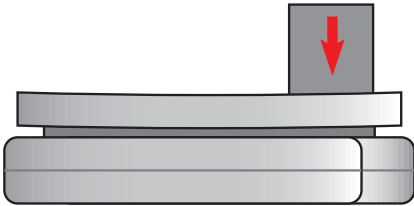

## Technology Strain Gauge

 
With Strain-Gauge technology, the Sunbeam Food Scales weigh ingredients accurately, regardless of where it is positioned on the glass weighing platform.

 
## Power saving LCD display

The large LCD display makes it easy to see weights and warnings.

## Gram/Ounce measurements

The large LCD display will display either gram or ounce measurements for use with metric or imperial recipes.

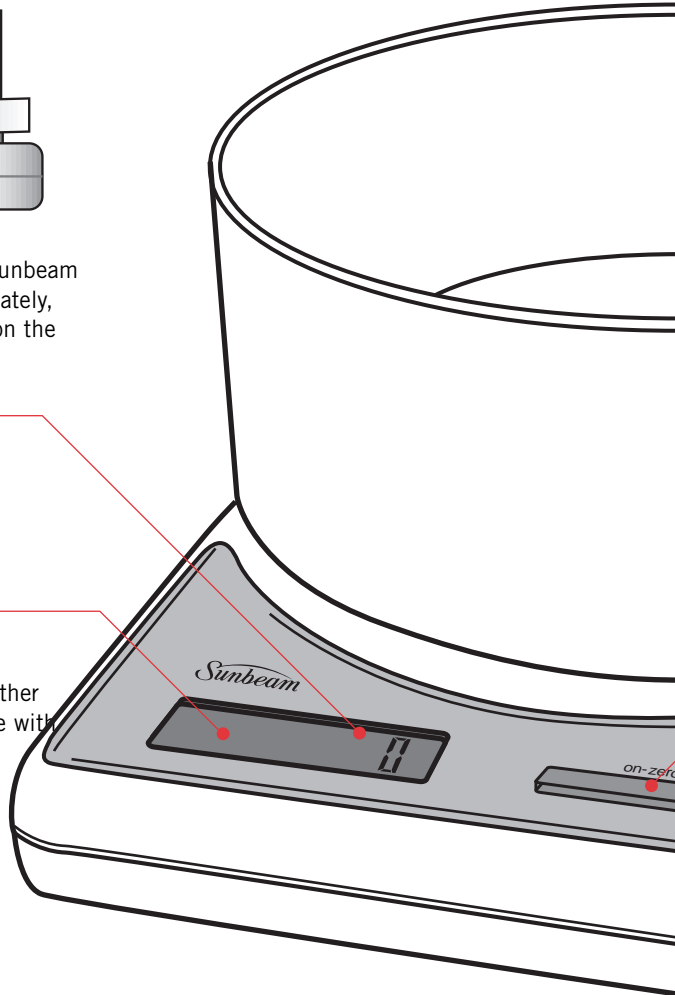

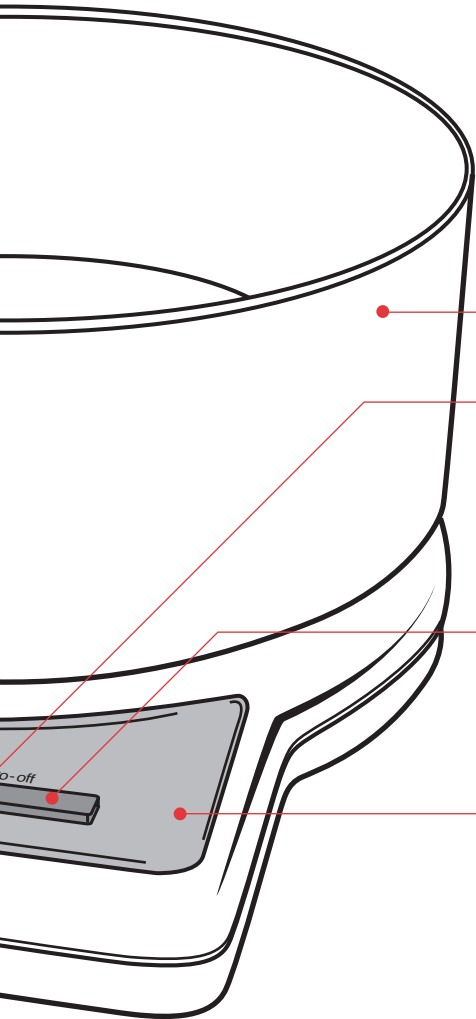

**800ml measuring bowl**

Large 800ml capacity bowl is ideal for measuring dry and wet ingredients.

**Add & weigh/zero function**

'Zero' function allows you to zero the weight of any type of container to which consecutive ingredients can be added, yet weighed individually.

**Automatic power off function**

**Low Battery Indicator**

When the life of the battery is low the LCD display will show batt.

# Using your Food Scales

1. Install a 9V alkaline battery in the underneath of the unit, replace the battery cover and place scales on a flat level surface.

**Note:** Rechargeable batteries are not suitable for the Food Scales electronic food scales.

2. If using the bowl or any other container, place container on platform before turning on the scale.
3. The Food scales weighs in grams or ounces.  
To select your preference, simply slide the switch on the bottom/base of the scale.
4. Turn on the Food Scales by pressing the **On** button. The LCD will display 0g or 0.0lbs, oz.
5. Place ingredients either in the container or directly onto the weighing platform.  
The weight will be displayed on the LCD display. As more ingredients are added the weight displayed on the LCD will automatically increase.

## Add & Weigh / Zero function

Your Food scales electronic food scales allows you to add consecutive items to the container, whilst weighing each item individually.

1. Follow steps 1 - 5 in using your Food scales electronic food scales.

2. Press the 'Zero' button and add your next ingredient to the bowl. The LCD will display the weight only of the last item added.
3. Repeat step 2 for weighing any additional ingredients.

## Overloading function

When the Food scales electronic food scales is overloaded, the LCD will display: **EEEE**  
Remove the weight immediately, as the excess weight may damage the scales.

## Low battery indicator

When the battery is running low, the LCD will display: **batt.**  
Replace the 9V alkaline battery.

## Replacing your battery

1. To replace your battery, remove the battery cover on the underside of the scales.
2. Place the new 9V alkaline battery on to the battery plug and press firmly into place.
3. Replace the battery cover.

**Note:** Remove the battery whenever the scales will be stored for a prolonged period of time.

# Care and Cleaning

Turn the Food Scales off when not in use and remove the battery if storing for prolonged periods.

**Note:** Never store with anything on top of your food scales, as the excess weight may damage them.

Wipe the weighing platform with a soft, slightly damp cloth and wipe dry. For

stubborn dirt, wipe with a damp cloth and mild detergent and wipe dry.

**Do not place the food scales in the dishwasher.**

**Note:** Never immerse the food scales in water.

'Sunbeam', is a registered trademark of Sunbeam Corporation.

Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 12 Month Replacement Guarantee and National Service Network.

**© Copyright. SUNBEAM CORPORATION LIMITED 2003.**

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line.

**Australia 1800 025 059**

**New Zealand (09) 912 0747.**





## Consumer Hotline


Australia

1800 025 059

New Zealand

(09) 912 0747

[www.sunbeam.com.au](http://www.sunbeam.com.au)

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2003.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>