

Life's Good



LG

AX8600

Quick Start Guide



Playing Music



Bluetooth® Pairing



Sending a vCard



Taking a Picture/
Recording a Video



USB Mass Storage

www.LGUSA.com

Getting to Know Your Phone

Volume Up/Down



Charging/Headset Adapter Port

Camera



Speaker

Touch Music Keys



Voice Command Key

Camera/Video Key

Contact List

Music

Left Soft Key

Web

Send Key

Voicemail Key

Vibrate Mode Key

OK/Speakerphone* Key

Access™ Apps

Right Soft Key

Back/Camera Key

Power/End Key

microSD™ Port

* Speakerphone feature is only available while a call is in progress.

Playing Music

Flip Closed

 
 
1. Insert a microSD™ card* (gold contacts facing down) into the slot on the right side of the phone.
2. Press any side key to unlock the external keys, then tap and hold the ►|| Key.
3. Use the side **Volume Keys** ◀▶ to select a song, and tap the ►|| Key to play.
4. Tap the ◀◀ or the ▶▶ Keys to scroll through songs.
5. Tap and hold the ►|| Key to exit the music player.

Flip Open

1. Insert a microSD™ card.
2. Press **left** on the Navigation Key, choose a category, then press **OK** to play.
3. Use the **Volume Keys** ◀▶ to adjust volume when a song is playing.
4. Press the **End Key** to exit the music player.

*Sold separately

Note: In order for your AX8600 to recognize music files, you must first format the microSD card so the required folders will be created (see User Guide for steps). Then transfer MP3 or AAC files into the **LG_MEDIA > Music** folder on the microSD card using an adapter or USB cable.*

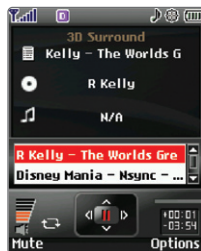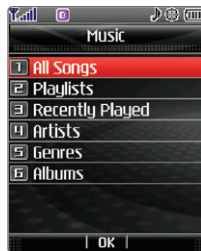 


Bluetooth Pairing

Enjoy hands-free entertainment and communication in the car, office, or at home with Bluetooth accessories, like a Bluetooth stereo headset for listening to music. Get wire-free convenience up to 30 feet away.

1. Set your Bluetooth accessory into pairing mode.*
2. Press **OK** , then select **Settings (9)**.
3. Select **Bluetooth (7)**, then **Paired Devices (1)**.
4. Press the **Left Soft Key** for **Search**.
5. If Bluetooth is set to off, you will be prompted to turn power on. Select **Yes (1)** and press **OK** , then **New Search (1)**.
6. The phone will now search for the accessory. Once found, highlight it and press **OK** to pair.
7. Enter the passcode (typically “0000” - 4 zeroes) and press **OK** .*
8. Press **OK** to connect with the device.

**Refer to the user manual of your Bluetooth accessory to activate pairing mode and for the passcode.*

 
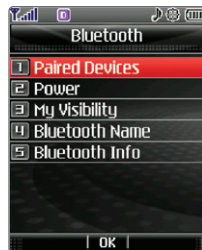 


Note: Bluetooth accessories sold separately.

Sending a vCard




 

Sharing contact information made easy. Send a vCard (electronic name card) to easily exchange names and phone numbers to another vCard-supported mobile phone or device via Bluetooth technology.

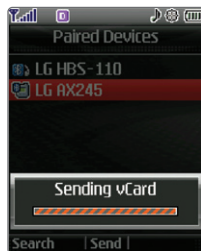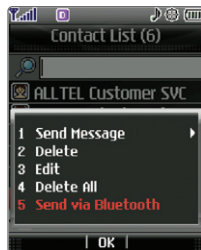

1. Press **up** on Navigation Key, highlight a contact and press the **Right Soft Key** for **Options**.
2. Select **Send via Bluetooth (5)**.
3. If Bluetooth is off, select **Yes (1)** .
4. Select a paired device from the list and press **OK** to send.

 


Taking a Picture/Recording a Video

Shooting photos on-the-fly has never been easier with the 1.3 megapixel camera. When you need to capture all the action, get it with live video and share it all instantly with Picture/Video Messaging.

1. To activate camera mode: With the flip open, press and *hold* the side **Camera/Video Key**  .
2. Press and *hold*  again to activate video mode.
3. Press **left** or **right** on the Navigation Key to adjust brightness. Press **up** or **down** to zoom. Press the **Right Soft Key** to adjust camera/video options.
4. Press  to take a photo or record a video. Press  to stop recording.
5. Press  to save or the **Left Soft Key** to send.

Note: To take a self-portrait with the flip closed, press and *hold*  and the side volume key. Press  again to take the picture.

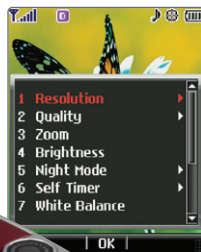

USB Mass Storage

Easily transfer your music (MP3 & AAC) and image (GIF, JPG, BMP, PNG) files between an optional microSD card* and your PC!

1. Insert a microSD card (gold contacts facing down) into the slot on the right side of the phone.
2. Power on the phone and connect it to your PC using a USB cable*.
3. Press **OK**, select **Settings (9)**, then **System (6)**.
4. Select **PC Connection (2)**, then **USB Drive (2)**.
5. The PC recognizes the phone as a **Removable Disk** under **My Computer**. Transfer your files by dragging and dropping them onto the Removable Disk icon.
6. When finished, disconnect the USB cable from the phone.

**Sold separately.*

Warning! Do not disconnect phone while file transfer is in progress.

Note: This feature only works in idle screen. The number of files you can store depends on the size of the memory card. Make sure the microSD card has been formatted on the phone so the required folders will be created for use with your AX8600 (see User Guide for steps).



Optional Accessories

Accessories for convenience and fashion are available at www.LGUSA.com.



Bluetooth Stereo Speakers



Bluetooth Stereo Headset



Bluetooth Headset



Bluetooth Headset



Portable Stereo Speakers



Vehicle Power Charger

©2007 LG Electronics, Inc. All rights reserved. All other trademarks are property of their respective owners. All phone images are simulated. The Bluetooth® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>