



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for AEG-ELECTROLUX L76475FL. You'll find the answers to all your questions on the AEG-ELECTROLUX L76475FL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual AEG-ELECTROLUX L76475FL
User guide AEG-ELECTROLUX L76475FL
Operating instructions AEG-ELECTROLUX L76475FL
Instructions for use AEG-ELECTROLUX L76475FL
Instruction manual AEG-ELECTROLUX L76475FL



L 76475 FL
L 76675 FL

EN User manual
DE Benutzerinformation

2
33



AEG
perfekt in form und funktion



[Your user manual](#)
[AEG-ELECTROLUX L76475FL](#)

Manual abstract:

• Always be careful when you move the appliance because it is heavy. Always wear safety gloves. • Make sure that there is air circulation between the appliance and the floor. • Adjust the feet to have the necessary space between the appliance and the carpet. **WARNING!** Risk of fire and electrical shock. • The appliance must be earthed. • Make sure that the electrical information on the rating plate agrees with the power supply. If not, contact an electrician. • Always use a correctly installed shockproof socket. • Do not use multi-plug adapters and extension cables.

• Make sure not to cause damage to the mains plug and to the mains cable. Should the appliance power supply cable need to be replaced, this must be carried out by our Service Centre. • Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. • Do not pull the mains cable to disconnect the appliance.

Always pull the mains plug. • Do not touch the mains cable or the mains plug with wet hands. • This appliance complies with the E.E.C. Directives. **ENGLISH 5 Water connection** • Make sure not to cause damage to the water hoses. • The appliance is to be connected to the water mains using the new supplied hose-sets. Old hose sets must not be reused. • Before you connect the appliance to new pipes or pipes not used for a long time, let the water flow until it is clean. • The first time you use the appliance, make sure that there is no leakage. • Do not put a container to collect possible water leakage under the appliance. Contact the Service to ensure which accessories can be used. **2.3 Care and Cleaning** **WARNING!** Risk of injury or damage to the appliance.

• Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket. • Do not use water spray and steam to clean the appliance. • Clean the appliance with a moist soft cloth. Only use neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects. **2.2 Use** **WARNING!** Risk of injury, electrical shock, fire, burns or damage to the appliance. • Use this appliance in a household environment. • Do not change the specification of this appliance. • Obey the safety instructions on the detergent packaging.

• Do not put flammable products or items that are wet with flammable products in, near or on the appliance. • Do not touch the glass of the door while a programme operates. The glass can be hot. • Make sure that you remove all metal objects from the laundry. **2.**

4 Disposal **WARNING!** Risk of injury or suffocation. • Disconnect the appliance from the mains supply. • Cut off the mains cable and discard it. • Remove the door catch to prevent children and pets to get closed in the appliance. **3.**

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 850 / 522 mm 540 mm 230 V 2200 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture 6 www.aeg.com Water supply pressure Water supply 1) Maximum load Spin speed Minimum Maximum Cotton Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) Cold water 7 kg 1400 rpm (L 76475 FL) 1600 rpm (L 76675 FL) 1) Connect the water inlet hose to a water tap with a 3/4" thread. **4. PRODUCT DESCRIPTION** 1 2 3 8 9 10 4 5 11 6 7 1 Worktop 2 Detergent dispenser 3 Control panel 4 Door handle 5 Rating plate 6 Drain pump 7 Feet for the appliance level 8 Water drain hose 9 Water inlet valve 10 Mains cable 11 Transit bolts 12 Feet for the appliance level **12 ENGLISH 7 4.1 Accessories** 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts. 3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. **5.**

CONTROL PANEL 1 2 3 Katoen Eco Coton Eco Super Eco 20 Min.



[Your user manual](#)

[AEG-ELECTROLUX L76475FL](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>