



Instrucciones PDF

Usted puede leer las recomendaciones de la guía del usuario, la guía técnica o la guía de instalación para AEG-ELECTROLUX L61270BI. Encontrarás las respuestas a todas sus preguntas sobre la AEG-ELECTROLUX L61270BI en el manual del usuario (información, especificaciones, consejos de seguridad, tamaño, accesorios, etc). Las instrucciones detalladas para la utilización aparecen en la Guía del usuario.

Manual de instrucciones AEG-ELECTROLUX L61270BI
Instrucciones de uso AEG-ELECTROLUX L61270BI
Manual de usuario AEG-ELECTROLUX L61270BI
Guía del usuario AEG-ELECTROLUX L61270BI
Modo de empleo AEG-ELECTROLUX L61270BI

LAVAMAT 61270 BI

EN WASHING MACHINE
ES LAVADORA

USER MANUAL 2
MANUAL DE INSTRUCCIONES 36



[Tus instrucciones](#)
[AEG-ELECTROLUX L61270BI](#)

Manual de resumen:

CHILD SAFETY DEVICE · When you activate this device, you cannot close the door. This prevents children or pets to be closed in the drum. To activate the device, turn it clockwise, until the groove is horizontal. To deactivate the device, turn it counterclockwise, until the groove is vertical. **INSTALLATION** · The appliance is heavy, be careful when you move it. · Do not transport your appliance without the transit bolts, you can damage internal components and cause leakages or malfunctions. **ENGLISH 5** · Do not install and connect a damaged appliance. · Make sure to remove all packaging and transport bolts. · Make sure that the mains plug is disconnected from the mains socket during installation. · Only a qualified person must do the electrical installation, the plumbing and the installation of the appliance.

This to prevent the risks of structural damage or injury. · Do not install or use the appliance where the temperature is less than 0 °C. · When you install the appliance on a carpet floor, make sure that there is air circulation between the appliance and the carpet. Adjust the feet to have the necessary space between the appliance and the carpet. **Electrical connection** · Make sure that the appliance is earthed.

· Make sure that the electrical information on the rating plate agrees with the power supply. · Always use a correctly installed shockproof socket. · Do not use multiple plugs and extension cables. There is a risk of fire. · Do not replace or change the mains cable.

Contact the service centre. · Make sure not to cause damage to the mains plug and cable. · Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation. · Do not pull the mains cable to disconnect the appliance. Always pull the mains plug. **Water connection** · Do not connect the appliance with old hoses already used. Only use new hoses. · Make sure not to cause damage to the water hoses. · Do not connect the appliance to new pipes or pipes not used for a long time.

Let the water flow for some minutes, then connect the inlet hose. · The first time you use the appliance, make sure that the water hoses and the couplings do not have leakages. **DISCARD THE APPLIANCE** 1. Disconnect the mains plug from the mains socket. 2. Cut off the mains cable and discard it. 3. Discard the door catch. This prevents children or pets to be closed in the appliance. There is a risk of suffocation (only for front-loading appliances).

TECHNICAL INFORMATION Dimensions Electrical connection: Width / Height / Depth Total depth Voltage Overall power Fuse Frequency 600 / 820 / 630 mm 640 mm 220-230 V 2000 W 10 A 50 Hz IPX4 Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture Water supply pressure Minimum Maximum 0,5 bar (0,05 MPa) 8 bar (0,8 MPa) 6

www.aeg.com Water supply 1) Maximum load Spin speed Cotton Maximum Cold water 7 kg 1200 rpm 1) Connect the water inlet hose to a water tap with a 3/4" thread. **ENGLISH 7 PRODUCT DESCRIPTION** 1 2 7 8 9 3 4 5 6 1 Detergent dispenser 2 Control panel 3 Door handle 4 Rating plate 5 Drain pump 6 Feet for the appliance level 7 Water drain hose 8 Mains cable 9 Water inlet hose 10 Feet for the appliance level 10 **ACCESSORIES** 1 2 1 Spanner To remove the transit bolts. 2 Plastic caps 4 3 To close the holes on the rear side of the cabinet after the removal of the transit bolts.

3 Anti-flood inlet hose To prevent possible leakage 4 Plastic hose guide To connect the drain hose on the edge of a sink. 8 www.aeg.com **CONTROL PANEL** 1 2 3 4 5 6 7 8 9 10 A B C 1 Programme selector dial 2 **TEMPERATURE** button (Temp.) 3 **SPIN** button (Centrif.



[Tus instrucciones](#)

[AEG-ELECTROLUX L61270BI](#)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>