

P2L-VM/P2E-VM INSERT

Your motherboard uses the ATI Rage IIC™ instead of the ATI Rage Pro™ as mentioned in the manual and therefore its specifications differ slightly from those listed in the manual. The following are some of the differences between your motherboard and the P2L-VM/P2E-VM with ATI's Rage Pro™ chipset:

ASUS P2L-VM/P2E-VM Motherboard Features (see page 8)

Onboard AGP VGA: Features ATI's Rage IIC™ chipset onboard with 4MB SDRAM.

AMC: AMC is NOT supported on this motherboard.

Video Driver

First Time Installation (Ignore page 67)

When starting Windows 95 (OSR2.0) or Windows 98, the operating system will detect that you have a new Standard PCI Graphics Adapter (VGA), then an **Updated Device Driver Wizard** will appear. You need to first allow Windows to install a standard PCI graphics adapter (VGA), and then install the correct driver from the CD. Click **Next**, **Finish**, and then **No** when prompted to restart your computer. Follow the procedure for **Install Video Driver and Utility** (see below).

Install Video Driver and Utility (Ignore page 68)

1. Reinsert your CD or double-click your CD drive icon in My Computer to bring up the autorun screen or run Setup.exe in the root directory of the CD.
2. Click **Install Video Driver and Utility** to begin the installation wizard.
3. Click the **Easy Install** button. The *ATI Installation* screen will appear.
4. Follow the wizard's on-screen instructions to complete the installation.

Install DirectX (Ignore page 69)

Reinsert your CD or double-click your CD drive icon in My Computer to bring up the autorun screen or run Setup.exe in the root directory of the CD. Click **Install DirectX5** from the main menu to begin installation. Once the installation is complete, your computer will restart without warning.

ATI Desktop (Ignore pages 75-84)

Video Driver Installation for Windows NT 4.0 (Refer to pages 86, 87)

Look in the \ATI\Winnt directory for the video driver.

Windows Video Player (Refer to page 99 of your manual)

Run ATI Player from **Start->Programs->ATI Multimedia**.

Audio Driver

First Time Installation (Ignore page 104)

If Windows does not automatically detect your audio device on startup, reinsert your CD or double-click your CD drive icon in My Computer to bring up the autorun screen. Click **UnInstall Audio Driver** from the main menu to uninstall your PnP device drivers and then restart Windows to allow Windows to automatically detect the onboard audio. Click **Next** when the *Update Device Driver Wizard* screen appears. Click **Other Locations** and then click **Browse**. Locate the \Audio\W95drv (for Windows 95), \Audio\W98drv (for Windows 98), or \Audio\Nt40drv (for Windows NT4.0) folder on the ASUS support CD and click **OK**. Click **OK** again and the device and driver location will be shown. Click **Finish** and you will be prompted to insert your CD again. Click **OK** and then click **Browse** to locate the audio drivers in the \Audio\W95drv, \Audio\W98drv, or \Audio\Nt40drv folder on the ASUS support CD and click **OK**. Click **OK** again to begin copying the files.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>