




Mobile Navigation TravelPilot Lucca 3.3




Operating Instructions
(long version)

Device Overview

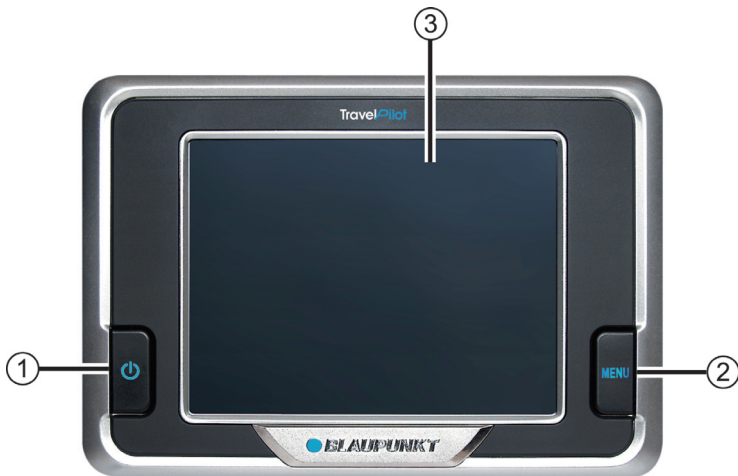


The following button are located beside the display:

- 1. Power (Screen ON/OFF):**
Long press (longer than three seconds): Switches the power on/off.
Short press: Switches the screen on/off. (battery saving mode)
- 2. Menu:**
Long press (longer than three seconds): Opens the main menu screen of the device.
Short press: Opens the quick settings menu.
- 3. 3.5" LCD Touchscreen:**
All entries and the control of Lucca are carried out in a simple and intuitive way by touching the buttons displayed on the touchscreen.

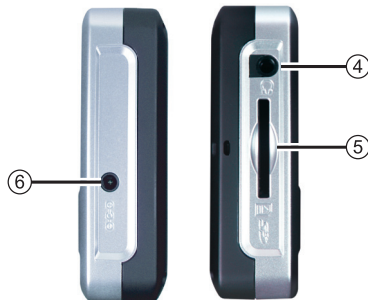

- 4. Headphone jack**
- 5. SD card slot**
- 6. DC power input jack**

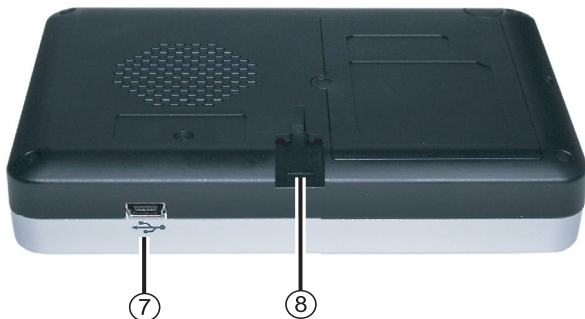

The underside features the following controls:

7. **USB Port**
8. **Connects the Lucca to the suction cup**

Device Overview	2	Menu Button	16
Safety notes	9	Quick Settings	16
Safety Notes for Navigation	9	Info	16
Safety Notes for Handling the Lucca	9	Additional Functions	16
Initial Startup of Lucca	10	Operating the Navigation Menus.....	17
Lucca Scope of Delivery	10	Software Keyboard	17
Protective Films and Covers	11	Entering Blank Spaces	17
Power On/Off.....	11	Deleting Characters	17
Setting the Language	12	Switching between Number, Umlaut and Character Input	18
Charging the Battery	12	Lists	18
Installation in the Vehicle	13	Buttons	19
Attaching the Suction Cup.....	13	Information	19
Removing the Suction Cup	14	GPS Status	19
Installing Lucca in the Suction Cup	14	Navigation	21
Removing the Lucca.....	14	General Notes about the Navigation.....	21
Power On/Off.....	15	Starting the Navigation	21
Power-on.....	15	Entering a Destination	22
Activating the Idle State.....	15	Navigating Home.....	22
Power-off	15	Showing a Map	22
Reactivating	15	Settings.....	22

Contents

Exiting the Menu	22	Copying the Destination from the Favourites	37
Additional Functions	22	Copying a Favourite for Destination Guidance	37
GPS Info.....	23	Additional Functions	38
Route Planning.....	23	Copying one of the Recent Destinations.....	38
Select Map.....	23	Additional Functions	39
Performing Basic Settings	23	Using Home Address as Destination	39
Setting the Time Zone	23	Managing Destinations	40
Entering the Home Address	24	Saving Destinations	40
Specifying a Destination	25	Saving one of the Recent Destinations.....	41
Entering a Destination	25	Renaming a Destination.....	41
Entering a Destination Country	25	Deleting a Destination	42
Entering a Destination Address	26	Deleting the Complete List	42
Additional Functions	27	Route Planning with Stages...43	
Selecting a Point of Interest	28	Entering Destination Points	43
Point of Interest in the Current Vicinity	28	Editing, Saving and Managing Routes.....	44
Additional Functions	30	Changing the Order	45
Point of Interest at a Specific Location	30	Deleting a Route Point	45
Special National Destination	32	Deleting a Complete Route List	45
Copying a Destination from the Map.....	34		
Moving the Map Section	34		

Managing Routes	45	Mute.....	54
Saving a route	45	Settings.....	54
Loading a route.....	46	Block Road, Unblocking.....	54
Calculating a Route.....	46	Inserting an Interim Destination ..	55
Displaying the Route on the Map.	47	Route Options.....	55
Simulation (demo mode).....	47	Next Destination	55
Specifying Route Options.....	47	Map Display during	
Destination Guidance	49	Destination Guidance	56
Disturbed GPS Reception.....	50	Navigation Tools.....	56
Quitting the Destination		Route Information.....	57
Guidance.....	50	Signpost Information	57
Reaching the Place of		Speed Limit	57
Destination	50	Showing Additional Map	
Working with the Map	51	Information	58
Map Operation.....	51	Map Information	58
Showing a Map	51	Route Information.....	59
Touching the Map	51	Signpost Information	59
Buttons	52	Speed	59
With Map View without GPS		Additional Functions during	
Reception.....	52	Navigation	61
With Map View with GPS		Inserting an Interim Destination ...	61
Reception.....	52	Approaching the Next Destination ..	62
Additional Functions.....	54	Blocking route segments	62
Day/Night Mode.....	54	Manual Blocking.....	62

Unlocking.....	63	Selecting MP3 Mode.....	72
Configuring Lucca/ Basic Settings	64	Starting Playback.....	72
Settings	64	Selecting a MP3 file	72
Language	64	Playback the MP3 File.....	73
Home Address	65	Repeated Play (Repeat).....	73
Map Information	65	Quitting Playback.....	73
Route Information.....	65	Removing the SD Card.....	74
Routing Options.....	66	Picture Viewer Mode	74
Route Planning.....	66	Starting the Picture Viewer.....	74
Signpost Information	66	Selecting a Picture file	75
Speed Limit	66	Starting the Slide Show.....	75
Auto Mode	67	Starting the Full Screen.....	76
Time Zone	68	Removing the SD Card.....	77
Format	68	Installing Street Maps	77
Representation	69	Removing the SD Card.....	78
Voice command	69	Technical Data.....	78
Factory Settings.....	69	Disposal of old unit	79
Touchscreen.....	69	Service	79
Product Information	70	Warranty	80
GPS Mode of Operation	70	Fault Removal / Frequently Asked Questions FAQ	80
MP3 Mode.....	71		
Preparing the SD Card.....	71		
Inserting the SD Card.....	71		

Safety notes

For your personal benefit, please carefully read the following safety notes and warnings before operating your Lucca for the first time.

Safety Notes for Navigation

**Caution:**

Do not operate the Lucca while driving to protect yourself and others against accidents!

View the display only if you are in a safe travel situation!

The street routing and traffic signs have priority over the instructions of the navigation system.

Follow the instruction of the Lucca only if circumstances and traffic regulations allow! Lucca will bring you to your destination even if you have to deviate from the planned route.

Notes:

- Routes are best planned before starting your trip. If you want to enter a new route while on the road, please head for the next parking or rest area!
- If you did not understand the voice information or if you are not sure what to do at the next intersection, use the map or arrow display for quick orientation.

Safety Notes for Handling the Lucca

**Caution:**

Protect the device against moisture since it is not waterproof and not splashproof.

Notes:

- Remove the power supply connector of the Lucca if you switch off

the engine since the GPS receiver constantly uses electricity and could discharge the vehicle battery.

- Do not unplug the connector by pulling on the wire. The wire could be damaged!
- Do not use harsh solvents to clean the device; use only a damp, lint-free cloth.

Initial Startup of Lucca

If you are starting up the Lucca for the first time, you must set your preferred language for the menus and the voice output.

Note:

Upon purchasing the Lucca the battery maybe empty. Please charge the battery before using the device.

When starting up the Lucca for the first time please allow the unit a few minutes to enter navigation mode.

Lucca Scope of Delivery

The scope of delivery contains the following components:

- Lucca Unit
- Suction Cup
- Connector charger for connecting to cigarette lighter (Cigar Plug)
- User's Manual (short version)

- CD/DVD with european road map and operating instructions (long versions)

Optional Accessories:

- Carrying Case
- DC Adapter
- USB Cable
- Second car kit
- VAN/SUV Suction Cup
- Holder for air vent opening

Protective Films and Covers

Prior to the initial use, remove the protective films from the display and front of the housing. Before inserting an SD card, please remove the dummy card. To protect the contacts, you can apply the elastic cover and dummy card again after using the Lucca.

Power On/Off

The **Power** button allows for turning the Lucca on or off. In its delivery state, the Lucca is switched off.

- Press the **Power** button on the bottom left-hand corner of the Lucca for longer than three seconds.



Setting the Language

If the Lucca is switched on for the first time, US English is used as the standard language. If necessary, you may have to set the desired language for the menus and the voice output:

→ Turn on the Lucca using the **Power** button.

A dialogue menu displays. In this menu you can select your preferred language.





→ Please follow the instructions.

The language is loaded and the main menu is displayed.

Charging the Battery

The rechargeable battery allows for operating the Lucca battery-operated without the external power supply.

The charge indicator of the battery is located in the top center of the screen. The symbols have the following meaning:

- : The device is supplied by an external power source. The battery is fully charged.
- : The device is supplied by an external power source. The battery is being charged.
- : The device is supplied by its internal battery. The charge state of the battery is sufficient.
- : The device is supplied by its internal battery. The charge state of the battery is low.

The number of dark block segments on the battery indicates the charge

state of the battery (0 to 3 segments).

Note:

If the charge state of the battery is very low, a warning message is displayed.

- To charge the battery, attach the supplied charger to the charging socket.

Note:

Use only original chargers for operating and charging the battery.

Note:

Do not discard any batteries in the household trash; instead, return them to the corresponding collection sites.

Installation in the Vehicle

For temporary installation in a vehicle, the Lucca features a suction cup to attach it to the windshield.



Caution:

Install the Lucca so that it does not block your view and does not distract from the traffic.

Do not install the Lucca in the airbag deployment area.

Ensure that the Lucca does not pose a threat to passengers in the vehicle in case of emergency braking.

Attaching the Suction Cup

The Lucca can be installed in the vehicle in a simple and safe way using the supplied suction cup.

- Locate a suitable place for installing the Lucca.
- To ensure a perfect hold, the glass must be free of dust and oil. If necessary, clean the glass first.

Installation in the Vehicle

- Press the suction plate of the support against the glass.
- Push the lever on the suction cup towards the glass.
- The track for mounting the Lucca must be aligned vertically.

Removing the Suction Cup


If you change vehicles, you can simply remove the suction cup.

- Push the lever on the suction cup away from the glass.
- Carefully loosen the suction plate at the edge of the glass so that air can enter between suction cup and glass.
- Carefully pull the suction cup off of the glass.

Installing Lucca in the Suction Cup

The suction cup features a track for mounting the Lucca on the inside.

- Carefully push the guide of the Lucca over the track of the suction cup.

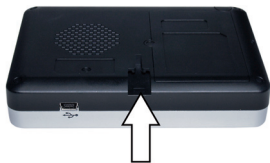

Removing the Lucca

- Pull the Lucca up and out of the suction cup.

Power On/Off

Power-on

- To power on the Lucca, push the **Power** button.

The device switches on and displays the logo screen.

Activating the Idle State

- To activate the idle state, briefly push the **Power** button.

The Lucca switches to the idle state (screen off state).

Power-off

- To power off the device, press and hold the **Power** button for longer than 4 seconds.

The Lucca is switched off.

Note:

In the power-off mode the Lucca is still using small amount of energy from the battery. After long period of time there is a possibility that the battery may need to be re-charged.

Reactivating

- Briefly push the **Power** button to power on the Lucca.

Menu Button


Quick Settings

In the *Quick Settings* menu volume and brightness can be adjusted. The *Quick Settings* menu can be entered at any time independent of the current menu being active.

→ Touch the **Menu** button.

The *Quick Settings* menu displays.

→ Touch the   buttons to adjust volume or brightness.

→  Touch this button to return to the previous menu.

Note:

After 5 seconds without touching the display Lucca returns automatically to the previous menu.

Info

Prerequisite:

- **A Navigation is active.**

→ Touch the **Info** button in the *Quick Settings* menu.

The last voice instruction is repeated.

Additional Functions

→ Touch the **More** button in the *Quick Settings* menu to gain access to additional functions.

- **Information**

- Touch the **Information** button to gain access to product information.

- **Battery**

- Touch the **Battery** button. The battery status displays.

- **Power Saving**

- Touch the **Power Saving** button. The *Power Saving* menu displays.

- *Backlight Time Out*: Touch the square on the right side to set the time until the backlight will be switched off after the last operation (for battery saving). Press the **OK** button to confirm.

- *Battery Warning Time Out*: Touch the square on the right side to set the timing for the battery warning. The battery warning will be displayed ac-

cordingly before the battery runs out. Press the **OK** button to confirm.


Operating the Navigation Menus

Software Keyboard


If text entries are required, the touch-screen displays a software keyboard. You can perform all entries using your finger. Only capital letters can be entered.

You do not have to enter any special characters or umlauts when entering city or street names. The Lucca completes these characters automatically.


Entering Blank Spaces

→ To enter a blank space, touch the  button.

Deleting Characters

→ To delete the last character, touch the  button.

Switching between Number, Umlaut and Character Input

To enter numbers, such as postcode,
→ touch the  button

To return to the character entry mode,

→ touch 

To enter an umlaut,

→ touch the  button. The umlaut keyboard is displayed.

As soon as you enter an umlaut, the character keyboard is automatically displayed again.

Note:

Umlauts do not have to be entered when entering address information, but they may be helpful for the description of stored destinations and routes.

List

In many cases, you can display lists from which you can select an entry.


This is the case, for example, if you do not enter the complete name of a place during the entry. After every entry of a letter, the text field shows the first entry that starts with the previously entered characters. To display a list with additional matching entries, touch the **List** button.

The end of the list features entries what contain the sequence of previously entered characters not at the beginning, but in the middle or at the end.



One entry of the list is always selected.

→ The selected entry can be selected by touching the **OK** button.

These lists contain the following buttons:


→ : Touch the **OK** button to accept the selected entry. Howev-

er, you can also directly touch an entry to accept it.

- : Touch this button to scroll up in the list by one page (5 elements).
- : Touch this button to scroll down in the list by one page (5 elements).
- To scroll through the list by several pages, repeatedly touch the corresponding button.


Note:

If the list features more than 5 elements, the scroll bar indicates the current position in the list.

- : Touch this button to return to the entry without selecting a list element.

Buttons

Buttons are located on all menus of the Lucca:

- : Touch this button to return to the previously opened menu. If you are in the *Navigation* menu, this button takes you to the Blau-

punkt start screen. Here, you can open another application, such as the MP3 player or the Picture Viewer, or reopen the navigation.

- **More:** Touch this button to obtain access to additional functions. Depending on the menu in which this button is located, different functions are offered.

If this button is deactivated, no additional functions are available.

Information

From the *Navigation* menu, you can display the current GPS status at any time.


GPS Status

The *GPS status* menu contains information about your current position and your current speed. In addition, you can also save your current position.

- In the *Navigation* menu, touch the **More** button.


The following window displays:

Operating the Navigation Menus

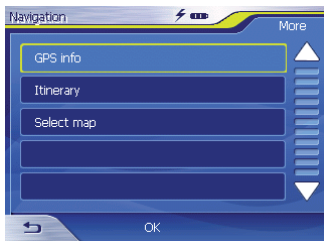


→ Touch the **GPS Info** button.

The *GPS Status* menu displays.

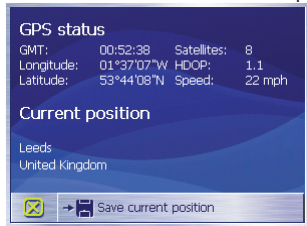

- GMT: Greenwich Mean Time London time without daylight savings time.
- Longitude/Latitude, current Position: Information of the east longitude and north latitude.

- Satellites: Number of satellites received. The navigation requires signals from at least three satellites.
- HDOP: Horizontal Dilution of Precision. Indicates the quality of the positioning. Theoretically, values from 0 to 50 are possible, whereby the following applies: The lower the value, the more precise the positioning (value 0 = no deviation from the actual position). Values up to 8 are acceptable for navigation.
- Speed: Indicates the current speed of the vehicle.
- Position: Indicates the address of the current position (if possible).
- Save current position: Touch this button to save the current position to the favourites.
- Touch the  button to close the GPS window.

Navigation

General Notes about the Navigation

The use of the Lucca is at your own risk.

Caution:

Do not operate the Lucca while driving to protect yourself and others against accidents!

View the display only if you are in a safe travel situation!

The street routing and traffic signs have priority over the instructions of the navigation system.

Follow the instruction of the Lucca only if circumstances and traffic regulations allow! Lucca will bring you to your destination even if you have to deviate from the planned route.

Starting the Navigation

- Power on the device using the **Power** button.
- In the start screen, touch the **Navigation** button.



The *Navigation* menu displays.



Navigation

The *Navigation* menu allows access to all the functions of the navigation.

Entering a Destination

→ Touch the **Destination entry** button to enter a destination for the navigation.

For further details, please read the section "Entering a Destination".

Navigating Home

→ Touch the **Home** button to use your stored home address as the destination for the navigation.

For further details, please read the section "Using the Home Address as Destination".

Showing a Map

→ Touch the **Show map** button to display the loaded street map.


For further details, please read the section "Working with the Map".

Settings

→ Touch the **Settings** button to adjust the settings of your Lucca.

For further details, please read the section "Configuring Lucca/Basic Settings".


Exiting the Menu

→ In the *Navigation* menu, touch  to quit the navigation. The Lucca start screen displays.

Additional Functions

→ Touch the **More** button to gain access to additional functions of the *Navigation*.

The list of additional functions displays.

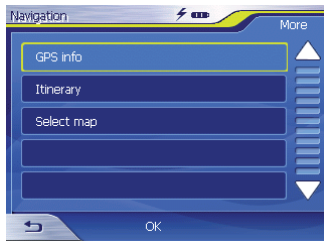

It contains the following functions:

GPS Info

- Touch the **GPS Info** button to obtain information about the current GPS status and about your current position.

Route Planning

- Touch the **Itinerary** button to plan a route with several stages.

For further details, please read the section "Route Planning with Stages".

Select Map

- Touch the **Select Map** button to choose between different available road maps.

Performing Basic Settings


Before you work with the Lucca,

- you should set the time zone of for your position so that the correct arrival times are displayed during the navigation, and
- you should enter your home address to quickly navigate home from any location.

Setting the Time Zone


- In the *Navigation* menu, touch the **Settings** button.

The Settings menu displays.

- Touch the  button until the screen displays the **Time zone** button.

- Next, touch **Time zone**.

The *Time zone* menu displays.

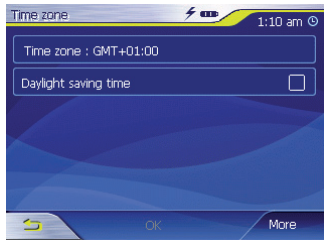

- Touch **Time zone**.
- Touch the time zone in the list that is valid for your current position (GMT without daylight savings time).

Navigation

Note:

The selection is facilitated by the display of the capitols in the respective time zone.

- Touch the **OK** button.
- If daylight savings time currently applies to your position, touch the **Daylight saving time** button.


The button displays a check mark.


Note:

If the time is changed at your position or if you drive into a different time zone, you must adjust the corresponding settings.

- Touch the **OK** button.
The *Navigation* menu displays.

Entering the Home Address

- In the *Navigation* menu, touch the **Settings** button.
The *Settings* menu displays.
- Repeatedly touch the  buttons until the **Home address** button displays.
- Touch the **Home address** button.
The *Home address* menu displays.

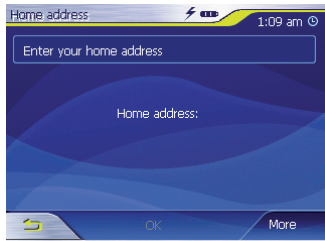

- Touch the **Enter your home address** button.
The *Destination entry* menu displays.
- Touch the **Address** button and enter your home address. See "Entering a Destination Address".
- Touch the Set as **home address** button.
The address is copied into the *Home address* menu.
- Touch the **OK** button.
The *Navigation* menu displays again.

Specifying a Destination

This section contains information about the different methods for entering, selecting and managing destinations with the Lucca.

How to start the navigation to a destination is described in the chapter "Destination Guidance".

Entering a Destination

With the Lucca, you can enter or select destinations in different ways:

- Entering a destination address
- Selecting a point of interest
- Copying a destination from the map
- Copying a destination from the favourites
- Reusing one of the Last destinations
- Using the home address

Entering a Destination Country

First, enter the country in which your destination is located.

Note:

This entry does not have to be repeated. If your destination is in a different country than the previous one, you must re-enter the country.

- In the main menu touch the **Navigation** button.

The *Navigation* menu displays.




- Touch the **Destination entry** button.

The *Destination entry* menu displays.

Navigation



- Touch the **Country** button.
The list of countries displays.

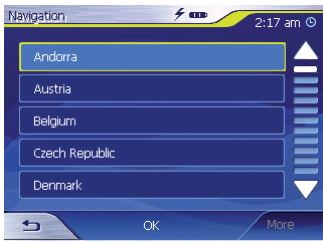


- Touch the country in which your destination is located.
The *Address* menu displays.

Note:


You can only select countries which are at least partially displayed on the currently loaded map.




Entering a Destination Address

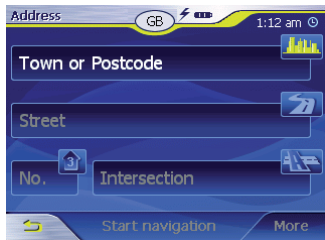- In the main menu touch the **Navigation** button.
The *Navigation* menu displays.
- In the *Navigation* menu, touch the **Destination entry** button.
The *Destination entry* menu displays.
- Touch the **Address** button.
The *Address* menu displays.




Note:

If the country containing your destination is not displayed in the top line, touch the  button and select the correct country. How to select a country is described in the chapter "Entering a Destination Country".

- Touch the Town field and enter  the target location. You can enter either the postcode or the name of the location.
- Touch the Street field  and enter the street.
- If you know the house number of your destination, touch the House  Number field to enter the house number.

Note:

If no house number is stored for the specified street in the maps, the House Number field is deactivated.

-  If you want to define an intersection as the destination, touch the Intersection

field to enter the crossroad to the defined street.

Note:

How to save a defined destination is described in the chapter "Saving one of the recent destinations".

Additional Functions

- Touch the **More** button to gain access to additional functions of the *Address* menu.

The list of Additional functions displays.

The list of Additional functions contains the following functions:

- **Route options:**
 - Here you can set the route options for the next navigation.

For further details, please read the chapter "Specifying route options".

- **Show:**
 - Select this button to view the specified address on the map.

For further details, please read the chapter "Working with the map".

Navigation

- **Save:**

- This function allows you to save the specified address to your favourites.

For further details, please read the chapter "Saving one of the recent destinations".

Selecting a Point of Interest

Special destinations, also referred to as POI (Point of interest), are part of the map and can be displayed on the map. The points of interest include airports and ferry harbours, restaurants, hotels, filling stations, public facilities and more. Special destinations can be used as navigation destinations.

Point of Interest in the Current Vicinity

Note:

Special destinations from the current vicinity can only be selected if the GPS reception is sufficient for determining the position.

→ In the main menu touch the **Navigation** button.


The *Navigation* menu displays.

→ In the *Navigation* menu, touch the **Destination entry** button.


The *Destination entry* menu displays.



→ Touch the **Points of interest** button.

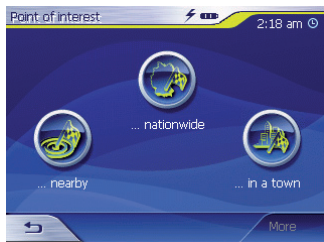The *Point of interest* menu displays.

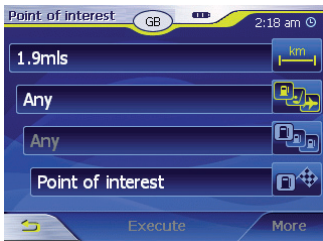


→ Touch the **... nearby** button.
The submenu displays.




-  Touch the Surrounding Radius field and select the radius in which you are looking for a point of interest.
-  Touch the Category field and select the category (e.g. petrol station) from which you want to look for points of interest.

Only those categories are available for selection for which points of interest can be located in the current vicinity.

-  Touch the Subcategory field and select the subcategory (e.g. Aral, BP, Shell, etc. from which you want to look for points of interest.

Only those subcategories are available for selection for which points of interest can be located in the current vicinity.

-  Touch the Point of interest field to select a specific target.

The keyboard is displayed. If you know a part of the description of the point of interest, it can be entered here to shorten the list.

- Touch the **List** button.
A list with points of interest appears. The points of interest displayed correspond to the selected category and subcategory. They also contain the characters you entered (if you entered any characters).
- Touch the entry of the point of interest to which you want to navigate.
- If you desire more detailed information about the point of interest, touch the **More** button, followed by **Show details**.
- Touch the **OK** button to accept the selected point of interest.

Note:

You do not have to fill out the fields **Category** and **Subcategory**. They are only intended to restrict the list of points of interest in the *Point of interest* field. This list can quickly become very extensive, particularly at larger locations.

How to save a defined destination is described in the chapter "Saving one of the Recent Destinations".

Additional Functions

→ Touch the **More** button to gain access to additional functions of the *Point of interest* menu.

The list of Additional functions displays.

The list of Additional functions contains the following functions:

- **Route options:**

- Here you can set the route options for the next navigation.

For further details, please read the chapter "Specifying Route Options".

- **Show:**

- Select this button to view the specified address on the map.

For further details, please read the chapter "Working with the Map".

- **Save:**

- This function allows you to save the specified address to your favourites.

For further details, please read the chapter "Saving one of the recent destinations".

Point of Interest at a Specific Location

→ In the main menu touch the **Navigation** button.


The *Navigation* menu displays.

→ Touch the **Destination entry** button.


The *Destination entry* menu displays.

→ In the menu, touch the **Points of interest** button.


The *Point of interest* menu displays.

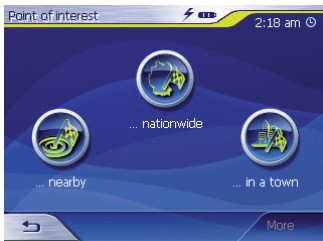


- In the *Point of interest* menu, touch the **...in a town** button. The submenu displays.

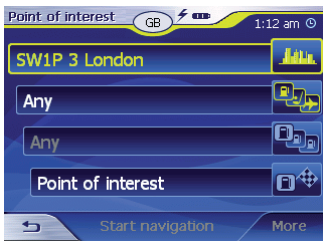


Note:


If the country containing your destination is not displayed in the first line, touch the  button twice and select the correct country.

How to select a country is described in the chapter "Entering a Destination Country".

-  Touch the Location field and enter the location in which you are looking for a point of interest. You can enter either the postcode or the name of the location.

-  Touch the Category field and select the category (e.g. culture) from which you want to look for points of interest.


Only those categories are available for selection for which points of interest can be located in the specified town.

-  Touch the Subcategory field and select the sub-

Navigation

category (e.g. museum, theatre, ...) from which you want to look for points of interest.

Only those subcategories are available for selection for which points of interest can be located in the specified town.

-  Touch the Point of Interest field.

The keyboard is displayed. If you know a part of the description of the point of interest, it can be entered here to shorten the list. However, you may also continue without an entry.


- Touch the **List** button.

A list with points of interest appears. The points of interest displayed correspond to the selected category and subcategory. They also contain the characters you entered (if you entered any characters).

- Touch the entry of the point of interest to which you want to navigate.
- If you desire more detailed information about the point of interest, touch the **More** button, followed by **Show details**.
- Touch the **OK** button to accept the selected point of interest.


Special National Destination

- In the main menu touch the **Navigation** button.
The *Navigation* menu displays.
- Touch the **Destination entry** button.
The *Destination entry* menu displays.
- In the menu, touch the **Points of interest** button.
The *Point of interest* menu displays.

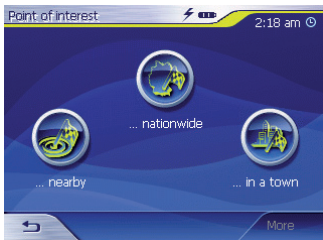




- In the *Point of interest* menu, touch the **...nationwide** button.

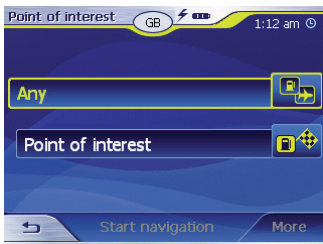The submenu displays.



Note:

If the country containing your destination is not displayed in the first line, touch the  button twice and select the correct country. How to select a country is described in the chapter "Entering a Destination Country".

-  Touch the Category field and select the category (e.g. airport) from which you want to look for points of interest. The selection offers only categories whose points of interest have a national meaning.
-  Touch the Point of Interest field.
The keyboard is displayed. If you know a part of the description of the point of interest, it can be entered here to shorten the list. However, you may also continue without an entry.
- Touch the **List** button.
A list with points of interest appears. The points of interest displayed correspond to the selected

Navigation

category. They also contain the characters you entered (if you entered any characters).

- Touch the entry of the point of interest to which you want to navigate.
- If you desire more detailed information about the point of interest, touch the **More** button, followed by **Show details**.
- Touch the **OK** button to accept the selected point of interest.

Copying a Destination from the Map

This function allows you to select the destination for a navigation directly on the map. In addition to towns and streets, you can also quickly select points of interest.

- In the main menu touch the **Navigation** button.
The *Navigation* menu displays.
- Touch the **Destination entry** button.
The *Destination entry* menu displays.


- In the destination entry, touch the **On map** button.

The map is displayed.





Moving the Map Section

To view the desired destination area on the map, you can move the map section and zoom in/out.

- Zooming/Moving
 - Touch the **Zoom/Move**  to switch between zoom and move mode.
 - Zoom
In the zoom mode (button not pressed), you can zoom in and out on the map. You can zoom in by plotting a diagonal start-

ing in the top left corner. You can zoom out by plotting a diagonal starting in the bottom right corner.

Note:

You can also zoom in and out using the  /  buttons.

– Move

In the move mode (button pressed), you can move the map. For this purpose, touch the map, hold the pen or your finger pressed and move the map area in the desired direction.

→ Touch the town (street or point of interest) to be defined as the destination for a few seconds.

The town is identified by an orange-dotted circle.



Information about the selected location is loaded from the data stock and displayed. Below the information field are buttons with which several functions can be called that are available for the selected route location.



You have the following options:


- Touch the **Start navigation** button to use the selected location as place of destination for the navigation.

Notes:

- This function is only available with GPS reception.
- If you use this function during a navigation, all previously defined route locations (stages and destination points) are deleted!
- Touch the **Save** button to save the selected destination. You can select the destination at any time from the list of favourites.
- Touch the **Search nearby** button to search for a point of interest in the vicinity of the selected destination.
- Touch the **Add** button to add the selected destination to the end of a route (as the last stage). The route point is subsequently identified on the map by a flag and also entered in the route point list in the *Itinerary* menu.

Note:

If you use this function during a navigation, the route is immediately recalculated and the navigation is subsequently continued.

- Touch the **Interim destination** button to add the selected destination to a route (as the next stage to be approached). The route is immediately recalculated and the navigation is subsequently continued.
- Touch the  button to return to the map view without executing a function.

Copying the Destination from the Favourites


The favourites contain all the destinations you saved using the **Save** button.

You can perform the following in this menu:

- Accepting destinations for the navigation,
- renaming navigation destinations, and
- deleting saved destinations.

Copying a Favourite for Destination Guidance

- In the main menu touch the **Navigation** button.
The *Navigation* menu displays.
- Touch the **Destination entry** button.
The *Destination entry* menu displays.
- Touch the **Favourites** button.
The *Favourites* menu displays.

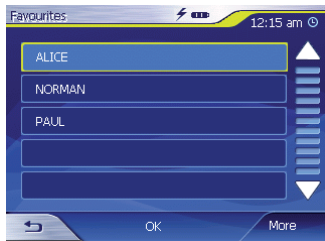

- Touch the desired destination.

Note:

If you want to view the address of a saved destination, touch this destination. Touch **More**, followed by **Show details**.

- Touch the **OK** button.
The *Address* menu displays. The address of the selected destination is entered in the corresponding fields.

How to delete or rename a saved destination is described in the chapter "Managing Destinations".

Additional Functions

→ Touch the **More** button to gain access to additional functions of the *Favourites* menu.

The list of Additional functions displays.

It contains the following functions:

- **Show details:**
 - Touch the **Show details** button to show the address of the selected destination.
- **Delete entry:**
 - Touch the **Delete entry** button to delete the selected destination.
- **Delete all:**
 - Touch the **Delete all** button to delete all the destinations from the *Favourites*.

For further details, please read the chapter "Deleting a Destination".

- **Rename entry**
 - Touch the **Rename entry** button to change the designation of the selected destination.

Copying one of the Recent Destinations

The destinations approached last are automatically stored in the *Last destinations* list.

You can perform the following in this list:

- Accepting a destination for the navigation,
 - saving a navigation destination in the *Favourites*, and
 - deleting entries from the *Last destinations* list.
- In the main menu touch the **Navigation** button.
The *Navigation* menu displays.
- Touch the **Destination entry** button.
The *Destination entry* menu displays.
- Touch the **Last destinations** button.
The *Last destinations* menu displays.



- Select the desired destination.
 - Touch the **OK** button.
- The destination is copied and the address is entered in the corresponding fields.

Additional Functions

- Touch the **More** button to gain access to additional functions of the *Last destinations* menu.
- The list of Additional functions displays.

It contains the following functions:

- **Show details:**
 - Touch the **Show details** button to show the address of the selected destination.

- **Delete entry:**
 - Touch the **Delete entry** button to delete the selected destination.
- **Delete all:**
 - Touch the **Delete all** button to delete all the entries of the *Last destinations* list.
- **Save under favourites:**
 - Touch the **Save under favourites** button to save the selected destination in the *Favourites*.

Using Home Address as Destination

If your home address is saved, you can quickly navigate home from any location.

How to save your home address is described in the chapter "Home address".

- In the main menu touch the **Navigation** button.
- The *Navigation* menu displays.
- Touch the **Home** button.
- The route calculation is performed and the navigation starts.

Note:

The route type used for the route calculation is automatically selected from the setting which you defined in the *Routing options* menu.

Managing Destinations

Two lists are available in which individual destinations are saved:

- In the *Favourites*
- In the *Last destinations* list

Each destination you specify and the destinations from the *Last destinations* list can be saved in the *Favourites*. This is particularly useful if you want to approach this destination repeatedly.

Destinations from the *Favourites* can be renamed.

You can delete individual destinations from both lists.

Saving Destinations

Prerequisite:

- You specified a destination as described in the chapter "Entering a Destination".
- Touch the **More** button.
- Touch **Save**.

A menu for entering a name is displayed.

- Enter a name for the destination.
- Touch the **OK** button.

The destination is saved in the *Favourites*.


Saving one of the Recent Destinations

Prerequisite:

- You opened the *Last destinations* list as described in the chapter "Copying one of the Recent Destinations".
- Select the destination which you want to save in the *Favourites*.



- Touch the **More** button.
- Touch **Save under favourites**.

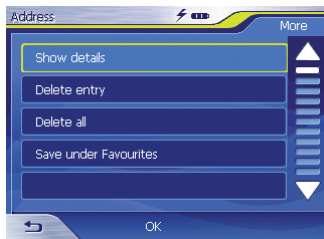

A menu for entering a name is displayed.

- Enter a name for the destination.
- Touch the **OK** button.

The destination is saved in the *Favourites*.

Renaming a Destination

- Open the *Favourites* menu as described in the chapter "Copying the Destination from the Favourites".
- Select the destination to be renamed.

Managing Destinations


- Touch the **More** button.
- Touch **Rename entry**.
A menu for entering a name is displayed.
- Enter a new name for the destination.
- Touch the **OK** button.
The destination is renamed.

Deleting a Destination

Prerequisite:

- You opened the *Favourites* as described in the chapter "Copying the Destination from the Favourites"
 - or -
 - you opened the *Last destinations* list as described in the chapter "Copying one of the Recent Destinations".
- Select the destination to be deleted from the list.
 - Touch the **More** button.
 - Touch **Delete entry**.

A confirmation menu is displayed.

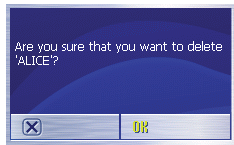

- Touch **OK** to delete the destination.
The destination is deleted from the list.


Deleting the Complete List

Prerequisite:

- You opened the *Favourites* as described in the chapter "Copying the Destination from the Favourites"
 - or -
 - you opened the *Last destinations* list as described in the chapter "Copying one of the Recent Destinations".
- Touch the **More** button.


→ Touch **Delete all**.

A confirmation is displayed.

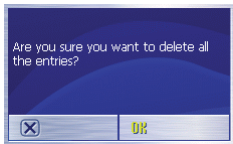

→ Touch **OK** to delete the list

- or -

→ touch  not to delete the list.

Route Planning with Stages

You can also perform the route planning without GPS receiver, e.g. in the comfort of your home. Defined routes can be saved for reuse so that you can plan any number of routes, e.g. for your vacation.


Entering Destination Points

A route is planned as follows:

→ In the *Navigation* menu, touch the **More** button.

→ Touch **Itinerary**.

The *Itinerary* menu displays.

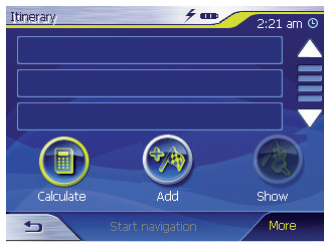

→ Touch the **Add** button to define the first route point.

Route Planning

The *Destination entry* menu displays.

→ Define the route point similar to the destination entry. For more information, see the chapter "Entering a Destination".

→ Touch the **Add** button.

The *Itinerary* menu displays. The defined destination is listed as route point 1.



→ Repeat the steps for all additional destinations to be added to the route.

Editing, Saving and Managing Routes

You can plan any number of routes, e.g. for your vacation. They can be

saved and used for navigation at a later time.


You can insert additional route points in the routes at any time, change the order of route points or display the route on the map.

The *Itinerary* menu provides various buttons for this purpose:

→ Touch the route point you want to select.

If the list features more than 3 entries, use the following buttons:

→ Touch the  button to scroll up the list by one page (3 elements).

→ Touch the  button to scroll down the list by one page (3 elements).

To scroll up or down the list by several pages,

→ touch the corresponding button repeatedly.

Note:

If the list features more than 3 elements, the scroll bar indicates the current position in the list.

Changing the Order

- Move route point up:
 - Select the route point to be moved.
 - Touch the **More** button.
 - Touch the **Move target up** button.
The *Itinerary* menu is displayed again, the selected route point is moved up in the route list by one position.
 - Repeat this process until the route point appears at the correct position in the route list.
- Move route point down:
 - Select the route point to be moved.
 - Touch the **More** button.
 - Touch the **Move target down** button.
The *Itinerary* menu is displayed again, the selected route point is moved down in the route list by one position.
 - Repeat this process until the route point appears at the correct position in the route list.

Deleting a Route Point

- Select the route point to be deleted.
- Touch the **More** button.
- Touch **Delete from route**.
The route list is displayed again.

Deleting a Complete Route List

- While the route list to be deleted is displayed, touch the **More** button.
- Touch **Delete the complete** list.

Managing Routes

Saving a route

- Touch the **More** button.
- Touch **Save route**.
A menu for entering a name is displayed.
- Enter a name for the route.
- Touch **OK**.

Note:

The route points are saved. If you load a saved route, it must be recalculated.

Route Planning

Loading a route

- Touch the **More** button.
- Touch **Load route**.
- Select the desired route.
- Touch **OK**.

Calculating a Route

A planned route can also be calculated without GPS reception so that you can gain an overview of the trip.

In this case, the first defined route point is set as the starting point of the route.

Note:

For a navigation, the current position is the starting point. The first stage is the travel to the first defined route point.

- Touch the **Calculate** button to calculate the complete distance as well as the estimated travel time of the route.

The route is being calculated. A window displays the progress of the calculation.

After the calculation is complete, the *Itinerary* menu displays the

complete trip from the first to the last route point and the estimated travel time for this trip instead of the **Calculate** button.

In addition, the distance from the previous route point and the estimated travel time for this stage are displayed for each route point.

Displaying the Route on the Map

→ Touch the **Show** button to display the entire route on the map.

The map is displayed.

The route is highlighted in blue.

The specified route points are identified by flags.


Simulation (demo mode)

→ Touch the map.

A selection menu appears.

→ Touch "Simulation".

The route is automatically travelled and driving recommendations are output.

→ Touch  to end the simulation, otherwise the simulation is repeated.

Note:

The simulation distance must be less than 100 kilometres.


Specifying Route Options

In the *Routing options* menu, you can define the speed profile of your vehicle, select the type of routing and exclude certain streets from usage. The route options remain valid for each destination guidance until the next change of the route options.

→ In the *Navigation* menu, touch the **Settings** button.

The *Settings* menu displays.

→ Touch the  button to scroll up the list by one page (3 elements).

→ Touch the  button to scroll down the list by one page (3 elements).


To scroll up or down the list by several pages,

→ touch the corresponding button repeatedly.

→ In the *Settings* menu, touch the **Routing options** button.

The *Routing options* menu displays.

Specifying Route Options

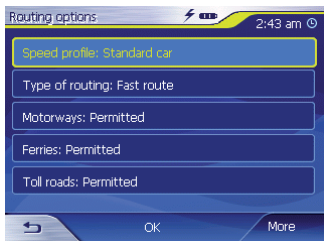

- Touch the **Speed profile** field to change between the available profiles.
- Touch the **Type of routing** field to change between the various modes:
 - Fast route
 - This option calculates the shortest route for the required time.
 - Short route
 - This option calculates the shortest route for the kilometres to be travelled.
- Sequentially touch the fields **Motorways**, **Ferries** and **Toll roads** and specify whether they should

be included in the route calculation or avoided.

- Permitted
 - This option includes the corresponding street type in the calculation of the route.
- Avoid
 - This option avoids the corresponding street type as far as possible.
- Forbidden
 - This option does not include the corresponding street type in the calculation of the route.

Destination Guidance

Prerequisite:

- You specified a place of destination as described in the chapter "Entering a Destination"

- or -

- you selected a place of destination from the *Favourites* as described in the chapter "Copying the Destination from the Favourites"

- or -

- you selected a place of destination from the *Last destinations* list as described in the chapter "Copying one of the Recent Destinations"

- or -

- you planned or loaded a route (as described in the chapter "Route Planning with Stages").

→ Touch the **Start navigation** button.

The route is being calculated.

The map is displayed. Your current position is represented by a yellow triangle. The route is highlighted in blue.




Notes:

- The route is calculated using the currently valid settings for the route calculation. The settings for the route options can be viewed and changed via the *Routing options* menu. For detailed information, please read the chapter "Specifying route options".
- If the navigation for a route is started, the starting point is always the current position. The first stage of the route is the first defined route point.

Destination Guidance

Disturbed GPS Reception

A message appears after entering the destination if no adequate GPS signal is received.

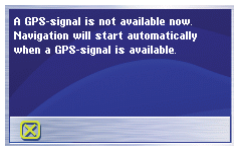


- If you are in an enclosed room, move to the outside. The Lucca requires a vertical line towards the sky.

If the GPS reception is disturbed during the destination guidance, the navigation is stopped.

As soon as the reception is re-established, the navigation system automatically recognises whether your position has changed and, if necessary, recalculates the route. At that time, you can simply continue your navigation.

Quitting the Destination Guidance

→ Touch this button  to quit the destination guidance.

A confirmation dialogue appears.

→ Touch **OK** to quit the destination guidance.

If you quit the destination guidance before reaching your destination, the *Navigation* menu opens. You can now enter a new destination or continue the navigation to the original destination by selecting the original destination again from the "Last destinations".

Reaching the Place of Destination

As soon as you have reached the destination point, the message "You have reached your destination" appears.

At this point, the map displays only your current position (yellow arrow).

Working with the Map

Map Operation

In this section you learn which information and which processing options are available in the map view. Depending on whether you display a map without or during the navigation, different options are available for operation.

Showing a Map

You can display the map

- during route planning,
- to display destinations on the map, or
- to copy destination from the map for the navigation.

You can open the map view as follows:

- Via the **Show map** button in the *Navigation* menu.
- Via the **On map** button in the *Destination entry* menu.

- Via the **Show** button in the additional functions in the *Address* menu after selecting a destination.

Touching the Map

→ Briefly touch the map to display additional functions.

Depending on whether you are currently in an active navigation or only display the map, only certain functions are available.

→ Touch the map for a few seconds to display information about the location you touched, and you can also select it as navigation destination.

For further details, please read the section "Copying a Destination from the Map".

Buttons



Different buttons are available in the map view with which you can adjust the display according to your needs.

With Map View without GPS Reception

- Show/hide buttons
 - **More**
This button allows you to hide the other buttons to gain a better overview of the map. Touching it again redisplay the auxiliary buttons.

With Map View with GPS Reception

- Auto mode
 - **More**
Touch this button to restore the standard view of the map after making changes. In doing so, the settings for the map orientation and auto zoom are applied, the auxiliary buttons are hidden and the map is centred according to your position.


-  The Change button allows you to display additional options in map view.
- Fix position/Fix map
 - This button is only active during a navigation. Touch the **Fix position/Fix map**  button to toggle the map view between "Position fixed" and "Map fixed".
 - Map fixed
In this mode (button not pressed), the map is fixed and the current position (yellow arrow) moves across the map.
 - Position fixed (standard setting)
In this mode (button pressed), the map is continually moved so that the current position (yellow arrow) is always closely centred in the bottom third of the map.

Note:

The "Map fixed" mode is automatically set as soon as you move the map; otherwise, the map would

constantly jump back to the current position. This mode should also be set if you want to select destination points from the map during the navigation.

- **Zooming/Moving**




- Touch the **Zoom/Move**  button to switch between zoom and move mode.






- **Zoom**

In the zoom mode (button not pressed), you can zoom in and out on the map. You can zoom in by plotting a diagonal starting in the top left corner. You can zoom out by plotting a diagonal starting in the bottom right corner.

- **Move**


In the move mode (button pressed), you can move the map. For this purpose, touch the map, hold the pen or your finger pressed and move the map area in the desired direction.

- Showing the complete route
 - Touch this button  to display the complete route on the map.
- Map in travel direction/Map to north
 - Touch the **In travel direction/To north**  button to toggle the map view between travel direction and aligned to north.
 - Align map to north
 - Touch this button (button not pressed) to align the map in the direction north.
 - Map in travel direction
 - Touch this button (button pressed) to align the map in the travel direction.
- 3D-view 
 - Touch this button to display the map in a three-dimensional representation from a bird's eye view.
- 2D-view
 - Touch the **More**, button to display the map in two-dimensional form again.

- Zoom out
 - Touch this button  to zoom out of the map.
- Zooming level bar between the buttons  / 
 - Touch one of the sections of the bar to zoom in or zoom out of the map.
- Zoom in
 - Touch this button  to zoom in on the map.
- Quit navigation
 - Touch this button  to quit the navigation.

Additional Functions

- Briefly touch any position on the map to activate additional functions. Depending on whether you are currently in a navigation or only display the map, only certain functions are available.
- The menu with the additional functions displays.

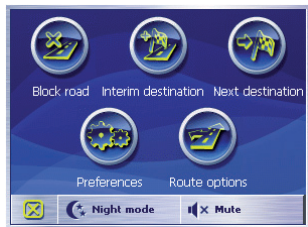

Day/Night Mode

- Touch the **Night mode** button to set the map display "Night" or "Day".

Mute

- Touch the **Mute** button to switch the voice instructions on or off.

Settings

- Touch the **Settings** button to display the *Settings* menu.
- For further details, please read the section "Settings".

Block Road, Unblocking

The **Block road** button is only available during a navigation. For fur-

ther details, please read the section "Blocking Route Segments".

Inserting an Interim Destination

→ Touch the **Interim destination** button to insert a new interim destination during the navigation.

The route is recalculated so that this interim destination can be approached as the next destination. Afterwards, all subsequent route points are selected.

For further details, please read the section "Inserting an Interim Destination".

Route Options

→ Touch the **Route options** button to change the route options.

For further details, please read the section "Routing options".

Next Destination

This function is only available during a navigation on a route with at least one interim point. Use this function if you want to skip the next route point.

→ Touch the **Next destination** button to approach the next to one route point.

The route is recalculated so that the next to one route point can be approached as the next destination.

For further details, please read the section "Approaching the Next Destination".

Map Display during Destination Guidance

During a navigation, the map display shows different navigation tools, route information and one additional button:

Navigation Tools

The left and lower area of the map display the following navigation tools:



- In case of actions that must be executed in brief succession, the next to one action is displayed in the small upper arrow field.
- The yellow triangle represents your position on the map. A continually changing map section ensures that the current position is always closely centred on the map (so-called moving map).
- The large lower arrow field displays the next action and the distance to the next action.
 - If you come closer to the action location, a bar is displayed to the right of the large arrow field instead of the distance:







- The more yellow bars are displayed, the closer you are to the location of the next action.
- The upper street field displays the next street name.

- The lower street field displays the current street name.

Route Information

The right area of the map displays the following route information:



- : This symbol represents stages. All information below it refers to the next destination.
-  2:20 am: Estimated time of arrival.
-  00h10: Estimated remaining travel time.
-  7m/s: Remaining kilometres/miles to destination.

Signpost Information

The upper area of the map displays signpost information you must follow:



Note:

This information can only be displayed if it is part of the map material.

Speed Limit

The right area of the map displays any speed limit that may apply:



Note:

This information can only be displayed if it is part of the map material.

Caution

The information on the digital road maps may be incorrect due to short-term changes (construction, etc.)!

The traffic situation and the local signpost information have priority over the information of the Lucca.

Showing Additional Map Information

You can use the Lucca to define which additional information is displayed on the map. All settings are performed in the *Settings* menu.

The additional information on the map is activated as follows:

- Open the *Settings* menu by touching the **Settings** button in the Navigation menu or by briefly touching any position on the map and then selecting the **Settings** entry.



Map Information

- Touch **Map information**.
- Activate the **Info bar** entry so that the compass and your current speed are displayed on the map in the lower right border.




- Activate the **Point of interest** entry so that all points of interest are displayed on the map (default setting).
- Activate the **Street names 2D** entry so that the street names are displayed on the map (only possible in 2-D display).

- Touch the  button to return to the *Settings* menu.

Route Information

- Select the **Route information** setting with the button.

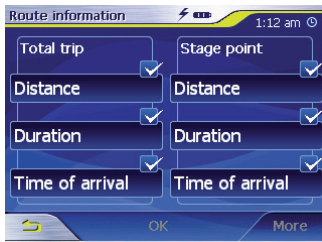

- Switch the desired route information on or off with the corresponding buttons.

The corresponding information for the next stage (upper area) and the complete route (lower area) is displayed on the map.




- Touch the  button to return to the *Settings* menu.

Signpost Information

- Touch **Signpost information**.

The *Signpost information* menu displays.


- Touch the **Show traffic signs** button to activate or deactivate the display of the exit signs.
- Touch the  button to return to the *Settings* menu.

Speed

- Touch **Speed limit**.

The *Speed limit* menu displays.

Map Display during Destination Guidance

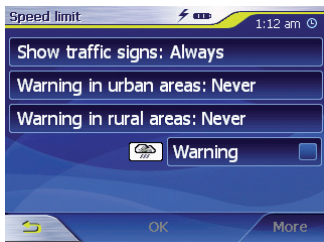

In the *Speed limit* menu you can define whether speed limits should be displayed during the navigation and whether you should be warned audibly if you are exceeding the speed limit.

- Display signs
- Touch the **Show traffic signs** button to change between the modes *Show traffic signs: Always*, *On speeding only* or *Never*.
- Warning in a town:
 - The **Warning in urban areas** button shows the level of the speed-reading at which you are audibly warned inside of build-up areas.

- Touch the **Warning in urban areas** button to change the value or to set it to **Never**.
- Warning outside of towns:
 - The **Warning outside urban areas** button shows the level of the speed-reading at which you are audibly warned outside of build-up areas.
- Touch the **Warning outside urban areas** button to change the value or to set it to **Never**.
- Warning
 - Activate the **Warning** button to receive an audible warning.
- Touch the **OK** button to save your settings.
Your settings are accepted and displayed on the map.

Additional Functions during Navigation

The following functions can be used during a navigation:

- Inserting an interim destination
- Skipping a stage
- Blocking route segments

Inserting an Interim Destination

During the navigation, you can insert a new interim destination at any time. The route is then recalculated so that this interim destination can be approached as the next destination. After reaching the interim destination, all remaining places of destination are selected.

An interim destination is created as follows:

Prerequisite:

- You are in the map display during a navigation.
- Briefly touch any position on the map.

→ Touch the **Interim destination** button.

The *Destination entry* menu displays.

→ Enter the place of destination as described in "Entering a Destination".

→ Touch the **Set as route point** button.

The route is recalculated and the defined interim destination is selected as the next route point.

Note:

You can also select the interim destination directly from the map as described in the section "Copying a Destination from the Map". Next, touch Interim destination.

Approaching the Next Destination

This function is only available during a navigation on a route with at least one interim point.

Use this function if you want to skip the next route point.

→ Touch the **Next destination** button to approach the next to one route point.

The route is recalculated so that the next to one route point can be approached as the next destination.

Blocking route segments

Manual Blocking

You have the option of manually blocking a route segment located on your route to evade the road section blocked for navigation. After a manual blocking, the route is recalculated.

Supposing that you are on the motorways and hear a traffic announcement on the radio about a traffic jam of 5 km on your route. In this case, you can use a manual blocking of the section to evade the traffic jam.


The manual blocking is only applicable to the current navigation and is no longer available for a new navigation or after a restart of the program.

Route segments are blocked as follows:

Prerequisite:

- You are in the map display during a navigation.

- Briefly touch any position on the map.
- Select the **Block road** entry.
The *Block road* menu displays.

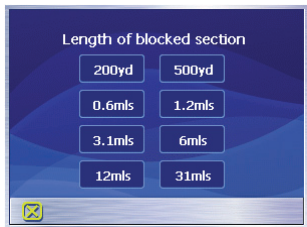

The road blocking is cancelled and the navigation uses once again the original calculated route.

- Enter the number of kilometres, starting with your current position, which you want to block.
The route is recalculated and the blocked route segment is evaded. The blocked segment is marked in red.

Unblocking

- Briefly touch any position on the map.
- Select the **Block road** entry.

Configuring Lucca/ Basic Settings

Settings


You can perform settings in the Lucca for the following areas:

- Language
- Home address
- Map information
- Route information
- Routing options
- Route planning
- Signpost information
- Speed limit
- Auto mode
- Time zone
- Format
- Representation
- Voice command
- Factory settings
- Touchscreen
- Product information

→ In the *Navigation* menu, touch the **Settings** menu to configure the Lucca.

→ If you made changes to the settings, you can touch the **OK** button of the *Settings* menu to accept the changes you made.

Or

→ Touch the  button to exit the *Settings* menu without saving the changes.

Language

In the *Language* menu, you can select your preferred for the menus and voice output.

- Touch the **Language** button.
The current language is displayed.
- Touch the **Set language**.
The language list displays.
- Touch on your preferred language to select the language.

Home Address

In the *Home address* menu, you can store your home address so that you can quickly navigate home from any location.

- Touch the **Enter your home address** button.
- Touch the **Address** button and enter your home address in the "Entering a destination address" section.
- Touch the **Set as home address** button.

The address is copied into the *Home address* menu.

Map Information

In the *Map information* menu, you can perform the following settings:

- Info bar
 - If you activate the entry, the compass, altitude and current speed are displayed on the map in the lower right border.
- Points of interest
 - If you activate the entry, the map displays all the points of interest.

- Street names 2D
 - If you activate the entry, the map displays all the street names.

Route Information

In the *Route information* menu, you can perform the following settings:

- Dist. to final dest., Time to final dest., ETA at final dest.
 - If you activate the entries, the map displays the estimated time of arrival, the estimated travel time and the remaining kilometres/miles to the destination point.
- Dist. to next dest., Time to next dest., ETA at next dest.
 - If you activate the entries, the map displays the estimated time of arrival, the estimated travel time and the remaining kilometres/miles to the next stage destination.

Note:

This information is only displayed if you navigate to several locations.

Routing Options

In the *Routing options* menu, you can define the speed profile of your vehicle, select the type of routing and exclude certain streets from usage. The route options remain valid for each destination guidance until the next change of the route options. For further details, please read the chapter "Specifying Route Options".

Route Planning

In the *Itinerary* menu, you can define whether the calculation for the next stage should automatically be performed after reaching a stage.

If the automatic calculation is activated, the route to the next stage destination is automatically calculated upon reaching a stage.

If the automatic calculation is deactivated, you can navigate to the next

stage destination by briefly touching any position on the map and selecting the Next option.

Signpost Information

In the *Signpost information* menu, you can specify whether signpost information, which you are to follow, should be displayed during the navigation or not.

→ Touch the **Show traffic signs** button to activate or deactivate the display.

Note:

This information can only be displayed if it is part of the map material.

Speed Limit

In the *Speed limit* menu you can define whether speed limits should be displayed during the navigation and whether you should be warned audibly if you are exceeding the speed limit.

- Display signs
- Touch the **Show traffic signs** button to change between the following modes:
 - Show traffic signs: Always,
 - Show traffic signs: On speeding only or
 - Show traffic signs: Never
- Warning in a town
 - The **Warning in urban areas** button shows the level of the speed-reading at which you are audibly warned inside of build-up areas.
- Touch the **Warning in urban areas** button to change the value or to set it to **Never**.
- Warning outside of towns
 - The **Warning in rural areas** button shows the level of the speed-reading at which you are audibly warned outside of build-up areas.
- Touch the **Warning in rural areas** button to change the value or to set it to **Never**.

- Warning
- Activate the **Warning** button to receive an audible warning.

Note:

This information can only be displayed if it is part of the map material.



Caution:

The information in the map material may be incorrect due to short-term changes (construction, etc.)!

The traffic situation and the local signpost information have priority over the information of the navigation system.

Auto Mode

In the *Auto mode* menu, you can perform the following settings:

- Begin with
 - Select whether the map should be displayed in 3-D view or in 2-D view by default.

- 3D auto zoom
 - Select whether you desire auto zoom or no auto zoom as default in 3-D view during a navigation.
- 2D auto zoom
 - Select whether you desire low auto zoom, standard auto zoom, high auto zoom or no auto zoom during a navigation with 2-D view.

Note:

For 2-D and 3-D auto zoom, the zoom depth is changed in reference to your speed: If you travel slowly, the scale becomes smaller. If you travel faster, the scale becomes larger. The deeper the auto zoom, the smaller the scale of the map.

- 2D-view
 - Select whether the map should be oriented to the north or in driving direction by default during a navigation with 2-D view.

Time Zone

In the *Time zone* menu, you can set the time zone that is valid for your position. This setting is important for the correct calculation of estimated arrival times.

- **Time zone**

→ Touch this field to set the time zone valid for your position.

- **Daylight saving time**

→ Touch this field to toggle between daylight savings time (button with check mark) and winter time (button without check mark).

Note:

If the time is changed at your location or if you drive into a different time zone, you must adjust the corresponding settings.

Format

In the *Format* menu you can specify which units of measure should be used for times and distances and the language to be used for the menus and voice output of the Lucca.

- **Time**
- Touch this field to toggle between 12-hour and 24-hour display.
- **Distance**
- Touch this field to toggle between the display in kilometres and miles.

Representation

In the *Representation* menu, you can set the brightness for day and night mode.

- Touch the **Representation** button.
The *Representation* menu displays.
- Touch the **Brightness Day** button to select the brightness value for day mode.
- Touch the **Brightness Night** button to select the brightness value for night mode.


Voice command

In the *Voice command* menu, you can mute voice command during navigation.

- Touch the **Voice command** button.
The *Voice command* menu displays.
- Touch the **Radio-mute** button to mute the voice commands.
- Touch the **OK** button to confirm.

Factory Settings

In the *Factory settings* menu, you can reset the navigation software to the factory settings.

- Touch the **Factory settings** button.
A confirmation is displayed.
 - Confirm the reset to the factory settings by touching **OK**.
- To avoid resetting the device,
- touch the  button.

Touchscreen

In the *Touchscreen* menu, you can recalibrate (align) the touchscreen if it responds imprecisely to touches.

- Touch the **Start calibration** button and follow the instructions on the display.

Product Information

- Touch this field to display the version of the map being used and the version of the navigation software.

GPS Mode of Operation

The Global Positioning System (GPS) was developed in the 70s by the US military.

GPS is based on a total of 24 satellites that are orbiting the earth and sending out signals. The GPS receiver receives these signals and calculates its distance to the individual satellites using the propagation time of the signals. This information is then used to determine its current geographical position.

The positioning requires signals from at least three satellites, and starting with the fourth one it is also possible to determine the altitude above sea level. The positioning is carried out with an accuracy to 3 metres.

Navigation with GPS. The provided maps also contain the geographical coordinates of the displayed points of interest, streets and towns. This allows the navigation system to calculate a route from a starting point to a place of destination.

If the Lucca receives the signals from at least 3 satellites, it can determine its position and display it on the map. This position can then be used as the starting point for a route calculation. Since a positioning and position display is carried out once every second, you can view your movement on the map.

MP3 Mode

The Lucca can be used to play MP3 audio files in MP3 format from SD cards. The playback utilises either the internal loudspeaker or headphones connected via the headphone jack.

Preparing the SD Card

The Lucca can play MP3 files from SD cards. The SD cards should be formatted using either the FAT 32 or FAT 16 format.

The MP3 files can be stored either at the top directory level or in folders on the SD card. You can also mix MP3 files and other files (e.g. .jpg files) in one folder. In MP3 mode, all other data are ignored by the Lucca and only MP3 files are being played.

Inserting the SD Card

The SD card slot is located on the right side of the Lucca.

MP3 Mode

- Push the SD card into the SD card slot according to the marking on the slot until the card engages.

Selecting MP3 Mode

If you are in a different operating mode,

- Press the **Menu** button longer than 3 seconds.
The main menu displays.



- Touch the **Music Player** button.
The *MP3* menu displays:




Starting Playback

If you selected the **MP3** button, the previously played MP3 will be played automatically.

Selecting a MP3 file

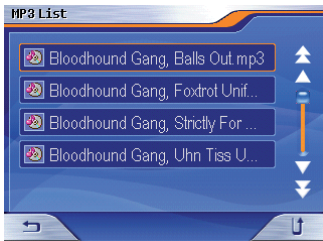

- In the *MP3* menu, touch the **File** button.
The *MP3 list* menu is displayed.



- Touch the file to which you want to listen by using the arrows to scroll up and down in the list.

The MP3 menu is displayed again and the selected MP3 file starts playing.

Playback the MP3 File

- To select the next file in the MP3 list, touch the  button in the MP3 menu.
- To select the previous file in the MP3 list, touch the  button in the MP3 menu.

The next or previous track starts playing.

Repeated Play (Repeat)

You can repeatedly play the current played file.

- In the MP3 menu, touch the **Repeat** button.

The current played MP3 file will repeatedly play.


- If you press again the **Repeat** button, the repeat function will be cancelled.



Quitting Playback

- To quit the playback, touch the **Stop** button in the MP3 menu. Playback is stopped.

Removing the SD Card

- You quit the MP3 mode by touching the  button in the *Mp3* menu.
- Carefully push on the SD card in the slot until it disengages.
The SD card is ejected a little bit and can be removed.

Picture Viewer Mode

The Lucca can also be used to view pictures that are stored on the inserted SD card. For this purpose, the pictures must be stored in the .jpg or .bmp format on the card. You can also mix JPG files and other data (e.g. MP3 files) in one folder. In the Picture Viewer mode, only the .jpg (.bmp) files in a folder are displayed and others are ignored.

Starting the Picture Viewer

If you are in a different operating mode,

- Press the **Menu** button longer than 3 seconds.
The main menu displays.



- Touch the **Picture Viewer** button. The *Pictures viewer* menu displays.



The first picture in the picture file recognised by the Lucca is displayed.


Selecting a Picture file

- To select the next picture in the file list, touch the next file by using the arrows to scroll down on the *Pictures Viewer* menu.
- To select the previous picture in the file list, touch the previous file by using the arrows to scroll up on the *Pictures Viewer* menu.

The next or previous picture is displayed.

Starting the Slide Show

- Touch the **Slide** button to start the slide show with all the pictures in the file list.

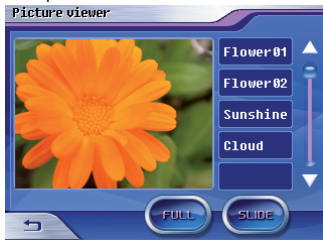

The picture slide is converted at 3 seconds intervals.




At the last slide the Question Notice where the slide show is finished will appear.



Starting the Full Screen


- Touch the **Full** button to view the full screen with all the pictures in the file list.

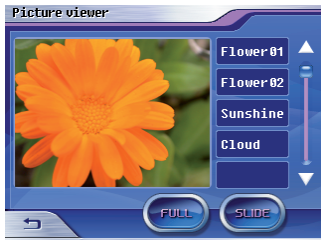

On the full screen mode, you can move to the previous or next file by using the arrow icon.



Removing the SD Card

- You quit the Picture Viewer mode by touching the  button in the *Pictures viewer* menu.
- Carefully push on the SD card in the slot until it disengages. The SD card is ejected a little bit and can be removed.

Installing Street Maps

The road map of the country in which the Lucca was purchased is preinstalled in the memory of the Lucca.

The preinstalled road map is also contained on the enclosed CD/DVD for a future restore.

Dependent on the purchase version the CD/DVD contains also other road maps.

To install a road map from the CD/DVD, copy it from the CD/DVD to an SD card or use the USB-port and install the road map as described below.

- Switch on the Lucca by pressing the **Power** button for a few seconds.
- Insert the new memory card into the SD card slot according to the marking on the card slot.

Or

- Connect the Lucca via the USB-port to your PC.

→ Switch off and on the Lucca again by pressing the **Power** button for a few seconds.

A dialog menu displays. Follow the instruction to install the street map.

Determine whether to load the content of the road map into the main memory of the device or whether the Lucca should load the data from the SD card during the navigation.

Note:

If you load the new road map into the main memory, the previously installed road map is overwritten.

→ Touch the **OK** button.

The selected road map is activated and the *Navigation* menu displays.

Removing the SD Card

→ Carefully push on the SD card in the slot until it disengages.

The SD card is ejected a little bit and can be removed.

Technical Data

OS: Microsoft Win CE 5.0
CPU: Atlas II Dual Core Processor (300MHz)

Main Memory:
RAM(64MB) DRAM
ROM(512MB) NAND Flash

Unit Size(mm):
115(W) x 80(L) x 25(H)

Unit Weight(g):
approx. 190

GPS: QuickFind Technology on Centrality Dual Core Processor 20 channel

Battery: Rechargeable Battery (Li-Ion 1230mA)

Sound: Max 1.5W Speaker built-in

SD Card: SD Card slot for external storage (max. 2GB)

Operating temperature:
-20°C ... 60°C

Storage temperature:
-30°C ... 70°C

Disposal of old unit

(EU countries only)



Do not dispose of your old unit in the household trash!

Please use the return and collection systems available to dispose of the old unit.

Service

In some countries Blaupunkt offers a specific repair service including a pick-up service.

In case your Lucca has to be sent to Blaupunkt for service you can order a pick-up service for your device on the internet.

Refer to www.blaupunkt.com to check if this service is available in your country.

Warranty

We provide a manufacturer's warranty for our products purchased within the European Union. For devices purchased outside the European Union, the warranty terms issued by our respective responsible domestic agency are valid.

The warranty terms can be called up under www.blaupunkt.com/de or requested directly from:

Blaupunkt GmbH, Hotline
Robert-Bosch-Str. 200
D-31139 Hildesheim

Fault Removal / Frequently Asked Questions FAQ

Why does the Lucca require GPS reception?

The system must know where it is located or where it is moving. This is accomplished with the help of GPS satellites. Without GPS reception, navigating is not possible.

How can I listen to MP3 music?

With the help of a PC, the MP3 files are stored on the card which is then inserted in the SD card slot of the Lucca. In conjunction with the cradle, they can also be played over the car sound system.

Can the navigation software be changed?

Yes. Simply insert the card in the SD card slot or use the USB-port and you can immediately navigate with the new data.

The internal navigation software remains intact and you can use either the internal navigation software or the one on the SD card for the selection.

Is the old internal navigation software overwritten with a change of the navigation software?

No, the system can navigate with the internal as well as the external data. If the external data (SD card) are used for navigation, the SD slot for the MP3 playback for the Lucca is unavailable during this time.

Can the internal navigation software be changed?

Yes. The data can be loaded in the internal memory. For this purpose, insert the SD card in the SD card slot or connect the Lucca via the USB-port with your PC and initiate the loading process via menu.

How long does the loading take from the SD card to the internal memory?

The loading process lasts approx. 15 minutes and is dependent upon the data size. For this reason, the individual countries are delivered as completely manufactured maps.

The data do not have to be loaded from the SD card into the internal memory.

Is it possible to play WMA files with DRM protection?

The playback of WMA files with Digital Rights Management protection (WMA-DRM) is not possible since the license key is not transferred during the transfer of the WMA file from the PC.

The playback of WMA files without DRM protection is, of course, possible.

Which cards can I use?

Commercial SD or MMC cards.

Which data format is required for an SD card?

FAT 16/32.

Country:		Phone:	Fax:/www:
Germany	(D)	0180-5000225	05121-49 4002 www.blaupunkt.com
Austria	(A)	01-610 39 0	01-610 39 391
Belgium	(B)	02-525 5444	02-525 5263
Denmark	(DK)	44-898 360	44-898 644
Finland	(FIN)	09-435 991	09-435 99236
France	(F)	01-4010 7007	01-4010 7320
Great Britain	(GB)	01-89583 8880	01-89583 8394
Greece	(GR)	210 94 27 337	210 94 12 711
Ireland	(IRL)	01-46 66 700	01-46 66 706
Italy	(I)	02-369 62331	02-369 62464
Luxembourg	(L)	40 4078	40 2085
Netherlands	(NL)	0800 400 1010	0800 400 1040
Norway	(N)	66-817 000	66-817 157
Portugal	(P)	2185 00144	2185 00165
Spain	(E)	902 52 77 70	91 410 4078
Sweden	(S)	08-7501850	08-7501810
Switzerland	(CH)	01-8471644	01-8471650
Czech. Rep.	(CZ)	02-6130 0446	02-6130 0514
Hungary	(H)	76 511 803	76 511 809
Poland	(PL)	0800-118922	022-8771260
Turkey	(TR)	0212-335 06 71	0212-346 00 40

Blaupunkt GmbH,
Robert-Bosch-Straße 200,
D-31139 Hildesheim

10/06 CM-AS/SCS1 (GB)

8 622 405 254





Mobile Navigation

TravelPilot Lucca 3.3



DE

Die Lucca hat eine neue Ein-/Ausschaltlogik!

Es gibt zwei Ausschaltzustände der Lucca:

- 1) Den Ruhestand (Kurzdruck auf die Schaltfläche **Power**).
- 2) Das vollständige Ausschalten aller Funktionen (Langdruck länger als 3 Sekunden auf die Schaltfläche **Power**).

Zum Einschalten drücken Sie die Schaltfläche **Power** kurz, wenn Sie die Lucca aus dem Ruhestand wecken möchten. Wenn das Gerät vollständig ausgeschaltet ist, drücken Sie die Schaltfläche **Power** länger als 4 Sekunden.

Wir wünschen Ihnen allzeit gute Fahrt - Ihr Blaupunkt Service Team



GB

The Lucca features a new switch-on/switch-off logic!

The Lucca features two switch-off states:

- 1) The idle state (short press on the **Power** button).
- 2) Complete switch-off of all functions (long press for longer than 3 seconds on the **Power** button).

To switch it on, briefly press the **Power** button to return the Lucca from the idle state. If the device is completely switched off, press the **Power** button for longer than 4 seconds.

Have a safe trip at all times - Your Blaupunkt Service Team



FR

Le Lucca répond à une nouvelle logique de mise en marche et d'arrêt !

Le Lucca peut prendre deux états d'arrêt différents :

- 1) Etat de repos (pression brève sur le bouton **Power**).
- 2) Arrêt complet de toutes les fonctions (pression prolongée, plus de 3 secondes, sur le bouton **Power**).

Si vous souhaitez sortir le Lucca de l'état de repos et le mettre en marche, appuyez brièvement sur le bouton **Power**. Si l'appareil avait été complètement arrêté, appuyez sur le bouton **Power** pendant plus de 4 secondes.

En vous souhaitant toujours bonne route - votre Service Team Blaupunkt



IT

Il Lucca ha una nuova logica di accensione/spengimento.

Per il Lucca sono disponibili due modalità di spegnimento:

- 1) Stand-by (breve pressione del pulsante **Power**).
- 2) Completa disattivazione di tutte le funzioni (pressione di durata superiore a 3 secondi del pulsante **Power**).

Per l'accensione premere brevemente il pulsante **Power**, se si intende riattivare il Lucca dallo stato di stand-by. Premere il pulsante **Power** per più di 4 secondi, se l'apparecchio è completamente spento.

Vi auguriamo buon viaggio - Il vostro Blaupunkt Service Team

8 622 405 423



NL

De Lucca is voorzien van een nieuwe aan-/uitschakellogica!

Er zijn twee uitschakeltoestanden van de Lucca:

- 1) De ruststand (de **Power** knop kort indrukken).
- 2) Het volledig uitschakelen van alle functies (langer dan 3 seconden op de **Power** knop drukken).

Om het apparaat in te schakelen drukt u kort op de **Power** knop, wanneer u de Lucca weer uit de ruststand wilt 'wekken'. Wanneer het apparaat volledig is uitgeschakeld, druk dan langer dan 4 seconden op de **Power** knop.

Wij wensen u altijd een goede reis - Uw Blaupunkt Service Team



SW

Lucca har en ny på-/avslagningslogik!

Lucca går att slå av på två olika sätt:

- 1) Viloläget (kort tryckning på skärknappen **Power**).
- 2) Slå av alla funktioner (lång tryckning (mer än 3 sekunder) på skärknappen **Power**).

För att slå på trycker du kort på skärknappen **Power** om du vill väcka Lucca ur viloläget. När apparaten är helt avstängd trycker du på skärknappen **Power** längre än 4 sekunder.

Blaupunkt Service Team - alltid där för dig



ES

¡El Lucca tiene una nueva lógica de conexión y desconexión!

Hay dos tipos de estado de desconexión:

- 1) El modo de reposo (pulsación breve del botón **Power**).
- 2) La desconexión completa de todas las funciones (pulsación durante más de 3 segundos del botón **Power**).

Pulse brevemente el botón **Power** si desea que el Lucca abandone el modo de reposo. Si el equipo está totalmente desconectado, pulse el botón **Power** durante más de 4 segundos.

Su equipo de servicio Blaupunkt le desea un buen viaje.



PT

O Lucca possui uma nova lógica de ativação/desativação!

Existem dois estados de desativação do Lucca:

- 1) O estado de repouso (toque breve no botão **Power**).
- 2) A desativação total de todas as funções (toque longo por mais de 3 segundos no botão **Power**).

Para ligar, prima brevemente o botão **Power**, se pretender reactivar o Lucca do estado de repouso. Se o aparelho estiver totalmente desligado, prima o botão **Power** por mais de 4 segundos.

Desejamos-lhe uma viagem sempre agradável - a sua equipa do serviço Blaupunkt

**DK****Lucca-navigasjonssystemet er udstyret med et logisk tænd/sluk-system!**

Lucca-navigasjonssystemet har to sluktilstande:

- 1) Dvaletilstand (kort tryk på skærmenknappen **Power**).
- 2) Fuldstændig deaktivering af alle funktioner (langt tryk i mere end 3 sekunder på skærmenknappen **Power**).

Hvis du vil tænde for systemet, skal du trykke kort på skærmenknappen **Power**, hvis Lucca-navigasjonssystemet befinder sig i dvaletilstand. Hvis systemet er helt slukket, skal du trykke på skærmenknappen **Power** i mere end 4 sekunder.

Vi ønsker dig god rejse. Hilsen dit Blaupunkt-serviceteam

**NO****Lucca har nye logiske funksjoner for å slå apparatet på og av!**

Det finnes to forskjellige tilstander for avslått apparat:

- 1) Hvilemodus (kort trykk på knappen **Power**).
- 2) Alle funksjoner fullstendig avslått (langt trykk i mer enn 3 sekunder på knappen **Power**).

For å slå på trykker du kort på knappen **Power** når du vil aktivere Lucca fra hviletilstand. Når apparatet er fullstendig avslått trykker du på knappen **Power** lenger enn 4 sekunder.

Vi ønsker deg en god reise. Hilsen ditt Blaupunkt serviceteam

**SF****Lucca-järjestelmässä on uusi kytkentä-/katkaisulogiikka!**

Lucca-järjestelmällä on kaksi erilaista katkaisutilaa:

- 1) Lepotila (painikkeen **Power** lyhyt painallus).
- 2) Kaikkien toimintojen täydellinen sammuttaminen (painikkeen **Power** pitkä, yli 3 sekuntia kestävä painallus).

Kun haluat herättää Lucca-järjestelmän lepotilasta, kytke laite päälle painamalla lyhyesti painiketta **Power**. Kun laite on kytketty kokonaan pois päältä, paina painiketta **Power** yli 4 sekuntia.

Blaupunkt-palvelutiimi toivottaa sinulle hyvää ja turvallista ajomatkaa

**TR****Lucca'da yeni bir açma/kapatma sistemi mevcuttur!**

Lucca'da iki kapatma durumu mevcuttur:

- 1) Hareketsiz durum (**Power** tuşuna butonuna basma).
- 2) Tüm fonksiyonları tamamen kapatma (**Power** butonuna 3 saniyeden fazla uzun süre basma).

Lucca'yı hareketsiz durumdayken açmak için **Power** butonuna kısa süre basınız. Cihaz tamamen kapatılmış durumda ise **Power** butonuna 4 saniyeden fazla basınız.

Size iyi sürüşler dileriz - Blaupunkt servis takımınız

**HU****A Lucca új be-és kikapcsoló logikával rendelkezik!**

A Lucca két kikapcsolási állapottal felszerelt:

- 1) A nyugalmi állapot (rövid nyomás a **Power**) kapcsolómezőre.
- 2) Az összes funkció teljes kikapcsolása (a **Power** kapcsolófelületet hosszabban, mint 3 másodperc lenyomva tartani).

Bekapcsoláskor nyomja meg a **Power** kapcsolófelületet röviden, ha a Lucca készüléket a nyugalmi állapotból fel kívánná ébreszteni. Ha a készülék teljesen ki van kapcsolva, nyomja meg a **Power** kapcsolófelületet és tartsa 4 másodpercnél hosszabb ideig lenyomva.

Minden időben kellemes utazást kíván Önnek - az Ön Blaupunkt szerviz csapata.

**PL****Urządzenie Lucca posiada nowy układ logiczny włączania/wyłączenia!**

Istnieją dwa stany wyłączenia urządzenia Lucca:

- 1) Stan spoczynkowy (krótkie naciśnięcie pola wyboru **Power**).
- 2) Całkowite wyłączenie wszystkich funkcji (długie naciśnięcie na ponad 3 sekundy pola wyboru **Power**).

Aby włączyć urządzenie Lucca, znajdujące się w stanie spoczynkowym, naciśnij krótko pole wyboru **Power**. Gdy urządzenie jest całkowicie wyłączone, naciśnij na ponad 4 sekundy pole wyboru **Power**.

Życzymy szerokiej drogi - Twój serwis Blaupunkt

**CZ****Přístroj Lucca má nový způsob vypínání/zapínání!**

Přístroj Lucca nabízí dva režimy vypínání:

- 1) klidový režim (krátké stisknutí tlačítka **Power**).
- 2) úplné vypnutí všech funkcí (dlouhé stisknutí tlačítka **Power** po dobu delší než 3 sekundy).

Pro návrat přístroje Lucca z klidového režimu stiskněte krátce tlačítko **Power**. Pokud je přístroj zcela vypnutý, stiskněte tlačítko **Power** po dobu delší než 4 sekundy.

Přejeme vám šťastnou cestu - váš servisní team Blaupunkt

**SK****Prístroj Lucca má nový spôsob zapínania/vypínania!**

Prístroj Lucca ponúka dva režimy vypínania:

- 1) Kludový režim (krátké stlačenie tlačítka **Power**).
- 2) Úplné vypnutie všetkých funkcií (dlhé stlačenie tlačítka **Power** na čas dlhší ako 3 sekundy).

Na návrat prístroja Lucca z kludového režimu stlačte krátko tlačítko **Power**. Pokiaľ je prístroj celkom vypnutý, stlačte tlačítko **Power** na čas dlhší ako 4 sekundy.

Prajeme vám šťastnú cestu - váš servisný tím Blaupunkt

**GR****Το Lucca έχει μια νέα λογική ενεργοποίησης/απενεργοποίησης!**

Υπάρχουν δύο καταστάσεις απενεργοποίησης του Lucca:

- 1) Η κατάσταση αδρανείας (σύντομο πάτημα στο κουμπί **Power**).
- 2) Η πλήρης απενεργοποίηση όλων των λειτουργιών (παρατεταμένο πάτημα περισσότερο από 3 δευτερόλεπτα στο κουμπί **Power**).

Για την ενεργοποίηση πιέστε για λίγο το κουμπί **Power**, όταν θέλετε να επαναφέρετε το Lucca από την κατάσταση αδρανείας. Εάν η συσκευή είναι πλήρως απενεργοποιημένη, πιέστε το κουμπί **Power** περισσότερο από 4 δευτερόλεπτα.

Σας ευχόμαστε καλό δρόμο - το επιτελείο της Blaupunkt



Mobile Navigation

TravelPilot Lucca 3.3 CC



DE

Beiliegendes Kartenmaterial (Backup CD-ROM)

Ihrer Lucca 3.3 CC liegt detailliertes Kartenmaterial zu den auf der Verpackung genannten Ländern (bzw. dem Land) bei. Entgegen den Angaben in den Bedienungsanleitungen umfasst dies nicht Gesamt-Europa. Kartenmaterial anderer Länder Europas erhalten Sie im Fachhandel.



GB

Enclosed map material (Backup CD-ROM)

Your Lucca 3.3 CC features detailed map material of the countries (or the country) listed on the packaging. Contrary to the information in the operating instructions, it does not include all of Europe. Map material of other countries of Europe is available at specialised dealers.



FR

Données cartographiques jointes (CD-ROM de sauvegarde)

Des données cartographiques détaillées relatives au(x) pays mentionné(s) sur l'emballage sont jointes à votre Lucca 3.3 CC. Contrairement à ce qui est indiqué dans la notice d'utilisation, elles ne portent pas sur l'ensemble de l'Europe. Vous pouvez vous procurer des données cartographiques relatives aux autres pays d'Europe dans le commerce spécialisé.



IT

Materiale cartografico accluso (CD-ROM di backup)

Insieme al Lucca 3.3 CC viene fornito materiale cartografico dettagliato relativo al/i Paese/i riportato/i sulla confezione. Contrariamente a quanto indicato nelle istruzioni d'uso queste mappe non comprendono l'intera Europa. Il materiale cartografico relativo agli altri Stati europei può essere acquistato separatamente presso rivenditori specializzati.



NL

Meegeleverd kaartmateriaal (back-up CD-ROM)

Bij uw Lucca 3.3 CC wordt gedetailleerd kaartmateriaal meegeleverd van de op de verpakking vermelde landen (resp. het land). In tegenstelling tot de informatie in de gebruiksaanwijzing omvat dit materiaal niet geheel Europa. Kaarten van andere Europese landen kunt u verkrijgen bij uw vakhandel.



ES

Material cartográfico adjunto (copia de seguridad en CD-ROM)

Su Lucca 3.3 CC incorpora material cartográfico detallado para el/los país(es) especificado(s) en el embalaje. A diferencia de lo indicado en el manual de instrucciones, esto no engloba a toda Europa. El material cartográfico de otros países de Europa puede adquirirse en comercios especializados.

8 622 405 545



PT

Mapas anexos (CD-ROM de segurança)

Juntamente com o seu Lucca 3.3 CC, recebe mapas pormenorizados dos países (ou país) mencionados na embalagem. Contrariamente às indicações nas instruções de serviço, eles não abrangem toda a Europa. Poderá adquirir mapas de outros países europeus no comércio da especialidade.



TR

Ekteki kart malzemesi (Backup CD-ROM)

Lucca 3.3 CC 'nizin detaylı kart malzemesi, adı geçen ülkelerin (veya ülkenin) ambalajında ektedir. Kullanım kılavuzlarındaki verilere rağmen, bu bütün Avrupa'yı kapsamaz. Avrupa'nın başka ülkelerinin kart malzemesini uzman piyasadan edinebilirsiniz.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>