 


# BOSCH

**Use and Care Manual  
For Household Use Only  
Notice d'utilisation et d'entretien  
Usage domestique uniquement  
Manual de instrucciones y cuidado  
sólo para uso doméstico**

**MMB 1000 UC**

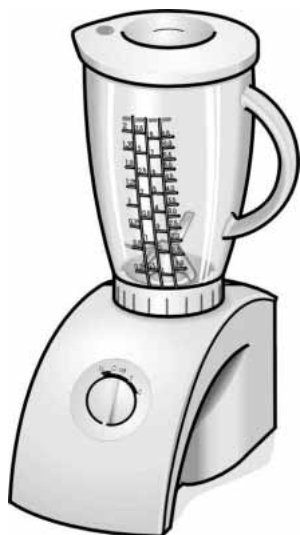

**MMB 2000 UC**



**MMB 1000 UC  
MMB 2000 UC**

**Blender**



---

**Use and Care Manual ..... 3**

**READ THIS MANUAL** thoroughly for important safety and operating instructions before using this appliance.

---

**Notice d'utilisation et d'entretien ..... xx**

Avant tout utilisation, **LISEZ ATTENTIVEMENT** ce manuel, vous y trouverez des consignes importantes portant sur la sécurité et le fonctionnement de votre appareil.

---

**Manual de instrucciones y cuidado ..... xx**

**LEA ESTAS INSTRUCCIONES** cuidadosamente por las instrucciones importantes de seguridad y funcionamiento antes de utilizar el electrodoméstico.

---

---

# IMPORTANT SAFEGUARDS

## READ AND SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

When using electrical appliances, basic safety precautions should always be followed, including the following:

 
- READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
- To protect against risk of electrical shock, do not immerse the power base in water or other liquid.
- Close supervision is necessary when used by or near children.
- Unplug cord from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return appliance to an authorized service center for examination, electrical repair, mechanical repair or adjustment.
- The use of attachments, including canning jars not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Keep hands and utensils out of the jar while blending to prevent the possibility of severe personal injury and/or damage to blender. A rubber spatula may be used but only when the blender is not running.
- Blades are sharp. Handle carefully.
- To avoid injury, never place the blade unit on the power base without the jar properly in place.
- Always operate blender with lid in place.
- When blending hot liquids, keep the vent holes around the measuring cap open to allow steam to escape.
- Allow hot liquids to cool down to a lukewarm temperature before pouring into the jug.

**Note:** This appliance has a polarized plug (one prong is wider than the other). As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fill fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

# Your new blender

Congratulations on having selected a Bosch blender; blenders that we feel are the best available.

The Bosch blenders are available in 2 models, powered by 600 W Bosch motor:

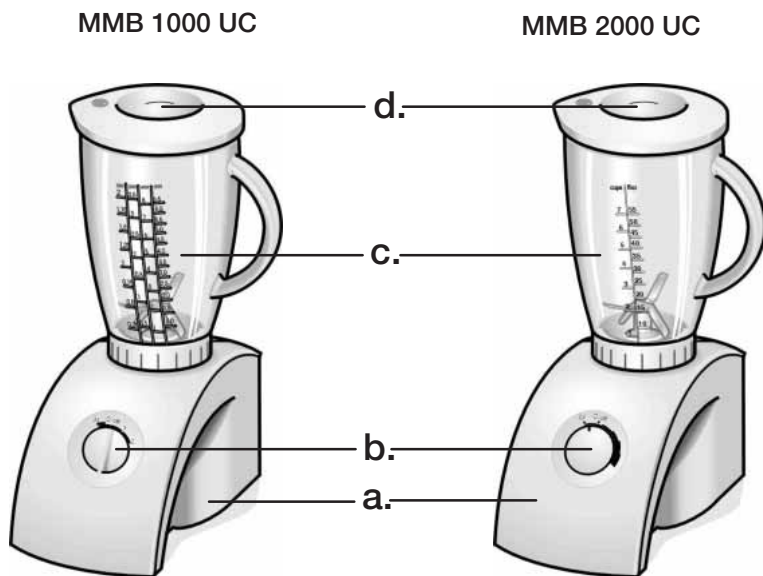

**The MMB 1000 UC with**

- a. motor base
- b. step switch
- c. plastic blender jug
- d. lid with funnel

**The MMB 2000 UC with**

- a. motor base
- b. retractable switch
- c. glass blender jug
- d. lid with funnel

# Operating the appliance

This appliance is designed for domestic use only.

Use the appliance for processing normal quantities of food for domestic use. Please keep the operating instructions.

If passing on the appliance to a third party, always include the operating instructions.

The appliance is suitable for preparing the following quantities:

 
## Quantities

	<b>MMB 1000 UC</b>	<b>MMB 2000 UC</b>
Solid food	3 ½ oz/ 100 g	3 ½ oz/ 100 g
Liquids	max. 3 ½ pints/ 2.0 liters	max. 3 pints/ 1.75 liters
⚠ Hot or frothing liquids	<b>max. 1¼ pints/ 1.0 liters</b>	<b>max. 1½ pints/ 0.75 liters</b>
To process ice or frozen food, set the rotary switch to position “M”.		


## Operating



- Clean the appliance and accessories before using for the first time.
- Attach the blender jug (1.) and rotate fully into position in a clockwise direction (2.).
- Add ingredients.
- Attach the lid and press down until it locks into position.
- ⚠ Allway hold the edge of the lid while operating the blender.

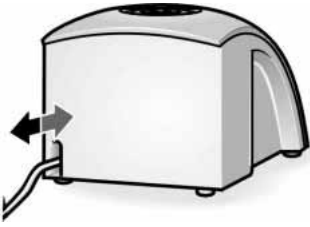

 1. Pull the cord out of the housing and insert the plug into outlet.

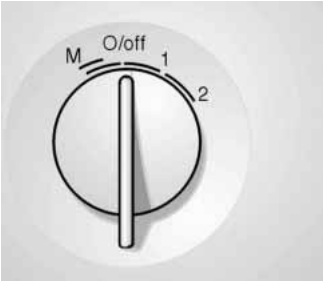

2. Switch on the appliance:

**MMB 1000 UC:**

 
Move the rotary switch to the desired setting.

**M** Pulse switch at maximum speed, grip switch for required blending duration

**O/off** Stop

**1** Low speed setting

**2** Maximum speed setting

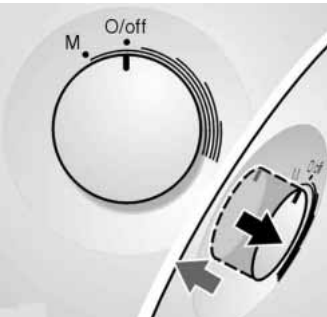

**MMB 2000 UC:**

Before use, push to extend the rotary switch.

Move the switch to the desired position.

**M** Pulse switch at maximum speed, grip switch for required blending duration

**O/off** Stop



Variable operating speed;  
operating speed steplessly adjustable

3. Always grip the edge of the lid while operating the blender.

**Do not grip the feed tube.**

## Adding more ingredients



1. Set the rotary switch to **"0/off"**.
2. Remove the lid and add more ingredients.  
*or*
3. Pour in more liquid trough the funnel in the lid.



Add solid ingredients trough the filler tube in the lid.

4. Move the rotary switch to the desired position.

## After blending

1. Set the rotary switch to **"0/off"**.  
MMB 2000 UC:  
also retract the rotary switch; press in the switch and release slowly.
2. Remove the blender jug by rotating it in counter-clockwise direction.  
Take the lid off the blender jug.

**Tip:** It is recommended that the blender jug be cleaned immediately after use, see "Cleaning and servicing".

# Cleaning and servicing

## **⚠ Warning!**

 
*Never immerse the motor block and the blades in water and do not clean in the dishwasher.*

**Note:** Do not use abrasive cleaning agents as these will damage the surfaces.

1. Pull out the plug.
2. Remove the mixer from the motor block.
3. Wipe the motor block with a damp cloth and wipe dry.
4. Disassemble the blender:  
Detach the blender motor base from the blender jug by rotating it in an counter-clockwise direction. Follow the wording on the underside of the blender support.



5. Disassemble the blender support:  
Carefully take the blade compartment out of the blender support.

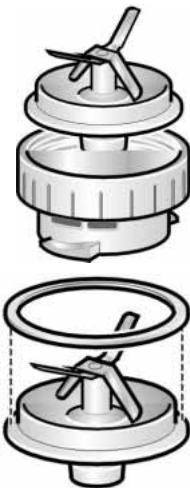

6. Carefully remove the sealing ring from the blade compartment.  
**Blades are very sharp.**





7. Disassemble the cover:  
Take the funnel out of the filler tube in the lid and remove the lower part of the lid.
8. Clean the blender jug, individual parts of the lid as well as the blender motor base in the dishwasher or with normal household detergent.
9. Clean the blade compartment and sealing ring with a brush under running water only. Detergent will impair the bearing lubrication.
10. Re-assemble in reverse sequence.

## Troubleshooting

### **⚠ Risk of electric shock!**

Before rectifying a fault, pull out the plug.

Fault	Remedial action
Blender does not start	Correctly attach the blender and rotate fully into position. Blade is blocked. Switch off the appliance, empty out the contents and refill. Switch on the appliance again.
The blender switches off during operation	Rotate the blender fully into position.

**⚠ If any other faults occur, contact Customer service.**

---

# Recipes

The blender is suitable for

- blending and frothing liquids,
- cutting and chopping raw fruit, vegetables, nuts and chocolate,
- pureeing soups, cooked fruit and vegetables,
- preparing mayonnaise and sauces.

---

## Mayonnaise

- 1 egg
- 1 heaped tsp. mustard
- 1 tbs. vinegar or lemon juice
- 1 pinch of salt
- 1 pinch of sugar
- 1 cup oil

Ingredients must be at the same temperature.

1. Switch on the blender at low speed.
2. Process the ingredients (except the oil) at low speed for several seconds.
3. Switch the blender to maximum speed, slowly pour the oil through the funnel and blend for approx. 1 minute.

### **Maximum quantity:**

Double the quantity of the basic recipe.

---

## Hot chocolate

- 2-3 fl oz cooled cooking chocolate
- 2 cups hot milk
- Whipped cream and grated chocolate as required

1. Cut the cooking chocolate into pieces (approx. ½ inch) and chop up completely in the blender at maximum speed.
2. Switch off the blender and add the milk through the funnel.
3. Blend for 1 minute at maximum speed.
4. Pour the hot chocolate into glasses and serve with whipped cream and grated chocolate as required.

---

## Banana milk shake

2–3 bananas  
2–3 heaped tbs. vanilla or lemon ice cream  
Few drops of vanilla flavoring  
2 cups milk

1. Blend ingredients at maximum speed for approx. 1 minute.

---

## Fruit sundae

8 oz fruit (e.g. strawberries, banana, orange, apple)  
1¾ oz–3½ oz sugar  
2 cups cold water  
Ice as required

1. Peel fruit and cut into pieces
2. Blend all the ingredients at maximum speed for approx. 1 minute.
3. Serve with the ice cream

---

## Citrus cocktail

2–3 oranges  
1–2 lemons  
½–1 tbs. sugar or honey  
1 cup apple juice  
1 cup mineral water  
Ice cube as required

1. Peel the oranges and apples, cut into pieces
2. Blend the ingredients (except the apple juice and mineral water) at maximum speed for approx. 1 minute.
3. Add the apple juice and mineral water
4. Blend briefly until the drink is frothy.
5. Pour the cocktail into glasses and serve as required with ice cubes

---

## Salsa

2–4 dried red chili pods (Chile De Arbol)

2 large garlic cloves

½ bunch fresh cilantro

8 oz can tomato sauce

1 tsp dried oregano

1 tsp ground cumin

½ tsp salt

Puree water, garlic and chili peppers for 30 seconds.

Add all other ingredients and blend until cilantro is finely chopped. Add additional tomato sauce or water if salsa is too hot.

---

## Fruit Smoothie

2 cups fruit juice

(banana/strawberry/pineapple or tropical mix)

2 cups frozen fruit

(strawberries, melon, peaches, berries or mix)

½ can frozen juice concentrate

(berry mix or tropical mix)

1 cup peach yogurt (or any flavor)

1 banana

1–2 cups ice

Blend all ingredients until smooth.



BSH Home Appliances Corporation  
5551 McFadden Avenue  
Huntington Beach, CA 92649  
USA

Web site: [www.boschsmallappliances.com](http://www.boschsmallappliances.com)

Customer Service (toll free): 1-866-44BOSCH (1-866-442-6724)

Appelez le service-client (gratuit) : 1-866-44BOSCH (1-866-442-6724)

Servicio al cliente (libre de cargo): 1-866-44BOSCH (1-866-442-6724)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>