 


# BOSCH

**Use and Care Manual  
For Household Use Only  
Notice d'utilisation et d'entretien  
Usage domestique uniquement  
Manual de instrucciones y cuidado  
Sólo para uso doméstico**

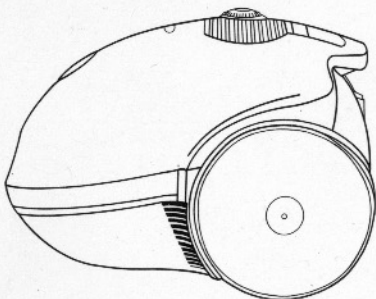

**BSA2...UC Vacuum cleaner**

---

**Use and Care Manual .....3**

---

**Notice d'utilisation et d'entretien .....16**

---

**Manual de instrucciones y cuidado .....29**

# Important Safeguards

## Use as directed

### **⚠ NOTE**

This vacuum cleaner is intended for use in the home and not for industrial purposes.

The vacuum cleaner must be used exclusively in accordance with the specifications stated in the instructions.

The manufacturer shall not be held liable for any damages which arise from use which is not as directed or has been caused by an incorrect operation of the vacuum cleaner. Therefore, please ensure that the following information is observed and heeded.

## Safety information

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

 
**⚠ WARNING** - To reduce the risk of fire, electric shock, or injury:

### **⚠ CAUTION**

- **Do not** leave appliance when plugged in. Unplug from outlet when not in use and before servicing.
- **Do not** use outdoors or on wet surfaces.
- **Do not** allow to be used as a toy. Close attention is necessary when used by or near children.
- **Do not** use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- **Do not** pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- **Do not** unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- **Do not** handle plug or appliance with wet hands.
- **Do not** put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- **Do not** use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- **Do not** pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- **Do not** use without dust bag and/or filters in place.
- **Do not** vacuum up damp substances or liquids to avoid electrical shock hazards.
- **Do not** operate the brush on or next to people or animals or let the tube or nozzles get close to your face or head to prevent entanglement or possible injury from flying debris.
- **Do not** operate the vacuum if any part of it is damaged to prevent injury to the operator or bystanders.

- **Do not** use machine as a step.
- **Do not** re-use or wash the filters.
- **Do not** remove any screws.
- **Do not** vacuum up sharp objects to prevent injuries when opening or emptying the appliance.
- **Do not** use a damaged vacuum appliance.
  
- **Do** operate the appliance only with original dust bags.
- **Do** operate the appliance only by using original spare parts, accessories or optional accessories. Use only as described in this manual.
- **Do** connect and start up the vacuum cleaner only in accordance with the information stipulated on the identification plate.
- **Do** protect the vacuum cleaner from external weather conditions, dampness and heat sources.
- **Do** switch off and unplug the appliance before any assembly, cleaning and before servicing.
- **Do** supervise children whenever they are around an operating appliance to prevent injury to the child and possible damage from misuse of the appliance.
- **Do** switch off and unplug the appliance if it stops sucking or at the event of any other fault.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- Unplug before connecting the Turbo Universal floor brush.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.


**SAVE THESE INSTRUCTIONS!**

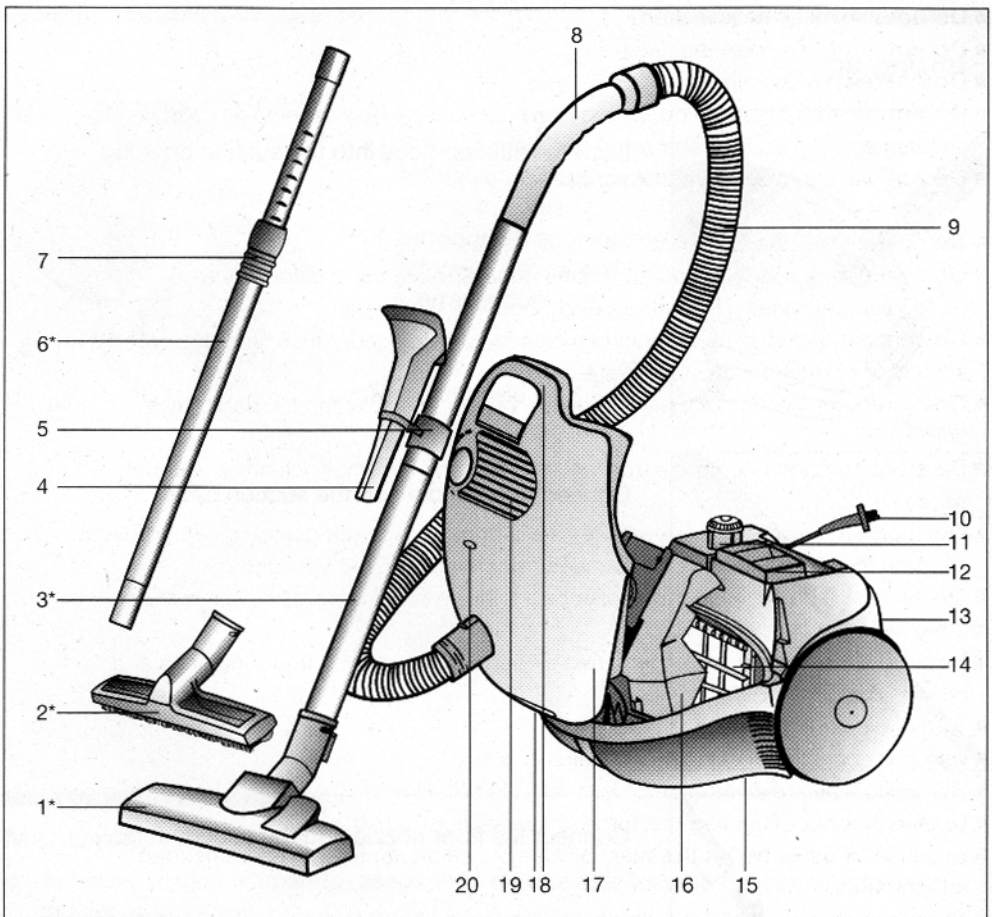


- |   |                            |
|---|----------------------------|
| 1 Adjustable floor nozzle*                              | 12 Exhaust filter          |
| 2 Hard floor nozzle*                                    | 13 Parking aid             |
| 3 2-parts steel tube*                                   | 14 Microsan filter         |
| 4 Combination nozzle                                    | 15 Storing aid             |
| 5 Attachment support for the<br>combination nozzle      | 16 Dust bag                |
| 6 Telescopic tube*                                      | 17 Lid                     |
| 7 Sliding sleeve  | 18 Handle                  |
| 8 Hose grip   | 19 Exhaust grid            |
| 9 Suction hose  | 20 Dust bag change display |
| 10 Plug   |                            |
| 11 On / off switch with<br>electronic suction regulator |                            |

\*Depending on version


## Starting up

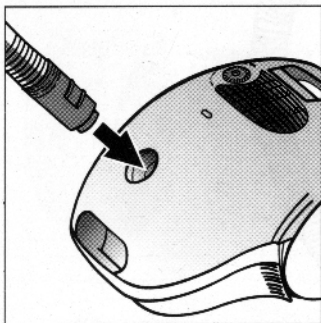 

 
Lock the suction hose into the suction opening

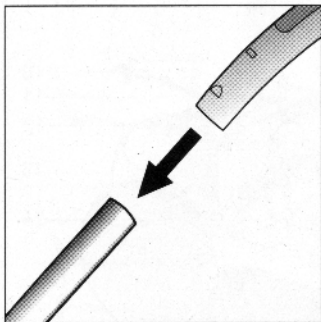

 Connect the handle and the suction tube.

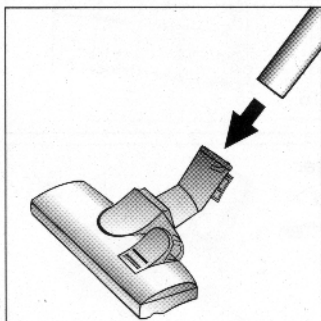


 Connect the floor nozzle and the suction tube.

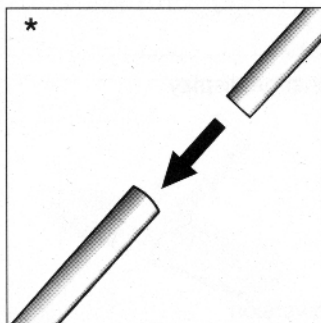


Connect the 2-part steel tube

 \*Depending on version

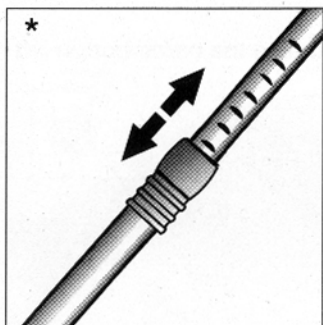


Unlock the telescopic tube and adjust to the desired length by moving the adjusting button/sliding sleeve up or down.

 
\*Depending on version

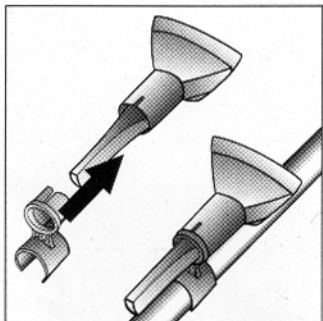

 
Slide the attachment support on to the combination nozzle and clip on to the suction / telescopic pipe

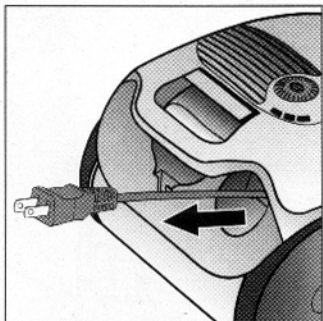

 Take the cord by the plug and pull out the desired length and then plug into the socket.

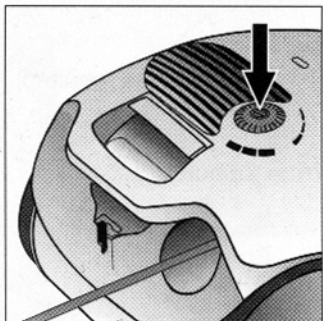


 Switch on/off the vacuum cleaner by pressing the on/off button with your hand or your foot

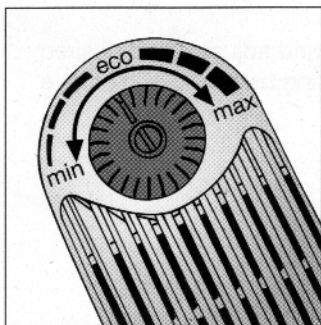



 Set the level of suction by turning the on/off button left or right.

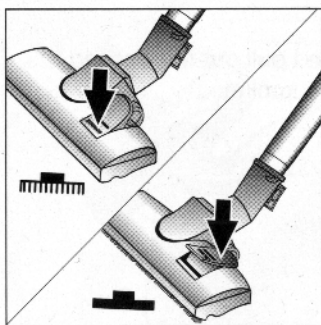
## Suction



Adjusting the floor nozzle:

- For cleaning rugs and carpet => 
- For cleaning hard floors => 

 This enables an optimum cleaning effect for the different flooring.

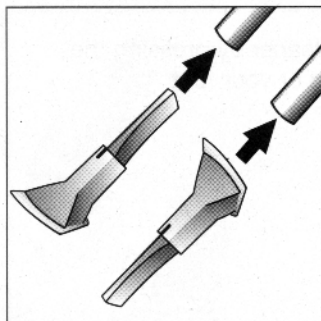


### Vacuuming with accessories

(connect to the handle or the suction tube as required)

Combination nozzle

 
For vacuuming in corners, joints, upholstery, curtains etc.



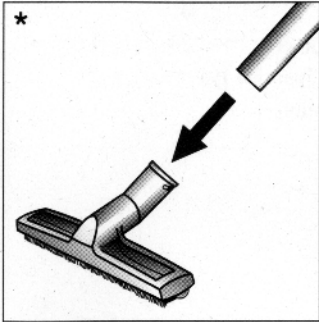


Hard floor nozzle  
For vacuuming hard floor surfaces (tile, wood etc)

 \*Depending on version

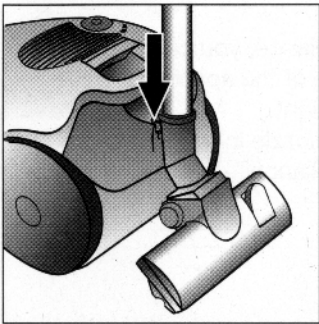


 When taking brief vacuuming pauses, you can use the parking aid on the back of the appliance. Push the hook on the floor nozzle in to the recess on the back of the appliance.

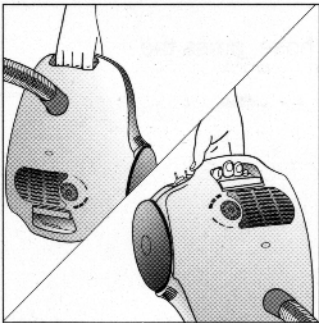


The appliance can be carried using the two grips. This is especially useful when vacuuming stairs or reaching up to the ceiling.


## After use

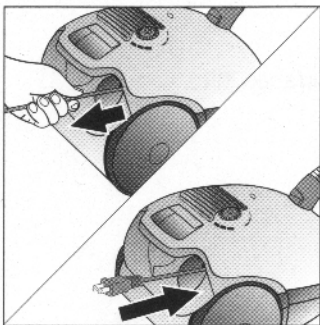 

 Pull out the plug from the socket.  
Pull briefly on the cord and then let go  
(the cord rolls up automatically)

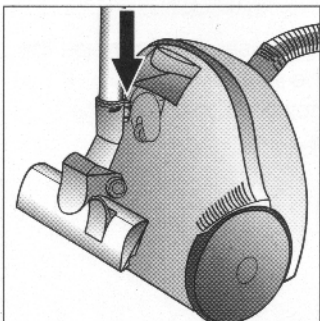


 To store / transport the appliance, you can use the  
storing aid on the underside of the appliance.  
Stand the appliance up straight.  
Push the hook on the floor nozzle in to the recess  
on the underside of the appliance.

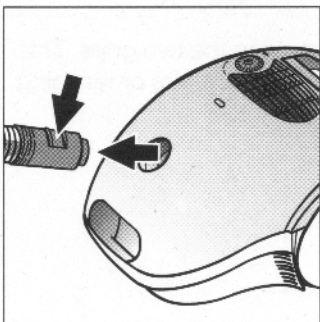


When removing the suction hose, press the  
latch and pull out the hose.

## Changing the filter

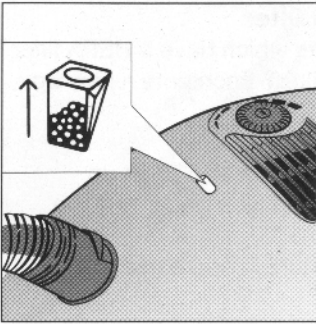 


### Replace the dust bag

 
The dust bag change display on the lid turns yellow, when it's time to replace the bag.

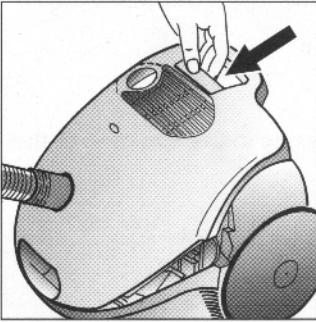

 Open the covering by lifting up on the lever.

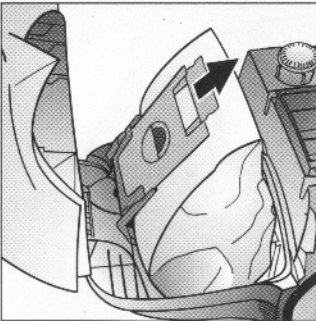


 Seal and remove the dust bag by pulling on the cover clip

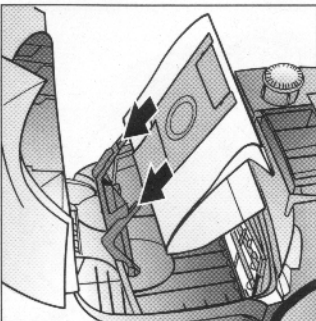

Insert the new dust bag in the holding fixture, up to the stop.

 
**Attention:** Cover will only close if a paper filter is inserted! After vacuuming fine dust particles (e.g. cement, plaster, etc.), clean the motor filter and replace the Microsan filter if necessary.

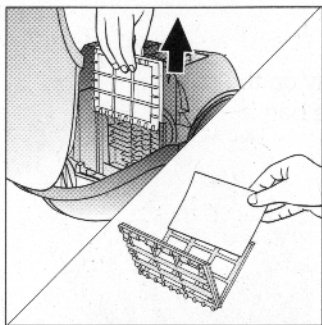

### Replacing the Microsan filter


(Omitted on vacuum cleaners which have a HEPA filter.)  
When should I change the filter? Each time a new box of dust bags is opened.

 - Open the covering.
- Pull out the filter holding fixture and open up.
- Dispose of the old Microsan filter and insert the new one.
- Slide the filter holding fixture in and close the covering.

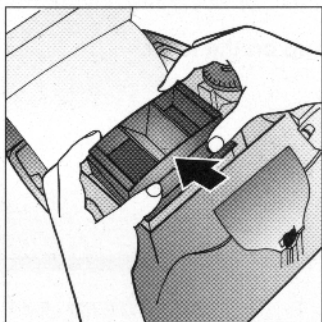


### Cleaning the motor filter

 - Open the covering.
- Unlock the insert by pressing in the direction of the arrow and pull out.

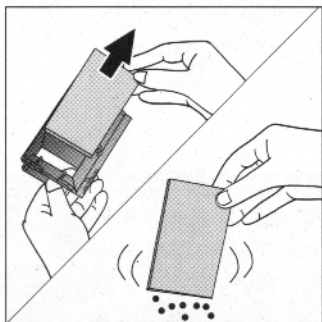

 - Remove the motor filter and clean it.
- Insert the cleaned motor filter.

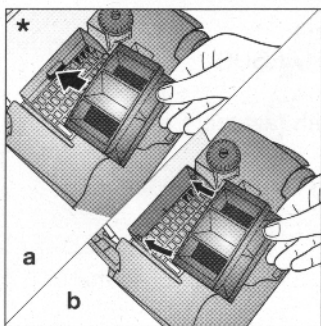

- a) Push in the insert below the front support ribs and engage.  
Close the covering.
- b) Push in the insert below the two lateral support ribs and engage.  
Close the covering.

\*Depending on version


## Maintenance

 - Before the appliance is cleaned, ensure that it has been switched off and unplugged.
- Vacuum cleaners and accessories made of plastic can be cleaned using a general commercial plastic cleaner.

**Do not use scouring agents, glass or all-purpose cleaners.  
Never immerse the vacuum cleaner in water!**

- If necessary, the dust compartment can be cleaned using another vacuum cleaner, or simply cleaned with a dry dust cloth / dust brush.


## Spare parts and optional extras

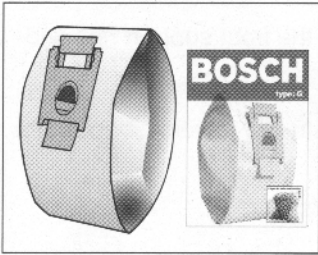

### Dust bag MEGAfil® BBZ51AFGUC


Contents:

 5 x dust bags MEGAfil® with fasteners and  
1 Microsan filter

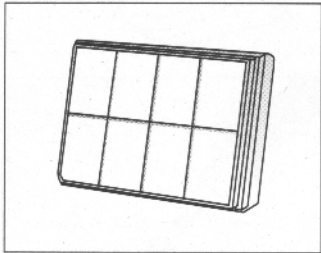

### HEPA Filter BBZ8SF1UC

 
additional filter for pure exhaust air.  
Recommended for those with allergies.  
Replace every year.

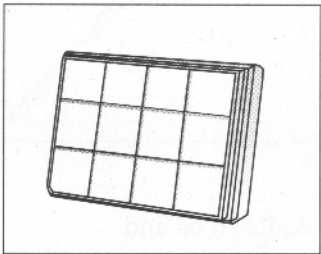

### Micro-/Activated Charcoal filter BBZ8KF1UC

Combination of micro filter and activated charcoal  
filter.

 The thick layer of activated charcoal prevents any  
disturbing odors for a long period of time (replace  
every 6 month).

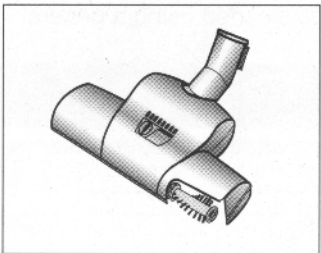


### TURBO-UNIVERSAL-floor brush BBZ28TBUC

Suitable for all floors. Brushes and vacuums in one  
step. Flattened piles are restored.

No marks are left in the piles. Lifts fluff, threads and  
hair with ease.

 The brush roller is driven by the suction force of the  
vacuum cleaner. No electrical connection required.

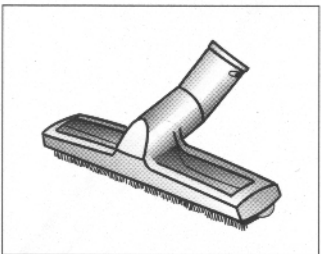

### Hard floor nozzle BBZ120HDUC

With extra soft bristles for all delicate wooden or other  
hard floors (tile, stone, etc.)

---

## **BOSCH Small Appliance Warranty**

BSH Home Appliances («BOSCH») warrants all new small appliances to be free from original defects in design, materials and workmanship for one (1) year after the sale to the original owner.

Within the stated warranty period, BOSCH will repair or replace, at its sole option, any small appliance or parts thereof which prove defective under the conditions of normal use and service at no charge to you. It is the owner's responsibility to return the appliance for repair. Repaired and replacement small appliances and parts shall be the same or as close in appearance as possible to the original for the purposes of this warranty.

Should you require service of your BOSCH small appliance, please contact customer service at 1-866-44-BOSCH. Repair of BOSCH appliances should only be performed by qualified technicians.

This warranty is limited to the original consumer purchase and is not transferable. Specifically excluded from this warranty are failures caused by accident, misuse, neglect, abuse, including tampering, use of frequency or voltage other than marked on the product, and use for commercial purposes.

To the extent allowed by law, this warranty sets out your exclusive remedies, whether for negligence or otherwise. BOSCH will not be liable for any consequential or incidental damages, losses or expenses.

**THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESSED WARRANTIES. ANY WARRANTY IMPLIED BY LAW, WHETHER FOR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR OTHERWISE, SHALL BE EFFECTIVE ONLY FOR THE PERIOD THAT THIS EXPRESSED WARRANTY IS EFFECTIVE. BOSCH DOES NOT ASSUME ANY RESPONSIBILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.**

No attempt to alter, modify or amend this warranty shall be effective unless authorized in writing by an officer of BOSCH. Some states do not allow limitations on how long implied warranties last or the exclusion or limitation of incidental or consequential damages, so the foregoing limitations and exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

BSH Home Appliances Corporation  
5551 McFadden Avenue  
Huntington Beach, CA 92649  
USA

Web site: [www.boschvacuums.com](http://www.boschvacuums.com)

Customer Service (toll free): 1-866-44BOSCH (1-866-442-6724)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>