


ABOUT THIS MANUAL



- Button operations are indicated using the letters shown in the illustration.
- Each section of this manual provides you with the information you need to perform operations in each mode. Further details and technical information can be found in the "REFERENCE" section.

GENERAL GUIDE

- Press **C** to change from mode to mode.
- In any mode, press **B** to illuminate the display.

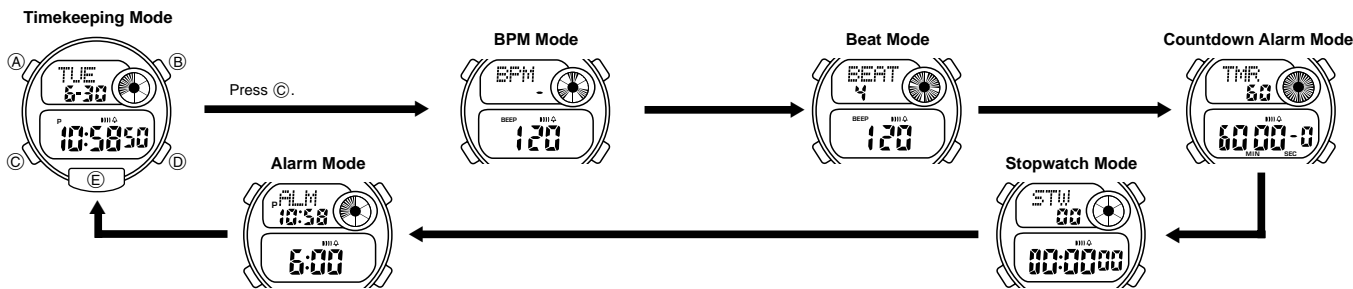

TIMEKEEPING MODE

In addition to normal timekeeping, use the Timekeeping Mode to set the current time and date.

Calibrating the Seconds Count




Use the following procedure to calibrate the seconds count on a time signal from a radio, TV, or other source.


1. In the Timekeeping Mode, hold down **A** until the seconds digits start to flash on the display.
2. Press **D** to set the seconds count to **00** when the time signal you are calibrating to sounds.
- Pressing **D** while the seconds count is in the range of 30 to 59 resets the seconds to **00** and adds 1 to the minutes. If the seconds count is in the range of 00 to 29, the minutes count is unchanged.
3. Press **A** to return to the current time display.

Setting the Current Time and Date

Day of week Month - Day

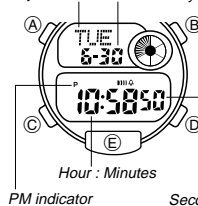

 1. In the Timekeeping Mode, hold down **A** until the seconds digits start to flash on the display.
- The seconds digits are flashing because they are selected.
2. Press **C** to move the flashing in the sequence shown below to select other digits and settings.



3. While hour, minutes, year, month, or day is selected (flashing), press **D** to increase the setting or **B** to decrease it.
- When the 12-hour format is selected, use **D** to toggle between 12-hour (12H) and 24-hour (24H) timekeeping.
4. After the time and date are set the way you want them, press **A** to return to the current time screen.

Notes

- When 12-hour format is selected, the P (PM) indicator appears on the display to indicate "p.m." times. There is no indicator for "a.m." times.
- Selecting 24-hour format causes the 24 indicator to appear on the display.
- The year can be set in the range of 1995 to 2039.
- The day of the week is automatically displayed in accordance with the month and day setting.
- The watch's built-in full automatic calendar automatically make allowances for different month lengths and leap years. Once you set the date, there should be no reason to change it except after the replacement of the watch's battery.


BPM MODE

The BPM Mode makes it easy to count the number of beats per minute and determine the tempo of music and any other rhythmical process.

- The letters "BPM" stand for "beats per minute" in this manual.
- The same BPM value is used by the BPM Mode and the Beat Mode.

Counting Beats

1. In the BPM Mode, press **D** to toggle between **BEEP** (BEEP indicator displayed) and **LIGHT** (LIGHT indicator displayed) as the button confirmation operation.
- **BEEP** causes the watch to beep each time you press **E** in the step 2 below, while **LIGHT** causes the backlight to flash when **E** is pressed.

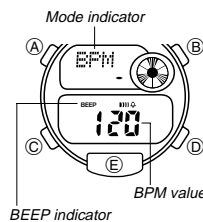

2. Press **E** five times in accordance with the beat of the music or rhythm.
- Each press of **E** causes the number of beats in the upper part of the display to cycle in the following sequence:
1 → 2 → 3 → 4 → -
3. After you press **E** the fifth time, the watch calculates an average number of beats per minute and displays the applicable BPM value.
- The BPM value is stored in memory. You can use the BPM value to perform a beat operation using the procedure under "Performing a Beat Operation".
- If you selected **LIGHT** in step 1, the backlight lights after step 3 for about two seconds to indicate that the BPM value is stored in memory.
- See "BPM Mode Notes" for more important information about the BPM value.


BEAT MODE

The Beat Mode can be used to produce an audible signal or flashing backlight in accordance with BPM value, which is like a digital metronome that can be used for a variety of different musical applications.

- The same BPM value is used by the BPM Mode and the Beat Mode.

Performing a Beat Operation


1. In the Beat Mode, press **D** to toggle between **BEEP** (audible signal) and **LIGHT** (flashing backlight) as the beat operation type.
- **BEEP** (BEEP indicator displayed) causes the watch to beep for each beat, while **LIGHT** (LIGHT indicator displayed) causes the backlight to flash.

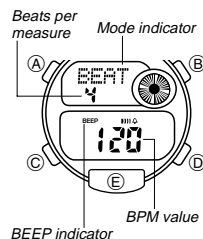

2. Press **E** to perform the selected beat operation at the speed indicated by the BPM value.
- The higher the BPM value, the faster the beat.
- The beat operation continues for one minute or until you press **E** again.
- When you select **BEEP** in step 1, the beat operation is performed in accordance with the number of beats per measure you specify under "Changing BPM Settings Manually" below.

Changing BPM Settings Manually


Beats per measure

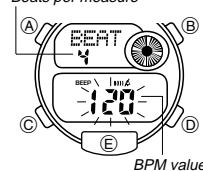

1. In the Beat Mode, hold down **A** until the BPM value starts to flash.
2. Press **D** to increase the BPM value or **B** to decrease it.
- You can set the BPM value within a range of 60 to 200.
- Pressing **B** and **D** at the same time changes the BPM value to its standard setting of 120.
3. Press **C**, and the beats per measure value starts to flash.
4. Press **D** to increase the number of beats per measure and **B** to decrease it.
- You can set the number of beats per measure within a range of 1 to 8.

5. After the BPM and number of beats per measure values are the way you want, press **A** to return to the initial Beat Mode screen.

COUNTDOWN ALARM MODE

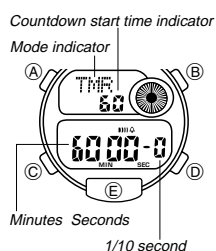

With the Countdown Alarm Mode, you get five built-in start times (60, 74, 90, 120, 180 minutes) that match the lengths of today's cassette tapes and mini disks (MD). You also get one user memory area in which you can store a starting time of your own. The countdown start time indicator shows which memory is currently selected.


- See "Countdown Start Time" for details about the start time indicator in the upper display.

Using the Countdown Timer

1. In the Countdown Alarm Mode, press (D) to cycle through the available start times until the one you want to use is on the display.
2. Press (E) to start the countdown timer.


- When the countdown reaches zero, an alarm sounds for 10 seconds or until you stop the alarm by pressing any button. The countdown time is automatically reset to its starting value after the alarm stops.
- Press (E) while a countdown operation is in progress to pause it. Press (E) again to resume the countdown.
- To completely stop a countdown operation, first pause it (by pressing (E)), and then press (A). This returns the countdown time to its starting value.
- The countdown operation is paused when the countdown time in the lower part of the display is different from the countdown start time indicator in the upper part of the display. The countdown time is at its starting value when both times are identical.

Setting a User Countdown Start Time

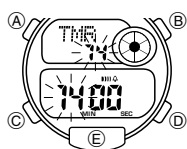


1. While the start time indicator and countdown start time are identical, hold down (A) until the minutes digits of the countdown start time start to flash on the display.
 - If the start time indicator and start time are not identical, it means that a countdown operation is paused. Press (A) to clear the current countdown operation and make the two values identical.
2. Press (D) to increase the minutes setting or (B) to decrease it.
 - You can set a time in the range of 1 to 180 minutes, in 1-minute steps.
3. After the countdown start time is the way you want it, press (A) to return to the initial Countdown Alarm Mode screen.

STOPWATCH MODE

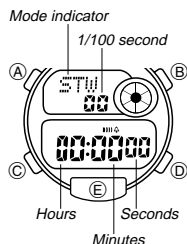


The Stopwatch Mode lets you measure elapsed time, split times, and two finishes. The range of the stopwatch is 23 hours, 59 minutes, 59.99 seconds.

 
(a) Elapsed time measurement



 (b) Split time measurement



 (c) Split time and 1st-2nd place times




ALARM MODE

You can set a Daily Alarm that sounds at the same time each day, while it is turned on. You can also turn on an Hourly Time Signal that causes the watch to beep twice every hour on the hour.

Setting the Daily Alarm

1. In the Alarm Mode, hold down (A) until the hour digits of the alarm time start to flash on the display.
 - The hour digits are flashing because they are selected.
 - This operation automatically turns on the Daily Alarm.
2. Press (C) to move the flashing in the sequence shown below to select other digits.

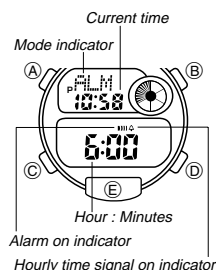

3. While hour or minutes is selected (flashing), press (D) to increase the setting or (B) to decrease it.
 - When setting the alarm time using the 12-hour format, take care to set the time correctly as a.m. (no indicator) or p.m. (P indicator).
4. After the alarm time is the way you want it, press (A) to return to the initial Alarm Mode screen.

Daily Alarm Operation


The alarm sounds at the preset time each day for about 20 seconds, or until you stop it by pressing any button.

To test the alarm

Hold down (E) to sound the alarm.

Turning the Daily Alarm and Hourly Time Signal on and off

In the Alarm Mode, press (D) to cycle through the on and off settings as shown below.

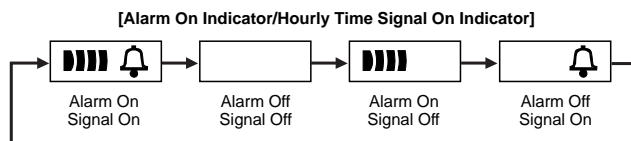

REFERENCE

This section contains more detailed and technical information about watch operation. It also contains important precautions and notes about the various features and functions of this watch.

Auto Return Operations

- If you leave the watch in BPM or Beat Mode for about one hour without performing any operation, it automatically changes to the Timekeeping Mode.
- If you leave a screen with flashing digits on the display for two or three minutes without performing any operation, the watch automatically saves anything you have set up to that point and exits the setting screen.

Scrolling

The (B) and (D) buttons are used in various modes and screens to scroll through available settings on the display. In most cases, holding down these buttons scrolls at high speed.

12-hour/24-hour Timekeeping Formats

The 12-hour/24-hour timekeeping format you select in the Timekeeping Mode is also applied in the Alarm Mode.

Backlight Precautions

The backlight use an EL (electro-luminescent) panel that causes the entire display to glow for easy reading in the dark. In any mode (except when making settings), press (B) to illuminate the display.

- The backlight remains lit for about eight seconds in the BPM and Beat Modes, and for about two seconds in other modes.
- The electro-luminescent panel loses illuminating power after very long use.
- The illumination provided by the backlight may be hard to see when viewed under direct sunlight.
- The watch will emit an audible sound whenever the display is illuminated. This is caused by a transformer that vibrates when the EL panel lights up. It does not indicate malfunction of the watch.
- The backlight automatically turns off whenever an alarm sounds.
- Frequent use of the backlight shortens the battery life.

BPM Mode Notes

- The watch cannot calculate a BPM value in either of the two following cases.
 - When you press (E) fewer than five times.
 - When you allow more than two seconds to pass between presses of (E).
- The watch will calculate a BPM value even if you press (E) more than five times. In this case, it uses the average timing of the last five presses of the (E) button.
- The BPM value is set within a range of 60 to 200 beats per minute. A beat below 60 is indicated by L on the display, while a beat above 200 is indicated by H.
- You can enter the BPM Mode from the Timekeeping Mode by pressing (E).

Countdown Start Time

- The Countdown Alarm Mode has five built-in start times (60, 74, 90, 120, 180) that match the lengths of today's cassette tapes and mini disks (MD). You also get one user memory area in which you can store a starting time of your own.
- You can set a user start time in the range of 1 to 180 minutes, in 1-minute steps. When you do, it is automatically inserted into its proper location among the built-in start times. If you set a user start time of 86, for example, it will be inserted between 74 and 90. This means when you scroll through the available start times on the watch display to select one, they will cycle in the sequence: 60 → 74 → 86 → 90 → 120 → 180.
- You can have only one user start time. If you set a new user start time while there is already one in memory, the new time replaces the old one, which is deleted.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>