




Quick Start

About Your Creative USB Adapter CB2431 with Bluetooth Wireless Technology

Thank you for choosing the Creative USB Adapter CB2431 with Bluetooth™ Wireless Technology. Your USB adapter is easy to set up and supports wireless transfer rates of up to 1 Mbps*. Your USB adapter adds Bluetooth technology to your computer and can be paired with other Bluetooth-enabled devices.

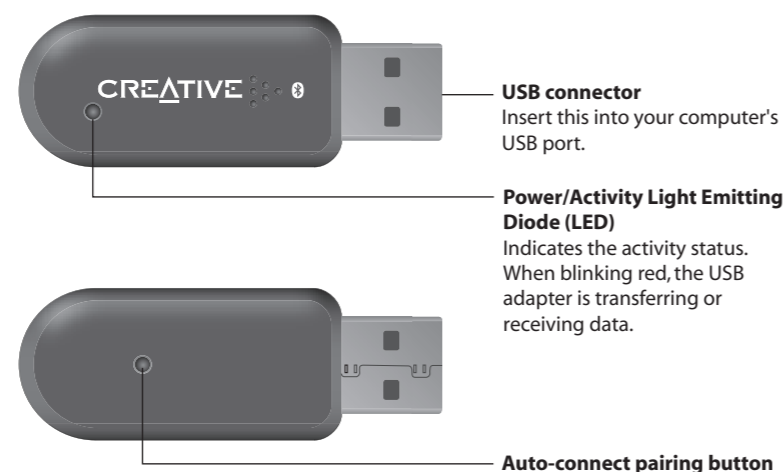

* Effective throughput of up to 723 Kbps.

1 Installing Your USB Adapter

DO NOT connect the USB adapter to your computer before installing the software.

- Turn on your computer and insert the Installation CD into your CD-ROM/DVD-ROM drive. Your CD should start automatically. If it does not, follow the steps below:
 - Start Windows Explorer.
 - On the left pane, click the **My Computer** icon.
 - Right-click the CD-ROM/DVD-ROM drive icon, and then click **Autoplay**.
- Select **Software Installation**.
- Select the **Bluetooth Software** check box and click the **OK** button.
- When a **Software Installation Wizard** dialog box appears, click the **Next** button.
- When a **License Agreement** dialog box appears, select **I accept the terms in the license agreement** and click the **Next** button.
- In the **Destination Folder** dialog box that appears, locate and select the folder where you want to install the software, and then click the **Next** button. The **Installation Progress Bar** appears on the screen.
- If the **Device not found** dialog box appears, click the **Cancel** button.
- Click the **Finish** button.
- When prompted, restart your computer.

- Connect the USB adapter to your computer as shown in Figure 1 below.

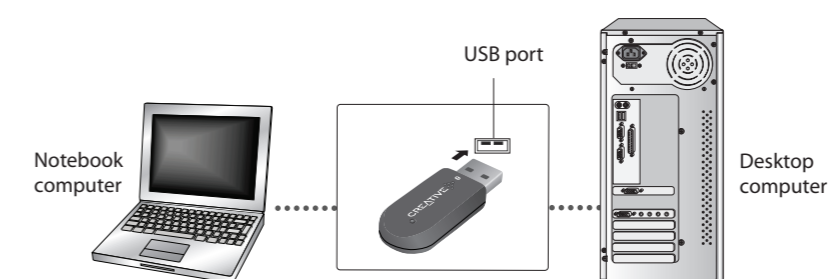


Figure 1

- When the **Add New Hardware Wizard** dialog box appears, click the **Install the software automatically [Recommended]** option, and then click the **Next** button.
- In the next dialog box that appears, click the **Next** button.
- Click the **Finish** button to complete the installation. The **My Bluetooth Places** icon appears on your computer's desktop and system tray.

For Windows XP Service Pack 2 only

- Click **Start** → **Settings** → **Control Panel**.
- Double-click the **System** icon.
- When the **System Properties** dialog box appears, click the **Hardware** tab.
- Click the **Device Manager** button.
- Double-click **Bluetooth Radios**.
- Right-click **Blutonium BCM Bluetooth 2.4GHz Single Chip Transceiver** and click **Update Driver**.
- When the **Hardware Update Wizard** dialog box appears, select **No, not this time** and click the **Next** button.
- Select **Install from a list or specific location (Advanced)** and click the **Next** button.
- Select **Don't search. I will choose the driver to install** and click the **Next** button.
- Select **CB2431/CB2436 Creative Bluetooth USB Adapter** and click the **Next** button.
- Click the **Finish** button. Your USB adapter should appear under **Bluetooth Devices** in Device Manager.



Your computer's USB port may be located on the front panel. If your USB adapter does not fit into the USB port located on the back panel, connect it to the USB port located on the front panel.

2 Configuring Your Bluetooth Device

- On your taskbar, right-click the **My Bluetooth Places** icon , and select **Start Using Bluetooth**. The **Initial Bluetooth Configuration Wizard** dialog box appears.
- Follow the instructions on the screen to complete the configuration.
- When you are prompted to install another Bluetooth device, click the **Skip** button.
- Click the **Finish** button.

3 Verifying Your Bluetooth Installation

- On your taskbar, right-click the **Bluetooth** icon, and select **Advanced Configuration**. The **Bluetooth Configuration** dialog box appears.
- Click the **Hardware** tab. The **Bluetooth Configuration** dialog box appears.
- In the **Device Properties** box, check the device status and device address. The device should be indicated as working properly and the device address should match the Bluetooth Device Address (BDA), found on a label on your USB adapter.

4 Pairing Your USB Adapter to Other Bluetooth-Enabled Devices

a. Using My Bluetooth Places Application

You need to pair your USB adapter for it to work with other Bluetooth-enabled devices. Use the My Bluetooth Places application to pair your USB adapter to Bluetooth-enabled devices. For more information about the My Bluetooth Places application, refer to the User's Guide (on CD). Go to **manual\<language>\manual.pdf**.

- On your taskbar, double-click the **My Bluetooth Places** icon . The **My Bluetooth Places** window appears.
- Double-click the **Find Bluetooth Devices** icon.
For Windows XP only: In the **Bluetooth Tasks** box, click **View devices in range**.
- In the **Entire Bluetooth Neighborhood** dialog box, double-click the Bluetooth-enabled device that you want to pair to.
- Follow the instructions on the screen.



If prompted for a Bluetooth pin code, type the pin code of the Bluetooth-enabled device that you are pairing your USB adapter to.

b. Using the Auto-connect Pairing Button

To pair your USB adapter to a Bluetooth-enabled keyboard or mouse, using the **Auto-connect pairing** button, do the following:

- Make sure that your Bluetooth-enabled keyboard or mouse is in Discoverable mode. For more information, refer to your keyboard's or mouse's User's Guide.
- Press and hold the **Auto-connect pairing** button on your USB adapter until the **Power/Activity** LED blinks red.
- When the **Bluetooth Device Selection** dialog box appears, wait for your USB adapter to detect your Bluetooth-enabled mouse or keyboard.
- To pair to your keyboard:**
When the **Bluetooth Security Setup** dialog box appears, in the **PIN Code** box, type your keyboard's pairing pin and press the **<Enter>** key. The **Bluetooth** icon on the taskbar turns green.

To pair to your mouse:

When the **Confirmation Required** dialog box appears, click the **Click here** button. The **Bluetooth** icon on the taskbar turns green.

Product Registration

Enjoy a host of benefits by registering your product during installation, or at www.creative.com/register. Benefits include:

- Service and Product Support from Creative
- Exclusive updates on promotions and events

Please note that your warranty rights are not dependent on product registration.

Creative Knowledge Base

Resolve and troubleshoot technical queries at Creative's 24-hour self-help Knowledge Base. Go to www.creative.com and select your region.

Customer Support Services & Warranty

You can find Customer Support Services, Warranty and other information in the Installation CD.

Customer Support Services	d:\support\<language>\support.pdf
Warranty	d:\warranty\<region>\<language>\warranty.pdf Please keep your Proof of Purchase for the duration of the Warranty period.
User's Guide	d:\manual\<language>\manual.pdf

(replace **d:** with the drive letter of your CD-ROM/DVD-ROM drive, **<region>** with the region you are in, and **<language>** with the language that the document is in).

Keep this document for future reference.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>