



CI3807 CI3807B INSTRUCTION MANUAL



Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.


To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

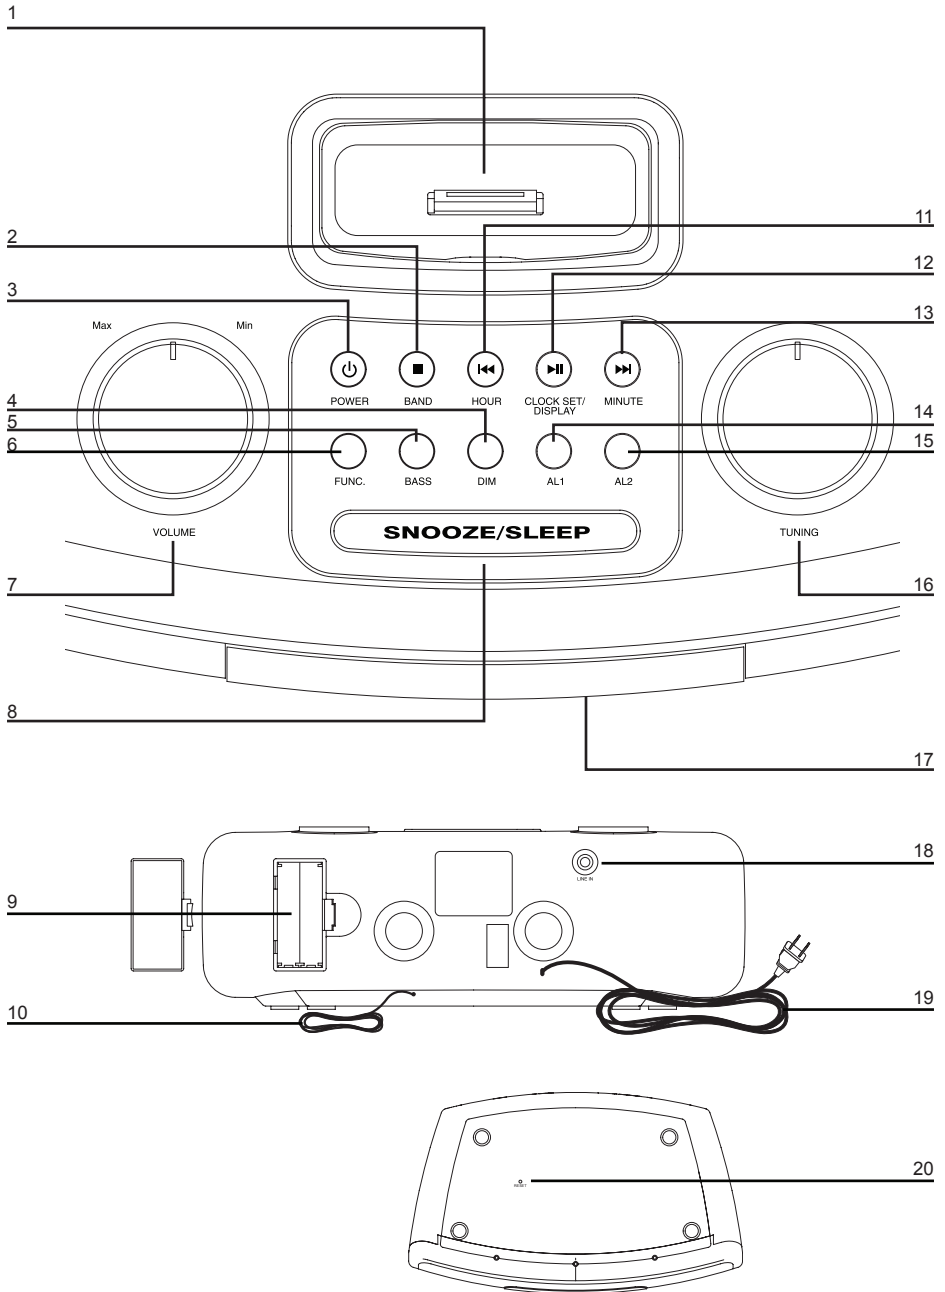

Features Defined

- 1 Dock for iPod** Using the included inserts, comfortably dock an iPod, iPod with color display, iPod with video, iPod mini, or iPod nano (2G). This dock will charge an iPod and allow it to be played through the unit's speakers.

- 2 Stop/BAND** Press the STOP button to stop a CD or iPod from playing. Press the BAND button to switch between AM and FM radio modes.

- 3 POWER** Press the Power button to turn the unit on and off. After the alarm sounds, press the POWER button to turn the alarm off until the next day.

- 4 DIM** Press the DIM (dimmer) button to adjust the brightness of the LCD between high, medium, and low.

- 5 BASS** Press the BASS button to boost the bass output on the unit.

- 6 FUNC.** Press the FUNC. (function) button to switch between Radio, iPod, and AUX modes.

- 7 VOLUME** Turn the VOLUME dial clockwise to increase the volume and counter-clockwise to decrease the volume.

- 8 SNOOZE/SLEEP** With the Power on, press the SLEEP button to set the sleep timer between 10 and 90 minutes. When the alarm sounds, press the SNOOZE button to delay the alarm for an additional 9 minutes.

- 9 Battery Compartment** (2 - 'AAA' batteries, not included) The Battery Compartment serves as a back-up for the clock. The batteries alone will not allow the Radio, iPod, or AUX functions to be used.

- 10 FM Antenna** The FM Wire Antenna provides flexibility and range when adjusting the FM reception. An AM Antenna is built into the player.

- 11 SKIP/SEARCH/HOUR** Press the SKIP/SEARCH button to skip to the previous track of an iPod. Press and hold the SKIP/SEARCH button to search backwards through an individual track of an iPod. Press the HOUR button to change the hour when setting the clock or alarms.

- 12 PLAY/PAUSE/CLOCK SET/DISPLAY** Press the PLAY/PAUSE button to play or pause a track on an iPod. With the unit off, press and hold the CLOCK SET button to activate the clock set mode. In Radio mode, press the DISPLAY button to toggle between the radio frequency view and the clock view.

- 13 SKIP/SEARCH/MINUTE** Press the SKIP/SEARCH button to skip to the next track of an iPod. Press and hold the SKIP/SEARCH button to search forwards through an individual track of an iPod. Press the MINUTE button to change the minute when setting the clock or alarms.

- 14 AL1** With the unit off, press and hold the AL1 button to enter the alarm 1 set mode.

- 15 AL2** With the unit off, press and hold the AL1 button to enter the alarm 2 set mode.

Peripherals

- 16 TUNING** Turn the TUNING dial clockwise to increase the radio frequency and counter-clockwise to decrease the radio frequency.
-
- 17 LCD Display** Use the LCD display to view the time, alarm time, function, and radio frequency.
-
- 18 LINE IN** Use the LINE IN to connect an external audio source to the unit. This requires a 1/8" miniphono plug (not included).
-
- 19 AC Cord** Plug the attached AC Cord into a standard outlet to power the unit.
-
- 20 RESET** Press the RESET button to reset the unit to its default factory settings.
-

Operations

Docking an iPod

1. Locate the numbered *Bracket* that fits the iPod that will be docked.

Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

2. Snap the *Bracket* into place over the iPod connector in the Docking Station.

All Brackets will only fit one way onto the Dock.

When inserting an iPod nano (first or second generation), slide the Dock connection on the unit so that it matches the opening on the iPod nano (first or second generation).

3. Connect the iPod to the iPod connector inside the Docking Station.

Once an iPod is connected to the Docking Station, the unit will charge the docked iPod.

Playing an iPod

1. Dock an iPod onto the unit.
2. Press the Power Button to turn the unit on.
3. Press the Function Button to switch the unit to iPod mode.
4. Press the Play/Pause Button to play and pause the docked iPod.

Operations

Setting the Clock

- a. Press and hold the CLK SET button. The TIME symbol will begin flashing on the LCD display.
- b. While holding the CLK SET button press the HOUR and MINUTE buttons to adjust the hour and minute.
- c. When the correct time is set, release the CLK SET button to set the designated time.
 - *To switch the clock to 12 or 24 hour time, press and hold the FUNCTION button in Power off mode. When the display flashes "12Hr", press the FUNCTION button again to switch to "24Hr".*

Setting the Alarm

- a. Press and hold the AL1 or AL2 button. The ALARM symbol will begin flashing on the LCD display.
- b. While holding the AL1 or AL2 button press the HOUR and MINUTE buttons to adjust the hour and minute.
- c. When the correct time is set, release the AL1 or AL2 button to set the designated alarm time.
- d. Press the AL1 or AL2 button to change the alarm source between iPod, Radio, and Buzzer.
 - *After the alarm sounds, press the SNOOZE button to delay the alarm for an additional 9 minutes, or press the Power button to turn the alarm off.*

Tuning the Radio

- a. With the unit powered on, press the function button until the unit is in Radio mode.
 - *The word "RADIO" will appear on the LCD Display when the unit is in Radio mode.*
- b. Press the STOP/BAND button to switch between AM and FM radio.
- c. Use the TUNING dial to change the radio frequency.
 - *Adjust the FM Wire Antenna to improve FM reception. The AM antenna is built into the player, so to improve AM reception adjust the position the unit.*

Connecting other Digital Audio Devices

- a. Connect an audio device to the LINE IN input.
- b. Press the FUNCTION button to set the unit to AUX mode, as indicated by the LCD Display.
- c. The audio device will now play through the speakers of the unit.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email prodinfo@gpx.com

Website www.gpx.com

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>