


AMERICAN STRATOCASTER® HH, 0117100, R/W

SWITCH & CONTROL FUNCTION

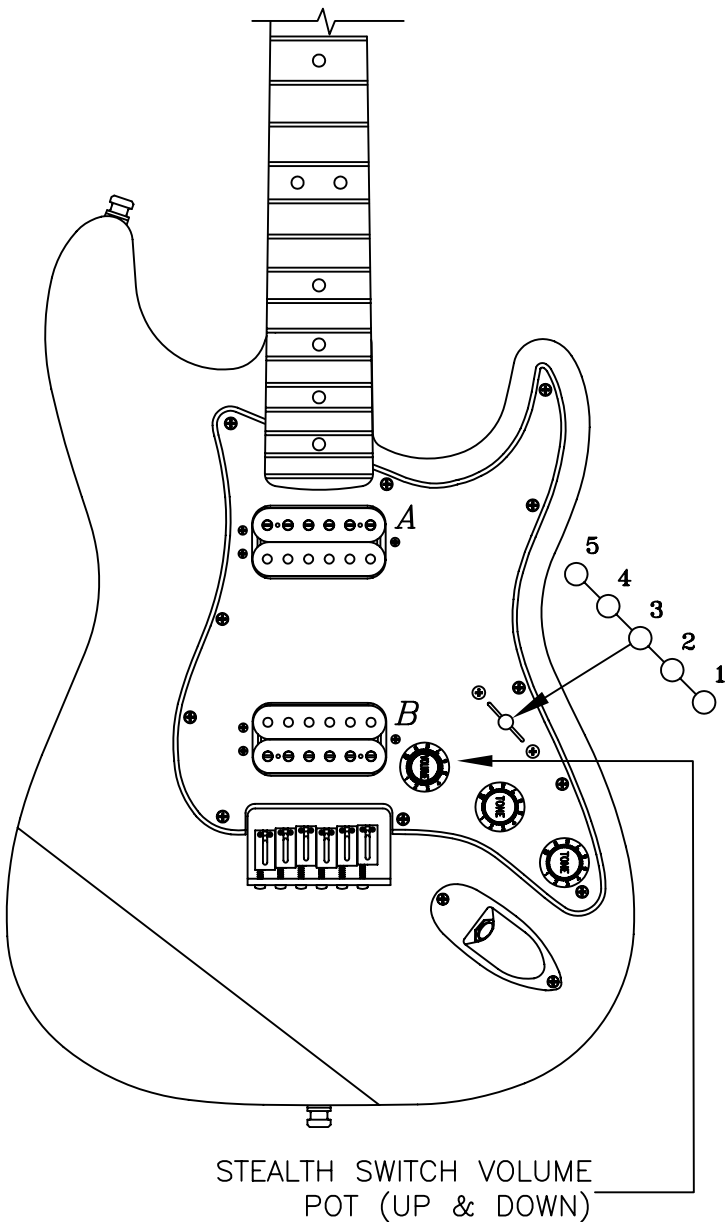

5 WAY SW POSITIONS, STEALTH SW UP					POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
SER	INS	SER			
					← BRIDGE PICKUP (B)
		SER	INS	SER	

5 WAY SW POSITIONS, STEALTH SW DOWN					POSITION
MV NT	MV NT	MV NT+BT	MV BT	MV BT	CONTROL
					← NECK PICKUP (A)
PAR					
					← BRIDGE PICKUP (B)
				PAR	

MV = MASTER VOLUME
 NT = NECK TONE
 BT = MID/BRIDGE TONE
 SER = COIL PAIR IN SERIES
 PAR = COIL PAIR IN PARALLEL
 INS = INSIDE COILS IN PARALLEL,
 SERIES WITH OUTSIDE COIL

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)

INDICATES POSITION OF 5 WAY SWITCH

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>