

iHome®

Model iP47
**Bluetooth
Alarm Clock Radio
for iPhone / iPod®**



Questions? Visit www.ihomeaudio.com

Table of Contents

Quick Start	1-2
Controls and Indicators	3
iP47 Display	3
Using the iP47	4
Using the Alarms	5
Listening to iPhone/iPod	6
Listening to Radio	6
Listening to other portable audio devices	7
Listening to Bluetooth Music	7
Making Calls with Bluetooth Mobile Phone	8
Sleep Operation	8
Dimmer Operation	9
Remote Control	9
Install Clock Backup Battery	10
Replacing the Remote Control Battery	10
A Consumer Guide to Product Safety	11
Trouble Shooting	12-15
Warranty	16



NOTE : The iP47 is designed for use with Bluetooth wireless devices compatible with the **HFP**, **HSP**, **A2DP** and **AVRCP** streaming audio profiles. Refer to your Bluetooth device's user manual or technical support to determine if your Bluetooth device supports these profiles.

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can damage the surface of the unit.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Getting Started

 
Thank you for purchasing the iP47. Designed specifically to play music through Bluetooth from your mobile phone or computer (through Bluetooth or line-in cord). This system provides high quality audio performance that brings out the best in your music and lets you wake or sleep to it.

Please read this instruction book carefully before the appliance is operated and keep it for future reference.

QDID:B013895

Quick Start

1: Power

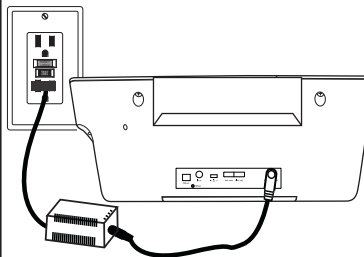

Attach AC adaptor cable to jack on back of the iP47 and plug the other end into a wall socket

2: Pair Your Bluetooth-enabled Phone With The iP47



- Select Bluetooth/discover mode on your phone (see your user manual)
- Press and hold the Play/Pause button on the iP47. The unit will enter Auto-pairing mode and begin searching for a device to pair with, indicated by flashing Bluetooth and pairing icons.
- When prompted, enter pass code for iP47 on your device: 1234
- A screen (on phone) should confirm successful pairing.

3: Making and Answering Calls



Once the iP47 is linked with your phone:

- To dial, open the keypad on front of the unit. Dial the number then press the Talk Button.
- To answer the phone, press the Talk Button. Press the End Button to end the call.

NOTE: If you have call waiting, press the Talk Button to answer a second call and place the first on hold.

4: Setting the Time Zone



Time is preset to Eastern Standard Time. Press and hold the Time Zone button until the display flashes. Press UP or DOWN buttons to set your Time zone. Press the Time Zone button again to confirm.

5: iPod/Bluetooth/ Radio/Line in



Press the Mode button as needed to select iPod, Bluetooth, FM1, FM2, AM or Line in modes. Press the ▲ or ▼ Button to tune radio to desired station. Press and hold a preset button to set current station as a preset.

6: Setting Alarms

 


Wake to iPod or Bluetooth: Press and hold Alarm 1 Button until the hour flashes. Press the ▲ or ▼ Button to set Hour. Press Alarm 1 again then press the ▲ or ▼ Button to set minutes. Press Alarm 1 again then press Mode Button to select iPod or Bluetooth device to wake to.

Wake to radio: Press and hold Alarm 2 Button and adjust alarm time as above, then select radio station to wake to.

Quick Start


7: Inserts

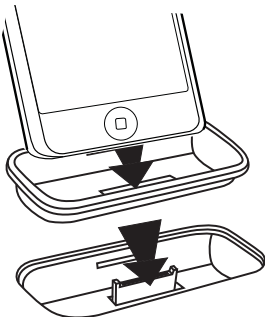

Select the dock insert for your iPhone or iPod model from the table below and place insert in dock.

Never dock your iPhone or iPod without an insert in place.

 8:iPhone/iPod

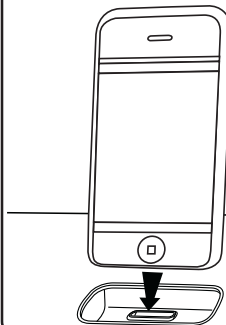


Insert an iPhone or iPod into the dock with proper insert (iPhone/iPod must not be in a skin or case). The iPhone/iPod will charge while docked. Press the Play/Pause Button on the iP47 to play your iPhone/iPod.


Use this insert	iPhone Insert 12	3rd Gen nano insert 13	iPod Touch Insert 14
For this iPod	iPhone	3rd Gen nano	iPod Touch

NOTE: If the insert for your iPod isn't listed, please visit an Apple store or www.ihomeaudio.com to purchase the proper insert.

 Controls and Indicators

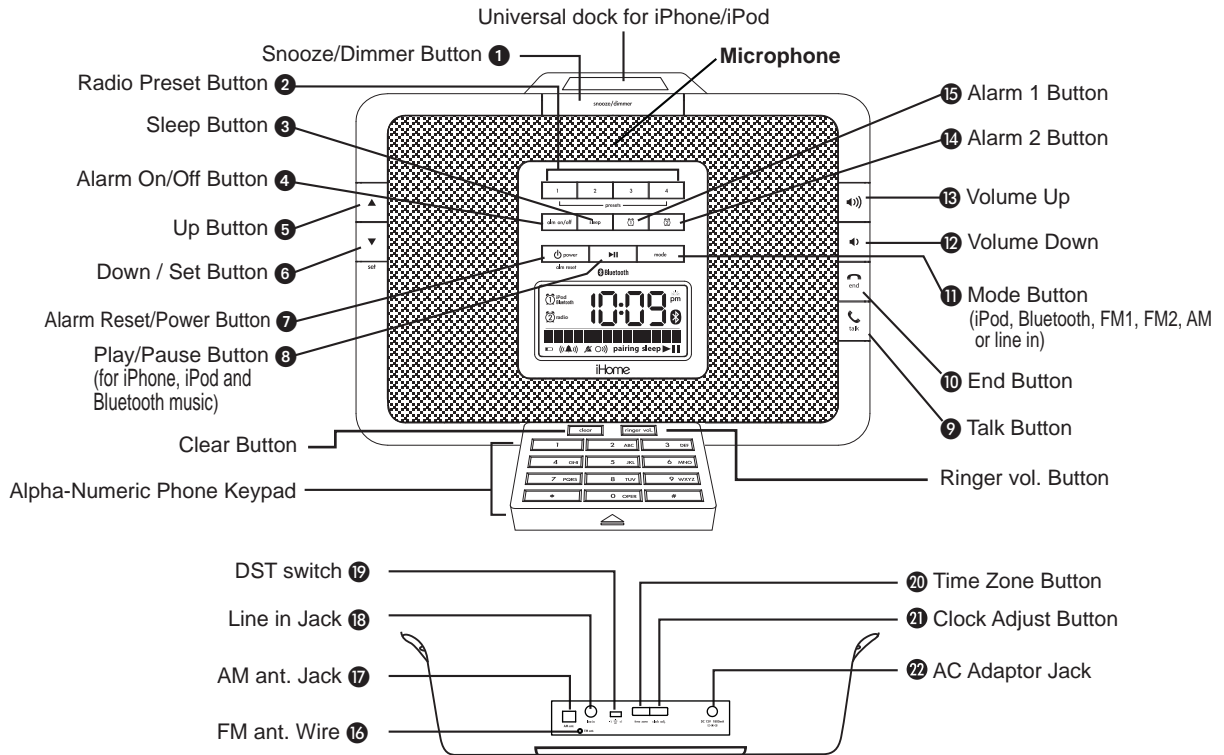


iP47 Display

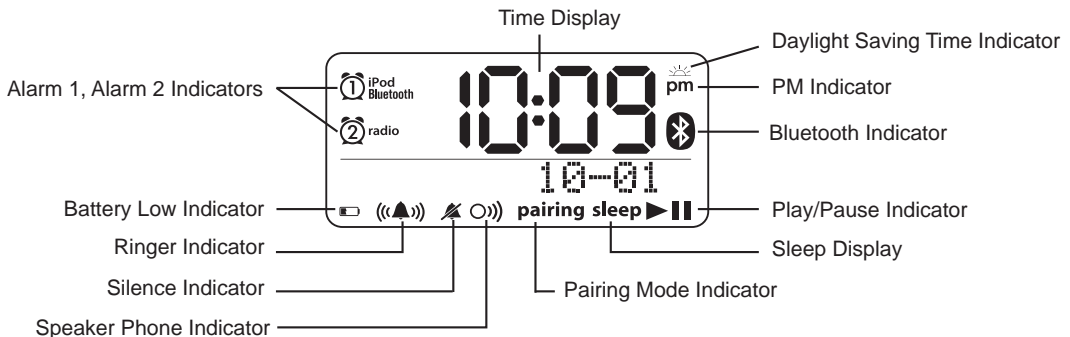 

Connecting the iP47 to Power Source



Connect the AC adaptor cable plug into the jack on the back of the system, then plug the AC cord of the AC adaptor into the wall outlet.

Turning the iP47 ON or OFF











Press the  Button on the iP47 or on the remote control at any time to turn the iP47 On or Off. Note that a docked iPhone or iPod will continue to charge when the unit is turned off as long as the AC adaptor is plugged in.

Setting Up the iP47

The iP47 clock is preset to U.S. Eastern Standard Time. It is simple to adjust the unit for your location.









1. Depending on your location and whether or not Daylight Saving Time (DST) is in effect, set the DST Switch located on the back of the unit to +1 to add one hour or to -1 to subtract one hour.
2. Press and hold the Time Zone Button located on the back of the unit until Time Zone Indicator at the lower part of the display flashes. Press the  or  Button to select your time zone.
3. Press Time Zone Button again. You will hear two beeps confirming your setting and exit the Time Zone Setting mode.
4. If the time showing is not correct, please see Setting Time and Calendar below to set the clock.

Setting Time and Calendar











1. Press and hold the Clock Adj Button located on the back of the unit for 2 seconds until the hour display flashes. Press the  or  Button to adjust the hour (hold for a few seconds to advance or reverse rapidly). Remember to set the correct AM or PM hour. An icon in the upper right hand corner of the time display is the PM Indicator; there is no AM indicator.
2. Press the Clock Adj Button again. The minute display will flash. Press the  or  Button to adjust the minute setting (hold for a few seconds to advance or reverse rapidly).
3. Press the Clock Adj Button again. The year will flash in the lower part of the display. Press the  or  Button until the current year is displayed.
4. Press the Clock Adj Button again. The number of the month will flash. Press the  or  Button until the current month is displayed.
5. Press the Clock Adj Button again. The date will flash. Press the  or  Button until the current date is displayed.
6. Press the Clock Adj Button once more. Two beeps will sound to confirm your settings and you will exit Time and Calendar Setting mode.

Setting the Alarms



Alarm 1 (wake to iPhone/iPod or Bluetooth device)

1. Press and hold the  Button until the hour display flashes. Press the  or  Button to set the alarm hour (hold for a few seconds to advance or reverse rapidly). Remember to set the correct AM or PM wake time. An icon in the upper right hand corner of the time display is the PM Indicator; there is no AM indicator.
2. Press the  Button again. The minute display will flash. Press the  or  Button to adjust the minute setting (hold for a few seconds to advance or reverse rapidly).
3. Press the  Button again. The currently selected alarm mode will flash. Press the Mode Button to select iPod (iPhone) or Bluetooth device to wake to.
4. Press the  Button again or wait for 10 seconds. The alarm is now armed, indicated by the numbered alarm clock icon.

Alarm 2 (wake to the radio)

1. Press and hold the  Button until the hour display flashes. Press the  or  Button to set the alarm hour (hold for a few seconds to advance or reverse rapidly). Remember to set the correct AM or PM wake time. An icon in the upper right hand corner of the time display is the PM Indicator; there is no AM indicator.
2. Press the  Button again. The minute display will flash. Press the  or  Button to adjust the minute setting (hold for a few seconds to advance or reverse rapidly).
3. Press the  Button again. The currently selected radio preset will flash. Press a preset button (P1 to P4) or use the Mode Button and  or  Button to select a radio station to wake to (see Listening to Radio on page 6 for details on setting radio station and presets).
4. Press the  Button again or wait for 10 seconds. The alarm is now armed, indicated by the numbered alarm clock icon.

Reviewing, Arming and Disarming Alarm (Turn Alarm Function On and Off)

1. Press the  or  Button once. The unit will show the current alarm time for alarm time review.
2. Alarms are automatically armed when set. Press "alm on/off" button to arm or disarm the alarm.

Resetting the Alarm to Come on the Next Day

1. When the alarm is sounding, press the Alarm Reset/Power Button to stop the alarm and reset it to come on the following day at the same time.









Snooze

1. Press the Snooze Button after the alarm sounds. The alarm will be silenced and come on again 9 minutes later. Snooze can be pressed several times during the 1 hour alarm cycle.

Sure Alarm

The iP47 has a sure alarm feature so the buzzer alarm still sound in the event of a power failure, if backup battery is installed. If your iPhone/iPod or Bluetooth device has no sound for 20 seconds or is not present, the iP47 will switch to buzzer alarm automatically.

Listening to iPhone or iPod





1. Dock an already playing iPhone or iPod (always use proper insert, see table on page 2). The iP47 will automatically turn on and you will hear the audio playing from your iPhone/iPod. Note: If the audio source volume is too low on the iPhone/iPod, the iP47 may not detect that the iPhone/iPod is in play mode. If so, pressing the Alarm Reset/Power Button on the main unit once should make it play.
2. When the iPhone/iPod is docked and in standby mode, press the  Button on the iP47 or on the remote control to play the iPhone/iPod. If the iP47 is already on, press the Mode Button until "iPod" appears on the lower part of the display, indicating the iP47 is in iPod mode. If your iPhone or iPod Touch is in video mode, you may see the "locked" slider on the iPhone/iPod display. If so, you will need to unlock your iPhone/iPod.
3. Press the  Button on the iP47 or on the remote control to pause play; press again to resume play.
4. Press the  or  Button on the iP47 or on the remote control to adjust the system volume.
5. Press the Mute Button on the remote control to mute the iP47 output. Press the Mute Button again (or a volume button) to release mute and restore normal sound output.
6. Press  or  Set Button on the iP47 or   on the remote control to go to the next or previous track. Press and hold while track is playing for high speed forward or reverse music search of the current track.

Listening to Radio

Setting up the Antennas



1. Connect the AM loop antenna plug to the back of the unit; adjust the antenna as needed for best reception.
2. Extend FM wire antenna fully for best reception. Do not strip, alter or attach to other antennas.

Tuning and Playing the Radio

1. Press the Mode Button until the desired radio band appears: FM1, FM2 or AM.
2. Press the  or  Button to tune the radio to a desired station. Hold briefly to have the radio autoscan/search for the next clear station.
3. To memorize the current station as a preset, press and hold Preset Button 1, 2, 3 or 4. A beep will confirm the setting and the preset number will appear in the display. Repeat steps 1-3 to preset up to 12 stations (8 FM and 4 AM). To listen to a preset station at any time, simply press the desired preset button. To change presets, select your radio band, tune to the desired station and press and hold the preset button.
4. Press the  or  Button on the iP47 or on the remote control to adjust the system volume.

Listening to other portable audio devices

You can play a MP3 player or other portable audio device through the iP47 via the Line in Jack.

1. Plug one end of an audio patch cord (**available at <http://www.ihomeaudio.com>**) into the headphone or line-out jack on your device and the other end of the patch cord into the iP47 Line in Jack, located on the back of the unit.
2. Turn on the iP47 and press the Mode button until “Line in” appears in the lower part of display, indicating Line in playing mode.
3. Turn on and play your device.
4. Press the  or  Button on the iP47 or on the remote control to adjust the system volume. You may need to adjust your device volume, too.



Remember to turn off your device when you are done playing it.

Listening to Bluetooth Music






 
You need to pair your Bluetooth device with the iP47 before you can auto-link to play/stream Bluetooth music through the iP47. Pairing creates a permanent “bond” so two devices can always recognize each other.

Note: the iPhone does not support the A2DP protocol, so it cannot be used to stream music. See Listening to your iPhone to play your iPhone through the iP47.

Pairing:

1. Press and hold the  Button for 4 seconds to begin pairing operation. The Bluetooth and “pairing” icons will flash.
2. Activate Bluetooth on your device according to the device’s user manual to link to iP47 . You may need to input the iHome device pass code: “1234”.
3. Once connected, the Bluetooth Icon  will remain.
4. iP47 will auto link with the last linked device when that device is in range.

Playing Bluetooth Music:

1. Once your device and the iP47 are linked you can start to play Bluetooth music through the iP47.
2. Turn on the iP47 and press the Mode button until “Bluetooth” appears in the lower part of the display .
3. Press the  Button on the iP47 or on the remote control to play your Bluetooth-enabled device. The display will show “Bluetooth” and a Play Icon. (Depending on the Bluetooth device you are using, you may need to manually go into media player mode on your device to make it work properly).
4. Press the  Button again to pause play; press again to resume it.
5. Press the  or  Button on the iP47 or on the remote control to adjust the system volume.
6. Press  or  Button on the iP47 or on the remote control to go to the next or previous track.





Please remember to turn off Bluetooth device manually.

NOTE: The iP47 must be in Bluetooth mode to play a Bluetooth-enabled device.







Making Calls with a Bluetooth Mobile Phone

Before you make a call with the iP47, you need to pair and link your Bluetooth-enabled phone with iP47. Please refer to Pairing procedure on page 7.

Answer a Call:

1. To answer a call, press the  Button. Now you can use the iP47 as a speaker phone.
2. Speak into the MIC (located below the Snooze/Dimmer Button) and press the  or  Button on the iP47 or on the remote control to adjust the call volume.
3. To end the call, press the  Button.

Dial/Re-dial Dialing:



1. Once the iP47 is paired to a Bluetooth mobile phone, you can use the integrated keypad or the remote control to enter a phone number.
2. Input a phone number in normal operation mode (you do not need to be in Bluetooth mode) then press the  Button. Press the Clear Button to cancel the last digit entered or press and hold Clear to cancel all digits. Press the  Button to cancel the call.
3. To redial the last dialed number, press the  Button twice (x2).
4. Press the  or  Button on the iP47 or on the remote control to adjust the call volume. NOTE: The iP47 has separate volume settings for phone operation which don't affect the volume of other modes.
5. To end a call, press the  Button.

Ringer Volume Select:

1. To select iP47 ringing volume, press the Ringer Vol. Button on the keypad to select to Hi, Mid, Low or Off.

Sleep Operation

 
Sleep mode lets you sleep to iPod, Bluetooth music or the radio, gradually lowering the volume until the unit shuts off at the selected time.









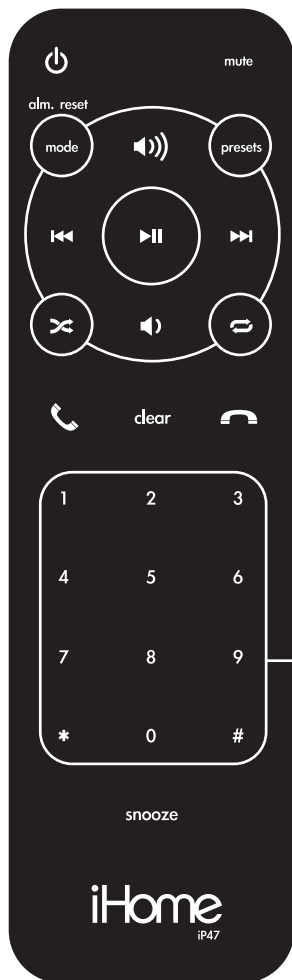







1. Press the Sleep Button to enter sleep mode. The Sleep Icon will appear on the display to indicate it is sleep mode. The unit will automatically turn off after the selected time. Sleep mode has a Gentle Sleep feature which gradually lowers the volume.
2. You can adjust the sleep timer from 120, 90, 60, 30 or 15 minutes by pressing the button again.
3. When the display changes back to show the real time, press the Sleep Button once will show the sleep time remaining. Pressing it again will change sleep time to next lowest increment.
4. iP47 has independent volume setting for sleep mode so you can adjust the sleeping volume without affecting the alarm volume. Press the  or  Button on the iP47 or on the remote control to adjust the system volume. The sleep volume will remain at that level the next time you enter sleep mode until controls are changed.
5. To stop listening at any time, press the Alarm Reset/Power On/Off Button on the iP47 or on the remote control to turn it off.

Dimmer Operation

During normal operation, press the Snooze Button to control the brightness of the LCD display.

Remote Control



 
-  - Press POWER / alm reset to turn unit on or off and reset alarm to come on the next day.
-  - Press MODE to select iPod, Bluetooth, FM1, FM2, AM or Line in mode.
-  - Press PLAY/PAUSE to play iPhone/iPod/Bluetooth and to pause and to resume play.
-  - Press VOLUME BUTTONS to adjust volume level.
-  - Press FWD/REV to skip to next or previous track. Hold for high speed music scan. Press to scan the radio frequency manually. Hold for autoscan radio frequency.
-  - Press PRESETS button to automatically go to the last accessed Preset Radio Station on last used BAND (FM1, FM2 or AM). Pressing PRESETS again while already listening to a station in Preset memory will go to the next Preset station programmed. Note: you cannot program presets from the remote.
-  - Press 'TALK' to answer a call or after dialling a number to connect a call.
-  - Press 'END' to cancel a call or end a call.
-  - Press 'CLEAR' to delete the last number entered, hold to delete all numbers entered.
-  - Press Keypad number buttons to enter a phone number.
-  - Press SNOOZE when alarm is sounding to snooze for 9 minutes, or during normal operation to adjust the brightness of the display.
-  - Press RANDOM or REPEAT to activate/deactivate 'random' or 'repeat' settings on a docked iPhone/iPod (only).
-  - Press MUTE in iPod, Radio, Line in, or Bluetooth Music mode to toggle the speaker sound on & off. "Mute" will appear on display. Press MUTE or a VOLUME control to exit mute function.
 
-  - Press MUTE during a phone call to mute the microphone. "Mic Muted" will appear on display. Press MUTE to exit mute function.
 

Install Clock Backup Battery

The iP47 uses 3 x AA backup battery system to provide backup alarm operation and clock settings in the event of a power failure. If the Backup Battery has been installed and a power failure occurs or the AC cord is accidentally disconnected, the display backlight will not remain lit, but current time and alarm time settings will be temporarily maintained. Otherwise, you must reset the time and alarm settings.

1. Open backup battery compartment door located on the bottom of the unit.
2. Please make sure the AC adaptor is connected. Otherwise all settings may be lost during battery replacement.
3. Insert 3 AA batteries, checking that the polarity (+ and – ends of the battery) matches the drawing near the battery compartment. Close the compartment door.

Note: Make sure you dispose of batteries properly (see your local regulations).

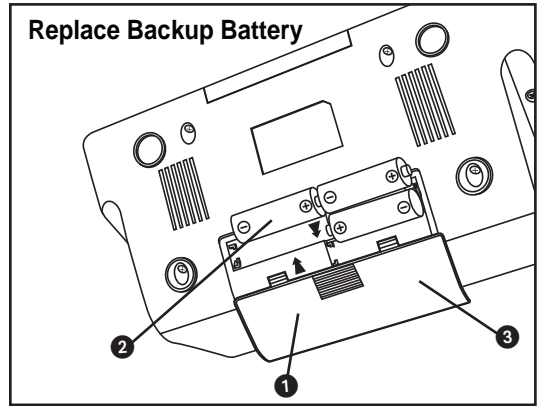


Replacing the Remote Control Battery

The remote control battery is already installed at the factory. When the remote control stops operating or its range seems reduces, it is time to replace a new one.

1. The battery door is located on the back end of the unit.
2. Pull the battery door to release the battery door latch and take out the battery holder.
3. Insert a **CR2032** battery, checking the + and – ends of the battery is matching to the drawing inside the battery compartment.
4. Replace the battery holder back into the remote control.

Note: Make sure you dispose of batteries properly (see your local regulations).

 For best results, aim remote control towards the remote sensor on the lower center of the unit.

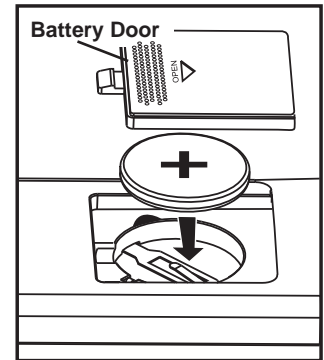

IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to assure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, and adhere to all warnings on the unit and in the instruction and service manual.

1. **Water and Moisture** - The unit should not be used near water. For example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.
2. **Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
3. **Heat** - The unit should be situated away from heat source such as radiators, heat register, stoves, or other appliances (including amplifiers) that produce heat.
4. **Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Power Cord Protection** – Power supply cord should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
6. **Cleaning** - The unit should be cleaned only as recommended by the manufacturer.
7. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
8. **Attachments** – Do not use attachments not recommended by the product manufacturer.
9. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit exhibits a marked change in performance or does not operate normally.
12. **Antenna** – Do not connect an external antenna to the unit (other than that provided).
13. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the power cord should be unplugged and take out batteries from the unit to prevent damage or corrosion.
14. **Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.

Questions? Visit www.ihomeaudio.com

Trouble Shooting

Symptom	Possible Problem	Solution
Unit doesn't respond (no power)	AC adaptor isn't plugged to a wall outlet or the connector is not plugged into the power supply jack on the back of the unit.	Plug the AC adaptor into a wall outlet and plug the connector into the AC jack on the unit
	Wall outlet is not functioning	Plug another device into the same wall outlet to confirm the outlet is working. If the outlet is controlled by a switch, check that the switch is ON.
	Power is off	Press the Power button on the iP47
Can't play Bluetooth music from cellphone or other Bluetooth devices	Device does not support the A2DP and AVRCP Bluetooth profiles	While you need the A2DP and AVRCP Bluetooth profiles to stream music to the iP47, you can still use the handsfree speaker phone functionality
	Device and iP47 are not paired AND linked	Make sure your phone supports the A2DP and AVRCP Bluetooth profiles before linking/pairing. The iP47 defaults to the last linked device, so a new device may need to be linked from the device itself (see your device's user guide).
Can't play my iPhone music via Bluetooth	iPhone does not support the A2DP profile	Dock iPhone in iP47 to listen to music
Bluetooth device didn't charge up	iP47 charges iPhone and docking iPod models only, not other devices	Make sure your device is plugged into a working charger
Sound is distorted	Volume level is set too high	Decrease the volume
	Sound source is distorted	If original sound source is poor quality, distortion and noise are easily noticed with high-power speakers.
		Try setting EQ to flat on your iPhone, iPod or Bluetooth device
Bluetooth music is broken up	Bluetooth device is out of range of iP47	Move your Bluetooth device within 30 feet of the iP47
Can't hear caller's voice	Bluetooth device is out of range of iP47	Move your cell phone closer to iP47
	Volume on iP47 is too low	Raise volume on iP47
Remote Control doesn't work	Batteries are weak/ dead	Replace with new battery
	Remote Control is too far way from main unit	Move the Remote Control closer to main unit
My Bluetooth headset won't pair with the iP47	Headsets and other receivers will not pair with the iP47	Pair headset directly with phone or other transmitting device
Others can't hear my voice/voice isn't clear to listener	You are too far from iP47 microphone	The mic is near the Snooze Button. Move closer to the iP47.
	Mic is muted/ Mute operation is on	Press the Mute button to release mute

Trouble Shooting

Symptom	Possible Problem	Solution
Can't wake to Bluetooth music	Device is not in play mode	Make sure your device is powered and streaming music
	Device is not charged	Make sure your device is adequately charged to last through the set alarm time
	Device does not support A2DP and AVRCP Bluetooth profiles	If your device does not support the A2DP and AVRCP profiles, set your alarm to wake to radio
Calls don't sound clear	Volume on iP47 is too low	Raise volume on the iP47
	Poor connection or cell phone reception	Retry call after moving phone for better reception/connection
Dialing out error message	Some phones do not support dialing out while listening to Bluetooth music	Check your cell phone owner's manual or website to see if your phone supports dialing out while listening to Bluetooth music. If it does not, turn off music before attempting to dial

Solución De Problemas

Síntoma	Causa posible	Solución
La unidad no funciona (no circula corriente eléctrica).	El adaptador de AC no está conectado al tomacorriente o el conector no está conectado a la ficha en la parte posterior de la unidad.	Conecte el adaptador de AC a un tomacorriente y el conector a la ficha de salida AC de la unidad.
	El tomacorriente no funciona.	Coloque otro aparato al tomacorriente y confirme su funcionamiento. Si el tomacorriente tuviera un selector de encendido, colóquelo en esa posición.
	La unidad no está encendida.	Oprima el botón "Power" (encendido) del iP47.
No se escucha la música por el teléfono celular vía Bluetooth o desde otro aparato transmisor.	El aparato no soporta tecnología Bluetooth A2DP ni AVRCP.	Para escuchar música a través del iP47 se requiere tecnología Bluetooth A2DP o AVRCP, si bien puede seguir utilizando el altoparlante del teléfono celular.
	El aparato y su iP47 no están ligados y trabajando en conjunto	Asegúrese que su teléfono soporte tecnología Bluetooth A2DP o AVRCP antes de conectarlos. El iP47 utiliza la tecnología del último aparato conectado, por ende este aparato deberá estar ligado (para realizarlo, consulte el Manual de Instrucciones del aparato).
No se escucha música vía Bluetooth a través del iPhone	El iPhone no soporta tecnología A2DP.	Para escuchar música, encastre el iPhone en su iP47.
El sonido sale distorsionado.	El volumen se encuentra muy alto.	Baje el volumen.
	La fuente de sonido está distorsionándolo.	Si el sonido original era de pobre calidad, las distorsiones y ruidos se harán más notables con los parlantes de alta potencia. Intente modificar los ajustes de EQ a plano en su aparato Bluetooth.
La música del aparato Bluetooth sale entrecortada.	Su aparato Bluetooth está fuera del rango de alcance del iP47.	Mantenga su aparato Bluetooth dentro de los 30 pies de distancia del iP47.
No se escucha la voz de quién ha llamado.	Su aparato Bluetooth está fuera del rango de alcance del iP47.	Coloque su teléfono más cerca del iP47.
	El volumen del iP47 se encuentra demasiado bajo.	Aumente el volumen del iP47.
El control remoto no funciona.	Las baterías están gastadas.	Reemplace las baterías por nuevas.
	El control remoto está fuera de rango.	Acerque el control remoto a la unidad.
Mi auricular Bluetooth no se conecta con el iP47	Algunos receptores y auriculares no pueden conectarse al iP47.	Conecte el auricular directamente a su teléfono u otro aparato transmisor.
Mi voz no se escucha con claridad o no se escucha en absoluto.	Usted se encuentra muy lejos del micrófono del iP47.	Manténgase dentro de los 5 pies de distancia del iP47.
	El micrófono está en "Mute" (interrupción de sonido).	Oprima el botón "Mute" (interrupción de sonido).

Solución De Problemas

Síntoma	Causa posible	Solución
La música con Bluetooth no funciona como despertador.	El aparato no está en modo "Play" (reproducción).	Asegúrese que el aparato esté conectado y transmitiendo música.
	El aparato está descargado.	Asegúrese que el aparato tenga carga suficiente como para durarle hasta la hora programada.
	El aparato no soporta tecnología Bluetooth A2DP y AVRCP.	Si su aparato no soporta tecnología Bluetooth A2DP y AVRCP, coloque su despertador para sonar con alarma o con zumbido.
Las llamadas no se escuchan con claridad.	El volumen del iP47 está muy bajo.	Aumente el volumen de su iP47.
	Hay mala recepción celular en ese sector.	Vuelva a intentar la llamada desde otro sector.
Mensaje de error al discar	Algunos teléfonos no pueden discar llamados mientras está escuchando música via Bluetooth	Verifique en el manual del usuario o en el sitio de internet de su teléfono celular si su teléfono puede discar mientras está escuchando música via Bluetooth. Si no lo permite, apague la música antes de discar.

Limited 90-Day Warranty Information

iHome Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$15.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service without proof of purchase is \$40.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$15.00 (\$40.00 without proof of purchase).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department

SDI Technologies Inc.

1330 Goodyear Drive

El Paso, TX 79936-6420

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will SDI Technologies or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your SDI Technologies product.

© 2008 SDI Technologies, Inc. All rights reserved

Questions? Visit www.ihomeaudio.com
or call 1-800-288-2792 Toll Free

Bluetooth iP47

QUICK CONNECTION GUIDE for iP47


BEFORE YOU START

 
 
 
 
Your Bluetooth device (cellphone, MP3 player, etc.) must support the **HSP, HFP, A2DP** and **AVRCP** Bluetooth profiles (commonly known as hands free and stereo audio profiles) to work with the iHome iP47. Please refer to your Bluetooth device's user manual for details on the Bluetooth profiles it supports and on how to set the device's Bluetooth pairing/searching mode. **NOTE: The Apple iPhone DOES NOT SUPPORT A2DP or AVRCP profiles;** it supports hands free phone operation profiles, but must be docked in the iP47 to play music.

ABOUT PAIRING

Pairing is the term used when wirelessly connecting two Bluetooth devices for the first time. This allows the devices to "see" each other and creates a unique lasting connection between the specific devices.

PAIRING & LINKING YOUR BLUETOOTH DEVICE WITH THE iP47

- 1) Make sure your Bluetooth device is fully charged.
- 2) Power Up your Bluetooth device and connect your iP47 to the AC adaptor.
- 3) Turn on Bluetooth functionality on your Bluetooth device. Typically, Bluetooth controls are found on the device's tools or settings menu (see your user manual). Turn on Bluetooth connectivity/make your device "discoverable".
- 4) To put the iP47 in pairing mode, press and hold the **Play button**. The Bluetooth icon  and "**pairing**" icon on the iP47 will flash.
- 5) Choose "add a new Bluetooth device" on your device. It will start to search. If the pairing attempt fails or times out, press and hold the **Play button** on the iP47 for 4 seconds to restart the process, and repeat "add a new Bluetooth device" on your Bluetooth device.
- 6) After your device and the iP47 have discovered each other, you will be asked to enter a passcode on your Bluetooth device. The passcode for the iP47 is: **1234**
- 7) A "Pairing Successful" or similar message should appear on your device and the Bluetooth icon on the iP47 should stop flashing, followed by a confirmation beep.
- 8) Pairing remains intact when the iP47 and/or the Bluetooth device is powered off or is taken out of link range (30 feet). The iP47 supports auto-linking and will automatically re-establish an active connection when your Bluetooth device returns within range.
- 9) The iP47 will automatically try to re-establish a link with the most recently linked Bluetooth device. If your device does not support auto-linking OR was not the last linked to the iP47, you must re-link manually by selecting iP47 from the Bluetooth device's menu on your Bluetooth device.

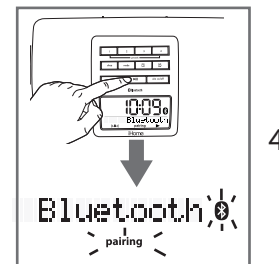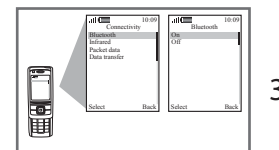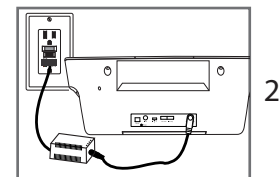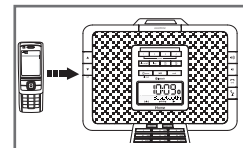

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>