

## CD-FX-HID-1 INSTRUCTIONS COLLINS FIXED-MOUNTED HID SPOTLIGHT

**Warning:** Please read all instructions and warnings prior to installation. Power must be disconnected prior to installation or servicing. This luminaire must be installed and operated per NFPA 70 National Electric Code, and all applicable codes and regulations. These instructions are provided as a guideline for proper installation, and do not purport to cover every possible installation scenario or configuration. If questions arise, consult the factory.

### INSTALLATION:

#### 1. Mounting:

- This light is intended to mount on a suitable base, such as the CD-BS-2, sold separately.
- Install the mounting base and attach the CD-FX-HID-1 fixture using the hardware supplied with the mounting base.
- Ensure the fixture is aimed properly and all hardware is tightened very securely. Failure to tighten the hardware properly could allow it to loosen in service.
- Connect the power lead to a suitable power source of nominal 12 VDC, observing polarity (red +, black -), and ensuring that the connections are waterproof.
- After mounting, test the fixture for proper operation.

### MAINTENANCE & USAGE RECOMMENDATIONS:

#### 2. Lamp and Ballast Maintenance:

- **Make sure power is off before performing any maintenance on the fixture.** HID fixtures produce extremely high voltage (greater than 24,000V) during operation.
- Remove the lensframe screw and nut, and set them aside for reuse later.
- Gently flex the lensframe outward, and pull it straight off. Be careful not to twist or deform the lensframe when removing it.
- The lamp is attached to the reflector with one screw. If the lamp requires replacement, then simply remove the mounting screw, replace the old lamp with a new one, and replace the mounting screw. Make sure that the new lamp is oriented in the same direction as the old lamp.
- The lamp and ballast are connected by wires with quick-connects. If any of these wires are damaged, then both the ballast and lamp must be replaced. Do not attempt to repair damaged wires.
- The ballast is held in place with two small brackets. To remove the ballast, remove the screws and brackets, and pull the ballast straight out. Install a new ballast by pushing the ballast straight in. Secure it by replacing the two screws and brackets.
- When maintenance has been completed, first ensure that all electrical connections are secured properly before proceeding.

- Reinstall the reflector, and align it properly. Clean the reflector if necessary with residue-free glass cleaner and a soft, lint-free cloth.
- Clean the glass lens, and place it on top of the reflector. The glass will directly hold the reflector in place.
- Wrap the lens gasket around the housing and lens. The gasket will hold the lens and fixture together. Ensure it is clean and placed properly before proceeding.
- Replace the lensframe by first pressing one end into the lens gasket. Make sure the tab is oriented properly before pressing it in firmly. Start pressing at the tab, and work the lensframe into the gasket by pressing firmly every couple of inches along the lensframe until the entire lensframe is seated properly. It is important to press in sequence, starting from the first tab and working all the way around the lensframe. The last place to press is the second tab, and the two lensframe tabs should meet closely when the lensframe is installed properly. Replace the lensframe screw and nut, and tighten them securely.

**Caution:** Do not touch the glass bulb of the lamp. If necessary, clean with isopropyl alcohol.

### 3. Switch Maintenance:

- **Make sure power is off before performing any maintenance on the fixture.** HID fixtures produce extremely high voltage (greater than 24,000V) during operation.
- Open the switchbox by removing the four screws holding the switchbox plate where the switch is installed.
- The switch can be removed by unscrewing the rubber boot. The switch is electrically connected with quick-connect tabs.
- If the switch needs to be installed on the opposite side of the fixture, simply remove both the switch cover and blank cover, and swap them. DO NOT remove the switchbox from the fixture for any reason.
- Before replacing the switchbox covers, ensure that the quick-connect tabs are secured properly on the switch, and the switch boot is tightened securely.
- When replacing the covers, ensure the gaskets are flat and properly seated so that the fixture remains waterproof.

### 4. Troubleshooting:

- In the event of improper operation, first use a voltmeter to ensure that the fixture is receiving adequate input power. CD-FX-HID-1 fixtures require 12VDC for proper operation. If the voltage is too low, the lamp may fail to light or restrike. If the voltage is too high, the ballast and lamp can fail prematurely. Correct any faults found.
- If no electrical faults are found, then either the ballast or lamp may require replacement. Always replace the lamp first, especially if it is an old lamp.
- If the fixture fails to light after replacing the lamp, then replace the ballast as well.
- A new lamp should normally be installed whenever a new ballast is installed.
- If necessary, contact Havis-Shields for additional troubleshooting procedures.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>