



Control Board

Model Number : AW-A795

Intel® Pentium® 4 Embedded SBC with Six Gigabit/Two 10/100LAN & SSD

User's Manual

Version 1.0

User's Manual

© Copyright 2005. All Rights Reserved

Manual Edition 1.0, January 2005

This document contains proprietary information protected by copyright. All rights are reserved, no part of this manual may be reproduced, copied, translated or transmitted in any form or by any means without prior written permission of the manufacturer.

The content of this manual is intended to be accurate and reliable, the original manufacturer assumes no responsibility for any inaccuracies that may be contained in this manual. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without prior notice.

Trademarks

IBM, EGA, VGA, XT/AT, OS/2 and PS/2 are registered trademarks of International business Machine Corporation

Award is a trademark of Award Software International, Inc

Intel is a trademark of Intel

RTL is a trademark of Realtek

VIA is a trademark of VIA Technologies, Inc

Microsoft, Windows, Windows NT and MS-DOS are either trademarks or registered trademarks of Microsoft Corporation

All other product names mentioned herein are used for identification purpose only and may be trademarks and/or registered trademarks of their respective companies

Limitation of Liability

While reasonable efforts have been made to ensure the accuracy of this manual, the manufacturer and distributor assume no liability resulting from errors or omissions in this manual, or from the use of the information contained herein.

User's Manual

Table of Contents

Chapter 1. General Information -----	5T
1.1 Introduction-----	5
1.2 Specification-----	6
1.3 AW-A795 Package-----	7
1.4 Board Layout-----	8
1.5 Board Dimension-----	8
Chapter 2. Connectors Location and Configuration -----	9
2.1 Connectors/Jumpers Location and Define-----	9
2.2 Installing Processors-----	11
2.3 Installing Memory-----	14
2.4 Connector and Jumpers Settings-----	17
CN1:USB0 Connector-----	17
CN2/3:LAN (10/100) Connector-----	17
CN4/5/6/7/8/9:Gigabit LAN Connector-----	17
CN10:COM1 RJ45 Connector -----	17
CN11/20/24/28/29/30/31:FAN Connector-----	18
CN12:Power LED Pin Header-----	18
CN13:USB1 Pin Header -----	18
CN14:COM2 Box Header-----	18
CN15:Parallel Box Header-----	18
CN16:ATX Power Connector-----	18
CN17:Mini PCI-----	19
CN18:GPIO Pin Header -----	20
CN19/21:SATA0/1 Connector -----	20
CN22:SATA LED Pin Header-----	20
CN23:HDD Power Connector-----	20
CN25:IDE (2mm) 44-pin 90 degree-----	20
CN26:IDE (2.54mm) 40-pin Connector-----	21
CN27:+12V Power Connector-----	21
CN32:HDD LED Pin Header-----	21
CN33:PS/On Pin Header-----	21
CN34:Reset Pin Header-----	21

User's Manual

CN36:KB/MS Pin Header-----	22
CN37:LAN LED Pin Header-----	22
CN38:LAN LED Pin Header-----	22
JP1:PS/On Always On Select-----	22
JP2/4/5:PCI-X slot Frequency Select-----	23
JP3:Speak Buzzer Enable-----	23
JP6: Clear CMOS-----	23
Chapter 3. BIOS Setup-----	24
3.1 Quick Setup-----	24
3.2 Entering the CMOS Setup Program-----	25
3.3 Menu Options-----	26
Standard CMOS Features-----	27
Advanced BIOS Features-----	28
Advanced Chipset Features-----	30
Integrated Peripherals-----	31
Power Management Setup-----	32
PNP/PCI Configuration-----	34
PC Health Status-----	36
Load Fail-Safe Default-----	36
Load Optimized Default-----	37
Set Supervisor & User Password-----	38
Chapter 4. Drivers and Utilities Installation-----	40
4.1 Ethernet Driver Installation -----	40
4.2 System Chipset Driver Installation-----	47
Appendix A. System Resources-----	50
Appendix B. Optional Cable List-----	53

User's Manual

Chapter 1. General Information

1.1 Introduction

THE AW-A795 embedded computing board, an “all-in-one” Network Security Hardware Appliance based on Intel® architecture with E7501+ICH3+P64H2 chipset supporting the Pentium® 4 processor with 400/533MHz FSB. The DDR 200/266 RAM (PC2100 registered) with ECC for enhanced data integrity up to 4GB. Based on E7501 chipset, AW-795 support eight Ethernet ports including six GbE ports, two 10/100BASE-T coppers for various markets and performance requirements.

Other features includes a CompactFlash socket, one PCI-X 133MHz slot and one Mini PCI socket for flexible expansion capabilities, one IDE connector, two USB ports, two Serial ports, one Parallel port, digital I/O, watchdog timer and hardware system monitoring for 1U chassis applications to give the customer a complete platform solution.

User's Manual

1.2 Specification

General Functions

CPU	Intel Pentium® 4 based processors with 400/533MHz Front-side Bus
BIOS	Award® 512KB Flash BIOS
Chipset	Intel® E7501 + ICH3 + P64H2
I/O Chipset	Winbond® 83627HF
Memory	Onboard two 184-pin DDR DIMM socket, support PC2100 registered memory up to 4Gbytes
Enhanced IDE	Support up to two IDE devices
Serial port	Two RS-232 ports, oneRJ-45 connector and one pin header
Parallel port	One pin header for parallel port
KB/Mouse connector	5x2 header onboard support PC/AT Keyboard and PS/2 mouse
USB connectors	Two USB ports, one with pin header
PCI Slot	One 64-bit PCI-X 133MHx
Watchdog Timer	Can generate a system reset, Support software selectable timeout interval.
System Monitoring	Support temperatures, fan speed and voltages monitoring
Digital I/O	Support eight application definable LEDs

Ethernet Interface

Chipset	Two Intel® 82551ER Fast Ethernet controller. Triple Intel®82546GB Fast Ethernet controller for Copper.
Ethernet interface	PCI 10/100Mbps Ethernet controller, IEEE 802.3U protocol compatible

SSD Interface	One 50-pin CompactFlash™ socket
----------------------	---------------------------------

Mechanical and Environmental

Power supply voltage	Standard ATX Power supply
Operating temperature	32 to 140 (0 to 40)
Board size	11.7”(L) x 13.1”(W) , (300mmx350mm)

User's Manual

1.3 AW-A795 Package

Please make sure that the following items have been included in the package before installation.

1. AW-A795 Low Power Embedded SBC
2. Quick Setup
3. Cable: Please refer to Appendix B Optional Cables
4. CD-ROM which contains the following folders:
 - (1) Manual
 - (2) System Driver
 - (3) Ethernet Driver
 - (4) Tools

If any of these items are missing or damaged, please contact your dealer from whom you purchased the board at once. Save the shipping materials and carton in the event that you want to ship or store the board in the future. After you unpack the board, inspect it to assure an intact shipment. Do not apply power to the board if it appears to have been damaged.

Leave the board in its original packing until you are ready to install

Precautions

Please make sure you properly ground yourself before handling the AW-A795 board or other system components. Electrostatic discharge can easily damage the AW-A795 board.


Do not remove the anti-static packing until you are ready to install the AW-A795 board.

Ground yourself before removing any system component from its protective anti-static packaging. To ground yourself, grasp the expansion slot covers or other unpainted parts of the computer chassis.

Handle the AW-A795 board by its edges and avoid touching its component.


User's Manual

1.4 Board Layout

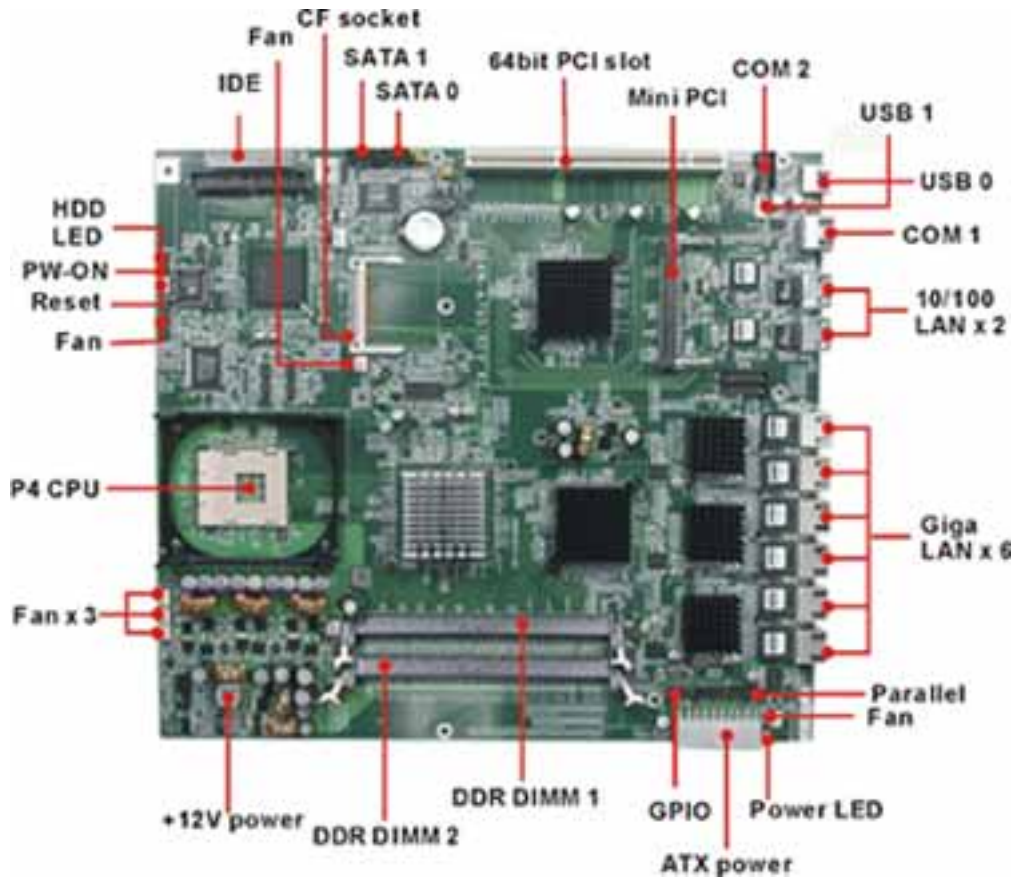

1.5 Board Dimension


User's Manual

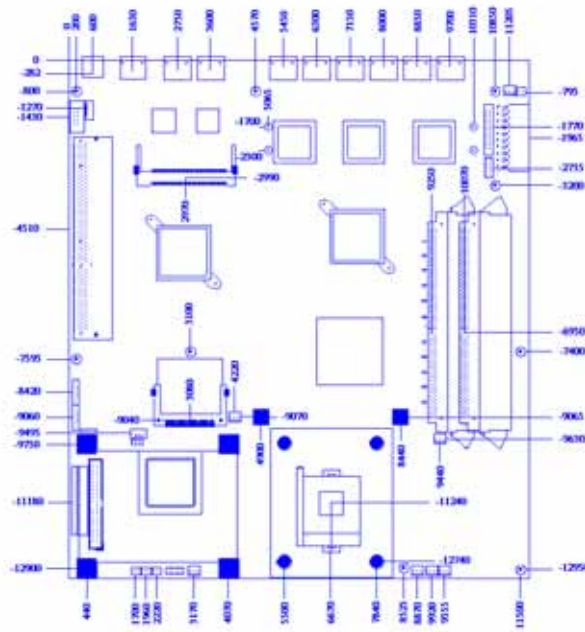

Chapter 2. Connectors/Switch Location and Configuration

2.1 Connectors/Jumpers Location and Define

User's Manual

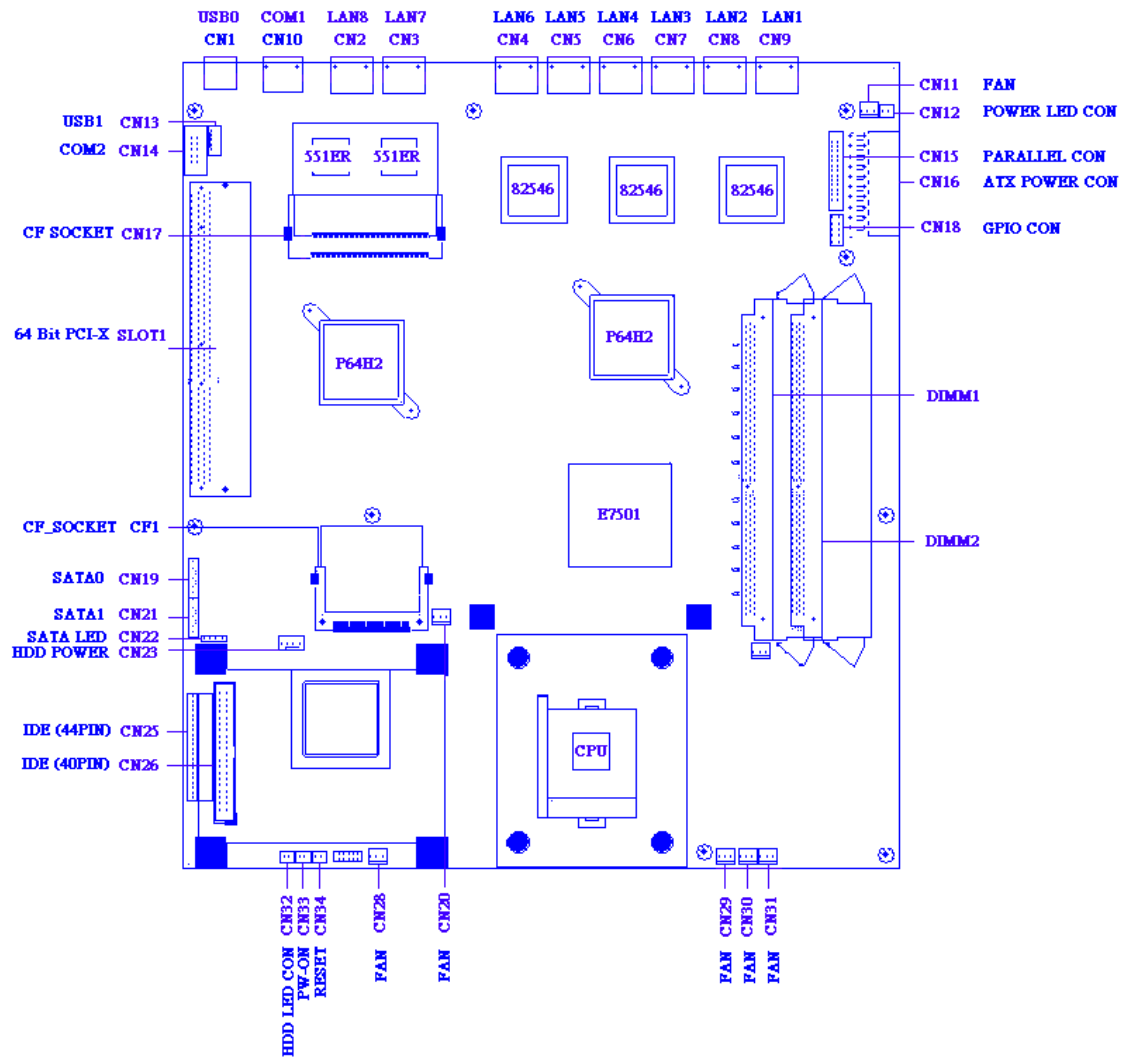

Connector	Define
CN1	USB0 Connector

CN2	LAN (10/100) Connector
CN3	LAN (10/100) Connector

User's Manual

CN4	Gigabit LAN Connector
CN5	Gigabit LAN Connector
CN6	Gigabit LAN Connector
CN7	Gigabit LAN Connector
CN8	Gigabit LAN Connector
CN9	Gigabit LAN Connector
CN10	COM1 RJ45 Connector
CN11	FAN Connector
CN12	Power LED Pin Header
CN13	USB1 Pin Header
CN14	COM2 Box Header
CN15	Parallel Box Header
CN16	ATX Power Connector
CN17	Mini PCI
CN18	GPIO Pin Header
CN19	SATA0 Connector
CN20	FAN Connector
CN21	SATA1 Connector
CN22	SATA LED Pin Header
CN23	HDD Power Connector
CN24	FAN Connector

CN25	IDE(2mm) 44 Pin 90 Degree
CN26	IDE(2.54mm) 40 Pin
CN27	+12V Power Connector
CN28	FAN Connector
CN29	FAN Connector
CN30	FAN Connector
CN31	FAN Connector
CN32	HDD LED Pin Header
CN33	PS-On Pin Header
CN34	Reset Pin Header
CN36	KB/MS Pin Header
CN37	LAN LED Pin Header
CN38	LAN LED Pin Header
Buzzer 1	Speak Buzzer
JP1	PS-On/Always On Select
JP2,4,5	PCI-X Slot Frequency Select
JP3	Speak Buzzer Enable
JP6	Clear CMOS

2.2. Installing Processors

The AW-A795 onboard built-in socket 479 for Intel® Pentium® 4 Processors. After installing the processor, you should proceed to installing the heatsink or cooler.

User's Manual

2.2.1 Installing CPU:



User's Manual



2.2.2 Remove CPU

(1) First, please push the tappet to unlock location.



(2) Then untie the screw beginning from left side you can refer to below the picture.



(3) Now you can take out the CPU from socket.

User's Manual


2.2.3 How to recognize CPU

Before you install CPU please make sure the CPU is exactly Pentium 4 processor. You can see the difference from CPU code and the pin out at backside.

(1) Pentium M CPU (Socket 479)



(2) PIII CPU – (uFCPGA Package)

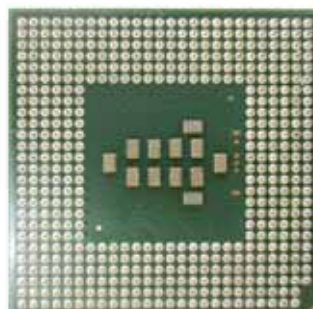

User's Manual

(3) Pentium 4 CPU (Socket 478)



2.3 Installing Memory

To insert a DIMM Memory:

The AW-A795 supports two 184-pin DDR sockets, memory up to 4GB. Please make sure to insert DDR with registered.



User's Manual

To Insert a DIMM Memory: Please align the module with the socket key and press down until the levers at each end of the socket snap close up.

There is only one direction for installing a module in the socket. Do not attempt to force the module into the socket incorrectly.



User's Manual

To Remove a DIMM Memory: To remove a DIMM, press down on the levers at both end of the module until the module pops out


There is only one direction for installing a module in the socket. Do not attempt to force the module into the socket incorrectly.



User's Manual


2.4 Connector and Jumper Settings

CN1 : USB0 Connector

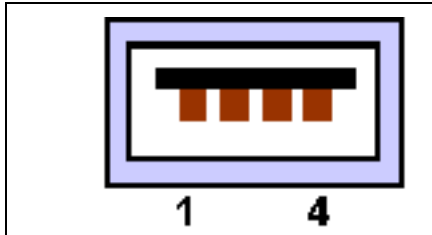

Pin	Define
1	+5V
2	Data0-
3	Data1+
4	Ground

CN2/3 LAN (10/100) Connector

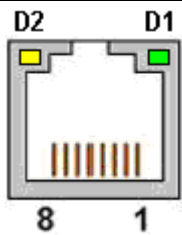


Pin	Define
1	TX0+
2	TX0-
3	RX0+
4	N/C
5	N/C
6	RX0-
7	N/C
8	N/C

LED:

D1 :Speed LED	
10 Mbps	DIM
100 Mbps	Green
D2 :Link/Activity LED	
Link	Yellow
Activity	Blinking

CN4/5/6/7/8/9:Gigabit LAN connector

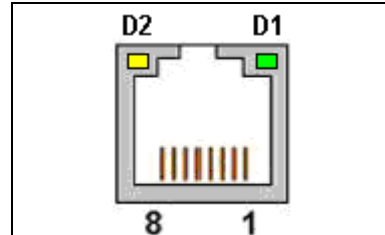


Pin	Define
1	TX0+
2	TX0-
3	RX0+
4	N/C
5	N/C
6	RX0-
7	N/C
8	N/C

LED:

D1 :Bi-Color Speed LED	
10 Mbps	Off
100 Mbps	Yellow
1000Mbps	Green
D2 :Link/Activity LED	
Link	Green
Activity	Blinking

CN10:COM1 RJ45 Connector

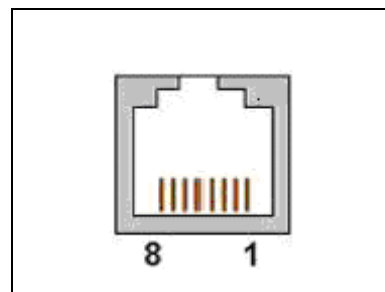


Pin	Define
1	CTS#
2	DTR#
3	TXD#
4	NC

User's Manual


5	NC
6	RXD#
7	PSR#
8	RTS#

3	TXD#	8	CTS#
4	DTR#	9	RI#2
5	Ground	10	NC


CN11/20/24/28/29/30/31:FAN Connector

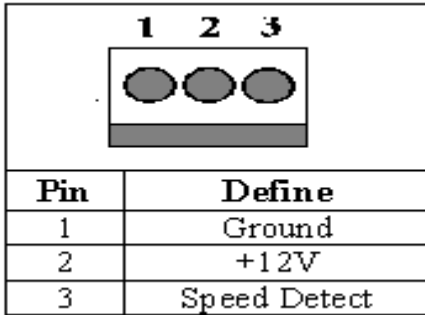


CN12:Power LED Pin Header

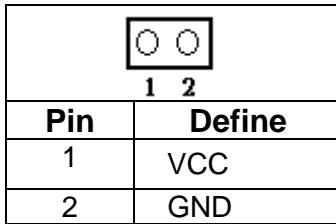


CN13:USB1 Pin Header

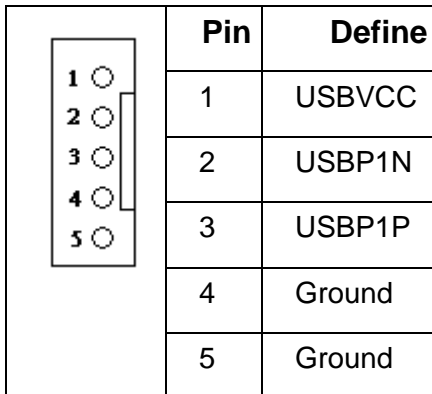

CN14 :COM2 Box Header

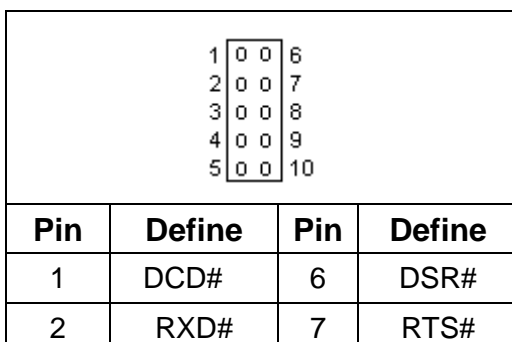


CN15 :Parallel Box Header

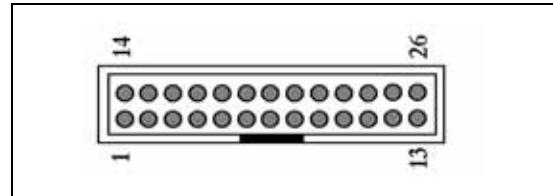

Pin	Define	Pin	Define
1	STROBE	14	AUTOFD
2	PD0	15	ERR
3	PD1	16	INT
4	PD2	17	SLCTIN
5	PD3	18	Ground
6	PD4	19	Ground
7	PD5	20	Ground
8	PD6	21	Ground
9	PD7	22	Ground
10	ACK*	23	Ground
11	BUSY	24	Ground
12	PE	25	Ground
13	SLCT	26	Ground

CN16:ATX Power Connector

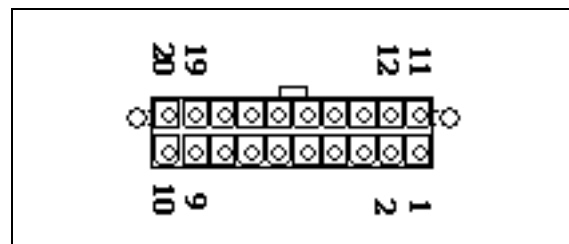


Pin	Define	Pin	Define
11	+3.3V	1	+3.3V
12	-12V	2	+3.3V
13	Ground	3	Ground
14	PS_ON*	4	+5V
15	Ground	5	Ground
16	Ground	6	+5V
17	Ground	7	Ground

User's Manual

18	-5V	8	POWER GOOD
19	+5V	9	5VSB
20	+5V	10	+12V

CN17:Mini PCI

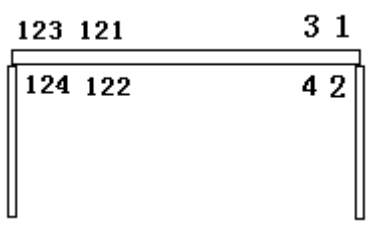


Pin	Define	Pin	Define
1	TIP	2	RING
3	8PMJ-33	4	8PMJ-13
5	8PMJ-63	6	8PMJ-23
7	8PMJ-73	8	8PMJ-43
9	8PMJ-83	10	8PMJ-53
11	LED1_GRNP	12	LED2_YELP
13	LED1_GRNN	14	LED2_YELN
15	CHSGND	16	RESERVED
17	INTB/D#	18	5V
19	3.3V	20	INTA/C#
21	RESERVED	22	RESERVED
23	GND	24	3.3VAUX
25	CLK	26	RST#
27	GND	28	3.3V
29	REQ#	30	GNT#
31	3.3V	32	GND
33	AD{31}	34	PME#
35	AD{29}	36	RESERVED
37	GND	38	AD{30}
39	AD{27}	40	3.3V
41	AD{25}	42	AD{28}
43	RESERVED	44	AD{26}
45	C/BE[3]#	46	AD{24}
47	AD{23}	48	IDSEL
49	GND	50	GND
51	AD{21}	52	AD{22}
53	AD{19}	54	AS{20}

55	GND	56	PAR
57	AD{17}	58	AD{18}
59	C/BE[2]#	60	AD[16]
61	IRDY#	62	GND
63	3.3V	64	FRAME#
65	CLKRUN#	66	TRDY#
67	SERP#	68	STOP#
69	GND	70	3.3V
71	PERP	72	DEVSEL#
73	CB/E[1]	74	GND
75	AD[14]	76	AD[15]
77	GND	78	AD[13]
79	AD[12]	80	AD[11]
81	AD[10]	82	GND
83	GND	84	AD[09]
85	AD[06]	86	C/BE[0]#
87	AD[07]	88	3.3V
89	3.3V	90	AD[06]
91	AD[05]	92	AD[04]
93	RESERVED	94	AD[02]
95	AD[03]	96	AD[00]
97	5V	98	RESERVED_ WIP4
99	AD[01]	100	RESERVED_ WIP4
101	GND	102	GND
103	AC_SYNC	104	M66EN
105	AC_SDATA_I N	106	AC_SDATA_ OUT
107	AC_BIT_CLK	108	AC_CODEC_ ID0#
109	AC_CODEC_ ID1#	110	AC_RESET#
111	MOD_AUDIO _MOD	112	RESERVED
113	AUDIO_GND	114	GND
115	SYS_AUDIO_ OUT	116	SYS_AUDIO_ IN

User's Manual

117	SYS_AUDIO_OUT G	118	SYS_AUDIO_IN G
119	AUDIO_GND	120	AUDIO_GND
121	RESERVED	122	MPCIACT#
123	VCC5VA	124	3.3VAUX

CN18 : GPIO Pin Header

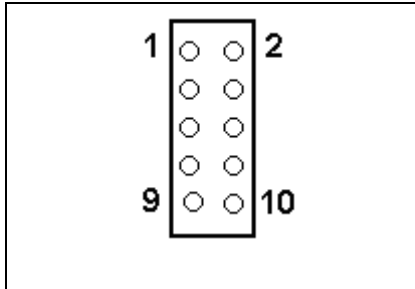

Pin	Define	Pin	Define
1	GPO4-	2	GPO4+
3	GPO5-	4	GPO5+
5	GPO6-	6	GPO6+
7	GPO7-	8	GPO7+
9	Ground	10	VCC

CN19/21:SATA0/1 Connector

Pin	Signal
1	Ground
2	TXP
3	TXN
4	Ground
5	RXN
6	RXP
7	Ground

CN22:SATA LED Pin Header

Pin	Signal
1	VCC3(3V)
2	SATA-ACT0
3	VCC3(3V)
4	SATA-ACT1

CN23:HDD Power Connector

Pin	Define	Pin	Define
1	+12V	2	GND
3	GND	4	+5V

CN25:IDE (2mm) 44Pin 90 degree

Pin	Define	Pin	Define
1	RESET*	2	Ground
3	DATA7	4	DATA8
5	DATA6	6	DATA9
7	DATA5	8	DATA10
9	DATA4	10	DATA11
11	DATA3	12	DATA12
13	DATA2	14	DATA13
15	DATA1	16	DATA14
17	DATA0	18	DATA15
19	Ground	20	NC
21	DREQ*	22	Ground

User's Manual

23	DIOW*	24	Ground
25	DIOR*	26	Ground
27	IOCHRDY	28	Ground
29	DACK*	30	Ground
31	IRQ14	32	NC
33	A1	34	DETECT
35	A0	36	A2
37	HD SELECT 0*	38	HD SELECT 0*
39	ACTIVE*	40	Ground
41	+5V	42	+5V
43	Ground	44	NC

31	IRQ14	32	N/C
33	A1	34	DETECT
35	A0	36	A2
37	PDCS#1	38	PDCS#3 *
39	ACTIVE*	40	GND

CN27:+12V Power Connector

Pin	Define
1	Ground
2	Ground
3	+12V
4	+12V

CN26:IDE(2.54mm) 40 Pin Connector

Pin	Define	Pin	Define
1	RESET*	2	GND
3	DATA 7	4	DATA 8
5	DATA 6	6	DATA 9
7	DATA 5	8	DATA 10
9	DATA 4	10	DATA 11
11	DATA 3	12	DATA 12
13	DATA 2	14	DATA 13
15	DATA 1	16	DATA 14
17	DATA 0	18	DATA 15
19	GND	20	KEY PIN
21	DREQ	22	GND
23	DIOW*	24	GND
25	DIOR*	26	GND
27	IOCHRDY	28	GND
29	DACK*	30	GND

CN32:HDD LED Pin Header

Pin	Define
1	IDE ACT#
2	VCC 3

CN33:PS/On Pin Header


Pin	Define
1	PAN SWIN
2	5V STBY

CN34:Reset Pin Header

Pin	Define
1	Reset #
2	GND


User's Manual

CN36:KB/MS Pin Header

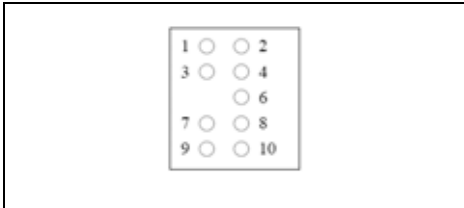


Pin	Define	Pin	Define
1	KCLK	2	MCLK
3	KDAT	4	MDAT
5	KEY	6	NC
7	PS2_GND	8	PS2_GND
9	PS2_VCC	10	PS2_VCC

CN37:LAN LED Pin Header

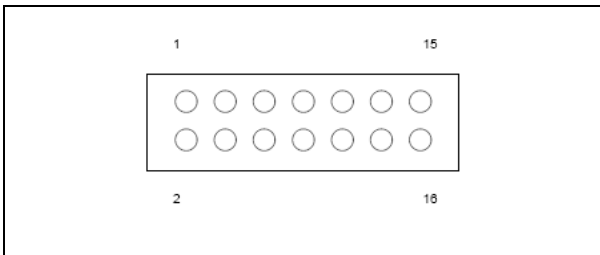

Pin	Define	Pin	Define
1	GL5-L2NK100#	2	GL5_LINK1000#
3	GL5_LINK_UP#	4	GL5_ACTIVITY#
5	GL6_LINK100#	6	GL6_LINK1000#
7	GL6_LINK_UP#	8	GL6_ACTIVITY#
9	L2_LINK_UP#	10	LED2+
11	L2_LINK100#	12	L2_ACTIVITY#
13	L1_LINK100#	14	LED1+
15	L1_LINK_UP#	16	L1_ACTIVITY#

CN38:LAN LED Pin Header

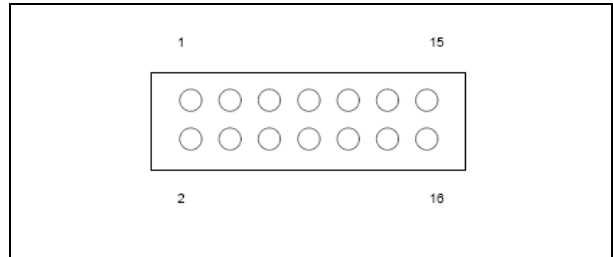













Pin	Define	Pin	Define
1	GL3_LINK100#	2	GL3_LINK1000#
3	GL3_LINK_UP#	4	GL3_ACTIVITY#
5	GL4_LINK100#	6	GL4_LINK1000#
7	GL4_LINK_UP#	8	GL4_ACTIVITY#
9	GL1_LINK100#	10	GL1_LINK1000#
11	GL1_LINK_UP#	12	GL1_ACTIVITY#
13	GL2_LINK100#	14	GLS_LINK1000#
15	GL2_LINK_UP	16	GL2_ACTIVITY#

JP1:PS/On/Always On Select



Pin	Setting
	PS-ON
	Always on (Default)

User's Manual



JP2/4/5:PCI-X Slot Frequency Select

Frequency	JP2	JP4	JP5
133MHz	Open 	2-3 	1-2 
100MHz	Open 	2-3 	2-3 
66MHz	Open 	1-2 	2-3 
33MHz	Short 	1-2 	2-3 

JP3:Speak Buzzer Enable

Pin	Setting
 Close	Enable (Default)
 Open	Disable

JP6:Clear CMOS

Pin	Setting
 1-2	Hold Data (Default)
 2-3	Clear CMOS

User's Manual

Chapter 3. BIOS Setup

The ROM chip of your AW-A795 board is configured with a customized Basic Input/Output System (BIOS) from Phoenix-Award BIOS. The BIOS is a set of permanently recorded program routines that give the system its fundamental operational characteristics. It also tests the computer and determines how the computer reacts to instructions that are part of programs.

The BIOS is made up of code and programs that provide the device-level control for the major I/O devices in the system. It contains a set of routines (called POST, for Power-On Self Test) that check out the system when you turn it on. The BIOS also includes CMOS Setup program, so no disk-based setup program is required CMOS RAM stores information for:

- Date and time
- Memory capacity of the main board
- Type of display adapter installed
- Number and type of disk drives

The CMOS memory is maintained by battery installed on the AW-A795 board. By using the battery, all memory in CMOS can be retained when the system power switch is turned off. The system BIOS also supports easy way to reload the CMOS data when you replace the battery of the battery power lose.

3.1 Quick Setup

In most cases, you can quickly configure the system by choosing the following main menu options:

1. Choose "Load Optimized Defaults" from the main menu. This loads the setup default values from the BIOS Features Setup and Chipset Features Setup screens.
2. Choose "Standard COS Features" from the main menu. This option lets you configure the date and time, hard disk type, floppy disk drive type, primary display and more.
3. In the main menu, press F10 ("Save & Exit Setup") to save your changes and reboot the system.

User's Manual

3.2 Entering the CMOS Setup Program

Use the CMOS Setup program to modify the system parameters to reflect the options installed in your system and to customized your system. For example, you should run the Setup program after you:

- Received an error code at startup
- Install another disk drive
- Use your system after not having used it for a long time
- Find the original setup missing
- Replace the battery
- Change to a different type of CPU
- Run the Phoenix-Award Flash program to update the system BIOS

Run the CMOS Setup program after you turn on the system. On-screen instructions explain how to use the program.

↓ Enter the CMOS Setup program's main menu as follows:

1. Turn on or reboot the system. After the BIOS performs a series of diagnostic checks, the following message appears:
"Press DEL to enter SETUP"
2. Press the key to enter CMOS Setup program. The main menu appears:

Phoenix - AwardBIOS CMOS Setup Utility

▶ Standard CMOS Features	Load Fail-Safe Defaults
▶ Advanced BIOS Features	Load Optimized Defaults
▶ Advanced Chipset Features	Set Supervisor Password
▶ Integrated Peripherals	Save User Password
▶ Power Management Setup	Save & Exit Setup
▶ PnP/PCI Configuration	Exit Without Saving
▶ PC Health Status	
↑↓→← : Select Item	
F10: Save & Exit Setup	
Time, Date, Hard Disk Type....	

User's Manual

3. Choose a setup option with the arrow keys and press <Enter>. See the following sections for a brief description of each setup option.

In the main menu, press F10 ("Save & Exit Setup) to save your changes and reboot the system. Choosing "EXIT WITHOUT SAVING" ignores your changes and exits the program. Pressing <ESC> anywhere in the program returns you to the main menu.

3.3 Menu Options

The main menu options of the CMOS Setup program are described in the following and the following sections of this chapter.

STANDARD CMOS FEATURES:

Configure the date & time, hard disk drive type, floppy disk drive type, primary display type and more

ADVANCED BIOS FEATURES:

Configure advanced system options such as enabling/disabling cache memory and shadow RAM

ADVANCED CHIPSET FEATURES:

Configure advanced chipset register options such DRAM timing

INTEGRATED PERIPHERALS:

Configure onboard I/O functions

POWER MANAGEMENT SETUP:

Configure power management features such as timer selects

PNP/PCI CONFIGURATION:

Configure Plug & Play IRQ assignments and PCI slots

PC HEALTH STATUS:

Configure the CPU speed and, if the optional Winbond W83627HF system monitor IC is installed, view system information

User's Manual

LOAD FAIL-SAFE DEFAULT:

Loads BIOS default values. Use this option as diagnostic aid if your system behaves erratically

LOAD OPTIMIZED DEFAULTS:

Loads optimized BIOS settings

SET SUPERVISORS & USER PASSWORD:

Configure the system so that a password is required when the system boots or you attempt to enter the CMOS setup program. When you log in with this password, you will be able to enter the COS Setup main menu, but you can not enter other menus in the CMOS Setup program.

SAVE & EXIT SETUP:

Save changes of values to CMOS and exit the CMOS setup program

EXIT WITHOUT SAVING:

Abandon all CMOS changes and exit the CMOS setup program

Standard CMOS Features Setup

↓ Use the Standard CMOS Setup option as follows:

1. Choose "Standard CMOS Features" from the main menu. The following screen appears:

Phoenix - Award BIOS CMOS Setup Utility	
Standard CMOS Features	
Date (mm:dd:yy)	Mon, Jan 21 2003
Time (hh:mm:ss)	10 : 40 : 23
	Item Help
▶ IDE Primary Master	<NONE>
▶ IDE Primary Slave	<NONE>
▶ IDE Secondary Master	<NONE>
▶ IDE Secondary Slave	<NONE>
Video	<EGA/VGA>
Halt On	<All, but Keyboard>
Base Memory	640K
Extend Memory	261120K
Total Memory	262144K
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help	
F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults	

User's Manual

- Use the arrow keys to move between fields. Modify the selected field using the PgUP/PgDN/+/- keys. Some fields let you enter numeric values directly.

Option	Description
Date (mm:dd:yy)	Type the current date
Time (hour:min:sec)	Type the current time (24-hour clock)
Hard Disks	Choose from "Auto", "User", or "None" If your drive is not one of the predefined types, choose "User" and enter the following drive specifications: Cylinders, heads, Wpcom, L-Zone, sectors, and mode Consult the documentation received with the drive for the values that will give you optimum performance.
Video	Choose: EGA/VGA CGA 40 CGA 80 Mono
Halt On	Controls whether the system stops in case of an error detected during power up. Choose: All Errors No Errors All, But Keyboard (Default) All, But Diskette All, But Disk/Key

- After you have finished with the Standard CMOS Features program, press the <ESC> key to return to the main menu.

Advanced BIOS Features Setup

↓ Use the Advanced BIOS Features Setup option as follows:

- Choose "Advanced BIOS Features Setup" from the main menu. The following screen appears:

User's Manual

Phoenix - Award BIOS CMOS Setup Utility
Advanced BIOS Features

Virus Warning	<Disabled>	Item Help
CPU L1 & L2 Cache	<Enabled>	Menu Level ▶
First Boot Device	<HDD-0>	Allows you to choose
Second Boot Device	<HDD-2>	the VIRUS warning
Third Boot Device	<CDROM>	feature for IDE Hard
OS Select For DRAM > 64MB	<Non-OS2>	Disk boot sector
Console Redirection	<Enabled>	protection. If this
Baud Rate	<19200>	function is enabled
Agent wait time (min)	<1>	and someone attempt to
Agent after boot	<Enabled>	write data into this area,
Report No FDD For WIN95		BIOS will show
Small Logo (EPA) Show		a warning message on
		screen and alarm beep
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC: Exit F1: General Help F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults		

2. Use the arrow keys to move between items and to select values. Modify the selected fields using the PgUP/PgDN keys. Press the <F1> "Help" key for information on the available options:

Option	Description
Virus Warning	When enabled, any attempt to write to the boot sector and partition table will halt the system and cause a warning message to appear. If this happens, you can use an anti-virus utility on a virus-free, bootable floppy disk to reboot and clean your system. The default setting is Disabled.
CPU L1 & L2 Cache	Choose Enable/Disable of the CPU internal Cache.
First/Second/Third Boot Device	The BIOS attempts to load the operating system from the devices in the sequence selected in these items. Choose: HDD-0, LS-120, USB FDD.....
Boot Other Device	Enable other device bootable not selected above.
OS Select for DRAM > 64MB	Set to OS/2 if your system is using OS/2 and has a memory size of more than 64MB
Console Redirection	Choose enabled to allowing agent which connect to this board to administrate this computer
Baud Rate	The data transfer rate (bit per second) to agent. Choose 9600/19200/38400/57600/115200 item.
Agent wait time(min)	Agent negotiate time, choose 1/2/4/8 min.

User's Manual

Agent after boot	Choose enabled to enable agent administrate this board after boot.
------------------	--

Advanced Chipset Features Setup

↓ Use the Advanced Chipset Features Setup option as follows:

1. Choose "Advanced Chipset Features Setup" from the main menu. The following screen appears ;

Phoenix - Award BIOS CMOS Setup Utility
Advanced Chipset Features

<ul style="list-style-type: none"> ▶ DRAM Timing control <Press Enter> ▶ DRAM Data Integrity Mode <ECC> ▶ System BIOS Cacheable <Enabled> ▶ Video BIOS Cacheable <Enabled> ▶ Memory Hole At 15M-16M <Disabled> 	Item Help
	Menu Level ▶
<p>↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC: Exit F1: General Help F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults</p>	

2. Move between items and select values by using the arrow keys. Modify the selected fields using the PnUP/PgDN Keys. For information on the various options, press <F1> key .

Option	Description
DRAM Timing Control	DRAM timing Configure < By SPD> X – CAS Latency Time 2 X – Active to Precharge Delay 5 X- DRAM RAS # to CAS# Delay 2 X – DRAM RAS# Precharge 2
DRAM Data Integrity Mode	Choose ECC or Non –ECC
System BIOS Cacheable	Choose Enabled or Disabled. When enabled, caching of the system BIOS at F0000h-FFFFFh, enhancing system performance. However, if any program writes

User's Manual

	to this memory area, a system error may result.
Video BIOS Cacheable	Choose Enabled or Disabled. When Enable this option to allow caching of the Video BIOS.
Memory Hole At 15M-16M	Choose Enabled or Disabled. You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it can not be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirement.

Integrated Peripherals

↓ Use the Integrated Peripherals Setup option as follows:

1. Choose "Integrated Peripherals Setup" from the main menu. The following screen appears:

Phoenix - Award BIOS CMOS Setup Utility
Advanced Chipset Features

▶ Onchip IDE Device <Press Enter> ▶ Onboard Device <Press Enter> ▶ Super IO Devic <Press Enter>	Item Help
	Menu Level ▶
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC: Exit F1: General Help F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults	

2. Move between items and select values by using the arrow keys. Modify the selected fields using the PgUP/PgDN keys. Please press the <F1> key for information on the various options.

User's Manual

Option	Description
Onchip IDE Device	IDE HDD Block Mode <Enabled> Onchip Primary PCI IDE <Enabled> IDE Primary Master PIO <Auto> IDE Primary Master UDMA <Auto> IDE Primary Slave UDMA <Auto> Onchip Secondary PCI IDE <Enabled> IDE Secondary Master PIO <Auto> IDE Secondary Slave PIO <Auto> IDE Secondary Master UDMA <Auto>
Onboard Device	USB Controller <Enabled> USB Keyboard <Disabled> USB Mouse Support <Disabled> BIOS Protected <Enabled>
Super IO Device	Onboard Serial Port1 <3F8/IRQ4> Onboard Serial Port 2 <2F8/IRQ3> Onboard Parallel Port <378/IRQ7> EPP Mode Select EPP 1.7 ECP Mode USE DMA 3

Power Management Setup

The Power Management Setup controls the board's "green" features. To save energy these features shut down the video display and hard disk drive.

↓ **Use the Power Management Setup option as follows:**

1. Choose "Power Management Setup" from the main menu. The following screen appears.

User's Manual

Phoenix - Award BIOS CMOS Setup Utility Power Management Setup

Power Management <User Define> Video Off Method <DPMS> Video Off In Suspend <Yes> Suspend Type <Stop Grant> MODEM Use IRQ <NA> Suspend Mode <Disabled> HDD Power Down <Disabled>	Item Help <hr/> Menu Level ▶
**Reload Global Timer Events ** Primary IDE 0 <Disabled> Primary IDE 1 <Disabled> Secondary IDE 0 <Disabled> Secondary IDE 1 <Disabled> FDD, COM, LPT Port <Disabled> PCI PIRQ (A-D) # <Disabled>	
↑↓→← Move: Enter:Select +/-/PU/PD:Value F10:Save ESC: Exit F1: General Help F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults	

- Move between items and select values by using the arrow keys. Modify the selected field the PgUP/PgDN keys. For information on the various options, press <F1> key.

Option	Description
Power Management	Choose Disable, User Define, Min Saving or Max. Saving. "User Define" – Lets you specify when the HDD and system will shut down "Min Saving" - Predefine timer value of 4-12 min. "Max Saving" – Predefine timer value of 1 minute
Video Off Method	Choose V/H SYNC+Blank, DPMS, Blank Screen When power management blanks the screen and turns off vertical and horizontal scanning. The DPMS (Display Power Management System) setting allows the BIOS to control the video card if it has the DPMS features. If you don't have a Green monitor, use the Blank Screen option
Video Off In Suspend	Choose the video off condition: NA/Suspend/Doze
Suspend Type	Choose "Stop Grant" or "Power on Suspend"
MODEM Use IRQ	Choose the IRQ used by the modem. Default: Disabled
Suspend Mode	Sets the time for Suspend mode or disables it

User's Manual

HDD Power Down	Sets the time for the HDD power down mode or disables it
Reload Global Timer Events	Choose Enable or Disable
	Primary IDE 0 <Disabled>
	Primary IDE 1 <Disabled>
	Secondary IDE 0 <Disabled>
	Secondary IDE 1 <Disabled>
	FDD, COM, LPT Port <Disabled>
	PCI PIRQ <A-D> <Disabled>

- After you have finished with the Power Management Setup, press the <ESC> key to return to the main menu.

PNP/PCI Configuration

This option is used to configure Plug and Play assignments and route PCI interrupts to designated ISA interrupts.

↓ Use the PNP/PCI Configuration Setup option as follows:

- Choose "PNP/PCI Configuration Setup" from the main menu, the following screen appears.

Phoenix - Award BIOS CMOS Setup Utility
PNP/PCI Configuration

Reset Configuration Data <Disabled>	Item Help
Resources Controlled by <Auto(ESCD)> IRQ Resources Press Enter DMA Resources Press Enter	Menu Level ▶ Default is Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the OS cannot boot
↑↓→← Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5:Previous Value F6:Fail-Safe Default F7:Optimized Defaults	

User's Manual

2. Move between items and select values by using the arrow keys. Modify the selected fields using the PgUP/PgDN keys. For information on the various options, please press <F1> key.

Option	Description
Reset Configuration Data	Choose Enable or Disable "Enable" – PNP configuration data is reset in BIOS "Disable" – PNP configuration data is retained in BIOS
Resources Controlled By	Choose Auto or Manual. This option specifies whether resources are controlled by automatic or manual configuration
IRQ Resources	IRQ-3 Assigned to <PCI Device> IRQ-4 Assigned to <PCI Device> IRQ-5 Assigned to <PCI Device> IRQ-7 Assigned to <PCI Device> IRQ-9 Assigned to <PCI Device> IRQ-10 Assigned to <PCI Device> IRQ-11 Assigned to <PCI Device> IRQ-12 Assigned to <PCI Device> IRQ-14 Assigned to <PCI Device> IRQ-15 Assigned to <PCI Device>
DMA Resources	Assign DMA channel 0/1/3/5/6/7 to legacy ISA or auto by default "PCI/ISA"

3. Please press the <ESC> key to return the main menu after finishing with the PNP/PCI Configuration Setup.

User's Manual

PC Health Status Configuration Setup

Choose "PC Health Status Configuration Setup" from the main menu, the following screen appears:

Phoenix – Award BIOS CMOS Setup Utility

PC Health Status

System Temperature :	24 / 75	Item Help
CPU Temperature :	37 / 98	
FAN 1 Speed :		
FAN 2 Speed :		
FAN 3 Speed :		
VCORE	1.44V	Menu Level ▶
VCCP	1.52V	
+3.3V	1.03V	
+5V	4.92V	
+12V	11.92V	
-12V	-12.44V	
-5V	- 4.94V	
VBAT(V)	3.31V	
+12V	11.92V	
-12V	-12.44V	
- 5V	- 4.94V	
VBAT(V)	3.31V	
Move Enter : Select +/-/PU/PD :Value F10:Save ESC:Exit F1:General Help		
F5:Previous Value F6:Fail-Save Default F7:Optimized Defaults		

Load Fail-Safe Defaults

This option loads the troubleshooting default values permanently stored in the BIOS ROM. This is useful if you are having problems with the main board and need to debug or troubleshoot the system. The loaded default settings do not affect the Standard CMOS Setup screen.

User's Manual

Phoenix - AwardBIOS CMOS Setup Utilities

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Default
Advanced Chipset Features	Load Optimized Defaults
Integrated Pheripherals	Set Password
Power Management	Setup
PnP/PCI Configura	Load Fail-Safe Defaults (Y/N)? Y
PC Health Status	Saving
Esc : Quit	
F10 : Save & Exit Setup	
↑↓→← : Select Item	
Time, Date, Hard Disk Type...	

To use this feature, highlight it on the main screen and press <Enter>. A line will appear on the screen asking if you want to load the BIOS default values. Pres the <Y> key and then press <Enter> if you want to load the BIOS default.

Load Optimized Defaults

This option loads optimized settings stored in the BIOS ROM. The auto-configured settings do not affect the Standard CMOS Setup screen.

Phoenix - AwardBIOS CMOS Setup Utilities

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Default
Advanced Chipset Features	Load Optimized Defaults
Integrated Pheripherals	Set Password
Power Management	Setup
PnP/PCI Configura	Load Optimized Defaults (Y/N)? Y
PC Health Status	Saving
Esc : Quit	
F10 : Save & Exit Setup	
↑↓→← : Select Item	
Time, Date, Hard Disk Type...	

To use this feature, highlight it on the main screen and press <Enter>. A line will appear on the screen asking if you want to load the Optimized Default Values. Press the <Y> key and then press <Enter> if you want to load the SETUP default.

User's Manual

Supervisor/User Password

The password options let you prevent unauthorized system boot-up or unauthorized use of CMOS setup. The Supervisor Password allows both system and CMOS Setup program access; the User Password allows access to the system and the CMOS Setup Utility main menu.

The password functions are disabled by default. You can use these options to enable a password function or, if a password function is already enabled, change the password.

To change a password, first choose a password option from the main menu and enter the current password. Then type your new password at the prompt. The password is case sensitive and you can use up to 8 alphanumeric characters. Press <Enter> after entering the password. At the Next Prompt, confirm the new password by typing it and pressing <Enter> again.

Phoenix - AwardBIOS CMOS Setup Utilities

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Default
Advanced Chipset Features	Load Optimized Defaults
Integrated Pheripherals	Set Password
Power Management	Setup
PnP/PCI Configura	Saving
PC Health Status	
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

After you use this option to enable a password function, use the "Security Option" in "BIOS Feature Setup" to specify whether a password is required every time the system boots or only when an attempt is made to enter the CMOS Setup program.

User's Manual

Save and Exit Setup

This function automatically saves all CMOS values before exiting Setup.

Phoenix - AwardBIOS CMOS Setup Utilities

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Default
Advanced Chipset Features	Load Optimized Defaults
Integrated Pheripherals	Set Password
Power Management	Setup
PnP/PCI Configura	Saving
PC Health Status	
Save CMOS and Exit (Y/N)? Y	
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

Exit Without Saving

Use this function to exit Setup without saving the CMOS value.

Phoenix - AwardBIOS CMOS Setup Utilities

Standard CMOS Features	Frequency/Voltage Control
Advanced BIOS Features	Load Fail-Safe Default
Advanced Chipset Features	Load Optimized Defaults
Integrated Pheripherals	Set Password
Power Management	Setup
PnP/PCI Configura	Saving
PC Health Status	
Quit Without Saveing (Y/N)? Y	
Esc : Quit	↑↓→← : Select Item
F10 : Save & Exit Setup	
Time, Date, Hard Disk Type...	

User's Manual

Chapter 4. Driver Utility


The system driver installation procedure must be performed first.

4.1 Ethernet Driver Installation

It AW-A795 supports three 10/100 Ethernet Controller by using Intel® 82551ER and 82546EB for optional Extension Fiber/Copper.


4.1.1. Intel 82546EB Ethernet

(1) Choose Ethernet Controller

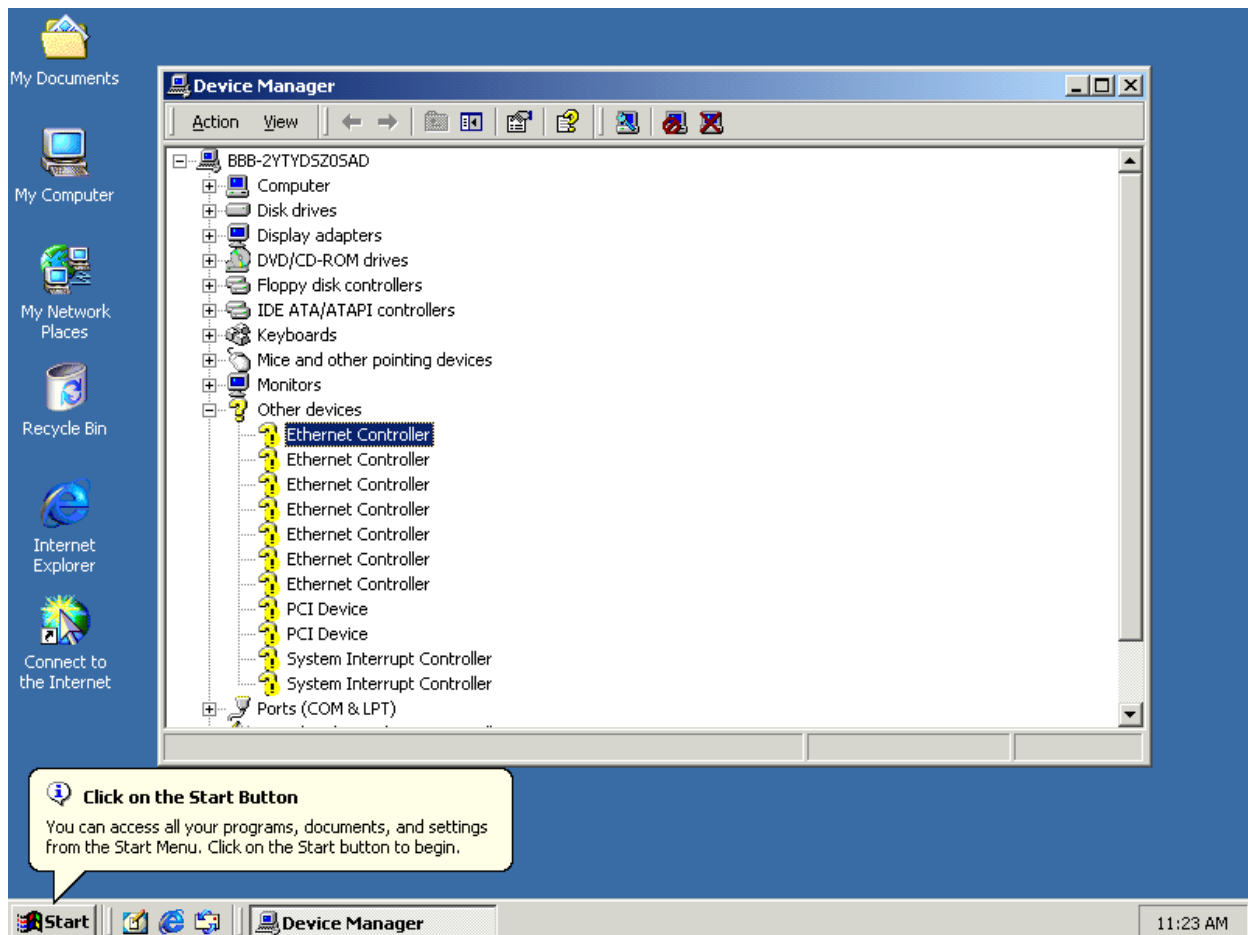


User's Manual

(2) Choose Driver

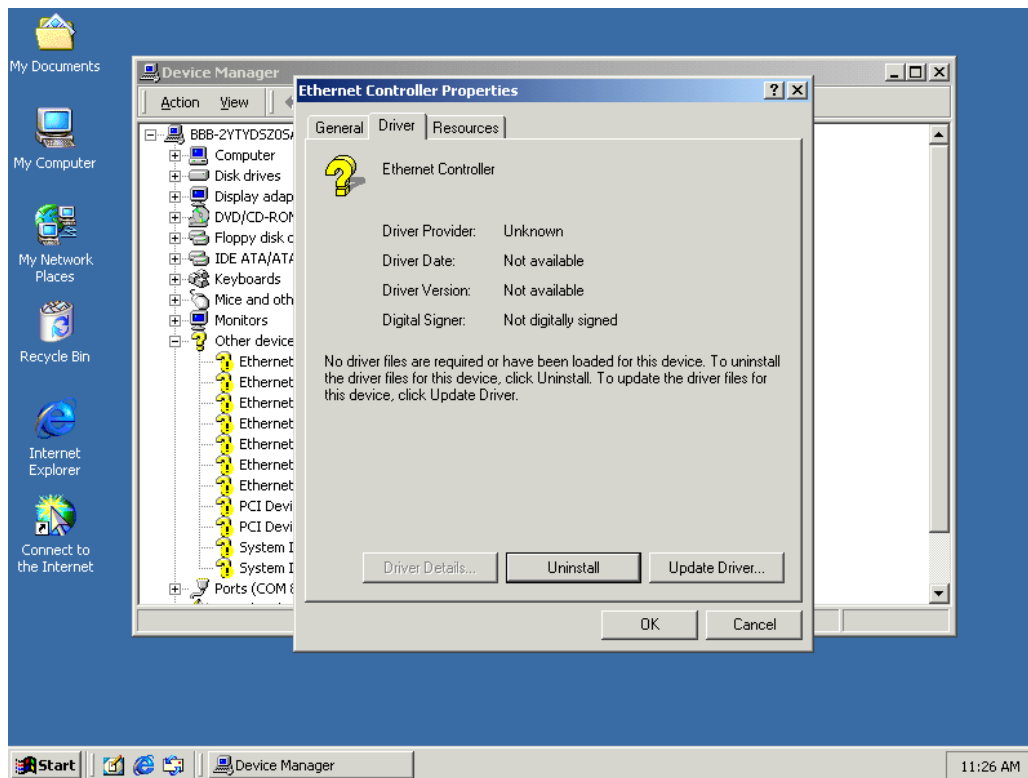


(3) Click Next

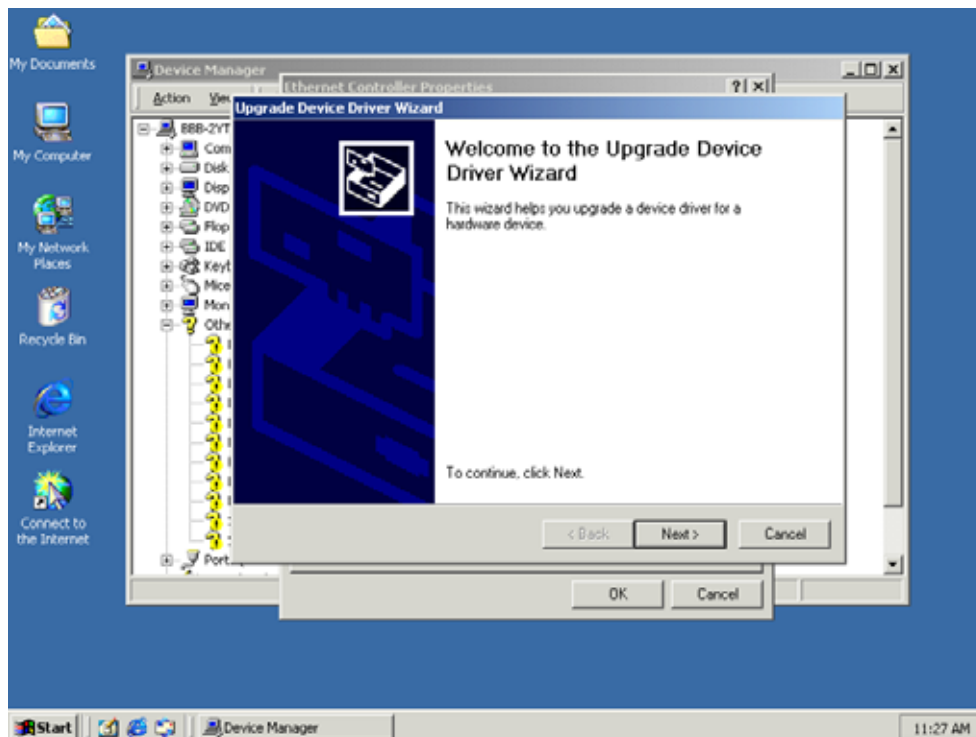


User's Manual

(4) Click Next

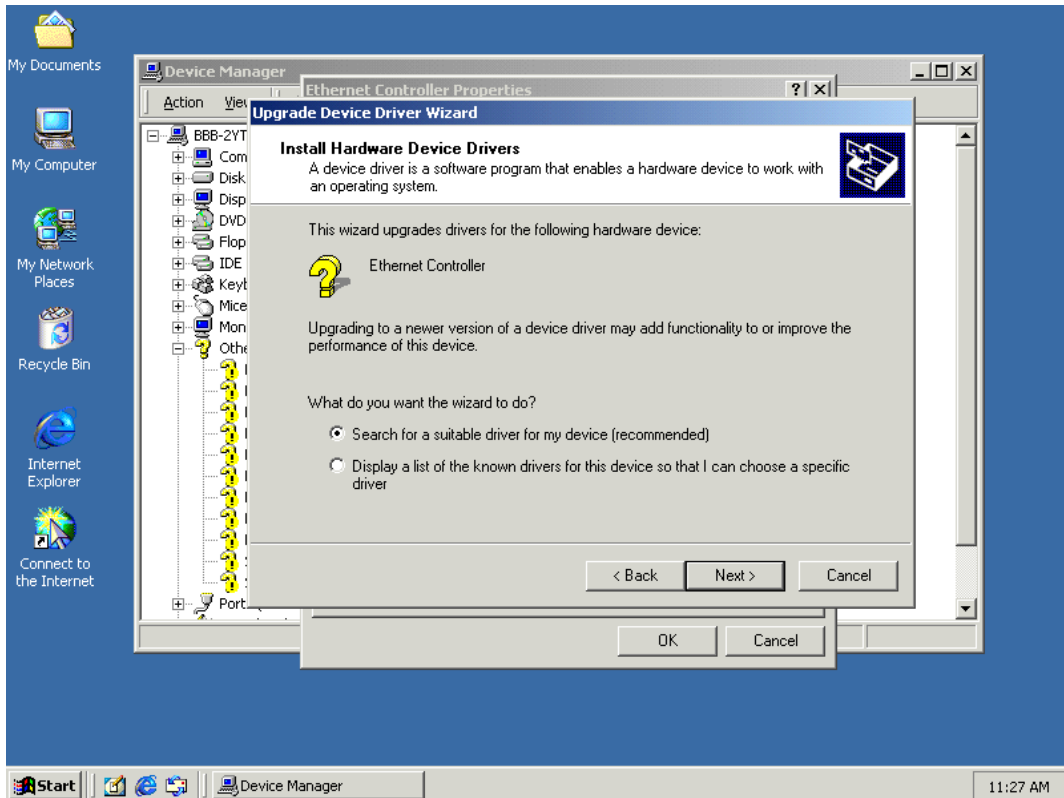


(5) Click Next

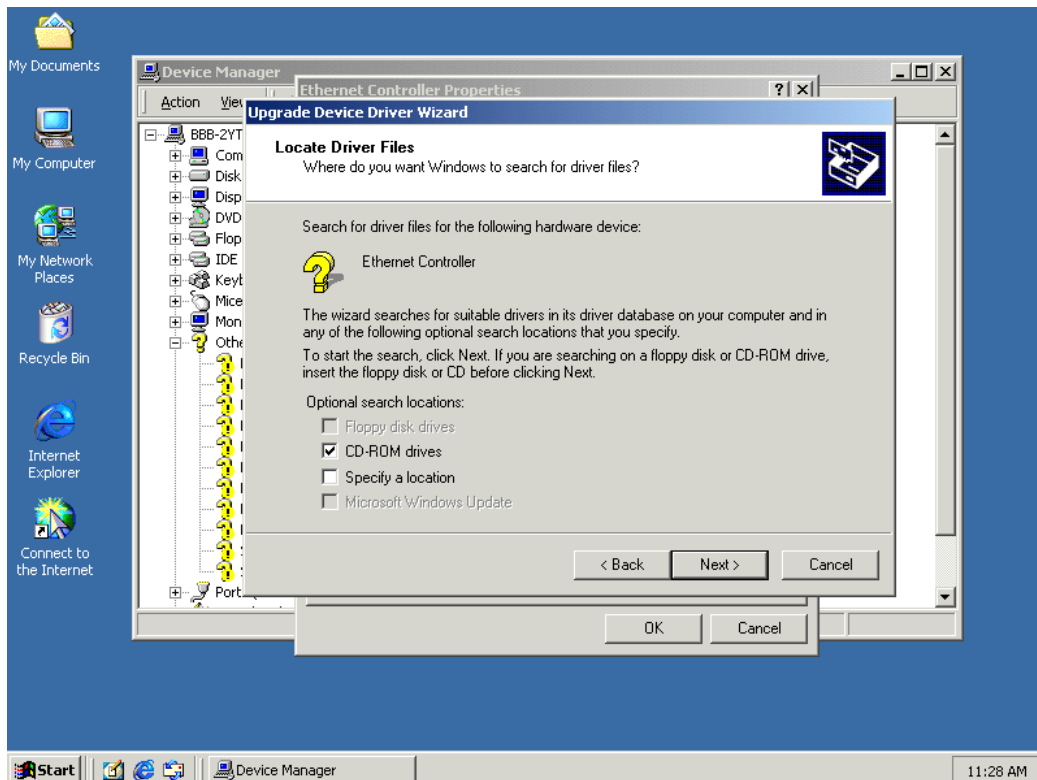


User's Manual

(6) Click Next

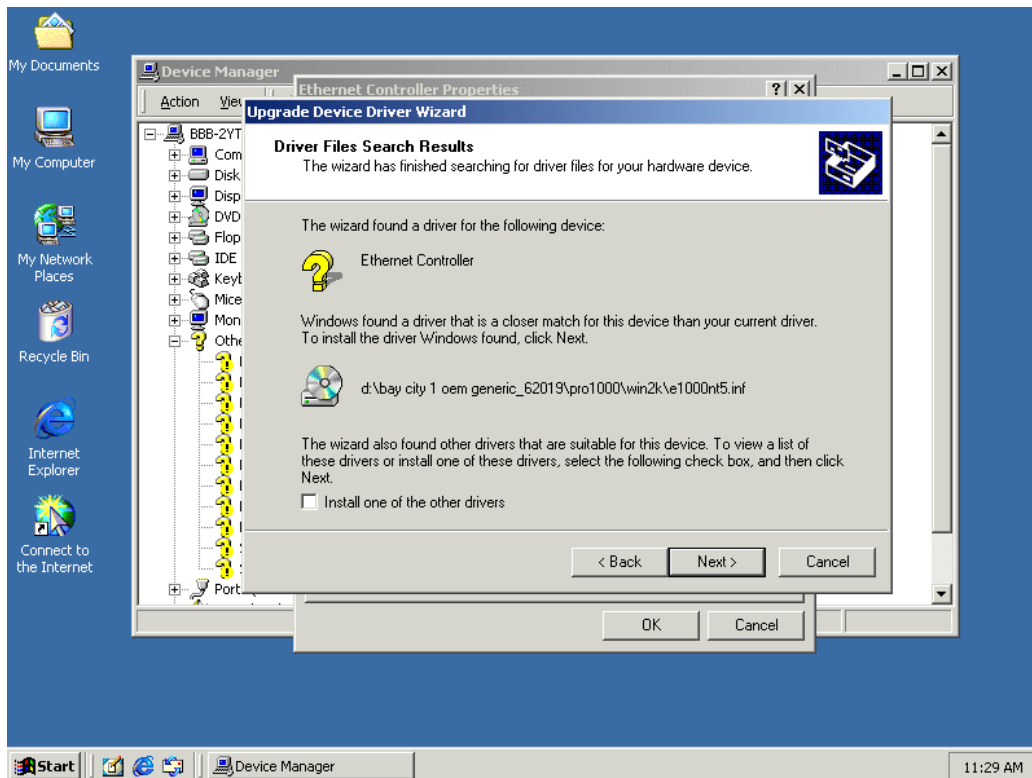

(7) Click Finish

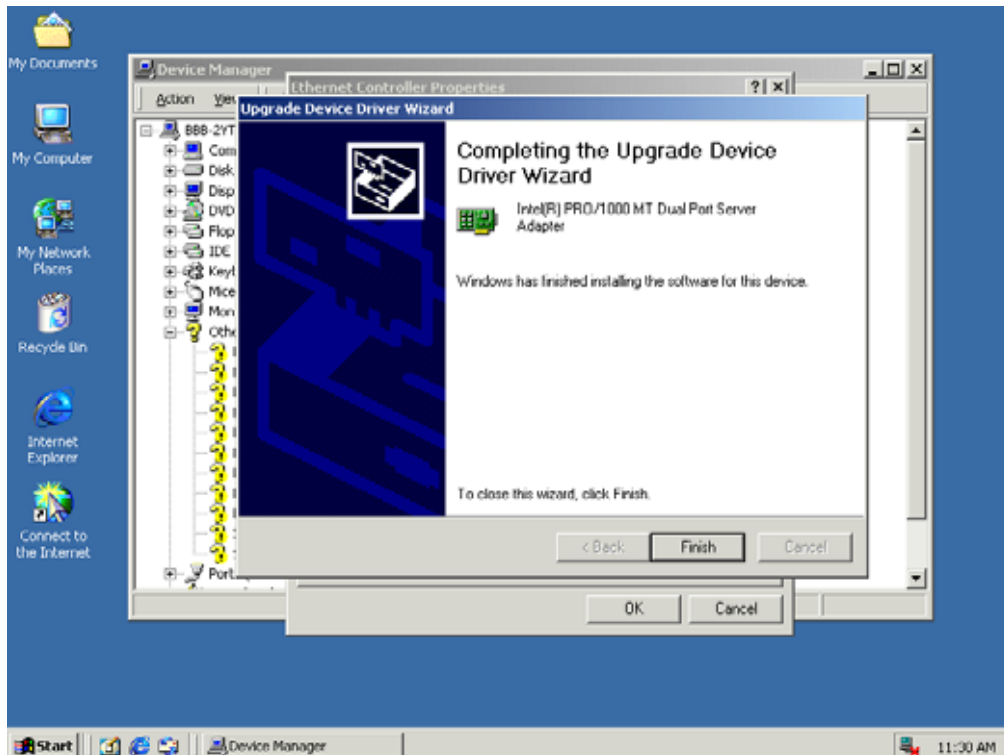


User's Manual

4.1.2 Intel® 82551 Ethernet Installation


Please install Ethernet drivers as follows:

(1)

1. Insert the AW-A795 CD-ROM driver into the CD-ROM Drive
- 2 . Select the Drivers/system file to click the Setup icon.
- 3 . Choose Ethernet controller

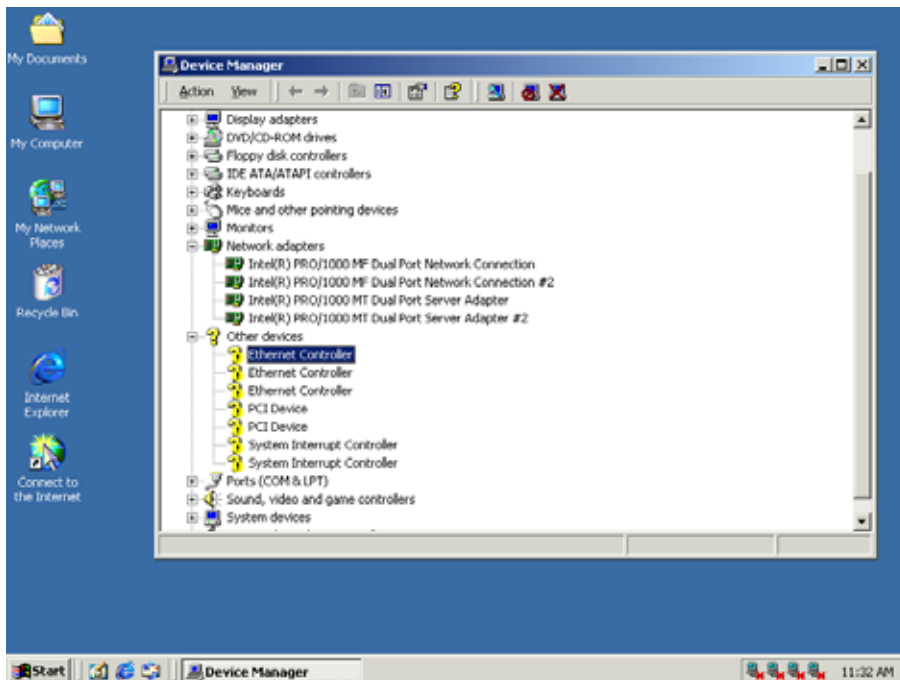


(2) Choose Driver

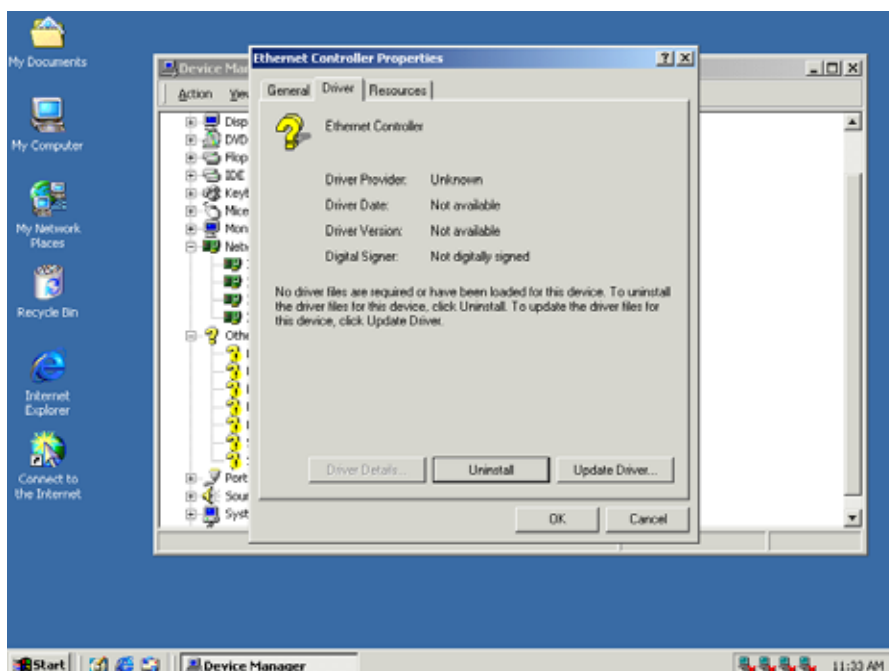


User's Manual

(3) Click Next

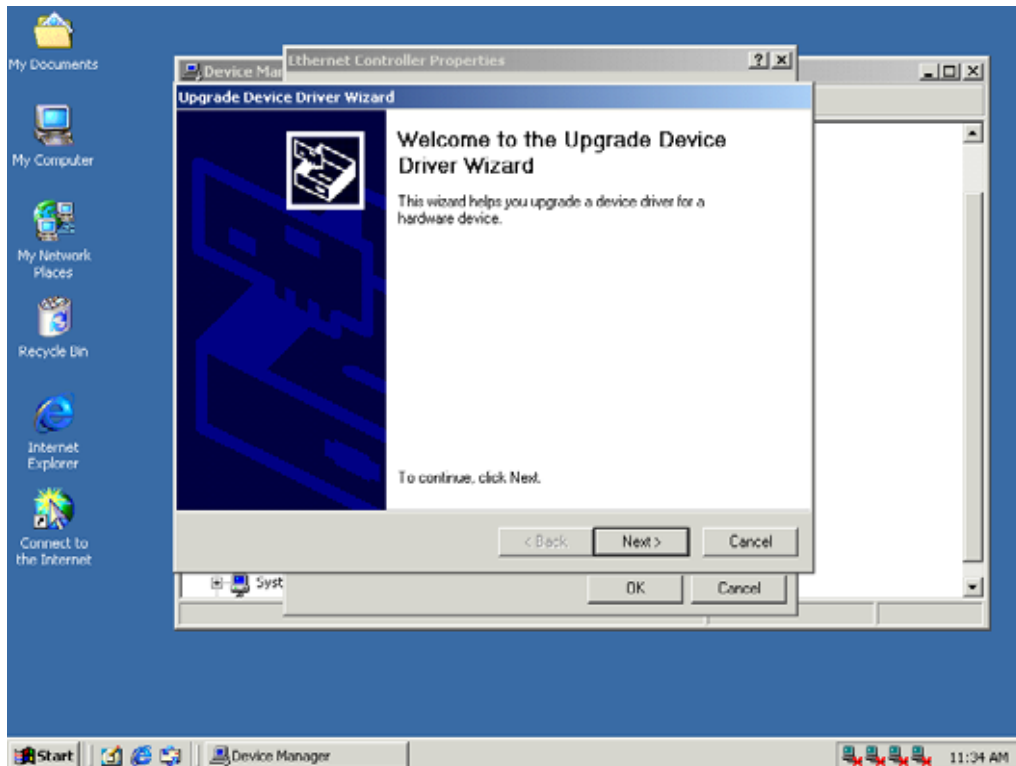


(4) Click Next

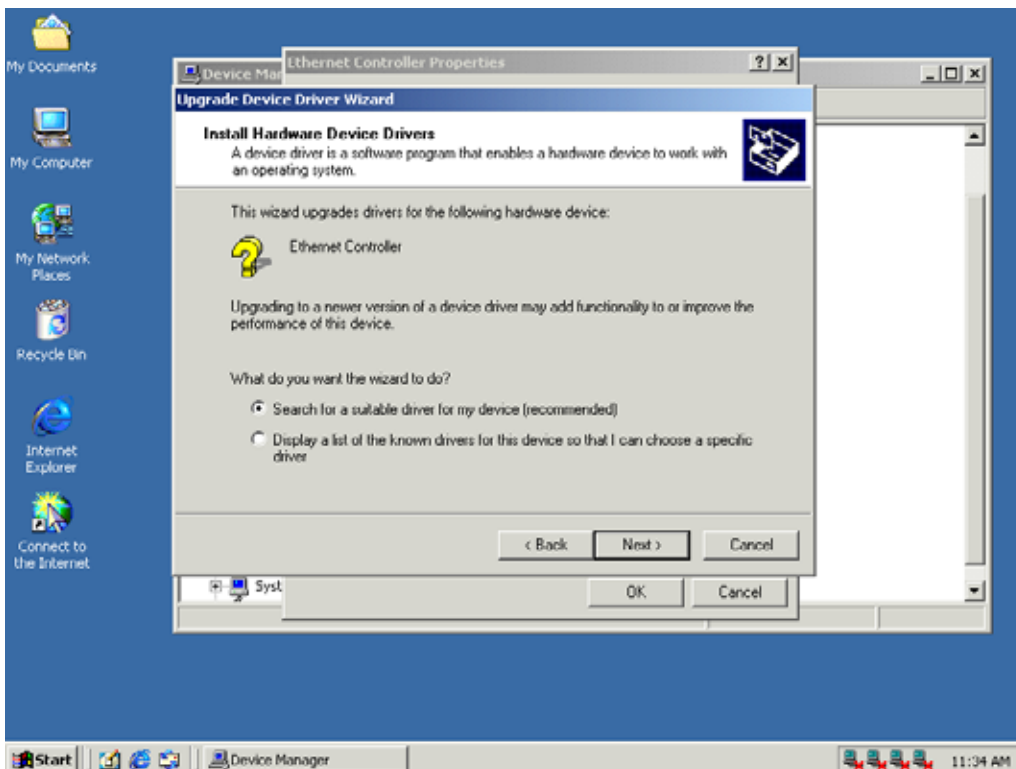


User's Manual

(5) Click Next

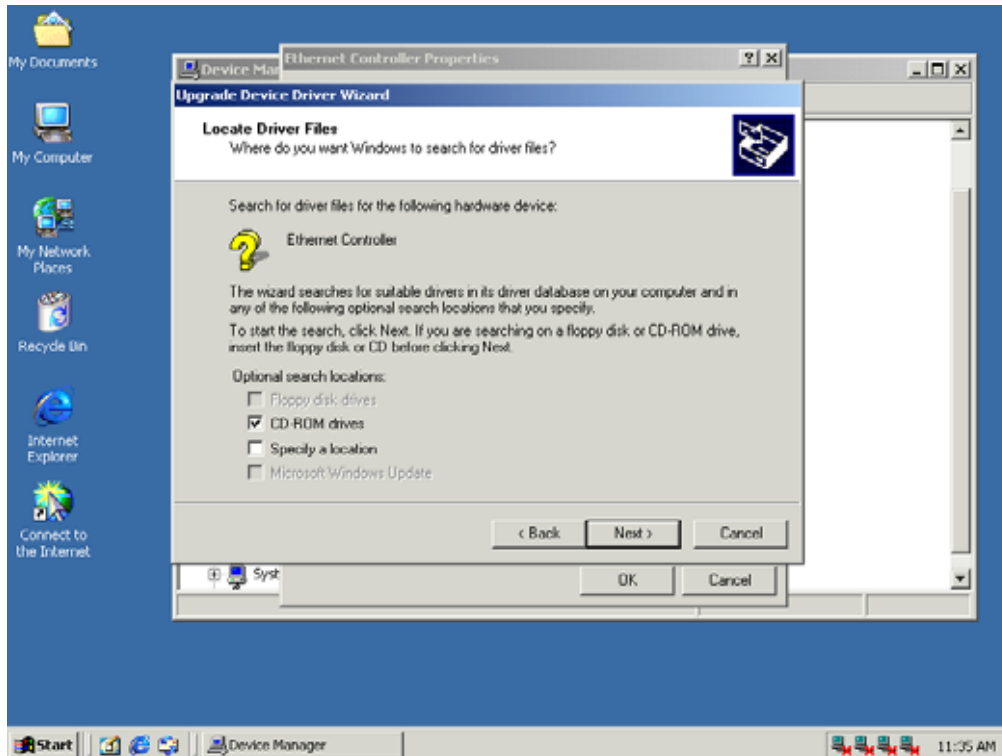


(6) Click Next

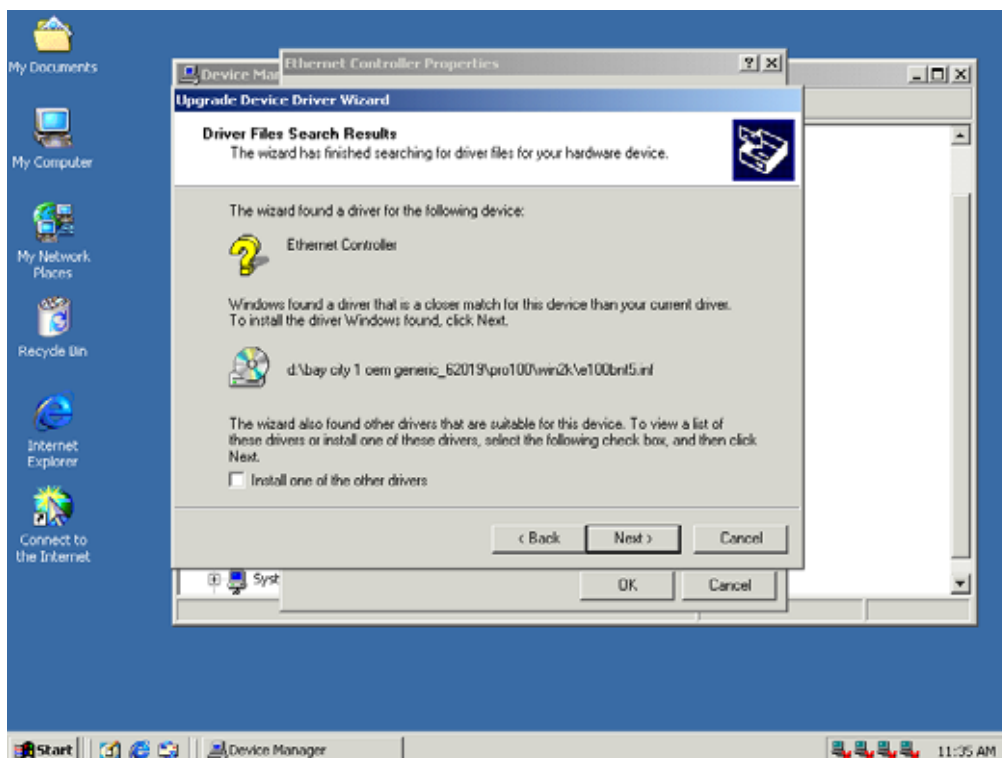


User's Manual

(7) Click Finish

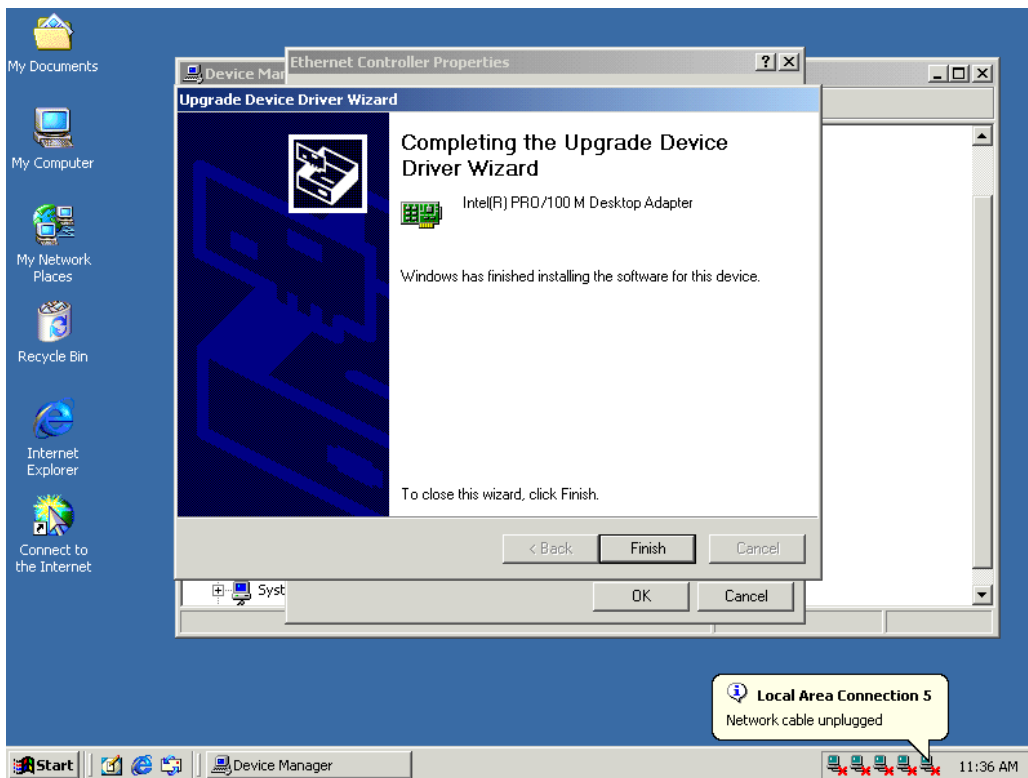

4.2.1 Install System Chipset Driver

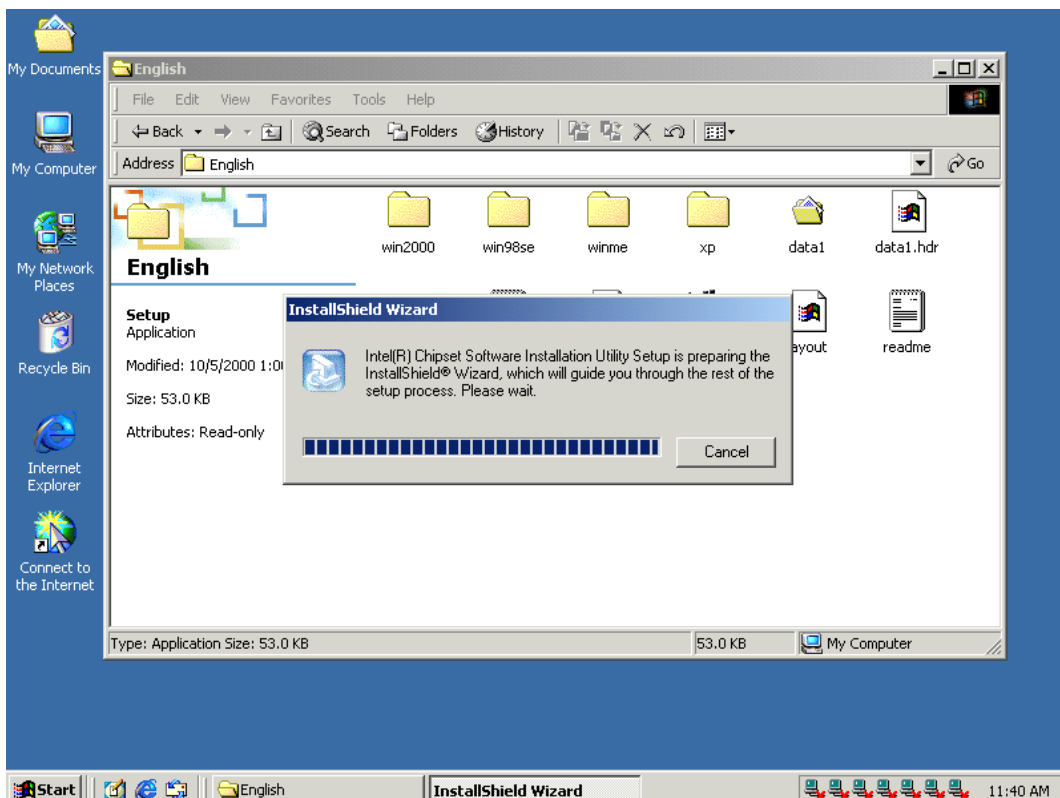

User's Manual

(1) Click Next



(2) Click Yes



(3) Click Next



User's Manual

(4) Click Finish



Installation process is completed and allowed the system to reboot.

User's Manual

Appendix A :System Resource

Interrupt Controller

The AW-A795 is a fully PC compatible control board, it consists of 16 ISA interrupt request lines and most of them already in used by other part of the board. Please make sure that the IRQs do not conflict if you would like to use extra add-on cards.

System IRQs are available to cards installed in the ISA expansion Bus first. Any remaining IRQs then may be assigned to this PCI Bus. You are able to use the Microsoft's Diagnostic(MSD.EXE) utility include in Windows director to see their map.

IRQ	Assignment
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ2	Interrupt rerouting from IRQ8 through IRQ15
IRQ3	Serial Port 2
IRQ4	Serial Port 1
IRQ5	USB Controller
IRQ6	Floppy Disk Controller
IRQ7	Parallel Port 1
IRQ8	Real Time Clock
IRQ9	Ethernet Controller
IRQ10	Reserved
IRQ11	USB Controller
IRQ12	Mouse
IRQ13	Math Coprocessor
IRQ14	Primary IDE Controller
IRQ15	Secondary IDE Controller

DMA Channel Assignment : Channel 4 is by default used to cascade the two controllers

Channel	Assignment
DMA0	Available fir PCI and ISA Slot
DMA1	Available for PCI And ISA Slot
DMA2	Floppy Disk Controller
DMA3	Available for PCI and ISA Slot
DMA4	Cascade

User's Manual

DMA5	Available for PCI and ISA Slot
DMA6	Available for PCI and ISA Slot
DMA7	Available for PCI and ISA Slot

Memory Map

The following table indicates memory of AW-A795. The address ranges specify the runtime code length.

Memory below 1MB (1Mb ~ 640KB)

Address Range	Type	Owner
A0000~AFFFF	ISA	VGA Adapter
B0000~BFFFF	ISA	VGA Adapter
C0000~C7FFF	ISA	Adapter ROM
F0000~FFFFFF	ISA	System BIOS

Memory above 1MB (1MB ~ 142336KB)

Address Range	Type	Owner
F0000000~F7FFFFFF	PCI	PCI – PCI Bridge
F8000000~F82FFFFFF	PCI	PCI – PCI Bridge

System Memory Map

Start High	Start Low	Size High	Size Low	Type
00000000	00000000	00000000	0009FC00	Available
00000000	000F0000	00000000	00010000	Reserved
00000000	FFC00000	00000000	00100000	Reserved
00000000	FEE00000	00000000	00001000	Reserved
00000000	FFB00000	00000000	00500000	Reserved
00000000	0009FC00	00000000	00000400	Reserved
00000000	00100000	00000000	3FF00000	Available

I/O Map

The addresses shown in the table are typical locations.

I/O Port	Assignment
0 ~ F	AT DMA Controller
20 ~ 21	AT Interrupt Controller
40 ~ 43	82C54 Compatible Programmable Timer

User's Manual

60	8042 Compatible keyboard Controller
61	AT Style Speaker
64	8042 Compatible keyboard Controller
70 ~ 71	Real Time Clock
81 ~ 83	AT DMA Controller
87	AT DMA Controller
89 ~ 8B	AT DMA Controller
8F ~ 91	AT DMA Controller
A0 ~ A1	AT Interrupt Controller
C0 ~ DF	AT DMA Controller
F0 ~ FF	Math Coprocessor
170 ~ 177	IDE Controller
1F0 ~ 1F7	IDE Controller
294 ~ 297	PCI Bus
2F8 ~ 2FF	Communication Port (COM2)
376	IDE Controller
378 ~ 37A	LPT1
3BB ~ 3B0	VGA Adapter
3C0 ~ 3DF	VGA Adapter
3F0 ~ 3F5	FDD Controller
3F6	IDE Controller
3F7	FDD Controller
3F8 ~ 3FF	Communication Port (COM1)
4D1 ~ 4D0	PCI Bus
778 ~ 77B	Parallel
CF8 ~ CFF	PCI Bus
4000 ~ 40BF	PCI Bus
A000 ~ BFFF	PCI Bus
C000 ~ CFFF	PCI Bus
D000~D01E	USB Controller
D400~D41E	USB Controller
F000~F00E	IDE Controller

User's Manual

Appendix B:

Standard Cable List

Part No.	Cable Description	AW-A795 Connector	Terminating Connector
46-ICOM00-00	COM Port Cable	CN9	2.54mm ,COM2 Cable
46-IPS200-00			
46-IUSB2B-00			
46-ILPT01-00	Printer Cable	CN18	2.0 mm ,Printer Port Cable

Optional Cable List

Part No.	Cable Description	AW-A795 Connector	Terminating Connector
46-ATA660-00	ATA-66 Cable	CN22	2.0 mm , 44-Pin IDE Cable



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>