



**WHITE-RODGERS**

## F145-1189

Replacement Door for Classic White Digital  
Thermostats

### INSTALLATION INSTRUCTIONS

Before installing the new door onto your digital thermostat, you will need to attach one of the two operating instruction labels to the new door.

1. Determine the type of thermostat you have. If the two buttons on the far right of the thermostat look like **fig.1**, you will use the label numbered **153-7090**.  
If the two buttons on the far right of your thermostat look like **fig.2**, you will use the label numbered **153-7075**.
2. Place the thermostat door on a table and position it so that the recessed area is facing up, and the door is positioned as shown in fig. 3.
3. Peel the backing off the label you will use. Working from the upper edge, lay the label in place on the door. Gently wipe the label down to remove any air bubbles.
4. To install the door, insert the extruded dimples into the recesses located on the lower right and left edges of the thermostat (it may be necessary to bend the door slightly to fit it into place).

HOLD  
COPY

RUN  
PRGM

Figure 1

HOLD  
TEMP

ADV  
PRGM

Figure 2

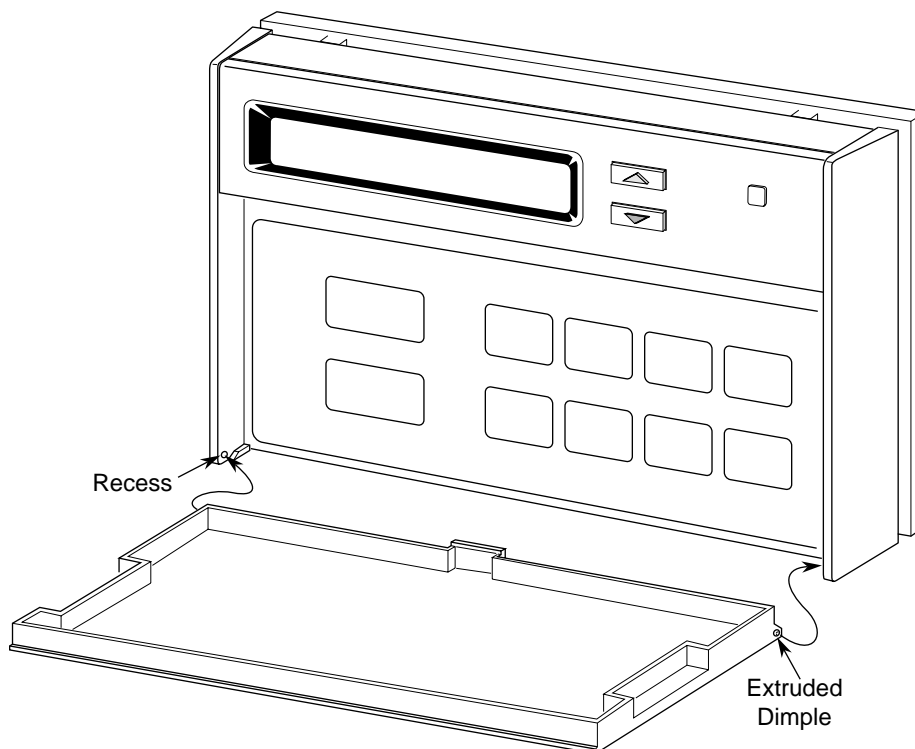


Figure 3. Install door



**WHITE-RODGERS DIVISION**  
EMERSON ELECTRIC CO.  
9797 REAVIS ROAD  
ST. LOUIS, MISSOURI 63123-5398

Printed in U.S.A.

**PART NO. 37-5161A**

9241

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>