


## INSTALLATION INSTRUCTIONS

### C-3190 SLIDE-OUT RADIO TRAY

#### 1996-2008 FORD CROWN VICTORIA

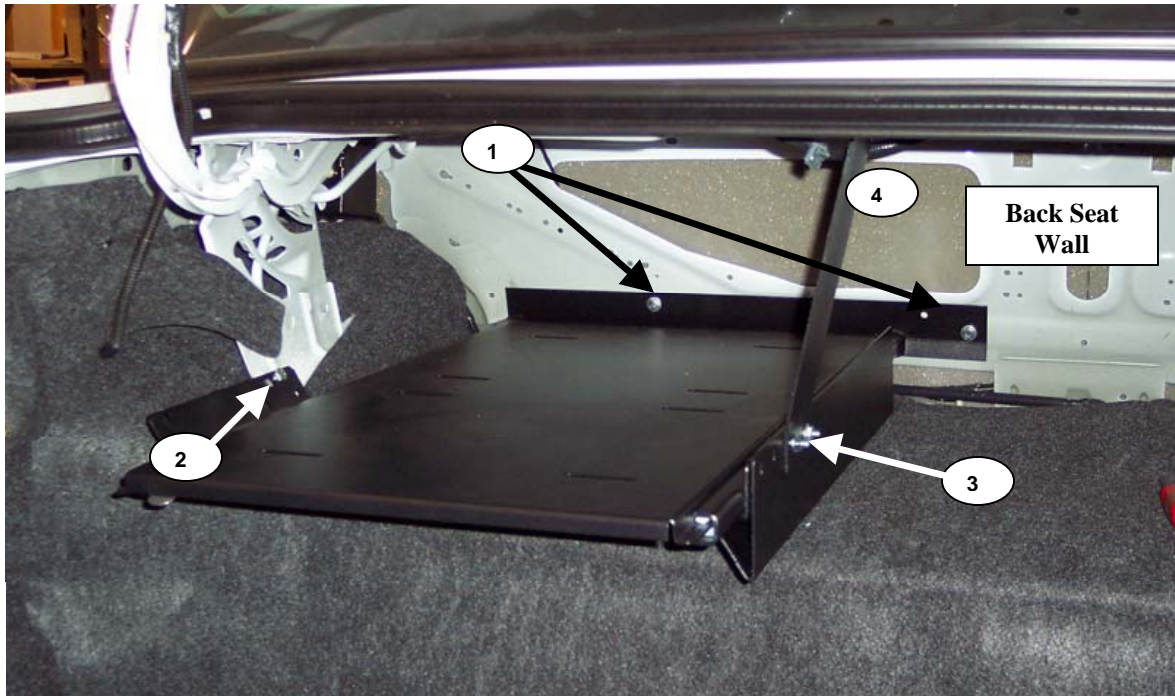

**Step 1.** Align forward radio shelf bracket with existing holes in front of trunk wall. Use 2 (two) 1/4" x 1" hex head cap screws, 2 (two) 1/4" flat washers and 2 (two) 1/4" flange nuts. Don't fully tighten bracket yet.

**Step 2.** Use a block of wood or a shim to level radio shelf. Drill 1/4" hole into trunk hinge, support base on driver's side. Fasten down shelf using 1 (one) 1/4" x 1" hex head cap screw, 1 (one) 1/4" flat washer, and 1 (one) 1/4" flange nut.

**Step 3.** Insert 2 (two) 1/4" x 1" hex head cap screws in shelf holes. Place bottom support bracket over hex head cap screws, then place hanger support bracket on top of bottom bracket. Place 2 (two) 1/4" flat washers and 2 (two) 1/4" flange nuts. 1998 Crown Vic: use pair of holes toward *front* of vehicle. For 1997 Crown Vic: use holes toward rear of vehicle.

**Step 4.** Using the support as a template, mark and drill two holes in upper deck. Bolt support bracket on with 1/4" x 1" hex head cap screws,

2 (two) 1/4" flat washers, and 1/4" flange nuts. Make sure shelf is level and tighten all hardware.

**Tools needed:** 7/16" wrench and socket, drill and 1/4" bit, level.

**Hardware Included:** 8 (eight) 1/4" x 1" screws, 8 (eight) 1/4" flange nuts, 8 (eight) 1/4" flat washers.

**Note:** Do not substitute hardware. Do not use self-tapping screws as they will vibrate loose.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>