

INSTALL INSTRUCTIONS C-3610-CV PENTAX PRINTER MOUNT '96-08 FORD CROWN VICTORIA

TOOLS REQUIRED:

Power Drill
Drill Bit Set

Phillips Screwdriver
Wire Crimping Tool

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
3	#10 X 1/2" Sheet metal screw	GSM33194
3	#10 X 3/4" Sheet metal screw	GSM33195
5	#8 X 3/8" Black torx screw	CM86508
1	#10 X 1/2" Machine screw	GSM33118


REMOVE:

- Using Phillips screw driver, remove existing inner plastic glove box assembly.
(Do not remove glove box door)

INSTALLATION:

1. Subassembly:

- Position printer housing inside glove box opening on left side. (Approximately 1" inch from side)
- Using the housing hinge as a template, mark the three mounting holes.
- The hinge rod should be above the glove box fame. This is critical to allow the glove box door to close.
- Drill (3) 9/64" holes

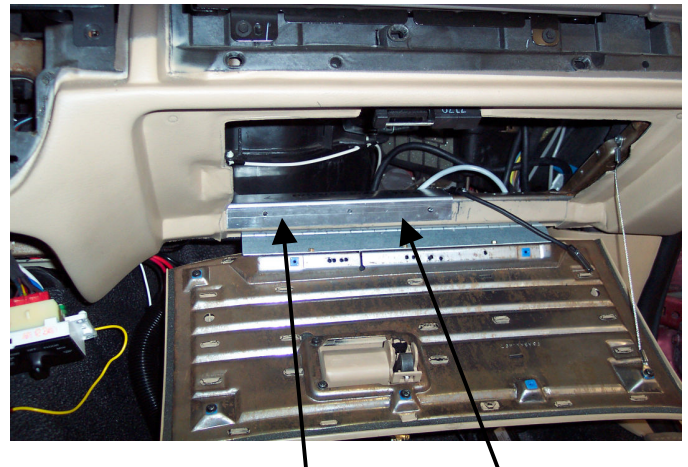

Housing Hinge Location

2. Glove box filler:

- The 2000 and newer model years requires a glove box door filler (CM93605).
- Attach this filler with (5) #8 X 3/8" Black torx screws.
- On vehicle model years 1996-1999 – remove glove box retractor.


Note: 1999 and older models do not get this filler.

3. Mount Printer Housing:

Note: Printer should Not be in the housing yet.

- Mount housing assembly using (3) #10 x 3/4" sheet metal screws.
(These screws go through the hinge and the holes you drilled in subassembly)

- Place latch “L” bracket on the glove box door – mark and drill a 5/32” pilot hole. (“L” bracket is attached to slide rail and can be accessed through opening in housing) Mount bracket using (1) #10 X ½” Sheet metal screw. Check and adjust slide rail bolt as needed.

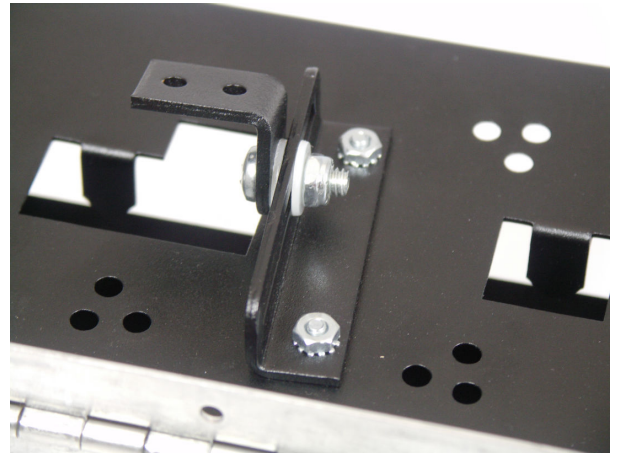


4. Pentax Printer:

- Put printer into housing.
- Plug in the power and data cable to printer.
- Run data cable to Monitor or CPU. (Depending on application)
- Run power and ground to a 12volt battery or ignition source.

Note: Be sure to fuse appropriately.



5. Glove box lanyard:

- Mount glove box lanyard (CM93606) to the glove box door. (see note)
- Open the glove box so the printer slide is approximately 95% open.
- Connect other end of lanyard to the doorframe with #10 X ½” Sheet metal screw.

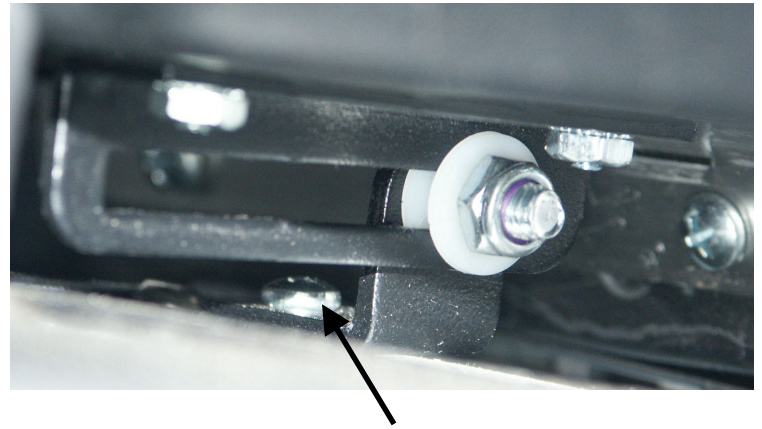

Mounting on glove box door

Note: 2000 and newer is attached to Glove Box filler with Machine Screw and 1999 and older is attached to glove box door with Sheet metal screw.

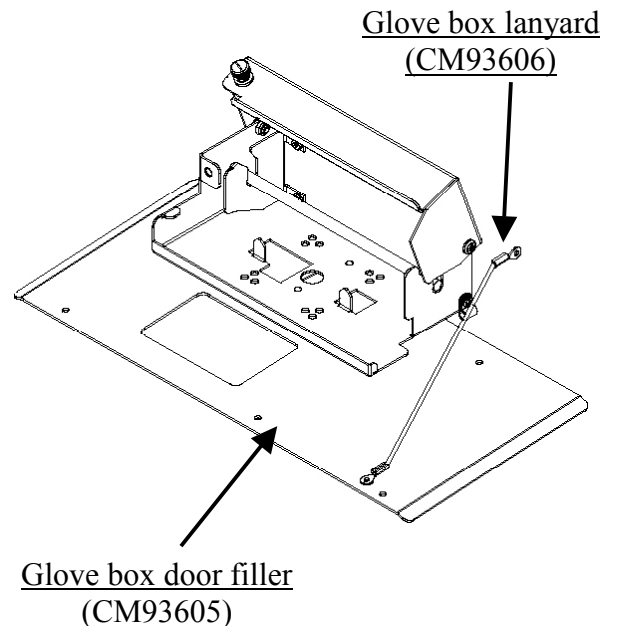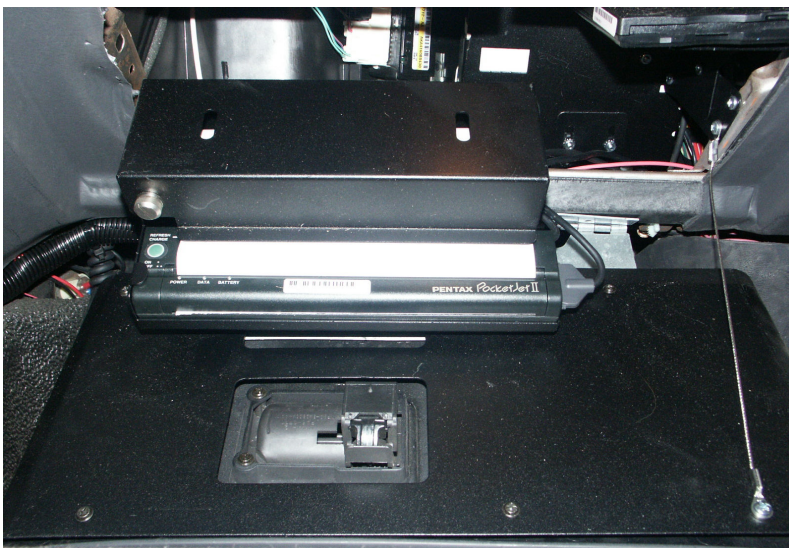

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>