

## INSTALLATION INSTRUCTIONS

### MODEL WBI-F7 INTERIOR WINDOW BAR KIT

### 1996-2007 FORD CROWN VICTORIA

**TOOLS REQUIRED:**

Eye Safety Goggles  
Power Drill


1/8" Drill Bit  
Phillips Screw Driver

**HARDWARE:**

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
12	#10 x 1/2" Flat head sheet metal screw	GSM33150
1	Driver Side Window guard	WBI-F7-1
1	Passenger Side Window guard	WBI-F7-6

**INSTALLATION:**

1. Open door and position the guard to contour the door panel and fit evenly around the window frame.
2. With guard positioned, mark the vehicles doorframe using the holes in the guard as a guide.
3. Remove window guard and drill the marked holes using an 1/8" drill bit.
4. Re-position the guard and attach to the doorframe using #10 x 1/2" flat head sheet metal screws.

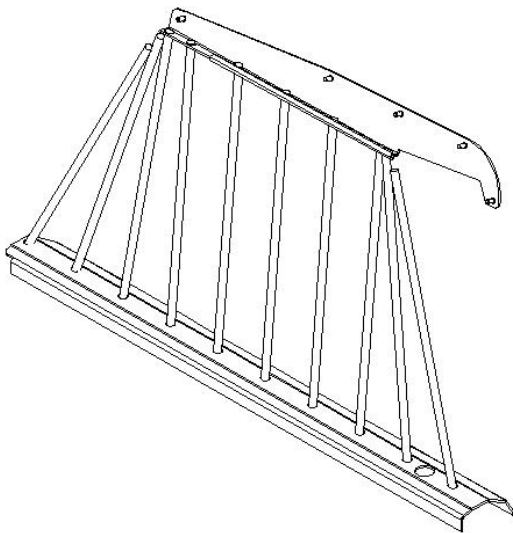

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>