

INSTALLATION INSTRUCTIONS

1997-2008 FORD EXPEDITION WGI-F14

INTERIOR WINDOW GUARDS

TOOLS REQUIRED:

Power drill	3/16" drill bit
Magic marker or pencil	Safety Goggles
Phillips screwdriver	Snips or cutter for plastic trim
1/8" drill bit	Ratchet wrench with 7/16" socket

HARDWARE FOR PASSENGER DOORS (WGI-F5-1 & WGI-F5-6):


18 #10 X 1/2" PFHSMs (undercut flat head) GSM34150

INSTALLATION PASSENGER DOOR WINDOW GUARDS (WGI-F5-1 & WGI-F5-6):

1. With the doors open, hold the window guard up to the window/door frame. The guard should fit evenly around the window frame.
2. Mark mounting hole locations.
3. Put on safety goggles
4. Drill holes as marked with a 1/8" drill bit.
5. Attach window guards by using #10 X 1/2" flat head sheet metal screws.

FORD EXPEDITION

WINDOW GUARD POSITIONS

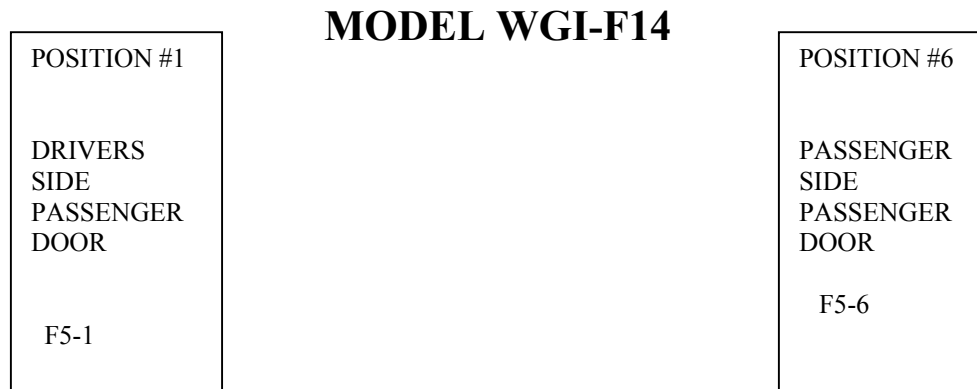

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>