

INSTALLATION INSTRUCTIONS P-REAR-2 REAR PARTITION w/ EXIT HATCH 1997-2008 FORD E-SERIES VANS

****WILL NOT WORK IN 2008 15 PASSENGER VAN (NO SPACE)****

TOOLS REQUIRED:


Power Drill	3/8" Socket Set
Drill Bit Set	Eye Protection
Ratcheting Wrench	

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
12	5/16" x 1 1/2" Hex Head Lag Bolt	GSM33066
2	1/4-20 x 1" Hex Head Bolt	GSM33002
2	1/4" Flat Washer	GSM31005
2	1/4-20 Serrated Nut	GSM30023
2	Top Mounting Brackets	HS-PA99008-1

1. INSTALLATION:

- Rear passenger seat will remain in place. There is very little space between seat and rear doors.
- Place and position partition w/ spring clips facing towards rear of vehicle.
- Partition must be pushed tight against seat in order to close doors.
- Drill 3/16" pilot holes into floor of vehicle.
- Bolt partition to vehicle using 5/16" x 1 1/2" Hex head lag bolts.
- Loosely bolt Top-mounting brackets to partition w/ (2) 1/4-20 x 1" Hex Head bolt, washer, and nut.
- Mark and pre-drill 3/16" pilot where bracket lands on vehicles rear door trim. Attach using (4) 5/16" x 1 1/2" Hex head lag bolts.
- Tighten all loose hardware

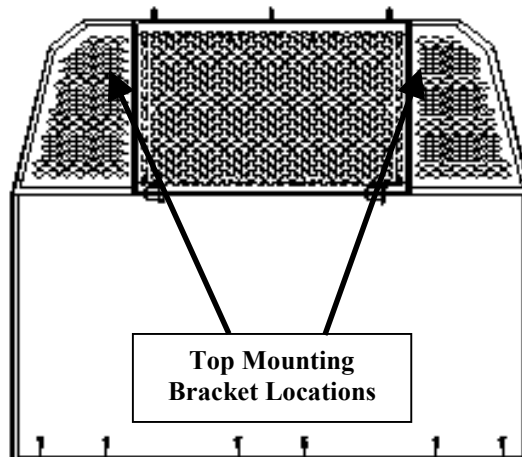

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>