

INSTALL INSTRUCTIONS

C-3330-800 MW-800 FIXED MONITOR MOUNT

1996-2006 FORD CROWN VICTORIA


TOOLS REQUIRED:

Power Drill
 Drill Bit Set – 1/8” through 3/8”
 3/8” and 1/4” Drive Standard And Metric
 Socket Sets W/6” Extensions
 3/8” and 1/4” Ratchets

Phillips and Standard screwdriver set
 Wire Cutters
 Wire Strippers
 Wire Crimping Tool
 Standard And Metric Wrench Sets

HARDWARE:

<u>QTY</u>	<u>DESCRIPTION</u>	<u>PART #</u>
6	#8 X 1 1/2” Black sheet metal screws	GSM33136
4	10-32 X 2 1/2” Machine screws	GSM33122
4	10-32 Keps nuts	GSM30028
2	#8 X 3/8” Black Torx screws	CM86508
4	10-32 x 1/2” Machine screws	GSM33118
4	#10 Flat washers	GSM31003
4	#10 Star washers	GSM31034

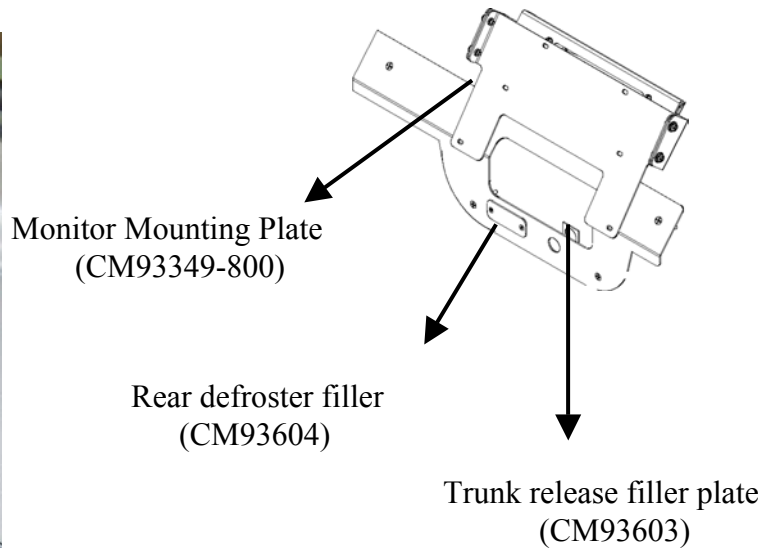

INSTALLATION:

A. DISASSEMBLE DASHBOARD:

1. Remove long dash trim. This is trim piece that contains trunk release and rear defroster switch.
2. Pull AM/FM radio, HVAC controls, and trunk release button.
3. Remove 7mm Hex Head Screws located above speedometer control, and below AM/FM Radio.

Note: This will ease installation of Monitor Mounting Bracket. Do not unplug HVAC controls. Lay HVAC controls gently on floor of car.

B. INSTALLING DASH MOUNT SUPPORT BRACKETS:

1. Run power and ground for monitor to factory heater control hole
2. Run large black data cable that connects monitor to CPU, to factory heater control hole.
3. Cut long dash trim panel to 22 3/8" (removed in step A.1.). Make sure cut is smooth and even and put back into place.
4. Remove (4) 7mm hex head sheet metal screws from dash panel.
5. Mount Monitor Dash Bracket using (6) #8 X 1 1/2" Black sheet metal screws.
6. Mount attached clamps using (4) attached 10-32 X 2 1/2" machine screws and (4) 10-32 Keps nuts.
7. Support the main part of plate w/ sheet metal screws prior to mounting the clamps. Be sure that these screws are flush to dashboard.

Note: Pull cables through bottom hole in Monitor dash bracket.

8. Position trunk release filler plate (CM93603) behind Monitor dash bracket where trunk release hole is located.
9. Push trunk release switch through hole.

Note: Make sure trunk release catches filler plate.

10. Plug in trunk release wires: On 1997-1999 model years attach Rear Defroster filler plate (CM93604) w/ (2) #8 X 3/8" Black Torx Screws. On year 2000 and newer mount the rear defroster switch and connect wire plug.
11. Mount monitor to Monitor Mounting Plate (CM93349-800) using Motorola Monitor hardware (6) 4mm-0.7x6mm Metric machine screws. Set monitor aside for now.
12. Plug in power cable and Data cable. Mount monitor to dash bracket w/ (4) 10-32 x 1/2" Machine screws, (4) #10 flat washers, and (4) #10 star washers.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>