# TAMERICA'S FAVORITE ER

### Hearthview (864) Wilmington Face

Pewter 99300495 Black 99300496

#### Compatibility:

- 864TRV Fireplace
- 864ST Fireplace
- 864HO Fireplace

#### **Packing List:**


- Face
- Glass Frame Cover
- Aromatherapy Bracket
- Face Baffle
- (2) Upper Face Brackets (w screws attached)
- (4) Fireplace Brackets (upper and lower)
- (16) Nuts (for Face Brackets & Aromatherapy Bracket))
- (2) 10-24 1-1/2" Screws

#### **Aromatherapy Option**

**NOTE**: Aromatherapy option is not compatible with the 864HO.

This face is compatible with the aromatherapy tray (sku 98500385) on the 864ST and 864TRV. If using this option, make the necessary modifications to the face prior to installing the face (see page 7 of this instruction sheet for details).

#### **Installation Details**

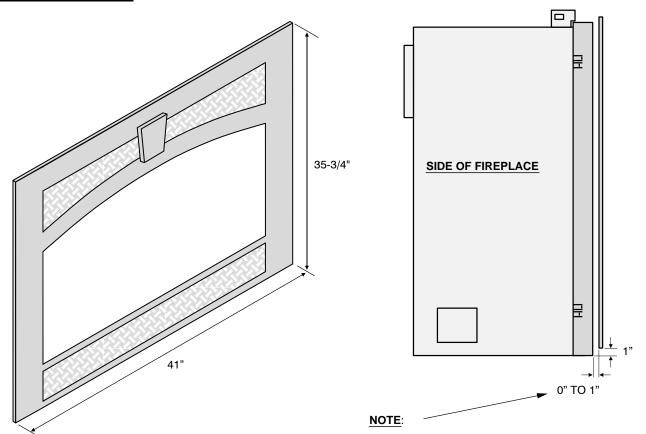

This face has an adjustable bracket that allows for different facing depths to be tucked under the face.

Page 1 of 10 17601408 - 8/31/10 © Travis Industries, Inc.

# PARERICA'S FAVORITE ERE


### Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496


#### **Special Instructions for 864HO Fireplaces**

The Wilmington face requires the outer grill deflectors to be removed to allow for installation of the face mounting brackets. Once the brackets are installed, replace the deflectors. See the instructions below.

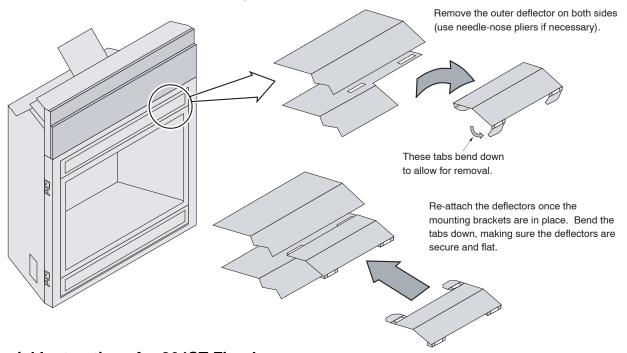

### **Special Instructions for 864ST Fireplaces**

The Wilmington face requires removal of the center deflector prior to installing the face. **NOTE**: This deflector must be replaced to its original position if a different face or grill is used.

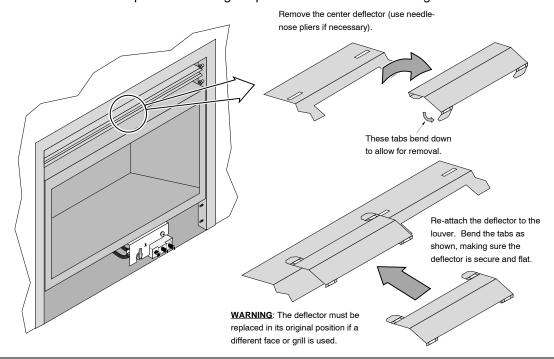

Page 2 of 10 17601408 - 8/31/10 © Travis Industries, Inc.

# PANERICA'S FAVORITE FRE


## Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496

### **Installation**

1 Install the fireplace brackets onto the fireplace following the directions below.

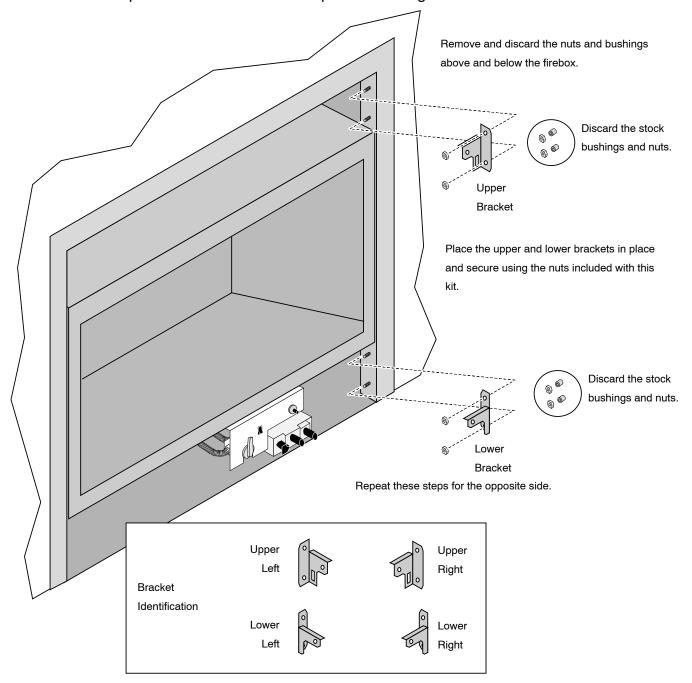

Page 3 of 10 17601408 - 8/31/10 © Travis Industries, Inc.

## Sopi.


## Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496

### 2 Install the glass frame cover following the directions below.

Place the cover over the top of the door frame.

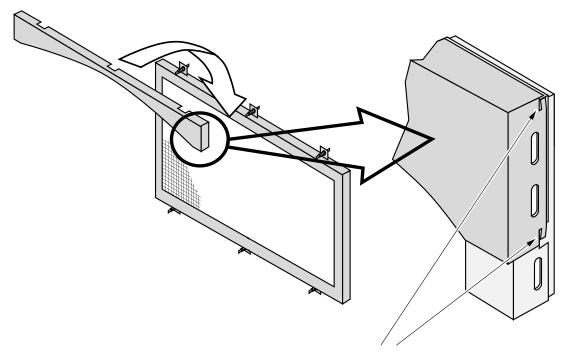

Push these pins inwards to lock the cover in place.


## PARRICA'S FAVORITE FRE

## Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496

3 Attach the face baffle and face brackets following the directions below.

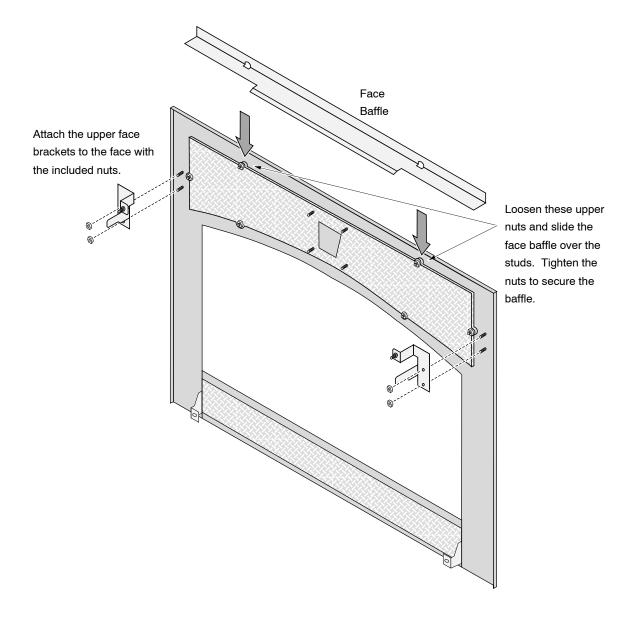

Page 5 of 10 17601408 - 8/31/10 © Travis Industries, Inc.


## Zopi.

### Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496

4 Install the face following the directions below.

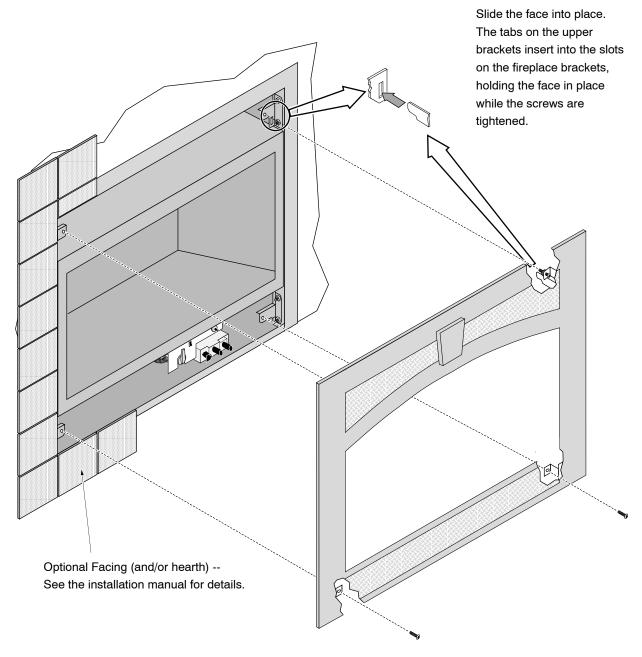

### **Plated Surfaces**

Use denatured alcohol and a soft cloth to clean plated surfaces. Marks left on the surface may damage the face.



Page 6 of 10

17601408 - 8/31/10

© Travis Industries, Inc.

# PANERICA'S FAVORITE FRA

### Hearthview (864) Wilmington Face

Pewter 99300495


Black 99300496

### **Aromatherapy Option - Modification Details**


The instructions below details preparation of the aromatherapy tray and the installation of the extension. Refer to the aromatherapy kit for details on use of this kit.

1 Prepare the aromatherapy bracket following the directions below.

Bend these clips on the aromatherapy bracket up.

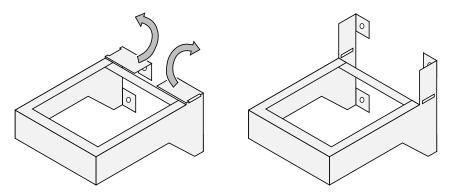

2 Attach the aromatherapy bracket to the back of the face following the directions below.

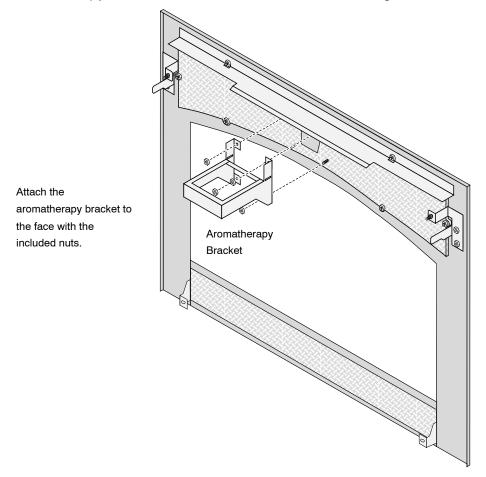

Page 7 of 10 17601408 - 8/31/10 © Travis Industries, Inc.


## Sopi

### Hearthview (864) Wilmington Face


Pewter 99300495

Black 99300496

3 Remove the keystone and discard the retainer plate following the directions below.

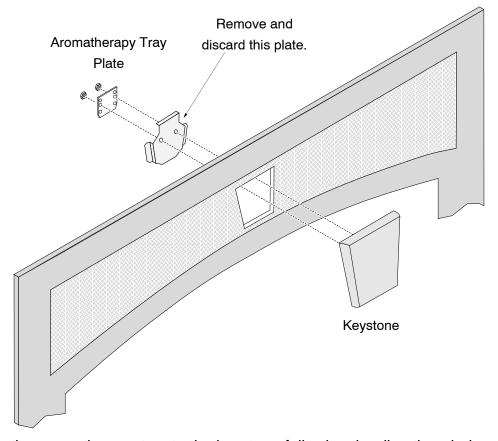

4 Attach the aromatherapy tray to the keystone following the directions below.

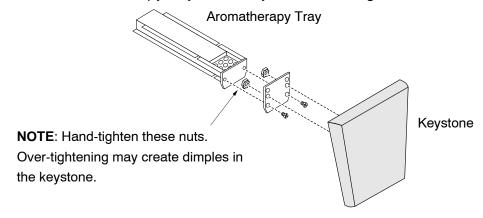




## Hearthview (864) Wilmington Face

Pewter 99300495 Black 99300496

5 Attach the extension assembly following the directions below.

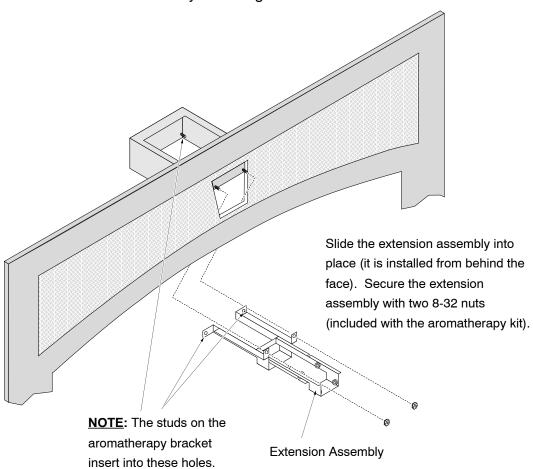


## PAMERICA'S FAVORITE ER

### Hearthview (864) Wilmington Face

Pewter 99300495

Black 99300496

6 Slide the tray into the extension assembly following the directions below.

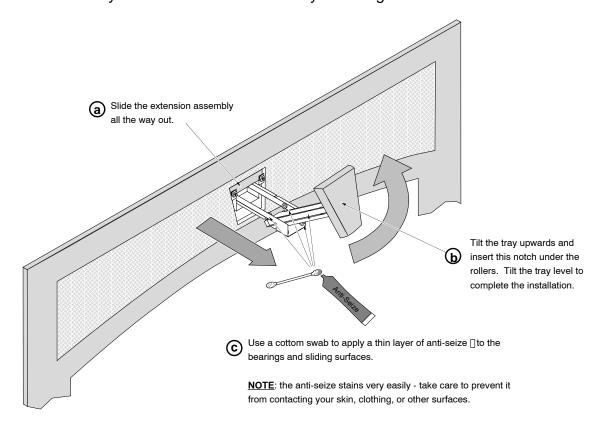

#### **INSTALLATION NOTE:**

The aromatherapy bracket comes in close proximity to the upper center glass latch. When installing the face, position the bracket above the glass latch.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com