

USER'S MANUAL

PMB-601LF

**Intel® Core 2 Duo
ATX Motherboard
With VGA/Sound/2LAN**

PMB-601LF M1

***PMB-601LF Intel® Core 2 Duo
ATX Motherboard
With VGA/ Sound/ 2LAN***

OPERATION MANUAL

COPYRIGHT NOTICE

This operation manual is meant to assist both Embedded Computer manufacturers and end users in installing and setting up the system. The information contained in this document is subject to change without any notice.

This manual is copyrighted in January, 2007. You may not reproduce or transmit in any form or by any means, electronic, or mechanical, including photocopying and recording.

ACKNOWLEDGEMENTS

All trademarks and registered trademarks mentioned herein are the property of their respective owners.

CE NOTICE

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

You are cautioned that any change or modifications to the equipment not expressly approve by the party responsible for compliance could void your authority to operate such equipment.

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION

1-1	About This Manual	1-2
1-2	System Specification	1-3
1-3	Safety Precautions	1-6

CHAPTER 2 HARDWARE CONFIGURATION

2-1	Jumper & Connector Quick Reference Table	2-2
2-2	Component Locations	2-3
2-3	How to Set the Jumpers	2-4
2-4	COM Port Connector	2-6
2-5	COM3 RI & Voltage Selection	2-8
2-6	COM4 RI & Voltage Selection	2-9
2-7	RS232/422/485(COM2) Selection	2-10
2-8	Keyboard and PS/2 Mouse Connector	2-11
2-9	Reset Connector	2-11
2-10	Hard Disk Drive LED Connector	2-12
2-11	ATX Power Button	2-12
2-12	External Speaker Connector	2-12
2-13	PLED Connector	2-13
2-14	KeyLock Connector	2-13
2-15	External SMI Connector	2-13
2-16	Clear CMOS Data Selection	2-14
2-17	CPU Fan Connector	2-14
2-18	System Fan Connector	2-15
2-19	Power Fan Connector	2-15
2-20	NB Fan Connector	2-15
2-21	VGA Connector	2-16
2-22	Serial ATA Connector	2-17
2-23	Floppy Disk Drive Connector	2-19
2-24	Printer Connector	2-20
2-25	Universal Serial Bus Connector	2-21
2-26	IrDA Connector	2-22
2-27	USB & LAN Connector	2-23
2-28	ATX Power Connector	2-25
2-29	Sound Connector	2-26
2-30	CD Audio-In Connector	2-27
2-31	Memory Installation	2-27

CHAPTER 3 SOFTWARE UTILITIES

3-1	Introduction	3-2
3-2	VGA Driver Utility	3-3
3-3	Flash BIOS Update	3-4
3-4	LAN Driver Utility	3-6
3-5	Sound Driver Utility	3-7
3-6	Intel Chipset Software Installation Utility	3-8
3-7	USB2.0 Software Installation Utility	3-9
3-8	Watchdog Timer Configuration	3-10

CHAPTER 4 AWARD BIOS SETUP

4-1	Introduction	4-2
4-2	Entering Setup	4-3
4-3	The Standard CMOS Features	4-4
4-4	The Advanced BIOS Features	4-8
4-5	Advanced Chipset Features	4-12
4-6	Integrated Peripherals	4-14
4-7	Power Management Setup	4-19
4-8	PNP/PCI Configuration	4-21
4-9	PC Health Status	4-23
4-10	Frequency Control	4-24
4-11	Load Fail-Safe Defaults	4-25
4-12	Load Optimized Defaults	4-25
4-13	Password Setting	4-26
4-14	Save & Exit Setup	4-27
4-15	Exit Without Saving	4-28


APPENDIX A EXPANSION BUS

PCI Bus Pin Assignment	A-2
------------------------------	-----

APPENDIX B TECHNICAL SUMMARY

Block Diagram	B-2
Interrupt Map	B-3
RTC & CMOS RAM Map	B-4
Timer & DMA Channels Map	B-5
I/O & Memory Map	B-6

INTRODUCTION

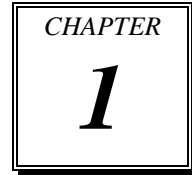

This chapter gives you the information for PMB-601LF. It also outlines the System specifications.

Section includes:

- About This Manual
- System Specifications
- Safety Precautions

Experienced users can skip to chapter 2 on page 2-1 for a Quick Start.

1-1. ABOUT THIS MANUAL

Thank you for purchasing our PMB-601LF Intel® Core 2 Duo ATX Motherboard enhanced with VGA/Sound/2LAN, which is fully PC / AT compatible. The PMB-601LF provides faster processing speed, greater expandability and can handle more tasks than before. This manual is designed to assist you how to install and set up the system. It contains four chapters. The user can apply this manual for configuration according to the following chapters:

Chapter 1 Introduction

This chapter introduces you to the background of this manual, and the specifications for this system. The final page of this chapter will indicate how to avoid damaging this board.

Chapter 2 Hardware Configuration

This chapter outlines the component locations and their functions. In the end of this chapter, you will learn how to set jumper and how to configure this card to meet your own needs.

Chapter 3 Software Utilities

This chapter contains helpful information for proper installations of the VGA utility, LAN utility, Sound utility, and Flash BIOS Update. It also describes the Watchdog-timer configuration.

Chapter 4 Award BIOS Setup

This chapter indicates you how to set up the BIOS configurations.

Appendix A Expansion Bus

This Appendix introduces you the expansion bus for 1 x PCI-E16 BUS, 1 x PCI-E4 BUS, 4 x PCI Bus and 1 x ISA BUS.

Appendix B Technical Summary

This section gives you the information about the Technical maps.

1-2. SYSTEM SPECIFICATIONS

- **CPU (mPGA775):**

- Intel® Celeron®-D, Pentium® 4, Pentium®-D, Core 2 Duo processor in mPGA775 Socket.

- 2.8~3.8 GHz clock generator for Pentium 4

- 1.86~2.66GHz clock generator for Core 2 Duo

- Front Side Bus 533/667/800/1066 MHZ.

- Auto detect voltage regulator.

- **CHIPSET :**

- Intel Q965 + ICH8DO+FWH

- **MEMORY :**

- Supports up to 8GB DDR SDRAM.

- Four 240-pin DDR2 DIMM sockets on board.

- **CACHE :**

- Built-in CPU.

- **REAL-TIME CLOCK :**

- Build in South Bridge.

- **BIOS :**

- Phoenix-AwardBIOS™ for plug & play function.

- 8Mb with VGA BIOS.

- Easy update 1MB flash EEPROM.

- Support S/IO Setup.

- **KEYBOARD CONNECTOR :**

- Mini DIN connector.

- Supports for AT/PS2 keyboard.

- **MOUSE CONNECTOR :**

- Mini DIN connector.

- Supports for PS/2 Mouse.

- **BUS SUPPORT :**

- 1 PCI-E16 Slot, support Graphic Card

- 1 PCI-E4 Slots, support I/O card

- 4 PCI Slots

1 ISA Slot

● **DISPLAY :**

Built-in Intel Q965, support for CRT.
Onboard 15-pin VGA D-SUB connector, support for resolution on SVGA Monitor.

● **SATA INTERFACE :**

6 SATA ports, support RAID 0,1,5,10.

● **SERIAL PORT :**

Four serial connectors.
COM1/3/4 for RS-232, COM2 for RS-232/422/485.
COM3/4 can output +5V or +12V, and use jumper settings.

● **FLOPPY DISK DRIVER INTERFACE :**

Support up to two Floppy Disk Drives, 3.5" and 5.25" (360K / 720K / 1.2M / 1.44M / 2.88M).

● **USB CONNECTOR :**

Support up to ten USB 2.0 ports.
4 ports with LAN1/ LAN2 on rear panel.
6 ports with external 2.54 connector 2x5-pin headpin.

● **LAN ADAPTER :**

Dual ports, Intel® 82573V x 2, 10/100/1000 BaseT Ethernet.
LAN1: 10/100/1000 BaseT Ethernet
LAN2: 10/100/1000 BaseT Ethernet
Support wake-on-LAN function.

● **SOUND :**

Realtek ALC262A (HD Codec), including SPDIF.
Fully Compliant HD Analog I/O Component
16-Bit Stereo Full-Duplex Codec
Four Analog Line-level Stereo Inputs for Connection.
High Quality CD Input with Ground Sense
Stereo Line-Level Output
Interface: Line-In, Line-Out, Microphone, and CD Audio-In.

● **HARDWARE MONITORING FUNCTION :**

Monitor Voltage, CPU temperature, & Cooling fan.

If CPU Temperature is over setting, the buzzer will send out a warning (only under DOS system).

● **IRDA PORT :**

5-pin Infrared port, support IrDA v1.0 SIR protocol

● **PARALLEL PORT :**

SPP / ECP / EPP Function.

1 port, bi-directional parallel port.

● **GREEN FUNCTION :**

Controlled by hardware and software.

● **LED INDICATOR :**

System power

Hard Disk access (SATA)

● **DMA CONTROLLER :**

82C37 x 2

● **DMA CHANNELS :**

7

● **INTERRUPT CONTROLLERS :**

82C59 x 2

● **INTERRUPT LEVELS :**

15

● **OPERATING TEMPERATURE :**

0 to 60°C.

● **BOARD DIMENSIONS :**

305mm x 344mm, 12" x9.61"

● **BOARD NET WEIGHT :**

810 gram.

1-3. SAFETY PRECAUTIONS

Follow the messages below to avoid your systems from damage:

1. Keep your system away from static electricity on all occasions.
2. Prevent electric shock. Don't touch any components of this card when the card is power-on. Always disconnect power when the system is not in use.
3. Disconnect power when you change any hardware devices. For instance, when you connect a jumper or install any cards, a surge of power may damage the electronic components or the whole system.

HARDWARE CONFIGURATION

CHAPTER

2

**** *QUICK START* ****

Helpful information describes the jumper & connector settings, and component locations.


Section includes:

- Jumper & Connector Quick Reference Table
- Component Locations
- Configuration and Jumper settings
- Connector's Pin Assignments

2-1. JUMPER & CONNECTOR QUICK REFERENCE TABLE

COM Port Connector	COM1, COM2 COM3, COM4
COM3 Port RI/Voltage Selection	JP6
COM4 Port RI/Voltage Selection	JP7
RS232/422/485 (COM2) Selection	JP5
Keyboard/Mouse Connector	KB_MS1
Reset Connector	JP8 (5, 7)
Hard Disk Drive LED Connector	JP8 (1, 3)
ATX Power Button	JP8 (6, 8)
External Speaker Connector	JP8 (14, 16, 18, 20)
PLED Connector	JP8 (2, 4)
KeyLock Connector	JP8 (13, 15)
External SMI Connector	JP8 (17, 19)
Clear CMOS Data Selection	JP4
CPU Fan Connector	CPU_FAN1
System Fan Connector	SYS_FAN1
Power Fan Connector	PWR_FAN1
NB Fan Connector	NB_FAN1
VGA Connector	VGA1
Serial ATA Connector	SATA1, SATA2, SATA3, SATA4
Floppy Disk Drive Connector	FDD1
Printer Connector	LPT1
Universal Serial Bus Connector	USB1, USB2, USB3
IrDA Connector	JP1
USB&LAN Connector	USB_RJG1, USB_RJG2
ATX Power Connector	ATX_PWR1, ATX_PWR2
Sound Connector	JAUDIO1
CD Audio-In Connector	CD_IN1
Memory Installation	DIMM1, DIMM2, DIMM3, DIMM4

2-2. COMPONENT LOCATIONS

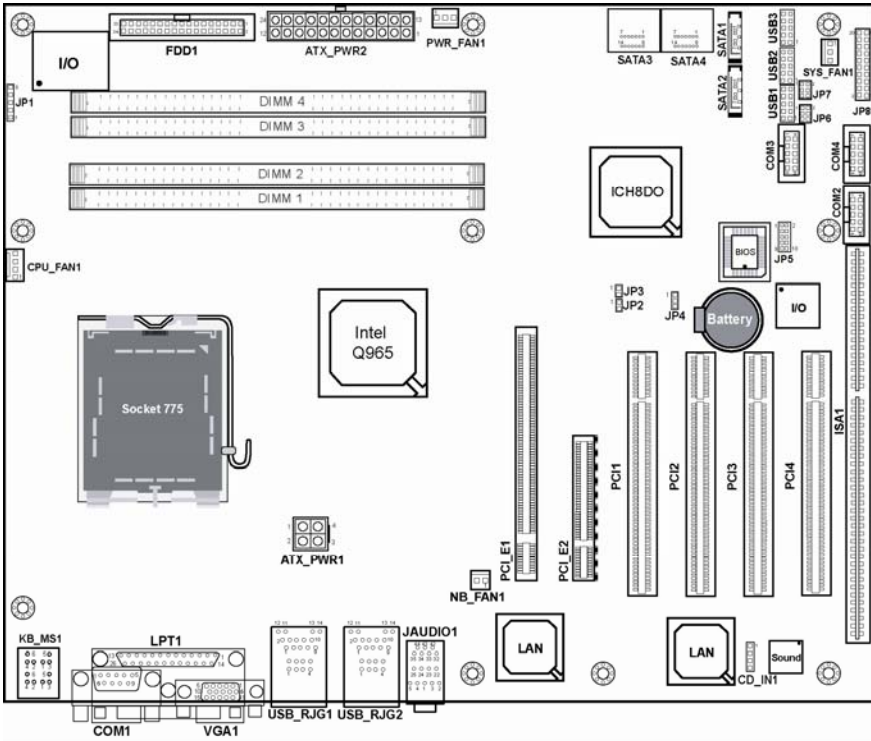


PMB-601LF Connector, Jumper and Component locations

2-3. HOW TO SET THE JUMPERS

You can configure your board by setting jumpers. Jumper is consists of two or three metal pins with a plastic base mounted on the card, and by using a small plastic "cap", Also known as the jumper cap (with a metal contact inside), you are able to connect the pins. So you can set-up your hardware configuration by "open" or "close" pins.

The jumper can be combined into sets that called jumper blocks. When the jumpers are all in the block, you have to put them together to set up the hardware configuration. The figure below shows how this looks like.

JUMPERS AND CAPS

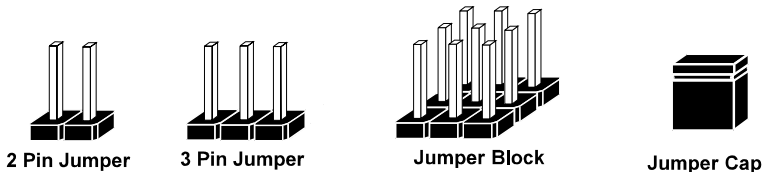

If a jumper has three pins (for examples, labelled PIN1, PIN2, and PIN3), You can connect PIN1 & PIN2 to create one setting by shorting. You can either connect PIN2 & PIN3 to create another setting. The same jumper diagrams are applied all through this manual. The figure below shows what the manual diagrams look and what they represent.


JUMPER DIAGRAMS




Jumper Cap
looks like this




2 pin Jumper
looks like this



3 pin Jumper
looks like this

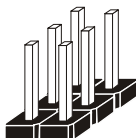

Jumper Block
looks like this



JUMPER SETTINGS



2 pin Jumper close(enabled)
Looks like this



1




3 pin Jumper
2-3 pin close(enabled)
Looks like this



1



Jumper Block
1-2 pin close(enabled)
Looks like this



1 2


2-4. COM PORT CONNECTOR

COM1 : COM1 Connector

COM1 is fixed as RS-232.

The pin assignment is as follows :

PIN	ASSIGNMENT
1	COM1_DCD#
2	COM1_RX
3	COM1_TX
4	COM1_DTR#
5	GND
6	COM1_DSR#
7	COM1_RTS#
8	COM1_CTS#
9	COM1_RI#

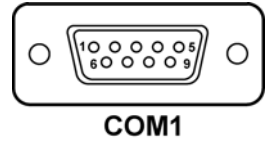


COM2 : COM2 Connector

The COM2 is selectable as RS-232/422/485.

The pin assignment is as follows :

PIN	ASSIGNMENT		
	RS-232	RS-422	RS-485
1	COM2_DCD#	TX-	TX-
2	COM2_RX	TX+	TX+
3	COM2_TX	RX+	RX+
4	COM2_DTR#	RX-	RX-
5	GND	GND	GND
6	COM2_DSR#	RTS-	GND
7	COM2_RTS#	RTS+	GND
8	COM2_CTS#	CTS+	GND
9	COM2_RI#	CTS-	GND

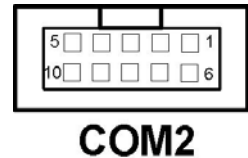


COM3 : COM3 Connector

COM3 is fixed as RS-232.

The pin assignment is as follows :

PIN	ASSIGNMENT
1	COM3_DCD#
2	COM3_RX
3	COM3_TX
4	COM3_DTR#
5	GND
6	COM3_DSR#
7	COM3_RTS#
8	COM3_CTS#
9	COM3_RI#




COM3

COM4 : COM4 Connector

COM4 is fixed as RS-232.

The pin assignment is as follows :

PIN	ASSIGNMENT
1	COM4_DCD#
2	COM4_RX
3	COM4_TX
4	COM4_DTR#
5	GND
6	COM4_DSR#
7	COM4_RTS#
8	COM4_CTS#
9	COM4_RI#






COM4

2-5. COM3 RI & VOLTAGE SELECTION

JP6 : COM3 RI & Voltage Selection

The selections are as follows:

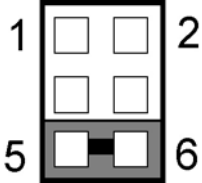
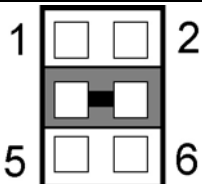
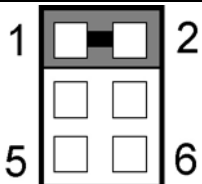
SELECTION	JUMPER SETTINGS	JUMPER ILLUSTRATION
5V	5-6	 <p>JP6</p>
12V	3-4	 <p>JP6</p>
RI	1-2	 <p>JP6</p>

***Manufacturing Default -- RI.

2-6. COM4 RI & VOLTAGE SELECTION

JP7 : COM4 RI & Voltage Selection

The selections are as follows:

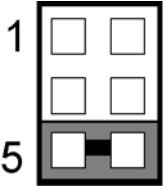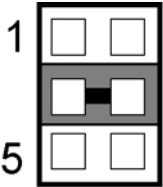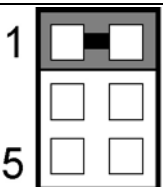SELECTION	JUMPER SETTINGS	JUMPER ILLUSTRATION
5V	5-6	 <p>JP7</p>
12V	3-4	 <p>JP7</p>
RI	1-2	 <p>JP7</p>

***Manufacturing Default -- RI.

2-7. RS232/422/485 (COM2) SELECTION

JP5 : RS-232/422/485 (COM2) Selection

This connector is used to set the COM2 function.

The jumper settings are as follows :

COM 2 Function	Jumper Settings (pin closed)	Jumper Illustrations
RS-232	All Open	<p>JP5</p>
RS-422	1-2, 3-4, 9-10	<p>JP5</p>
RS-485	1-2, 5-6, 7-8	<p>JP5</p>


*** Manufacturing default -- RS-232.

2-8. KEYBOARD AND PS/2 MOUSE CONNECTOR

KB_MS1 : Keyboard and PS/2 Mouse Connector

The pin assignments are as follows :

PIN	ASSIGNMENT
1	KBDATA
2	NC
3	GND
4	VCC5
5	KBCLK
6	NC
7	MSDATA
8	NC
9	GND
10	VCC5
11	MSCLK
12	NC

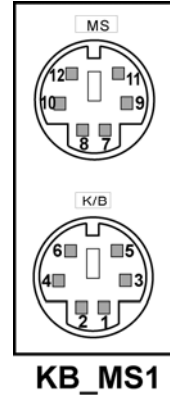


2-9. RESET CONNECTOR

JP8 (5, 7) : Reset Connector.

The pin assignment is as follows :


PIN	ASSIGNMENT
5	GND
7	RST_BTN



2-10. HARD DISK DRIVE LED CONNECTOR

JP8 (1, 3) : Hard Disk Drive LED Connector
The pin assignment is as follows :


PIN	ASSIGNMENT
1	HD_LED+
3	HD_LED-



2-11. ATX POWER BUTTON

JP8 (6, 8) : ATX Power Button
The pin assignment is as follows :

PIN	ASSIGNMENT
6	PWRBTNSW
8	GND



2-12. EXTERNAL SPEAKER CONNECTOR

JP8 (14, 16, 18, 20) : External Speaker Connector
The pin assignment is as follows :

PIN	ASSIGNMENT
14	SPK_VCC
16	SPEAKER SIGNAL
18	SPEAKER SIGNAL
20	SPEAKER SIGNAL




2-13. PLED CONNECTOR

JP8 (2, 4) : PLED Connector

The pin assignment is as follows:

PIN	ASSIGNMENT
2	PW_LED+
4	PW_LED-




2-14. KEYLOCK CONNECTOR

JP8 (13, 15) : Keylock Connector

The pin assignment is as follows:

PIN	ASSIGNMENT
13	KEYLOCK
15	GND



2-15. EXTERNAL SMI CONNECTOR

JP8 (17,19) : External SMI Connector

The pin assignment is as follows:



PIN	ASSIGNMENT
17	SLP_BTN
19	GND



2-16. CLEAR CMOS DATA SELECTION

JP4 : Clear CMOS Data Selection

The selections are as follows :

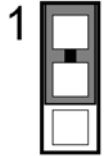FUNCTION	JUMPER SETTING (pin closed)	JUMPER ILLUSTRATION
Normal	1-2	 <p>1</p> <p>JP4</p>
Clear CMOS	2-3	 <p>1</p> <p>JP4</p>

*** Manufacturing Default -- Normal.


Note: To clear CMOS data, user must power-off the computer and set the jumper to "Clear CMOS" as illustrated above. After five to six seconds, set the jumper back to "Normal" and power-on the computer.

2-17. CPU FAN CONNECTOR

CPU_FAN1 : CPU Fan connector

The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	VCC12
3	LPC1_FANIO1
4	LPC1_FANPWM1

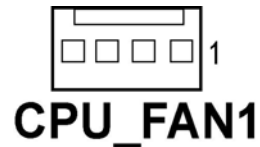

2-18. SYSTEM FAN CONNECTOR

SYS_FAN1 : System Fan connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	VCC12
3	LPC1_FANIO2



2-19. POWER FAN CONNECTOR

PWR_FAN1 : Power Fan connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	VCC12
3	LPC1_FANIO3



2-20. NB FAN CONNECTOR


NB_FAN1 : North Bridge Fan connector
The pin assignment is as follows:

PIN	ASSIGNMENT
1	GND
2	VCC12



2-21. VGA CONNECTOR

VGA1: VGA Connector

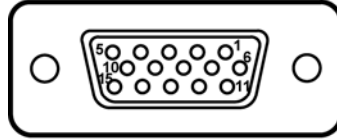

VGA1


PIN	ASSIGNMENT
1	RED
2	GREEN
3	BLUE
4	NC
5	GND
6	GND
7	GND
8	GND
9	VCC
10	GND
11	NC
12	DATA
13	HSYNC
14	VSYNC
15	CLK

2-22. SERIAL ATA CONNECTOR

SATA1~SATA4: The PMB-601LF possesses four Serial ATA Connector, SATA1~SATA4. The pin assignments are as follows:


SATA1:

PIN	ASSIGNMENT
1	GND
2	SATA_TXPC4
3	SATA_TXNC4
4	GND
5	SATA_RXNC4
6	SATA_RXPC4
7	GND

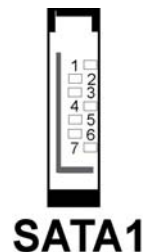


SATA2:

PIN	ASSIGNMENT
1	GND
2	SATA_TXPC5
3	SATA_TXNC5
4	GND
5	SATA_RXNC5
6	SATA_RXPC5
7	GND

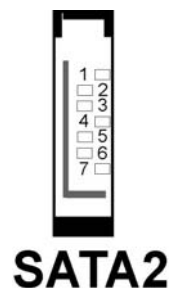

SATA3:


PIN	ASSIGNMENT
1	GND
2	SATA_TXPC0
3	SATA_TXNC0
4	GND
5	SATA_RXNC0
6	SATA_RXPC0
7	GND
8	GND
9	SATA_TXPC1
10	SATA_TXNC1
11	GND
12	SATA_RXNC1
13	SATA_RXPC1
14	GND

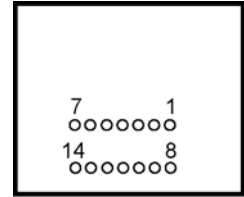

SATA3

SATA4:

PIN	ASSIGNMENT
1	GND
2	SATA_TXPC2
3	SATA_TXNC2
4	GND
5	SATA_RXNC2
6	SATA_RXPC2
7	GND
8	GND
9	SATA_TXPC3
10	SATA-TXNC3
11	GND
12	SATA_RXNC3
13	SATA_RXPC3
14	GND

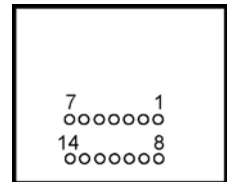


SATA4

2-23. FLOPPY DISK DRIVE CONNECTOR

FDD1 : Floppy Disk Drive Connector

You can use a 34-pin daisy-chain cable to connect two-FDDs. On one end of this cable is a 34-pin flat cable to attach the FDD on the board, and the other side is attaches two FDDs.

The pin assignments are as follows :



FDD1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	GND	2	F_DENSEL#
3	GND	4	NC
5	GND	6	NC
7	GND	8	F_INDEX#
9	GND	10	F_MTRA#
11	GND	12	F_DRVB#
13	GND	14	F_DRVA#
15	GND	16	F_MTRB#
17	GND	18	F_DIR#
19	GND	20	F_STEP#
21	GND	22	F_WDATA#
23	GND	24	F_WGATE#
25	GND	26	F_TRK0#
27	GND	28	F_WPT#
29	GND	30	F_RDATA#
31	GND	32	F_HDSEL#
33	GND	34	F_DSKCHG#

2-24. PRINTER CONNECTOR

LPT1: Printer Connector

As to link the Printer to the card, you need a cable to connect both DB25 connector and parallel port.

The pin assignments are as follows :



LPT1


PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	STB	14	AFD#
2	PDR0	15	ERR#
3	PDR1	16	INIT#
4	PDR2	17	SLIN#
5	PDR3	18	GND
6	PDR4	19	GND
7	PDR5	20	GND
8	PDR6	21	GND
9	PDR7	22	GND
10	ACK#	23	GND
11	BUSY	24	GND
12	PE	25	GND
13	SLCT	26	NC

2-25. UNIVERSAL SERIAL BUS CONNECTOR

USB1: Universal Serial Bus Connector

The pin assignments are as follows:


PIN	ASSIGNMENT
1	USB4_VCC5
2	USBN8
3	USBP8
4	GND
5	NC
6	USB4_VCC5
7	USBN9
8	USBP9
9	GND
10	NC

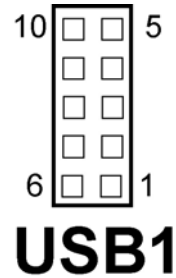

USB2: Universal Serial Bus Connector

The pin assignments are as follows:


PIN	ASSIGNMENT
1	USB3_VCC5
2	USBN6
3	USBP6
4	GND
5	NC
6	USB3_VCC5
7	USBN7
8	USBP7
9	GND
10	NC

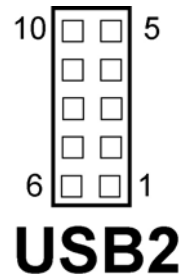

USB3: Universal Serial Bus Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	USB2_VCC5
2	USBN4
3	USBP4
4	GND
5	NC
6	USB2_VCC5
7	USBN5
8	USBP5
9	GND
10	NC

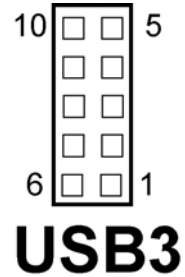

2-26. IRDA CONNECTOR

JP1: IrDA (Infrared) Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	VCC5
2	NC
3	IRRX
4	GND
5	IRTX



2-27. USB&LAN CONNECTOR

USB_RJG2: USB & LAN Connector


The pin assignments are as follows:

LAN:

PIN	ASSIGNMENT
1	LAN1_TXDP
2	LAN1_TXDN
3	LAN1_RXDP
4	LAN1_RXDN
11	LAN1_LILED
12	LAN1_ACTLED
13	LAN1_SPD100
14	LAN1_LEDVCC

USB:

PIN	ASSIGNMENT
A1	USB0_VCC5
A2	USBN0
A3	USBP0
A4	GND
B1	USB0_VCC5
B2	USBN1
B3	USBP1
B4	GND

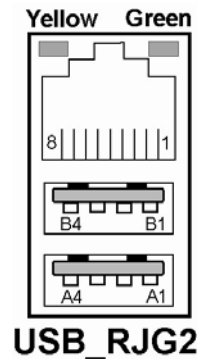


USB_RJG1: USB & LAN Connector

The pin assignments are as follows:

LAN:

PIN	ASSIGNMENT
1	LAN2_1MDI_P0
2	LAN2_1MDI_N0
3	LAN2_1MDI_P1
4	LAN2_1MDI_N1
5	LAN2_1MDI_P2
6	LAN2_1MDI_N2
7	LAN2_1MDI_P3
8	LAN2_1MDI_N3
11	LAN2_LILED
12	LAN2_ACTLED
13	LAN2_SPD100
14	LAN2_SPD1000

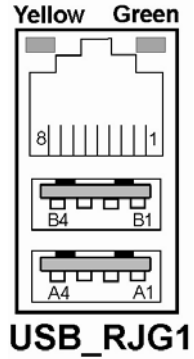

USB:


PIN	ASSIGNMENT
A1	USB1_VCC5
A2	USBN2
A3	USBP2
A4	GND
B1	USB1_VCC5
B2	USBN3
B3	USBP3
B4	GND

2-28. ATX POWER CONNECTOR

ATX_PW1 : ATX 12V Connector


The pin assignments are as follows:

PIN	ASSIGNMENT
1	GND
2	GND
3	+12V
4	+12V

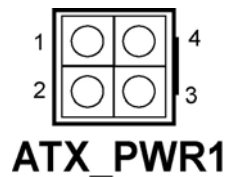

ATX_PW2 : ATX Power Connector

The pin assignments are as follows:



ATX_PWR2

PIN	ASSIGNMENT	PIN	ASSIGNMENT
1	+3.3V	13	+3.3V
2	+3.3V	14	-12V
3	GND	15	GND
4	+5V	16	PSON
5	GND	17	GND
6	+5V	18	GND
7	GND	19	GND
8	POK	20	-5V
9	5VSB	21	+5V
10	+12V	22	+5V
11	+12V	23	+5V
12	+3.3V	24	GND

2-29. SOUND CONNECTOR

JAUDIO1 : Sound Connector, including Line-In, Line-Out & Mic.
Also can support only MIC connector. The pin assignments are as follows :

Line-In


PIN	ASSIGNMENT
32	HD_LINE-L
33	GND
34	GND
35	HD_LINE-R

Line-Out

PIN	ASSIGNMENT
22	HD_OUT-L
23	NC
24	NC
25	HD_OUT-R

Mic-In

PIN	ASSIGNMENT
1	GND
2	HD_MIC1
3	HD_MIC_GND
4	NC
5	HD_MIC_VCC

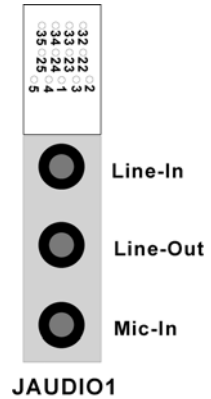


2-30. CD AUDIO-IN CONNECTOR

CD_IN1 : CD Audio-In Connector

The pin assignments are as follows:

PIN	ASSIGNMENT
1	CD-L
2	CD-REF
3	CD-REF
4	CD-R

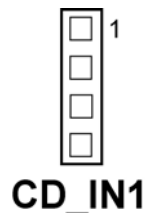

2-31. MEMORY INSTALLATION

PMB-601LF CPU Card can support up to 4GB in four DIMM sockets.

DRAM BANK CONFIGURATION

DIMM 1	DIMM 2	DIMM3	DIMM4	TOTAL MEMORY
128MB	128MB	128MB	128MB	512MB
256MB	256MB	256MB	256MB	1GB
512MB	512MB	512MB	512MB	2GB
1GB	1GB	1GB	1GB	4GB
2GB	2GB	2GB	2GB	8GB

SOFTWARE UTILITIES

CHAPTER

3

This chapter comprises the detailed information of VGA driver, LAN driver, Sound driver, and flash BIOS update. It also describes on how to configuration the watchdog timer.

Section includes:

- Introduction.
- VGA Driver Utility
- Flash BIOS Update
- LAN Driver Utility
- Sound Driver Utility
- Intel® Chipset Software Installation Utility
- USB2.0 Chipset Software Installation Utility
- Watchdog Timer Configuration

3-1. INTRODUCTION


Enclosed with our PMB-601LF package is our driver utility, which may come in a form of a CD ROM disc or floppy diskettes. For CD ROM disc user, you will only need some of the files contained in the CD ROM disc, please kindly refer to the following chart:

Filename (Assume that CD ROM drive is D:)	Purpose
D:\Driver\VGA	Intel Q965 For VGA driver installation
D:\Driver\FLASH	For BIOS update utility
D:\Driver\LAN	For LAN Driver installation
D:\Driver\Sound	Realtek ALC262A Audio HD For Sound driver installation
D:\Driver\UTILITY	Intel® Chipset Software Installation Utility For Win 2000, XP,2003
D:\Driver\RAID	Intel® ICH8-R RAID Software Installation Utility For Win 2000, XP,2003
D:\Driver\USB 2.0	USB 2.0 Software Installation Utility For Win 2000, XP
D:\Driver\F6flpy32	Intel® ICH8-R driver used for FLOPPY when Install Win2000, XP,2003

⚠ User should remember to install the Utility right after the OS fully installed.

3-2. VGA DRIVER UTILITY

The VGA interface embedded with our PMB-601LF can support a wide range of display. You can display CRT, PCI-E (SDVO) simultaneously with the same mode.

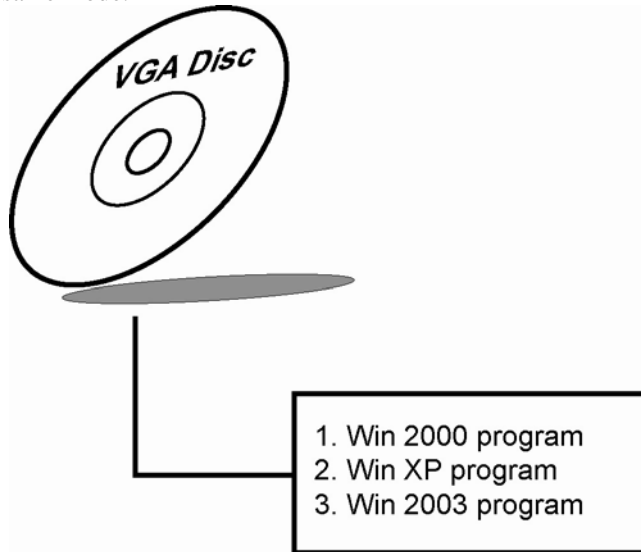

3-2-1. Installation of VGA Driver:

To install the VGA Driver, simply follow the following steps:

1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 2000/XP/2003 system, go to the directory where VGA driver is located.
3. Click **Setup.exe** file for VGA driver installation.
4. Follow the instructions on the screen to complete the installation.
5. Once installation is completed, shut down the system and restart in order for the changes to take effect.

3-3. FLASH BIOS UPDATE

3-3-1. System BIOS Update:

Users of PMB-601LF can use the program “Awdflash.exe” contained in CD ROM for BIOS update. This is found in D:\flash\Awdflash.exe.

3-3-2. To update BIOS :

- (1) Install “Awdflash.exe” from the CD ROM Disk into your system.
- (2) Insert the new BIOS file you have obtained from Protech.
- (3) Type the pathname to Awdflash.exe and execute the BIOS update with file B601xxxx.bin
C:\UTIL\AWDFLASH\AWARDFLASH B601xxxx.bin
- (4) The screen will display the table below:

AwardBIOS Flash Utility V8.69 (C)Phoenix Technologies Ltd. All Rights Reserved
For Broadwater-6A79LP69C-00 DATE : 01/16/2007 Flash Type - SST 49LF008A /3.3V
File Name to Program : B601xxxx.bin
Message : Do You Want To Save BIOS (Y/N)

If you want to save up the original BIOS, enter “Y” and press < Enter > . If you choose “N”, the following table will appear on screen.


AwardBIOS Flash Utility V8.69 (C)Phoenix Technologies Ltd. All Rights Reserved
For Broadwater-6A79LP69C-00 DATE : 01/16/2007 Flash Type - SST 49LF008A /3.3V File Name to Program : B601xxxx.bin
Message : Press ‘Y’ to Program or ‘N’ to Exit

Select “Y”, and the BIOS will be renewed. When you are refreshing your BIOS, do not turn off or reset the system, or you will damage the BIOS. After you have completed all the programming, you will see the line: “Reset System or power off to accomplish update process!”. Please turn off or reset the system. Then the Flash BIOS is fully implemented.

3-4. LAN DRIVER UTILITY

3-4-1. Introduction

PMB-601LF is enhanced with LAN function that can support various network adapters. Installation programs for LAN drivers are listed as follows:

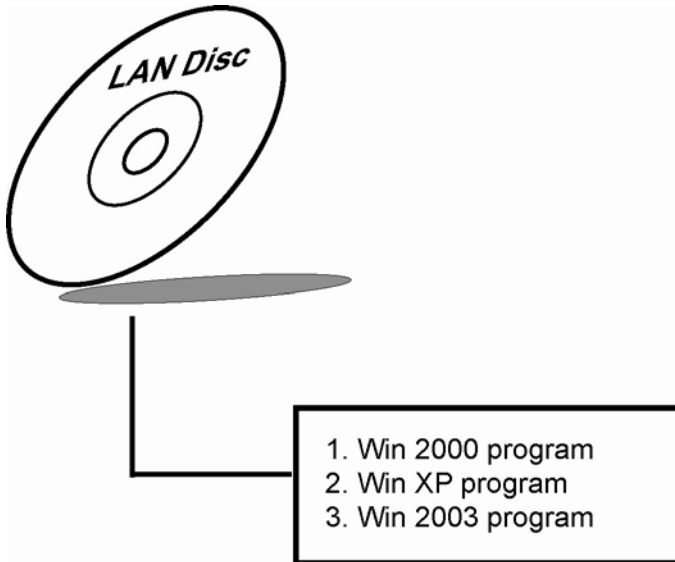


For more details on Installation procedure, please refer to **Readme.txt** file found on **LAN DRIVER UTILITY**.

3-5. SOUND DRIVER UTILITY

3-5-1. Introduction

The Realtek ALC262A sound function enhanced in this system is fully compatible with Windows 2000 and Windows XP. Below, you will find the content of the Sound driver :

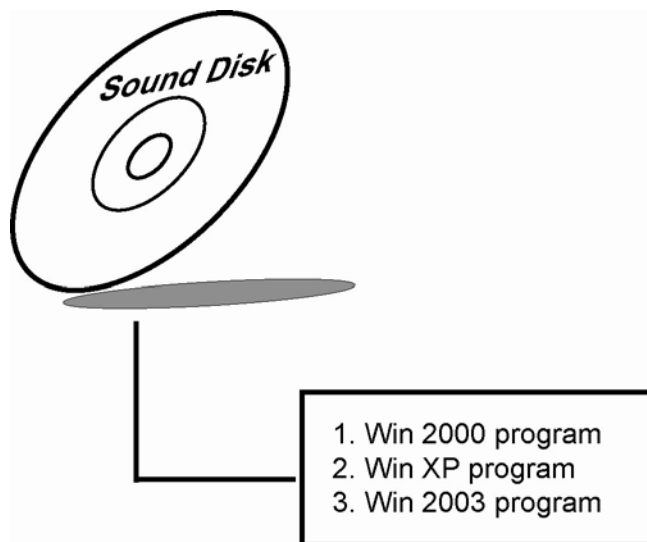

3-5-2. Installation Procedure for Windows 2000/XP/2003

1. From the task bar, click on Start, and then Run.
2. In the Run dialog box, type D:\Sound\path\setup, where "D:\Sound\pathname" refers to the full path to the source files.
3. Click on the OK button or press the ENTER key.
4. Click on the "Next" and OK prompts as they appear.
5. Reboot the system to complete the driver installation.

3-6. INTEL® CHIPSET SOFTWARE INSTALLATION UTILITY

3-6-1. Introduction

The Intel® Chipset Software Installation Utility installs to the target system the Windows* INF files that outline to the operating system how the chipset components will be configured. This is needed for the proper functioning of the following features:

- Core PCI and ISAPNP Services
- AGP Support
- IDE/ATA33/ATA66/ATA100 Storage Support
- USB Support
- Identification of Intel® Chipset Components in Device Manager

3-6-2. Installation of Utility for Windows 2000/XP/2003

The Utility Pack is to be installed only for Windows 2000 and XP program.

It should be installed right after the OS installation, kindly follow the following steps:


1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 2000/XP/2003 system, go to the directory where Utility Disc is located.
3. Click **Setup.exe** file for utility installation.
4. Follow the instructions on the screen to complete the installation.
5. Once installation is completed, shut down the system and restart in order for the changes to take effect.

3-7. USB2.0 SOFTWARE INSTALLATION UTILITY

3-7-1. Installation of Utility for Windows 2000/XP

Intel USB 2.0 Enhanced Host Controller driver can only be used on Windows 2000 and Windows XP on Intel Desktop boards. It should be installed right after the OS installation, kindly follow the following steps:

1. Place insert the Utility Disk into Floppy Disk Drive A/B or CD ROM drive.
2. Under Windows 2000, and XP system, go to the directory where Utility Disc is located.
3. Start the "System" wizard in control panel. (Click Start/Settings/Control Panel).
4. Select "Hardware" and click "Device Manager" button.
5. Double Click "USB Root Hub".
6. Select "Driver".
7. Click "Install" to install the driver.
8. Follow the instructions on the screen to complete the installation.
9. Click "Finish" after the driver installation is complete.

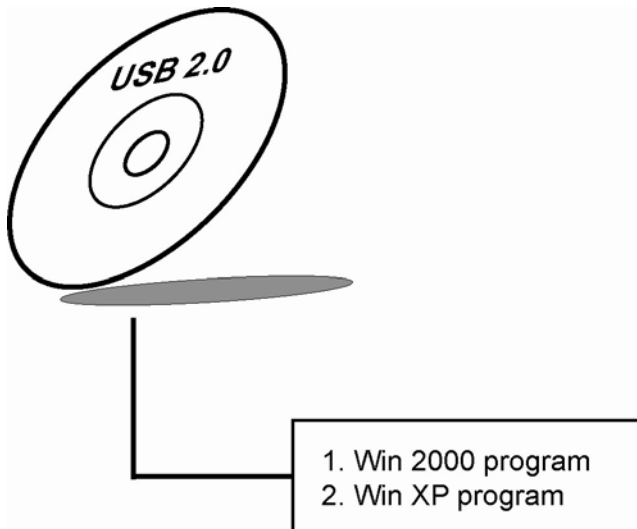

3-8. WATCHDOG TIMER CONFIGURATION

The I/O port address of the watchdog timer is 2E(hex) and 2F(hex). 2E (hex) is the address port. 2F(hex) is the data port. User must first assign the address of register by writing address value into address port 2E(hex), then write/read data to/from the assigned register through data port 2F (hex).

Configuration Sequence

There are three steps to completing the configuration setup:

- (1) Enter the MB PnP Mode.
- (2) Modify the data of configuration registers.
- (3) Exit the MB PnP Mode.

Undesired result may occur if the MB PnP Mode is not exited normally.

(1) Enter the MB PnP Mode

To enter the MB PnP Mode, four special I/O write operations are to be performed.

(2) Modify the data of configuration registers

All configuration registers can be accessed after entering the MB PnP Mode. Before accessing a selected register, the content of index 07h must be changed to the LDN to which the register belongs, except some Global registers.

(3) Exit the MB PnP Mode

Set bit 1 of the configure control register (index=02h) to “1” to exit the MB PnP Mode.

Sample code:

```
.*****;
;Enter PnP Mode
.*****;
MOVDX,2Eh
MOVAL,87h
OUTDX,AL
MOVAL,01h
OUTDX,AL
MOVAL,55h
OUTDX,AL
MOVAL,55h
OUTDX,AL
.*****;
;Select LDN to 07h
.*****;
MOVDX,2Eh
```



```
MOV AL,07h
OUTDX,AL
MOV DX,2Fh
MOV AL,07h
OUTDX,AL
;*****
;Select Time resolution by index 72h
;AL=C0h Second resolution
;AL=80h Minute resolution
;*****
MOV DX,2Eh
MOV AL,72h
OUTDX,AL
MOV DX,2Fh
MOV AL,0C0h
OUTDX,AL
;*****
;Write non-zero value into index 73h
;for Enable WDT and Start count down.
;*****
MOV DX,2Eh
MOV AL,73h
OUTDX,AL
MOV DX,2Fh
MOV AL,02h
OUTDX,AL
;*****
;Write zero value into register AL
;for Disable WDT.
;*****
MOV DX,2Eh
MOV AL,73h
OUTDX,AL
MOV DX,2Fh
MOV AL,00h
OUTDX,AL
;*****
;Exit PnP Mode
;*****
MOV DX,2Eh
MOV AL,02h
OUTDX,AL
MOV DX,2Fh
MOV AL,02h
OUTDX,AL
```

AWARD BIOS SETUP

CHAPTER

4

This chapter shows how to set up the Award BIOS.

Section includes:

- Introduction
- Entering Setup
- The Standard CMOS Features
- The Advanced BIOS Features
- The Advanced Chipset Features
- Integrated Peripherals
- Power Management Setup
- PNP/PCI Configuration
- PC Health Status
- Frequency Control
- Load Fail-Safe Defaults
- Load Optimized Defaults
- Password Setting
- Save and Exit Setup
- Exit Without Saving


4-1. INTRODUCTION

This chapter will show you the function of the BIOS in managing the features of your system. The PMB-601LF Intel Core 2 Duo ATX Motherboard is equipped with the BIOS for system chipset from Phoenix - Award Software Inc. This page briefly explains the function of the BIOS in managing the special features of your system. The following pages describe how to use the BIOS for system chipset Setup menu.

Your application programs (such as word processing, spreadsheets, and games) rely on an operating system such as DOS or OS/2 to manage such things as keyboard, monitor, disk drives, and memory.

The operating system relies on the BIOS (Basic Input and Output system), a program stored on a ROM (Read-only Memory) chip, to initialize and configure your computer's hardware. As the interface between the hardware and the operating system, the BIOS enables you to make basic changes to your system's hardware without having to write a new operating system.

The following diagram illustrates the interlocking relationships between the system hardware, BIOS, operating system, and application program:

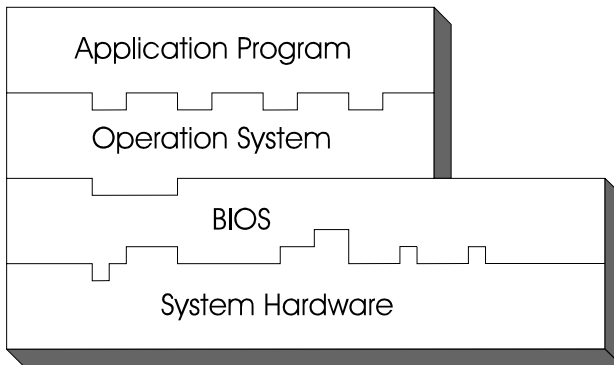

4-2. ENTERING SETUP

When the system is powered on, the BIOS will enter the Power-On Self Test (POST) routines and the following message will appear on the lower screen:

PRESS TO ENTER SETUP, ESC TO SKIP MEMORY TEST

As long as this message is present on the screen you may press the key (the one that shares the decimal point at the bottom of the number keypad) to access the Setup program. In a moment, the main menu of the Award SETUP program will appear on the screen:

Phoenix - AwardBIOS CMOS Setup Utility	
<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PnP/PCI Configurations ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency Control Load Fail-Safe Defaults Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
Esc : Quit F10 : Save & Exit Setup	↑↓→← : Select Item
Time, Date, Hard Disk Type	

Setup program initial screen

You may use the cursor the up/down keys to highlight the individual menu items. As you highlight each item, a brief description of the highlighted selection will appear at the bottom of the screen.

4-3. THE STANDARD CMOS FEATURES

Highlight the "STANDARD CMOS FEATURES" and press the <ENTER> key and the screen will display the following table:

Phoenix - AwardBIOS CMOS Setup Utility
Standard CMOS Features

Date (mm:dd:yy)	Thu, Jun 22 2007	Item Help
Time (hh:mm:ss)	13 : 54 : 47	
▶ SATA Channel 1	[HDS728080PLA380]	Menu Level ▶ Change the day, month, year and century
▶ SATA Channel 2	[None]	
▶ SATA Channel 3	[None]	
▶ SATA Channel 4	[None]	
▶ SATA Channel 5	[None]	
▶ SATA Channel 6	[None]	
Drive A	[1.44M, 3.5 in.]	
Video	[EGA/VGA]	
Halt On	[All, But Keyboard]	
Base Memory	640K	
Extended Memory	514048K	
Total Memory	515072K	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

CMOS Setup screen

In the above Setup Menu, use the arrow keys to highlight the item and then use the <PgUp> or <PgDn> keys to select the value you want in each item.

DATE:

< Month >, < Date > and <Year >. Ranges for each value are in the CMOS Setup Screen, and the week-day will skip automatically.

TIME:

< Hour >, < Minute >, and < Second >. Use 24 hour clock format, i.e., for PM numbers, add 12 to the hour. For example: 4: 30 P.M. You should enter the time as 16:30:00.

SATA CHANNEL 0/1/2/3/4/5:

The BIOS can automatically detect the specifications and optimal operating mode of almost all SATA hard drives. When you select type AUTO for a hard drive, the BIOS detect its specifications during POST, every time system boots.

If you do not want to select drive type AUTO, other methods of selecting drive type are available:

1. Match the specifications of your installed SATA hard drive(s) with the preprogrammed values for hard drive types 1 through 45.
2. Select USER and enter values into each drive parameter field.
3. Use the SATA HDD AUTO DETECTION function in Setup.

Here is a brief explanation of drive specifications:

Type: The BIOS contains a table of pre-defined drive types. Each defined drive type has a specified number of cylinders, number of heads, write precompensation factor, landing zone, and number of sectors. Drives whose specifications do not accommodate any predefined type are classified as type USER.

- Size: Disk drive capacity (approximate). Note that this size is usually greater than the size of a formatted disk given by a disk-checking program.
- Cyls: number of cylinders.
- Head: number of heads.
- Precomp: write precompensation cylinders.
- Landz: landing zone.
- Sector: number of sectors.
- Mode: Auto, Normal, Large or LBA.

Auto: The BIOS automatically determines the optimal mode.

- Normal: Maximum number of cylinders, heads, sectors supported are 1024, 16 and 63.
- Large: For drives that do not support LBA and have more than 1024 cylinders.
- LBA (Logical Block Addressing): During drive accesses, the

SATA controller transforms the data address described by sector, head and cylinder number into a physical block address, significantly improving data transfer rates. For drives greater than 1024 cylinders.

DRIVE A:

Select the type of floppy disk drive installed in your system. The available options are 360KB 5.25in, 1.2KB 5.25in, 720KB 3.5in, 1.44MB 3.5in, 2.88MB 3.5in and None.

VIDEO:

This category selects the type of video adapter used for the primary system monitor. Although secondary monitors are supported, you do not have to select the type in Setup. Available Options are as follows:

EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA, SEGA, SVGA or PGA monitor adapters.
CGA 40	Color Graphics Adapter, power up in 40 column mode.
CGA 80	Color Graphics Adapter, power up in 80 column mode.
MONO	Monochrome adapter, includes high resolution monochrome adapters.

HALT ON:

This category allows user to choose whether the computer will stop if an error is detected during power up. Available options are “All errors”, “No errors”, “All, But keyboard”, “All, But Diskette”, and “All But Disk/Key”.

BASE MEMORY:

Displays the amount of conventional memory detected during boot up.

EXTENDED MEMORY:

Displays the amount of extended memory detected during boot up.

TOTAL MEMORY:

Displays the total memory available in the system.

HARD DISK ATTRIBUTES:

Type	Cylinders	Heads	V-P comp	LZone	Sect	Capacity
1	306	4	128	305	17	10
2	615	4	300	615	17	20
3	615	6	300	615	17	30
4	940	8	512	940	17	62
5	940	6	512	940	17	46
6	615	4	65535	615	17	20
7	642	8	256	511	17	30
8	733	5	65535	733	17	30
9	900	15	65535	901	17	112
10	820	3	65535	820	17	20
11	855	5	65535	855	17	35
12	855	7	65535	855	17	49
13	306	8	128	319	17	20
14	733	7	65535	733	17	42
15	000	0	0000	000	00	00
16	612	4	0000	663	17	20
17	977	5	300	977	17	40
18	977	7	65535	977	17	56
19	1024	7	512	1023	17	59
20	733	5	300	732	17	30
21	733	7	300	732	17	42
22	733	5	300	733	17	30
23	306	4	0000	336	17	10
24	977	5	65535	976	17	40
25	1024	9	65535	1023	17	76
26	1224	7	65535	1223	17	71
27	1224	11	65535	1223	17	111
28	1224	15	65535	1223	17	152
29	1024	8	65535	1023	17	68
30	1024	11	65535	1023	17	93
31	918	11	65535	1023	17	83
32	925	9	65535	926	17	69
33	1024	10	65535	1023	17	85
34	1024	12	65535	1023	17	102
35	1024	13	65535	1023	17	110
36	1024	14	65535	1023	17	119
37	1024	2	65535	1023	17	17
38	1024	16	65535	1023	17	136
39	918	15	65535	1023	17	114
40	820	6	65535	820	17	40
41	1024	5	65535	1023	17	42
42	1024	5	65535	1023	26	65
43	809	6	65535	852	17	40
44	809	6	65535	852	26	61
45	776	8	65335	775	33	100
47			AUTO			

Award Hard Disk Type Table

4-4. THE ADVANCED BIOS FEATURES

Choose the "ADVANCED BIOS FEATURES" in the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced BIOS Features

▶ CPU Feature	[Press Enter]	Item Help	
▶ Hard Disk Boot Priority	[Press Enter]		
First Boot Device	[Hard Disk]	Menu Level ▶	
Second Boot Device	[Hard Disk]		
Third Boot Device	[LS120]		
Boot Other Device	[Enabled]		
Boot Up Floppy Seek	[Enabled]		
Typematic Rate Setting	[Disabled]		
x Typematic Rate (Chars/Sec)	6		
x Typematic Delay (Msec)	250		
Security Option	[Setup]		
APIC Mode	[Enabled]		
MPS Version Control For OS	[1.4]		
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults			

BIOS Features Setup Screen

The "BIOS FEATURES SETUP" allow you to configure your system for basic operation. The user can select the system's boot-up sequence and security.

A brief introduction of each setting is given below.

CPU FEATURE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
CPU Feature

Limit CPUID MaxVal	[Disabled]	Item Help
Execute Disable Bit	[Enabled]	
Virtualization Technology	[Enabled]	
		Menu Level ▶
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. LIMIT CPUID MAXVAL

The CPUID instruction of some CPUs will return a value greater than 3.If you are using Windows operating system. Please disable this feature.

2. EXECUTE DISABLE BIT

To select enable or disable the No-Execution Page Protection Technology.

3. VITRUALIZATION TECHNOLOGY

To select enable or disable Virtualization Technology.

HARD DISK BOOT PRIORITY:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
Hard Disk Boot Priority

1. SATA 1. : HDS728080PLA380 2. Bootable Add-in Cards	Item Help
	Menu Level ► Use<↑> or <↓> to select a device, then press <+> to move it up, or <-> to move it down the list. Press <ESC> to exit this menu.
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults	

Select Hard Disk Boot Device Priority

FIRST/SECOND/ THIRD/ OTHER BOOT DEVICE:

The BIOS attempt to load the operating system from the devices in the sequence selected in these items.

BOOT UP FLOPPY SEEK:

You may enable / disable this item to define whether the system will look for a floppy disk drive to boot at power-on, or proceed directly to the hard disk drive.

TYPEMATIC RATE SETTING:

Enable this item if you wish to be able to configure the characteristics of your keyboard. Typematic refers to the way in which characters are entered repeatedly if a key is held down. For example, if you press and hold down the "A" key, the letter "a" will repeatedly appear on your screen on your screen until you release the key. When enabled, the typematic rate and typematic delay can be selected.

TYPOMATIC RATE (CHARS/SEC):

This item sets the number of times a second to repeat a key stroke when you hold the key down.

TYPOMATIC DELAY (MSEC):

The item sets the delay time after the key is held down before it begins to repeat the keystroke.

SECURITY OPTION:

This category allows you to limit access to the system and Setup, or just to Setup.

System	The system will not boot and access to Setup will be denied if the correct password is not entered at the prompt.
Setup	The system will boot, but access to Setup will be denied if the correct password is not entered at the prompt.

🔔 To disable security, select PASSWORD SETTING at Main Menu and then you will be asked to enter password. Do not type anything and just press <Enter>, it will disable security. Once the security is disabled, the system will boot and you can enter Setup freely.

APIC MODE:

To Enable Advanced Programmable Interrupt Controller

MPS VERSION CONTROL FOR OS:

This option is only valid for multiprocessor motherboards as it specifies the version of the Multiprocessor Specification (MPS) that the motherboard will use. The MPS is a specification by which PC manufacturers design and build Intel architecture systems with two or more processors.

4-5. ADVANCED CHIPSET FEATURES

Choose the "ADVANCED CHIPSET FEATURES" from the main menu, the screen shown as below.

Phoenix - AwardBIOS CMOS Setup Utility
Advanced Chipset Features

DRAM Timing Selectable [By SPD] X CAS Latency Time Auto X DRAM RAS# to CAS# Delay Auto X DRAM RAS# Precharge Auto X Precharge dealy (tRAS) Auto X System Memory Frequency By SPD Memory Hole At 15M-16M [Disabled]		Item Help Menu Level ►
** VGA Setting ** PEG/Onchip VGA Control [Auto] On-Chip Frame Buffer Size [8MB] DVMT Mode [DVMT] DVMT/ FIXED Memory Size [128 MB]		
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

Chipset Features Setup Screen

This parameter allows you to configure the system based on the specific features of the installed chipset. The chipset manages bus speed and access to system memory resources, such as DRAM and the external cache.

It also coordinates communications between conventional ISA bus and the PCI bus. It must be stated that these items should never need to be altered. The default settings have been chosen because they provide the best operating conditions for the system. The only time you might consider making any changes would be if you discovered that data was being lost while using your system.

DRAM TIMEING SELECTABLE:

The value in this field depends on performance parameters of the installed memory chips (DRAM). Do not change the value from the factory setting unless you install new memory that has a different performance rating than the original DRAMs.

CAS LATENCY TIME:

When synchronous DRAM is installed, the number of clock cycles of CAS latency depends on the DRAM timing.

DRAM RAS# TO CAS# DELAY:

This item let you insert a timing delay between the CAS and RAS strobe signals, used when DRAM is written to, read from, or refreshed. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system. The choices are 2 and 3.

DRAM RAS# PRECHARGE TIME:

If an insufficient number of cycles is allowed for the RAS to accumulate its charge before DRAM refresh, the refresh may be incomplete and the DRAM may fail to retain data. Fast gives faster performance; and Slow gives more stable performance. This field applies only when synchronous DRAM is installed in the system. The choices are 2 & 3.

PRECHARGE DEALY (tRAS):

Precharge Delay This setting controls the precharge delay, which determines the timing delay for DRAM precharge

SYSTEM MEMORY FREQUENCY:

Allow to choose different frequency of memory module.

MEMORY HOLE AT 15-16M:

You can reserve this area of system memory for ISA adapter ROM. When this area is reserved, it cannot be cached. The user information of peripherals that need to use this area of system memory usually discusses their memory requirements

PEG/ONCHIP VGA CONTROL:

To select the PCI-Express Graphics or onchip VGA Graphics.

ON-CHIP FRAME BUFFER SIZE:

The On-Chip Frame Buffer Size can be set as 32MB. This memory is shared with the system memory.

DVMT MODE:

Intel Dynamic Video Memory Technology Mode.

DVMT/FIXED MEMORY SIZE:

DVMT Memory Size Select.

4-6. INTEGRATED PERIPHERALS

Choose "INTEGRATED PERIPHERALS" from the main setup menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
Integrated Peripherals

▶ OnChip IDE Device	[Press Enter]	Item Help
▶ SuperIO Device	[Press Enter]	
Onboard Serial Port 3	[3E8]	Menu Level ▶
Serial Port 3 Use IRQ	[IRQ10]	
Onboard Serial Port 4	[2E8]	
Serial Port 3 Use IRQ	IRQ11]	
▶ USB Device Setting	[Press Enter]	
Onboard Lan1 Controller	[Enabled]	
Onboard Lan2 Controller	[Enabled]	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

Integrated Peripherals Setup Screen

By moving the cursor to the desired selection and by pressing the <F1> key, the all options for the desired selection will be displayed for choice.

🔔 If bios setup menu item supports USB device boot, it will cause Win9x detects the same storages twice when the system is rebooted, and USB HDD will fail. Note: this cause just happen under Win9x, the phenomenon is a limitation.

ONCHIP IDE DEVICE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
OnChip IDE Device

IDE HDD Block Mode	[Enabled]	Item Help
IDE DMA transfer access	[Enabled]	
IDE Primary Master PIO	[Auto]	Menu Level ► If your IDE hard drive supports block mode select Enabled for automatic detection of the optional number of block read/writes per sector the drive can support.
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
SATA Mode	[IDE]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. IDE HDD BLOCK MODE

Block mode is also called block transfer, multiple commands, or multiple sector read/write. If your IDE hard drive supports block mode (most new drives do), select Enabled for automatic detection of the optimal number of block read/writes per sector the drive can support

2. IDE DMA TRANSTER ACCESS

To Enable/Disable the IDE DMA transfer access

**3. PRIMARY MASTER/SLAVE PIO
SECONDARY MASTER/SLAVE PIO**

The four IDE PIO fields allow you to set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

**4. PRIMARY MASTER/SLAVE UDMA
SECONDARY MASTER/SLAVE UDMA**

Ultra DMA/33 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 95 OSR2 or a third-party IDE bus master driver). If you hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support.

5. SATA MODE

Set the Serial ATA configuration. When set in Advanced Host Controller Interface (AHCI) or RAID mode, the SATA controller is set to Native mode. Configuration options: [IDE] [RAID] [AHCI]

SUPER IO DEVICE:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
SuperIO Device

Onboard FDC Controller	[Enabled]	Item Help
Onboard Serial Port 1	[3F8/IRQ4]	Menu Level ►
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[Normal]	
X UR2 Duplex Mode	[Half]	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
X ECP Mode Use DMA	3	
PWRON After PWR-Fail	[Off]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. ONBOARD FDC CONTROLLER

Select Enabled if the system has a floppy disk controller (FDC) installed on the system board and you wish to use it. If you install and-in FDC or the system has no floppy drive, select Disabled.

2. ONBOARD SERIAL PORT 1/2

Select an address and corresponding interrupt for the first and second serial ports.

3. UART MODE SELECT

This item allows you to select UART mode.

4. **UR2 DUPLEX MODE**
This item allows you to select the IR half/full duplex function.
5. **ONBOARD PARALLEL PORT**
This item allows you to determine access onboard parallel port controller with which I/O address.
6. **PARALLEL PORT MODE**
Select an operating mode for the onboard parallel (printer) port. Select *Normal*, *Compatible*, or *SPP* unless you are certain your hardware and software both support one of the other available modes.
7. **ECP MODE USE DMA**
Select a DMA channel for the parallel port for use during ECP mode.
8. **PWRON AFTER PWR-FAIL**
This item allows you to select if you want to power on the system after power failure. The choice:Off,On,Former-Sts.

**ONBOARD SERIAL PORT 3/4:
SERIAL PORT 3/4 USE IRQ:**

Select an address and corresponding interrupt for third and forth serial port.

USB DEVICE SETTING:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
Onboard Device

USB 1.0 Controller	[Enabled]	Item Help
USB 2.0 Controller	[Enabled]	
USB Keyboard Function	[Enabled]	Menu Level ►
USB Mouse Function	[Enabled]	
USB Storage Function	[Enabled]	
*** USB Mass Storage Device Boot	Setting ***	
USB Flash Disk 2.00	[Auto mode]	
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Descriptions on each item above are as follows:

1. USB 1.0 CONTROLLER

This should be enabled if your system has a USB installed on the system board and you want to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

2. USB 2.0 CONTROLLER

Enable the USB 2.0 controller.

3. USB KEYBOARD FUNCTION

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB keyboard.

4. USB MOUSE FUNCTION

Select Enabled if your system contains a Universal Serial Bus (USB) controller and you have a USB Mouse.

5. USB STORAGE FUNCTION

Enable the USB Storage Function

6. USB FLASH DISK 2.00

Select USB Flash Disk Type.

ONBOARD LAN 1/2 CONTROLLER:

Enable the LAN controller.

4-7. POWER MANAGEMENT SETUP

Choose "POWER MANAGEMENT SETUP" option on the main menu, a display will be shown on screen as below :

Phoenix - AwardBIOS CMOS Setup Utility
Power Management Setup

ACPI Function	[Enabled]	Item Help
Power Management	[User Define]	
Suspend Mode	[Disabled]	
Soft-Off by PWR-BTTN	[Instant-Off]	
Wake-Up by PCI card	[Enabled]	
Resume by Alarm	[Disabled]	
X Date (of Month) Alarm	0	
X Time (hh:mm:ss) Alarm	0 : 0: 0	
		Menu Level ►
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

Power Management Setup Screen

The "Power Management Setup" allows the user to configure the system to the most effectively save energy while operating in a manner consistent with your own style of computer use.

ACPI FUNCTION:

Users are allowed to enable or disable the Advanced Configuration and Power Management (ACPI).

POWER MANAGEMENT:

This item allows the user to select the type or degree of power saving and is directly related to the following modes:

- a. HDD Power Down
- b. Suspend Mode

SUSPEND MODE:

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

SOFT-OFF BY PWR-BTTN:

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has “hung”. The choices are Delay 4 Sec and Instant-Off.

WAKE-UP BY PCI CARD:

An input signal on the serial Ring Indicator (RI) line (in other words, an incoming call on the modem) awakens the system from the soft-off state.

RESUME BY ALARM:

When enabled, you can set the date and time at which the RTC alarm awakens the system from Suspend mode.

4-8. PNP/PCI CONFIGURATION

Choose "PNP/PCI CONFIGURATION" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
PnP/PCI Configurations

Init Display First	[PCI Slot]	Item Help
Reset Configuration Data	[Disabled]	
Resources Controlled By	[Auto (ESCD)]	Menu Level ►
x IRQ Resources	Press Enter	
PCI/VGA Palette Snoop	[Disabled]	
** PCI Express relative items **		
Maximum Payload Size	[128]	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

PNP/PCI Configuration Setup Screen

The PNP/PCI Configuration Setup describes how to configure PCI bus system. PCI, also known as Personal Computer Interconnect, is a system, which allows I/O devices to operate at speeds nearing the speed of the CPU itself uses when communicating with its own special components.

This section covers technical items, which is strongly recommended for experienced users only.

INIT DISPLAY FIRST:

This item allows you to decide to active whether PCI Slot or on-chip VGA first.

RESET CONFIGURATION DATA:

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system configuration has caused such a serious conflict that the operating system cannot boot.

RESOURCE CONTROLLED BY:

The Award Plug and Play Bios can automatically configure all of the booth and Plug and Play-compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows 95. By choosing “manual”, you are allowed to configure the *IRQ Resources and DMA Resources*.

IRQ RESOURCES:

The options for these items are found in its sub menu. By pressing the <ENTER> key, you are prompt to enter the sub menu of the detailed options as shown below:

Phoenix – Award CMOS Setup Utility
IRQ Resources

IRQ-3 assigned to	[PCI Device]	Item Help	
IRQ-4 assigned to	[PCI Device]		
IRQ-5 assigned to	[PCI Device]	Menu Level ► Legacy ISA for devices compliant with the original PC AT bus specification, PCI/ISA PnP for devices compliant with the Plug and Play standard whether designed for PCI or ISA bus architecture	
IRQ-7 assigned to	[PCI Device]		
IRQ-9 assigned to	[PCI Device]		
IRQ-10 assigned to	[PCI Device]		
IRQ-11 assigned to	[PCI Device]		
IRQ-12 assigned to	[PCI Device]		
IRQ-14 assigned to	[PCI Device]		
IRQ-15 assigned to	[PCI Device]		
↑↓→←:Move Enter:Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults			

Descriptions on each item above are as follows:

1. IRQ-n Assigned to:

You may assign each system interrupt a type, depending on the type of device using the interrupt.

PCI/VGA PALETTE SNOOP:

Leave this field at disabled.

MAXIMUM PAYLOAD SIZE:

To select the maximum payload size of PCI Express devices.

4-9. PC HEALTH STATUS

Choose "PC HEALTH STATUS" from the main menu, a display will be shown on screen as below:

Phoenix - AwardBIOS CMOS Setup Utility
PC Health Status

Shutdown Temperature	[Enabled]	Item Help
Vcore	1.26V	Menu Level ►
+1.8V	1.79V	
+3.3V	3.28V	
+12V	12.03V	
+5V	4.91V	
System Temperature	27 C	
CPU Temperature	33 C	
CPU FAN	2556 RPM	
System FAN	8035 RPM	
Power FAN	0 RPM	
↑↓→←: Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6: Fail-Safe Defaults F7:Optimized Defaults		

PC Health Status Setup Screen

The PC Health Status Setup allows you to select whether to choose between monitoring or to ignore the hardware monitoring function of your system.

SHUTDOWN TEMPERATURE:

This item allows you to set up the CPU shutdown Temperature.

VCORE:

This item shows you the current system voltage.

1.8V/3.3V/12V / 5V :

Show you the voltage of 1.8V/3.3V/12V/5V.

SYSTEM/CPU TEMPERATURE:

This item shows you the current System/CPU temperature.

CPU/SYSTEM/POWER FAN:

This item shows you the current CPU/ SYSTEM /Power FAN speed.

4-10. FREQUENCY/VOLTAGE CONTROL

Choose "FREQUENCY CONTROL" from the main menu, a display will be shown on screen as below:

Phoenix – AwardBIOS CMOS Setup Utility
Frequency Control

Auto Detect PCI Clk	[Enabled]	Item Help
Spread Spectrum	[Enabled]	
		Menu Level ▶
↑↓→←:Move Enter: Select +/-/PU/PD:Value F10:Save ESC:Exit F1:General Help F5: Previous Values F6:Fail-Safe Defaults F7:Optimized Defaults		

Frequency / Voltage Control Setup Screen

AUTO DETECT DIMM/PCI CLK:

This item allows you to enable or disable auto detect DIMM/PCI Clock.

SPREAD SPECTRUM:

This item allows you to enable or disable the spread spectrum modulate.

4-11. LOAD FAIL-SAFE DEFAULTS

By pressing the <ENTER> key on this item, you get a confirmation dialog box with a message similar to the following:

Load Fail-Safe Defaults (Y/N) ? N

To use the BIOS default values, change the prompt to "Y" and press the <Enter > key. CMOS is loaded automatically when you power up the system.

4-12. LOAD OPTIMIZED DEFAULTS

When you press <Enter> on this category, you get a confirmation dialog box with a message similar to the following:

Load Optimized Defaults (Y/N) ? N

Pressing "Y" loads the default values that are factory setting for optimal performance system operations.

4-13. PASSWORD SETTING


User is allowed to set either supervisor or user password, or both of them. The difference is that the supervisor password can enter and change the options of the setup menus while the user password can enter only but do not have the authority to change the options of the setup menus.

TO SET A PASSWORD

When you select this function, the following message will appear at the center of the screen to assist you in creating a password.

Enter Password:

Type the password up to eight characters in length, and press < Enter >. The password typed now will clear any previously entered password from CMOS memory. You will be asked to confirm the password. Type the password again and press the < Enter > key. You may also press < Esc > to abort the selection and not enter a password.

 User should bear in mind that when a password is set, you will be asked to enter the password everything you enter CMOS setup Menu.

TO DISABLE THE PASSWORD


To disable the password, select this function (do not enter any key when you are prompt to enter a password), and press the <Enter> key and a message will appear at the center of the screen:

PASSWORD DISABLED!!!
Press any key to continue...

Press the < Enter > key again and the password will be disabled. Once the password is disabled, you can enter Setup freely.

4-14. SAVE & EXIT SETUP


After you have completed adjusting all the settings as required, you must remember to save these setting into the CMOS RAM. To save the settings, select "SAVE & EXIT SETUP" and press <Enter>, a display will be shown as follows:

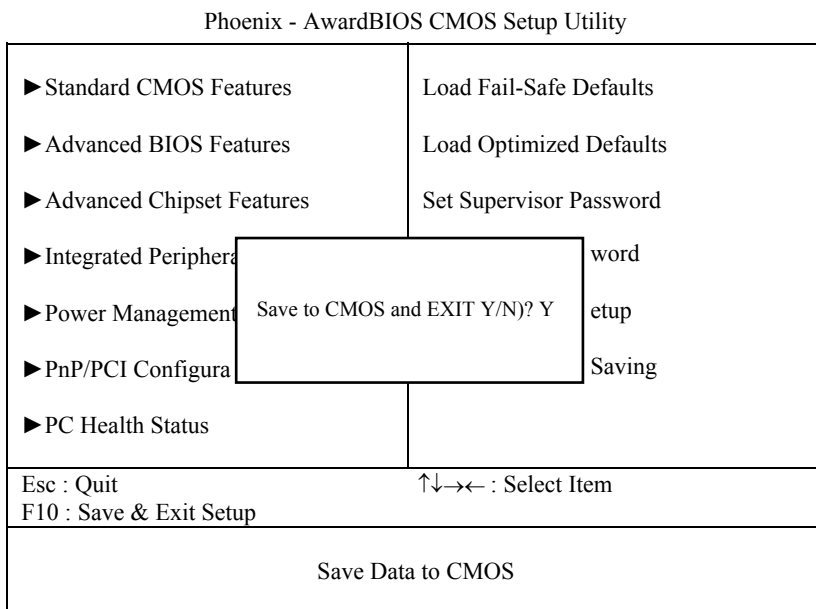


When you confirm that you wish to save the settings, your system will be automatically restarted and the changes you have made will be implemented. You may always call up the setup program at any time to adjust any of the individual items by pressing the key during boot up.

4-15. EXIT WITHOUT SAVING

If you wish to cancel any changes you have made, you may select the "EXIT WITHOUT SAVING" and the original setting stored in the CMOS will be retained. The screen will be shown as below:

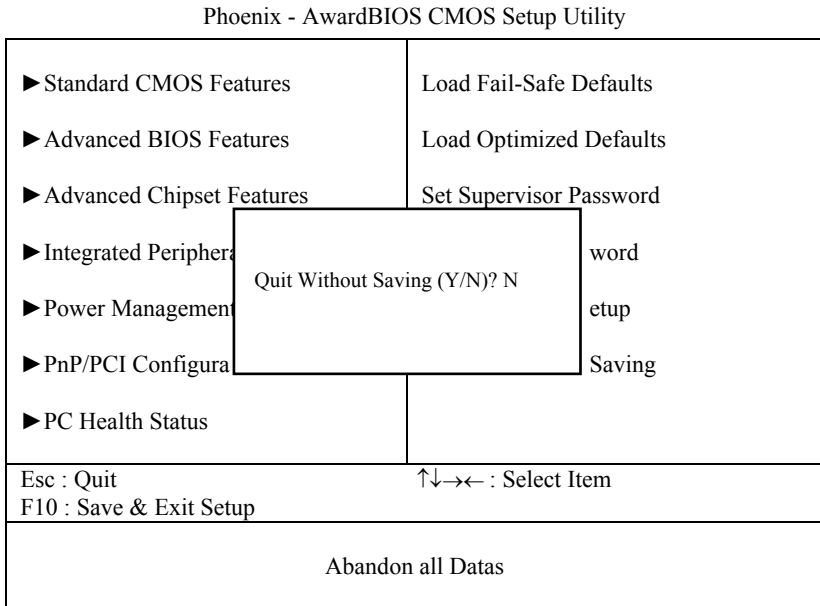

EXPANSION BUS

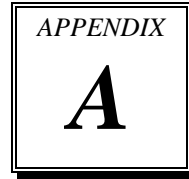

This appendix indicates the pin assignments.


Section includes:

- PCI BUS Pin Assignment

PCI BUS PIN ASSIGNMENT


Like ISA-BUS connector, the PCI-BUS edge connector is also divided into two sets: one consists of 98-pin; the other consists of 22-pin.

The pin assignments are as follows :



B		A		B		A	
PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT	PIN	ASSIGNMENT
B1	-12V	A1	TRST#	B31	+3.3V	A31	AD18
B2	TCK	A2	+12V	B32	AD17	A32	AD16
B3	GND	A3	TMS	B33	C/BE2#	A33	+3.3V
B4	TDO	A4	TDI	B34	GND	A34	FRAME#
B5	+5V	A5	+5V	B35	IRDY#	A35	GND
B6	+5V	A6	INTA#	B36	+3.3V	A36	TRDY#
B7	INTB#	A7	INTC#	B37	DEVSEL#	A37	GND
B8	INTD#	A8	+5V	B38	GND	A38	STOP#
B9	REQ3#	A9	CLKC	B39	LOCK#	A39	+3.3V
B10	REQ1#	A10	+5V(I/O)	B40	PERR#	A40	SDONE
B11	GNT3#	A11	CLKD	B41	+3.3V	A41	SB0#
B12	GND	A12	GND	B42	SERR#	A42	GND
B13	GND	A13	GND	B43	+3.3V	A43	PAR
B14	CLKA	A14	GNT1#	B44	C/BE1#	A44	AD15
B15	GND	A15	RST#	B45	AD14	A45	+3.3V
B16	CLKB	A16	+5V(I/O)	B46	GND	A46	AD13
B17	GND	A17	GNT0#	B47	AD12	A47	AD11
B18	REQ0#	A18	GND	B48	AD10	A48	GND
B19	+5V(I/O)	A19	REQ2#	B49	GND	A49	AD09
B20	AD31	A20	AD30	B52	AD08	A52	C/BE0#
B21	AD29	A21	+3.3V	B53	AD07	A53	+3.3V
B22	GND	A22	AD28	B54	+3.3V	A54	AD06
B23	AD27	A23	AD26	B55	AD05	A55	AD04
B24	AD25	A24	GND	B56	AD03	A56	GND
B25	+3.3V	A25	AD24	B57	GND	A57	AD02
B26	C/BE3#	A26	GNT2#	B58	AD01	A58	AD00
B27	AD23	A27	+3.3V	B59	+5V(I/O)	A59	+5V(I/O)
B28	GND	A28	AD22	B60	ACK64#	A60	REQ64#
B29	AD21	A29	AD20	B61	+5V	A61	+5V
B30	AD19	A30	GND	B62	+5V	A62	+5V

TECHNICAL SUMMARY

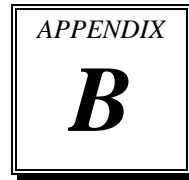


This section introduce you the maps concisely.

Section includes:

- Block Diagram
- Interrupt Map
- RTC & CMOS RAM Map
- Timer & DMA Channels Map
- I / O & Memory Map

BLOCK DIAGRAM

Prox-B601LF Block Diagram

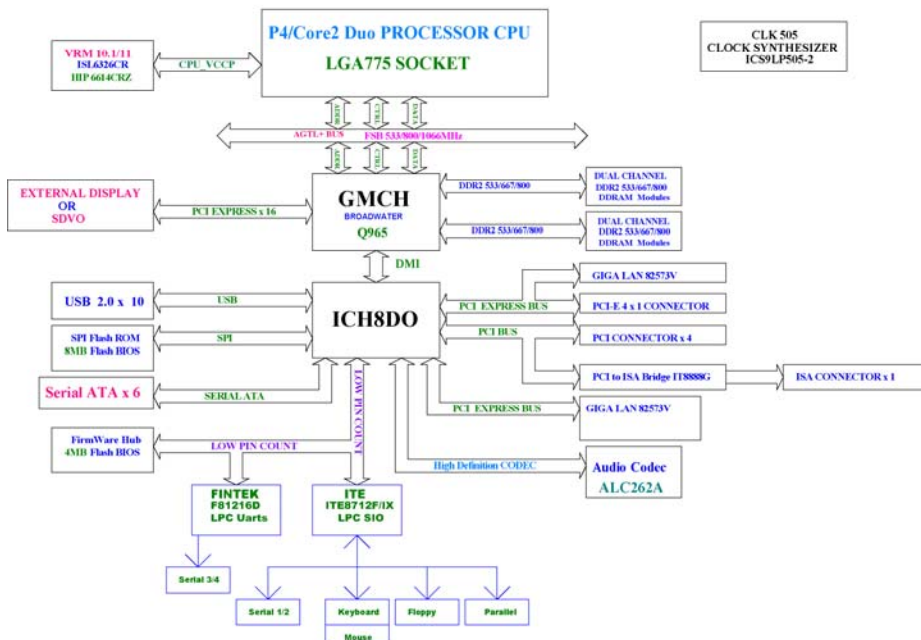

INTERRUPT MAP

IRQ	ASSIGNMENT
0	System TIMER
1	Keyboard
2	Cascade
3	Serial port 2
4	Serial port 1
5	Available
6	Floppy
7	Parallel port 1
8	RTC clock
9	Available
10	Available
11	Available
12	PS/2 Mouse
13	Math coprocessor
14	IDE1
15	IDE2

RTC & CMOS RAM MAP

CODE	ASSIGNMENT
00	Seconds
01	Second alarm
02	Minutes
03	Minutes alarm
04	Hours
05	Hours alarm
06	Day of week
07	Day of month
08	Month
09	Year
0A	Status register A
0B	Status register B
0C	Status register C
0D	Status register D
0E	Diagnostic status byte
0F	Shutdown byte
10	Floppy Disk drive type byte
11	Reserve
12	Hard Disk type byte
13	Reserve
14	Equipment byte
15	Base memory low byte
16	Base memory high byte
17	Extension memory low byte
18	Extension memory high byte
30	Reserved for extension memory low byte
31	Reserved for extension memory high byte
32	Date Century byte
33	Information Flag
34-3F	Reserve
40-7f	Reserved for Chipset Setting Data

TIMER & DMA CHANNELS MAP

Timer Channel Map :

Timer Channel	Assignment
0	System timer interrupt
1	DRAM Refresh request
2	Speaker tone generator

DMA Channel Map :

DMA Channel	Assignment
0	Available
1	Available
2	Floppy
3	Available
4	Cascade
5	Available
6	Available
7	Available

I/O & MEMORY MAP

Memory Map :

MEMORY MAP	ASSIGNMENT
0000000-009FFFF	System memory used by DOS and application
00A0000-00BFFFF	Display buffer memory for VGA/ EGA / CGA / MONOCHROME adapter
00C0000-00DFFFF	Reserved for I/O device BIOS ROM or RAM buffer.
00E0000-00EFFFF	Reserved for PCI device ROM
00F0000-00FFFFFF	System BIOS ROM
0100000-FFFFFFF	System extension memory

I/O Map :

I/O MAP	ASSIGNMENT
000-01F	DMA controller (Master)
020-021	Interrupt controller (Master)
022-023	Chipset controller registers I/O ports.
040-05F	Timer control registers.
060-06F	Keyboard interface controller (8042)
070-07F	RTC ports & CMOS I/O ports
080-09F	DMA register
0A0-0BF	Interrupt controller (Slave)
0C0-0DF	DMA controller (Slave)
0F0-0FF	Math coprocessor
1F0-1F8	Hard Disk controller
278-27F	Parallel port-2
2B0-2DF	Graphics adapter controller
2F8-2FF	Serial port-2
360-36F	Net work ports
378-37F	Parallel port-1
3B0-3BF	Monochrome & Printer adapter
3C0-3CF	EGA adapter
3D0-3DF	CGA adapter
3F0-3F7	Floppy disk controller
3F8-3FF	Serial port-1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>