


KB-MV Series

KB-MV2, KB-MV3, KB-SWM, KB-SWS Color Tilt Multi-Unit Video Entrance System

- INSTRUCTIONS -


The KB-MV series is a color video multi-unit entry system that can be configured for buildings with two to twelve tenant locations. Up to three video entrance stations can be used in one system. The color camera can be tilted upward for a better view of the visitor, and the speaker/microphone provides hands free communication at the entrance panel. Inside each tenant location, the standard Aiphone KB series audio/video stations are employed, allowing up to five monitoring locations per tenant. If there are less than three common entries, an individual audio-only or audio-video door station can be included for each tenant location.

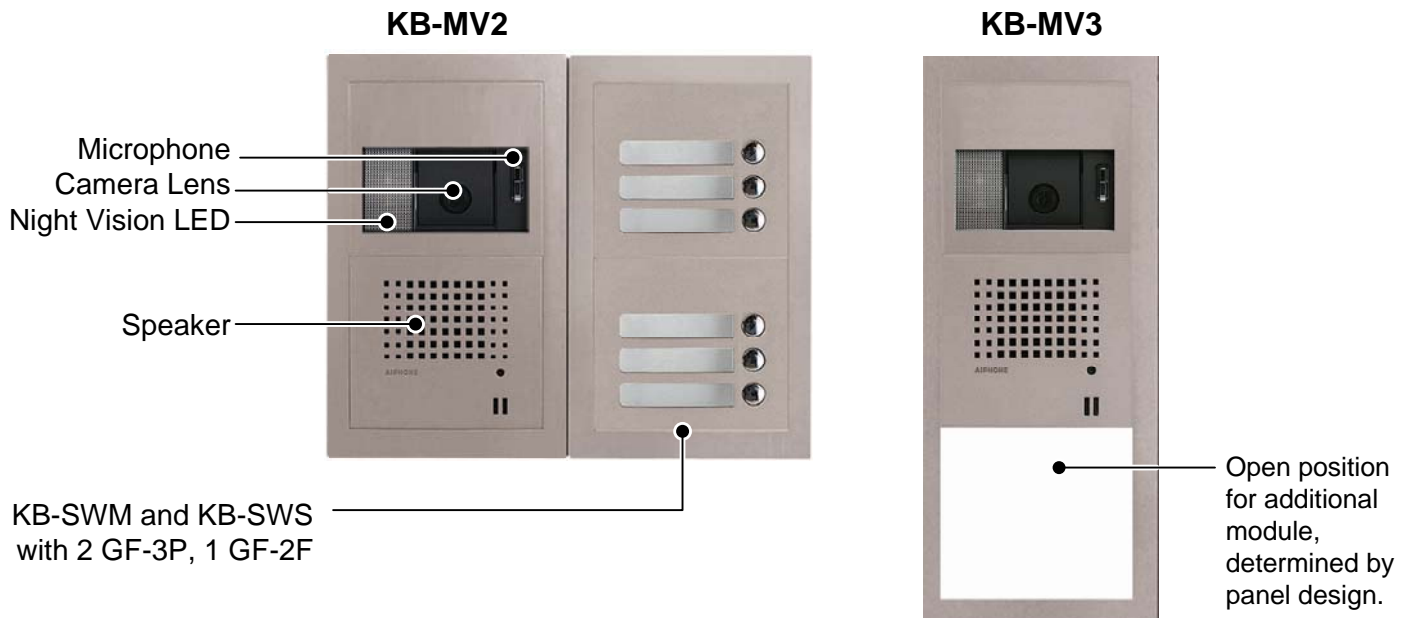

Features:

- Streamline design, can be semi flush mounted or surface mounted
- Color CCD camera with tilt control
- Configure from 2 to 12 call buttons per entry, using 1-, 2-, or 3-button modular panels
- Backlit call button directory for easy viewing of names at night
- Weather resistant for outdoor use
- Hands free communication from entry panel
- Automatic night mode LED
- Employs KB series room stations
- Up to three video entry stations per tenant
- Up to five inside stations per tenant
- Selective door release from each tenant location when using RY-3DL (one per tenant)
- Easy homerun wiring from entry to each tenant using Aiphone series wire # 871802

INSTALLATION DIAGRAM:

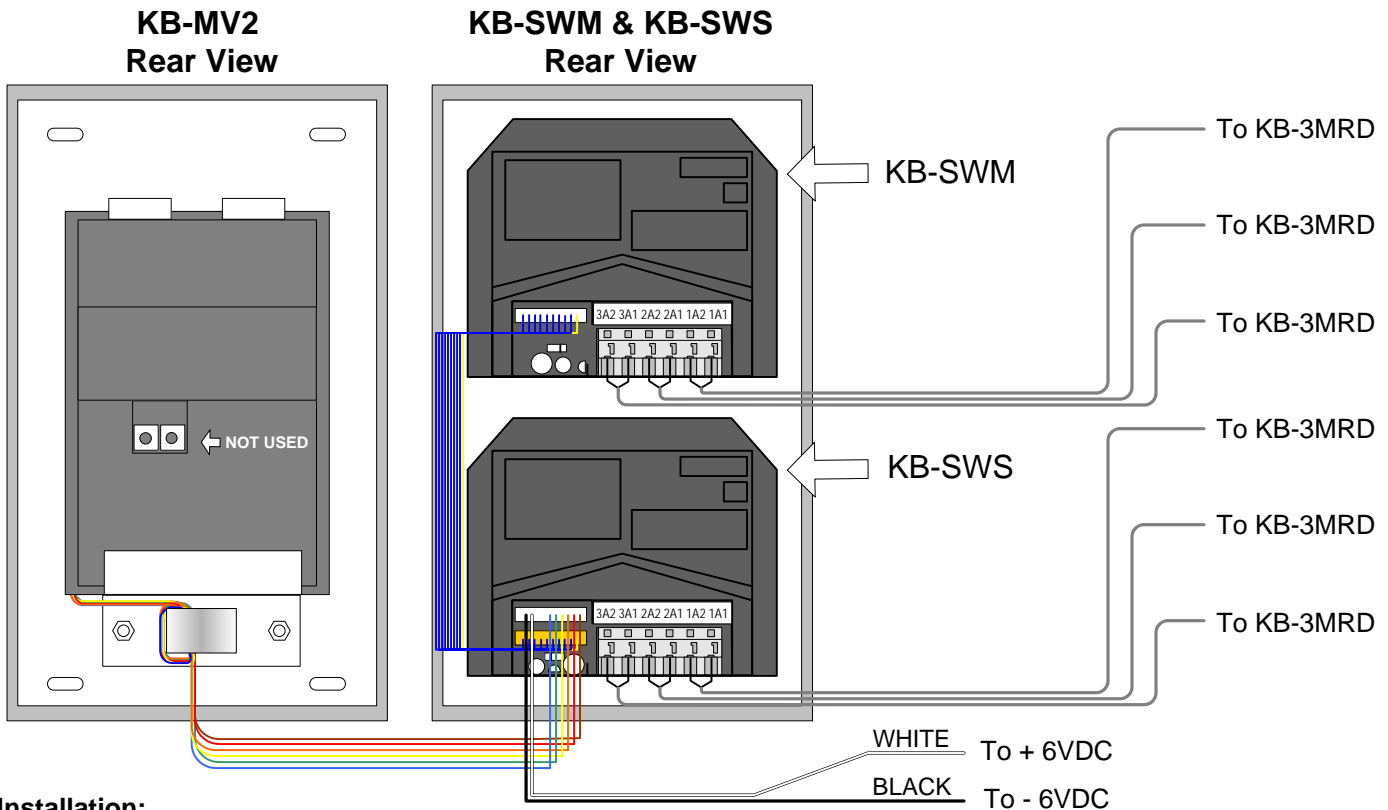


Installation:


- Mount the KB-SWM and KB-SWS into the GF-2F or GF-3F mounting bracket.
- Plug the KB-MV2 / KB-MV3 connector cable into the KB-SWM. If any KB-SWS sub-modules are used, plug the KB-MV2 / KB-MV3 connector cable into the closest one, then plug its blue and yellow 10-pin connector into the next switch module, daisy-chaining them together. Plug the last KB-SWS connector into the KB-SWM master switch module.
- Connect the black and white wire from the KB-MV2 / KB-MV3 connector cable to the SKK-620 power leads (cut spade lug connectors). The white wire connects to +6VDC (black w/white stripe), and the black wire to -6VDC (solid black).
- Connect wires from KB-3MRD's to corresponding terminals on the KB-SWM / KB-SWS. (1A1, 1A2 = upper button, 2A1, 2A2 = middle button, 3A1, 3A2 = lower button)
- Install completed entry panel into either the GF-2B / GF-3B (semi-flush mount) or GF-nHB (surface mount) as required.
- Use Aiphone series wire 871802. Wire must be 18AWG solid, non-shielded, PE insulation.

Initialization:


- The entrance panel must be powered on prior to powering the tenant stations.
- After the entrance and tenant stations are powered on, initialize the system by calling each tenant from each entry panel.

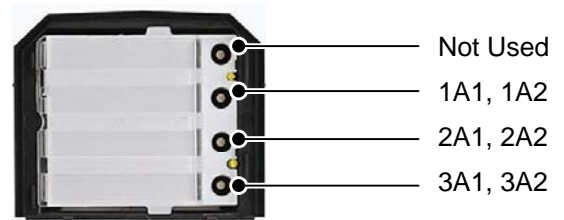

**GF-2F
(frame & bracket)**

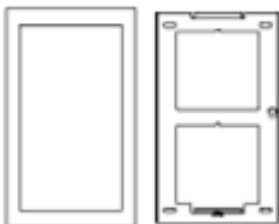

**GF-3F
(frame & bracket)**

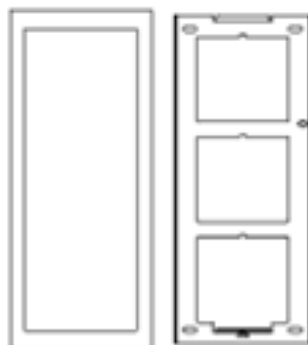


**KB-SWM & KB-SWS's
mounted in bracket**




WIRING DIAGRAM:

KB-MV3 + KB-SWM
(door #1)

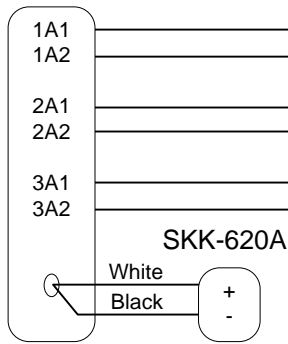


SKK-620A wire key:
+ = Blk w/white stripe, Red spade lug
- = Black wire with Green spade lug


KB-3MRD
(Top button)

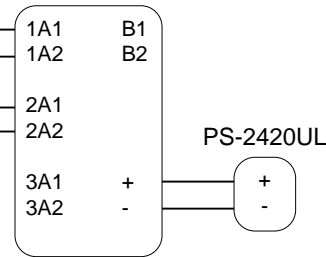


KB-3MRD
(Middle button)

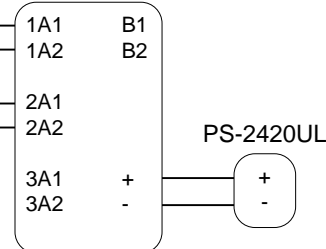

KB-MV3 + KB-SWM
(door #2)

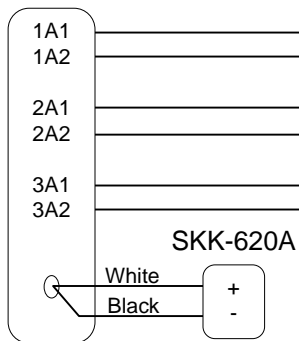


KB-3MRD
(Bottom button)

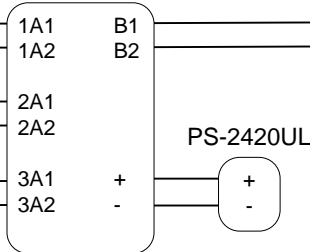


KB-3HRD

KB-3HRD

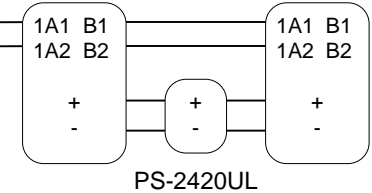

KB-DAR
(door # 3)



Wiring Notes:

- Use Aiphone wire 871802, or 2-conductor, 18 AWG solid, non-shielded, PE insulated cable.
- Each entrance panel must have its own SKK-620 power supply.
- Each tenant must have its own KB-3MRD master and PS-2420UL power supply.
- Refer to KB-3MRD instructions for complete wiring, including distance limitations.
- Add RY-3DL to each tenant if releasing more than one door.

Technical Notes:

- If a specific directory is not lit up, that KB-3MRD master is either not connected or not powered on.
- If video times out immediately or does not come on at all, it is possible that the wrong type of wire was used. Make sure cable is SOLID copper, non-shielded. Stranded wire cannot be used on this system.
- If the entrance panel loses 6V DC, the tenant that was last in communication with the door station, will be the only one to receive a call no matter what button is depressed at the entrance panel.

Operation:

- Depress button at entry panel to activate chime, and video at tenant station.
- Upon receiving chime and video at tenant station lift handset to communicate to entry panel.
- To release door depress key button on tenant station.
- To tilt camera up or down, depress tilt button on tenant station.
- To view entrance panel when not called depress the monitor button.
- Entrance panel can only be viewed by one monitor at a time. If the entrance panel is occupied and another tenant tries to monitor the entrance panel the monitor will not come on and a brief tone will be heard.

Specifications:

Power Source:	6V DC at entrance panel. Use one SKK-620 per entry panel. 24V DC for tenant stations. Use one PS-2420UL per 2 monitors in each tenant's location.
Operating Temperature:	14° ~ 140° F
Camera Unit:	CCD (Charged Coupled Device)
Overall Viewing Area:	36" Vert. X 72" Horiz. At 20"
Video Monitor:	4" TFT LCD
Scanning Lines:	525 Lines
Call In From Door:	4-stroke chime from door #1, 2-stroke chime from door #2, fast 8-stroke chime from door #3.
Communication:	Hands free at entry panel, handset at tenant station(s).
Wire:	18AWG solid, non-shielded, PE insulation. Use Aiphone Wire # 871802.
Wiring Distance:	650' homerun from each entrance panel to each KB-3MRD master tenant station. 330' max. from KB-3MRD to last KB-3HRD in each tenant location.

FCC Class B Verification

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or locate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE:

Only wiring and information relating to the installation of the KB-MV series entrance panel is contained here. Please consult the KB series Installation & Operation Manual for complete information on the KB series equipment installed in each tenant location.

WARRANTY

Aiphone warrants its products to be free from defects of material and workmanship under normal use and service for a period of one year after delivery to the ultimate user and will repair free of charge or replace at no charge, should it become defective upon which examination shall disclose to be defective and under warranty. Aiphone reserves unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship; and whether or not the product is within the warranty.

This warranty shall not apply to any Aiphone product that has been subjected to misuse, neglect, accident, or to use in violation of instructions furnished, nor extended to units which have been repaired or altered outside of the factory. This warranty covers bench repairs only, and any repairs must be made at the shop or place designated in writing by Aiphone.

Aiphone will not be responsible for any costs incurred involving on-site service calls.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>