

ADAC Ultra2 S466

**Single Ended and Low-
Voltage Differential SCSI**

PCI RAID Controller

Hardware Guide

8503624 A MAN US ADAC U2 S466 GDE R0
8/14/98

© Copyright 1998 Gateway, Inc.

All rights reserved.

This publication contains proprietary information which is protected by copyright. No part of this publication can be reproduced, transcribed, stored in a retrieval system, translated into any language or computer language, or transmitted in any form whatsoever without the prior written consent of the publisher, Gateway, Inc. Gateway, Inc. acknowledges the following trademarks:

Intel is a registered trademark of Intel Corporation.

MS-DOS, and Microsoft are registered trademarks of Microsoft Corporation. Windows 95,

Microsoft Windows and Windows NT are trademarks of Microsoft Corporation.

SCO, UnixWare, and Unix are registered trademarks of the Santa Cruz Operation. Inc.

Novell NetWare is a registered trademark of Novell Corporation.

IBM, AT, VGA, PS/2, and OS/2 are registered trademarks and XT and CGA are trademarks of International Business Machines Corporation.

NEC is a registered trademark of Nippon Electric Corporation.

Hewlett-Packard is a registered trademark of Hewlett-Packard Corporation.

Siemens is a registered trademark of Siemens Corporation.

AMP is a trademark of AMP Corporation.

Revision History

6/8/98 Initial release.

Table of Contents

1 Overview	1
Single Ended and Differential SCSI Buses	2
Maximum Cable Length for SCSI Standards	2
Documentation	3
ADAC Ultra2 S466 Block Diagram.....	4
2 Introduction to RAID	5
RAID Benefits.....	5
In This Chapter.....	6
ADAC Ultra2 S466 – Host-Based RAID Solution.....	7
RAID Overview	8
Consistency Check	8
Fault Tolerance	8
Disk Striping	9
Disk Spanning	10
Disk Mirroring	11
Parity	12
Hot Spares.....	13
Disk Rebuild.....	14
Logical Drive	15
Hot Swap.....	15
SCSI Drive States.....	16
Logical Drive States.....	16
Disk Array Types	17
Enclosure Management.....	17
3 RAID Levels	19
Selecting a RAID Level	20
RAID 0.....	21
RAID 1.....	22
RAID 3.....	23
RAID 5.....	25
RAID 10.....	26
RAID 30.....	27
RAID 50.....	28
4 ADAC Ultra2 S466 Features	29
Hardware Requirements	30
Configuration Features	30
Hardware Architecture Features.....	31
Array Performance Features.....	31
RAID Management Features.....	32
Fault Tolerance Features	32

Software Utilities.....	33
Operating System Software Drivers	33
ADAC Ultra2 S466 Specifications.....	34
PCI Bridge/CPU.....	35
Cache Memory	35
ADAC Ultra2 S466 BIOS	35
Onboard Speaker.....	36
Serial Port.....	36
SCSI Bus	36
SCSI Connectors	37
SCSI Termination.....	37
SCSI Firmware.....	37
RAID Management	38
Fault-Tolerance Features.....	39
Compatibility.....	40
Summary	40

5 Configuring ADAC Ultra2 S466 41

Configuring SCSI Physical Drives	41
Current Configuration	42
Logical Drive Configuration	42
Physical Device Layout.....	43
Configuring Arrays.....	45
Configuration Strategies.....	46
Assigning RAID Levels.....	48
Configuring Logical Drives.....	48
Optimizing Data Storage	49
Planning the Array Configuration	50
Array Configuration Planner	51

6 Hardware Installation..... 53

Checklist.....	53
Installation Steps	54
Step 1 Unpack	55
Step 2 Power Down.....	55
Step 3 Configure Motherboard.....	55
Step 4 Install Cache Memory	56
Step 5 Set Jumpers	58
ADAC Ultra2 S466 Card Layout	58
Step 6 Set Termination.....	61
SCSI Termination.....	62
Step 7 Install ADAC Ultra2 S466	65
Step 8 Connect SCSI Cables	66
Step 9 Set Target IDs	67
Device Identification on ADAC Ultra2 S466.....	68
Step 10 Power Up	69

Step 11 Run ADAC BIOS Setup.....	70
Step 12 Install Operating System Driver.....	70
Summary	72
7 Troubleshooting.....	73
BIOS Boot Error Messages.....	75
Other BIOS Error Messages.....	77
DOS ASPI Driver Error Messages.....	78
Other Potential Problems	79
A SCSI Cables and Connectors.....	83
SCSI Connectors	83
68-Pin High Density SCSI Internal Connector.....	83
High-Density 68-Pin SCSI Connector Pinout	89
68-Pin Connector Pinout for LVD SCSI.....	91
B Audible Warnings	93
Index.....	95

Preface

The ADAC Ultra2 S466 PCI RAID Controller supports all single ended and low-voltage differential (LVD) SCSI devices on an Ultra and Wide SCSI channel with data transfer rates up to 80 MB/s (Megabytes per second). This manual describes ADAC Ultra2 S466.

Limited Warranty The buyer agrees if this product proves to be defective, that Gateway is only obligated to repair or replace this product at Gateway's discretion according to the terms and conditions of the warranty registration card that accompanies this product. Gateway shall not be liable in tort or contract for any loss or damage, direct, incidental or consequential resulting from the use of this product. Please see the Warranty Registration Card shipped with this product for full warranty details.

Limitations of Liability Gateway, Inc. shall in no event be held liable for any loss, expenses, or damages of any kind whatsoever, whether direct, indirect, incidental, or consequential (whether arising from the design or use of this product or the support materials provided with the product). No action or proceeding against Gateway may be commenced more than two years after the delivery of product to Licensee of Licensed Software.

Licensee agrees to defend and indemnify Gateway from any and all claims, suits, and liabilities (including attorney's fees) arising out of or resulting from any actual or alleged act or omission on the part of Licensee, its authorized third parties, employees, or agents, in connection with the distribution of Licensed Software to end-users, including, without limitation, claims, suits, and liability for bodily or other injuries to end-users resulting from use of Licensee's product not caused solely by faults in Licensed Software as provided by Gateway to Licensee.

Cont'd

Package Contents You should have received:

- a ADAC Ultra2 S466 PCI RAID Controller,
 - a *ADAC Ultra2 S466 Hardware Guide*,
 - a *ADAC Ultra2 S466 Configuration Software Guide*,
 - a *ADAC Ultra2 S466 Operating System Drivers Guide*,
 - software license agreement,
 - diskette(s) with the ADAC Ultra2 S466 software, and
 - a warranty registration card.
-

Technical Support If you need help installing, configuring, or running the ADAC Ultra2 S466 PCI RAID Controller, call your Gateway OEM Technical Support representative. For the current number, refer to the *Assistance Resources Brochure* that was included with your system. Before you call, please complete the ***ADAC Ultra2 S466 Problem Report*** form on the next page.

Web Site

We invite you to access the Gateway world wide web site at:

<http://www.gateway.com>.

ADAC Ultra2 S466 Problem Report Form

Customer Information		ADAC Ultra2 S466 Information	
Name		Today's Date	
Company		Date of Purchase	
Address		Invoice Number	
City/State		Serial Number	
Country			
email address		Cache Memory	
Phone		Firmware Version	
Fax		BIOS Version	
System Information			
Motherboard:		BIOS manufacturer:	
Operating System:		BIOS Date:	
Op. Sys. Ver.:		Video Adapter:	
ADAC Ultra2 S466 Driver Ver.:		CPU Type/Speed:	
Network Card:		System Memory:	
Other disk controllers installed:		Other adapter cards installed:	
Description of problem:			
Steps necessary to re-create problem:			
1.			
2.			
3.			
4.			

Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							

	Channel 1
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	

Disclaimer

This manual describes the operation of the Gateway ADAC Ultra2 S466 Disk Array Controller. Although efforts have been made to assure the accuracy of the information contained here, Gateway expressly disclaims liability for any error in this information, and for damages, whether direct, indirect, special, exemplary, consequential or otherwise, that may result from such error, including but not limited to the loss of profits resulting from the use or misuse of the manual or information contained therein (even if Gateway has been advised of the possibility of such damages). Any questions or comments regarding this document or its contents should be addressed to Gateway at the address shown on the cover.

Gateway provides this publication “as is” without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability or fitness for a specific purpose.

Some states do not allow disclaimer of express or implied warranties or the limitation or exclusion of liability for indirect, special, exemplary, incidental or consequential damages in certain transactions; therefore, this statement may not apply to you. Also, you may have other rights which vary from jurisdiction to jurisdiction.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Gateway may make improvements and/or revisions in the product(s) and/or the program(s) described in this publication at any time.

Requests for technical information about Gateway products should be made to your Gateway representative.

FCC Regulatory Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and the receiver.
- 3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4) Consult the dealer or an experienced radio/TV technician for help.

Shielded interface cables must be used with this product to ensure compliance with the Class B FCC limits.

Gateway ADAC Ultra2 S466 PCI RAID Controller

Model Number: Series 466

FCC ID Number: IUESER466

Disclaimer

Gateway only certifies that this product will work correctly when this product is used with the same jumper settings, the same system configuration, the same memory module parts, and the same peripherals that were tested by Gateway with this product. The complete list of tested jumper settings, system configurations, peripheral devices, and memory modules are documented in the Gateway Compatibility Report for this product. Call your Gateway sales representative for a copy of the Compatibility Report for this product.

1 Overview

The ADAC Ultra2 S466 PCI RAID controller is a high performance intelligent PCI-to-SCSI host adapter with RAID control capabilities. The ADAC Ultra2 S466 provides reliability, high performance, and fault-tolerant disk subsystem management. The ADAC Ultra2 S466 is an entry level-to mid-range RAID controller solution. ADAC Ultra2 S466 offers a cost-effective way to implement RAID in a server. The ADAC Ultra2 S466 has an Ultra and Wide SCSI channel supporting data transfer rates up to 80 Megabytes per second (MB/s) per channel. The SCSI channel supports up to fifteen non-Ultra SCSI devices.

ADAC Ultra2 S466 Features ADAC Ultra2 S466 features:

- provides a high performance I/O migration path while preserving existing PCI-SCSI software,
 - Performs SCSI data transfers up to 80 MB/s,
 - performs synchronous operation on a wide LVD SCSI bus,
 - allows up to 15 LVD SCSI devices on the wide bus,
 - includes an Intel® i960RP that performs RAID calculations and routing and
 - supports 4, 8, 16, 32, 64, or 128 MB of Fast Page Mode or EDO DRAM cache memory in a SIMM socket used for read and write-back caching and RAID 5 parity generation.
-

SCSI Channel The ADAC Ultra2 S466 upgrade card includes one Fast-20 SCSI channel. The channel is powered by a Symbios Logic 53C895 (Fast-40) SCSI processor.

NVRAM and Flash ROM A 32 KB x 8 NVRAM stores RAID system configuration information. The ADAC Ultra2 S466 firmware is stored in flash ROM for easy upgrade.

SCSI Connectors ADAC Ultra2 S466 has one ultra high density 68-pin external connector for external storage subsystem and one high density 68-pin internal connector.

Single Ended and Differential SCSI Buses

The SCSI standard defines two electrical buses:

- a single ended bus and
 - low-voltage differential bus.
-

Maximum Cable Length for SCSI Standards

Standard	Single ended	LVD	Maximum Number of Drives
SCSI I	6 m	12 m	7
Fast SCSI	6 m	12 m	7
Fast Wide SCSI	6 m	12 m	15
Ultra SCSI	1.5 m	12 m	7
Ultra SCSI	3 m	12 m	3
Wide Ultra SCSI		12 m	15
Wide Ultra SCSI	1.5 m	12 m	7
Wide Ultra SCSI	3 m	12 m	3
Ultra 2 SCSI		25 m	1
Ultra 2 SCSI		12 m	7
Wide Ultra 2 SCSI		25 m	1
Wide Ultra 2 SCSI		12 m	15

SCSI Bus Widths and Maximum Throughput

SCSI Standard	SCSI Bus Width	SCSI Throughput
SCSI I	8 bits	5 MB/s
Fast SCSI	8 bits	10 MB/s
Fast Wide SCSI	16 bits	20 MB/s
Ultra SCSI	8 bits	20 MB/s
Wide Ultra SCSI	16 bits	40 MB/s
Ultra 2 SCSI	8 bits	40 MB/s
Wide Ultra 2 SCSI	16 bits	80 MB/s

Documentation


The ADAC Ultra2 S466 documentation set includes:

Using ADAC Ultra2 S466 Manuals This manual contains the RAID overview, RAID planning, and RAID system configuration information you will need first. Read the *ADAC Ultra2 S466 Hardware Guide* first.

ADAC Ultra2 S466 Configuration Software Guide This manual describes the software configuration utilities that configure and modify RAID systems.

ADAC Ultra2 S466 Operating System Drivers Guide This manual provides detailed information about installing the ADAC Ultra2 S466 operating system drivers.

ADAC Ultra2 S466 Block Diagram

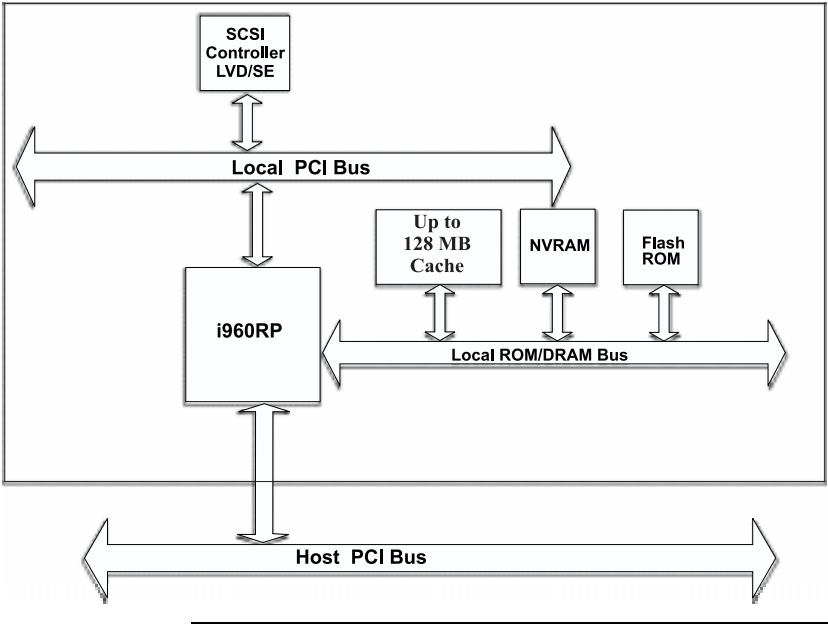

2 Introduction to RAID

RAID (Redundant Array of Independent Disks) is an array of multiple independent hard disk drives that provide high performance and fault tolerance. A RAID disk subsystem improves I/O performance over a computer using only a single drive. The RAID array appears to the host computer as a single storage unit or as multiple logical units. I/O is expedited because several disks can be accessed simultaneously. RAID systems improve data storage reliability and fault tolerance compared to single-drive computers. Data loss because of a disk drive failure can be recovered by reconstructing missing data from the remaining data and parity drives.

RAID Benefits

RAID has gained popularity because it: improves I/O performance, and increases storage subsystem reliability. RAID provides data security through fault tolerance and redundant data storage. The ADAC Ultra2 S466 management software configures and monitors RAID disk arrays.

Improved I/O Although disk drive capabilities have improved drastically, actual performance has improved only three to four times in the last decade. Computing performance has improved over 50 times during the same time period.

Increased Reliability The electromechanical components of a disk subsystem operate more slowly, require more power, and generate more noise and vibration than electronic devices. These factors reduce the reliability of data stored on disks.

In This Chapter

The following topics are discussed:

Major Topic	Subtopic	turn to
Host-based solution		page 7
RAID overview		page 8
	Consistency check	page 8
	Fault tolerance	page 8
	Disk striping	page 9
	Disk spanning	page 10
	Disk mirroring	page 11
	Parity	page 12
	Hot spares	page 13
	Disk rebuilds	page 14
RAID levels		page 19
	Selecting a RAID level	page 20
	RAID 0	page 21
	RAID 1	page 22
	RAID 3	page 23
	RAID 5	page 25
	RAID 10	page 26
	RAID 30	page 27
	RAID 50	page 28

ADAC Ultra2 S466 – Host-Based RAID Solution

RAID products are either:

- host-based or
- SCSI-to-SCSI.

The ADAC Ultra2 S466 controller is a host-based RAID solution. ADAC Ultra2 S466 is a PCI adapter card that is installed in any available PCI expansion slot in a host system.

Host-Based

A host-based RAID product puts all of the RAID intelligence on an adapter card that is installed in a network server. A host-based RAID product provides the best performance. ADAC Ultra2 S466 is part of the file server, so it can transmit data directly across the computer's buses at data transfer speeds up to 132 MB/s.

The available sequential data transfer rate is determined by the following factors:

- the sustained data transfer rate on the motherboard PCI bus,
- the sustained data transfer rate on the i960RP PCI to PCI bridge,
- the sustained data transfer rate of the SCSI controller,
- the sustained data transfer rate of the SCSI devices,
- the number of SCSI channels, and
- the number of SCSI disk drives.

Host-based solutions must provide operating system-specific drivers.

SCSI-to-SCSI

A SCSI-to-SCSI RAID product puts the RAID intelligence inside the RAID chassis and uses a plain SCSI Host Adapter installed in the network server. The data transfer rate is limited to the bandwidth of the SCSI channel. A SCSI-to-SCSI RAID product that has two wide SCSI channels that operate at speeds up to 80 MB/s must squeeze the data into a single wide SCSI (40 MB/s) channel back to the host computer.

In SCSI-to-SCSI RAID products, the hard drive subsystem uses only a single SCSI ID, which allows you to connect multiple drive subsystems to a single SCSI controller.

RAID Overview

RAID (Redundant Array of Independent Disks) is a collection of specifications that describe a system for ensuring the reliability and stability of data stored on large disk subsystems. A RAID system can be implemented in a number of different versions (or RAID Levels). The standard RAID levels are 0, 1, 3, and 5. ADAC Ultra2 S466 supports all standard RAID levels and RAID levels 10, 30, and 50, special RAID versions supported by ADAC Ultra2 S466.

Consistency Check

In RAID, check consistency verifies the correctness of redundant data in an array. For example, in a system with dedicated parity, checking consistency means computing the parity of the data drives and comparing the results to the contents of the dedicated parity drive.

Fault Tolerance


Fault tolerance is achieved through cooling fans, power supplies, and the ability to hot swap drives. ADAC Ultra2 S466 provides hot swapping through the hot spare feature. A hot spare drive is an unused online available drive that ADAC Ultra2 S466 instantly plugs into the system when an active drive fails.

After the hot spare is automatically moved into the RAID subsystem, the failed drive is automatically rebuilt. The RAID disk array continues to handle request while the rebuild occurs.

Disk Striping

Disk striping writes data across multiple disk drives instead of just one disk drive. Disk striping involves partitioning each drive storage space into stripes that can vary in size from 2 KB to 128 KB. These stripes are interleaved in a repeated sequential manner. The combined storage space is composed of stripes from each drive. ADAC Ultra2 S466 supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

For example, in a four-disk system using only disk striping (as in RAID level 0), segment 1 is written to disk 1, segment 2 is written to disk 2, and so on. Disk striping enhances performance because multiple drives are accessed simultaneously; but disk striping does not provide data redundancy.

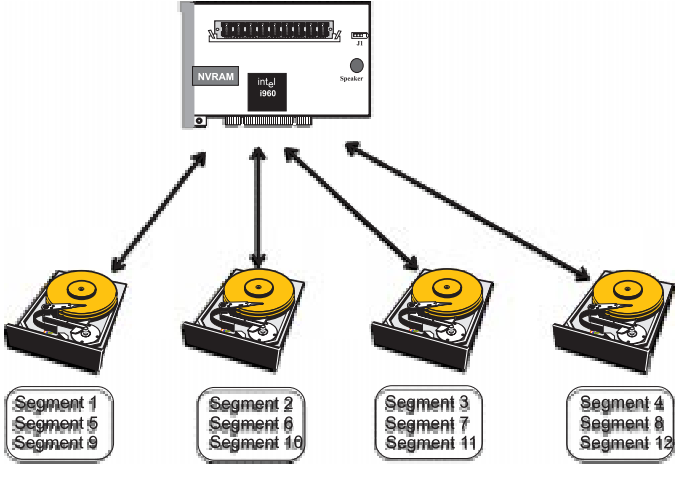

Stripe Width

Stripe width is the number of disks involved in an array where striping is implemented. For example, a four-disk array with disk striping has a stripe width of four.


Stripe Size

The stripe size is the length of the interleaved data segments that ADAC Ultra2 S466 writes across multiple drives. ADAC Ultra2 S466 supports stripe sizes of 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.

Disk Spanning

Disk spanning allows multiple disk drives to function like one big drive. Spanning overcomes lack of disk space and simplifies storage management by combining existing resources or adding relatively inexpensive resources. For example, four 400 MB disk drives can be combined to appear to the operating system as one single 1600 MB drive.

Spanning alone does not provide reliability or performance enhancements. Spanned logical drives must have the same stripe size and must be contiguous. In the following graphic, RAID 1 array is turned into a RAID 10 array.

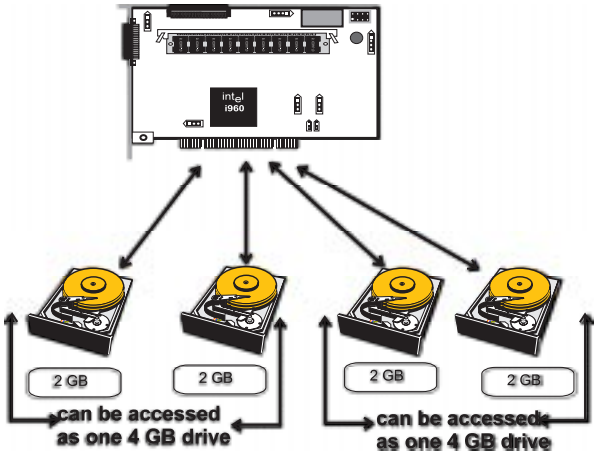


Spanning for RAID 10, RAID 30, or RAID 50

Level	Description
10	Configure RAID 10 by spanning two contiguous RAID 1 logical drives. The RAID 1 logical drives must have the same stripe size.
30	Configure RAID 30 by spanning two contiguous RAID 3 logical drives. The RAID 3 logical drives must have the same stripe size.
50	Configure RAID 50 by spanning two contiguous RAID 5 logical drives. The RAID 5 logical drives must have the same stripe size.
Note:	Spanning two contiguous RAID 0 logical drives does not produce a new RAID level or add fault tolerance. It does increase the size of the logical volume and improves performance by doubling the number of spindles.

Disk Mirroring

With mirroring (used in RAID 1), data written to one disk drive is simultaneously written to another disk drive. If one disk drive fails, the contents of the other disk drive can be used to run the system and reconstruct the failed drive. The primary advantage of disk mirroring is that it provides 100% data redundancy. Since the contents of the disk drive are completely written to a second drive, it does not matter if one of the drives fails. Both drives contain the same data at all times. Either drive can act as the operational drive.

Disk mirroring provides 100% redundancy, but is expensive because each drive in the system must be duplicated.

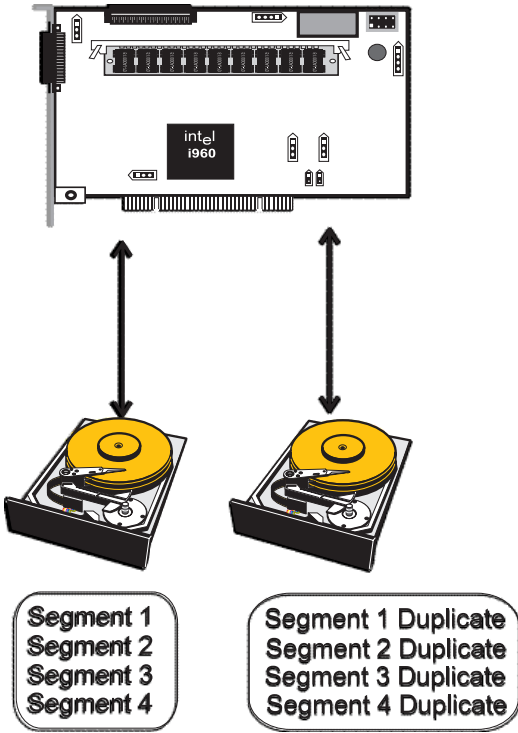

Parity


Parity generates a set of redundancy data from two or more parent data sets. The redundancy data can be used to reconstruct one of the parent data sets. Parity data does not fully duplicate the parent data sets. In RAID, this method is applied to entire drives or stripes across all disk drives in an array. The types of parity are:

Type	Description
Dedicated Parity	The parity of the data on two or more disk drives is stored on an additional disk.
Distributed Parity	The parity data is distributed across all drives in the system.

If a single disk drive fails, it can be rebuilt from the parity and the data on the remaining drives.

RAID level 3 combines dedicated parity with disk striping. The parity disk in RAID 3 is the last logical drive in a RAID set.

RAID level 5 combines distributed parity with disk striping. Parity provides redundancy for one drive failure without duplicating the contents of entire disk drives, but parity generation can slow the write process. A dedicated parity scheme during normal read/write operations is shown below:

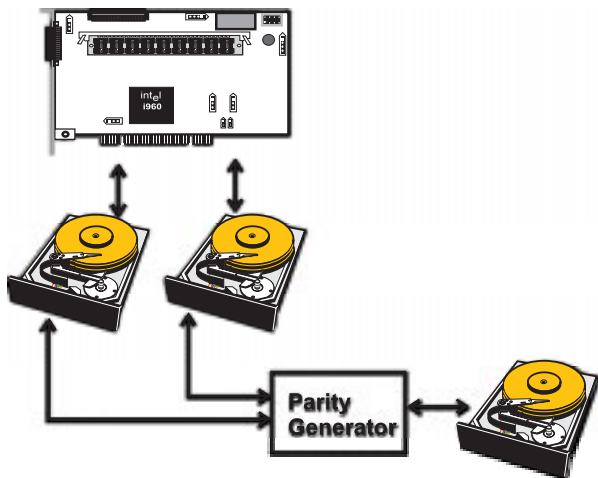

Hot Spares

A hot spare is an extra, unused disk drive that is part of the disk subsystem. It is usually in standby mode, ready for service if a drive fails. Hot spares permit you to replace failed drives without system shutdown or user intervention.

ADAC Ultra2 S466 implements automatic and transparent rebuilds using hot spare drives, providing a high degree of fault tolerance and zero downtime. The ADAC Ultra2 S466 RAID Management software allows you to specify physical drives as hot spares. When a hot spare is needed, the ADAC Ultra2 S466 controller assigns the hot spare that has a capacity closest to and at least as great as that of the failed drive to take the place of the failed drive.

Important

Hot spares are only employed in arrays with redundancy, for example, RAID levels 1, 3, 5, 10, 30, and 50.

A hot spare connected to a specific ADAC Ultra2 S466 controller can only be used to rebuild a drive that is connected to the same controller.

Disk Rebuild

You rebuild a disk drive by recreating the data that had been stored on the drive before the drive failed.

Rebuilding can be done only in arrays with data redundancy such as RAID level 1, 3, 5, 10, 30, and 50.

Standby (warm spare) rebuild is employed in a mirrored (RAID 1) system. If a disk drive fails, an identical drive is immediately available. The primary data source disk drive is the original disk drive.

A hot spare can be used to rebuild disk drives in RAID 1, 3, 5, 10, 30, or 50 systems. If a hot spare is not available, the failed disk drive must be replaced with a new disk drive so that the data on the failed drive can be rebuilt.

The ADAC Ultra2 S466 controller automatically and transparently rebuilds failed drives with user-definable rebuild rates. If a hot spare is available, the rebuild starts automatically when a drive fails. ADAC Ultra2 S466 automatically restarts the system and the rebuild if the system goes down during a rebuild.

Rebuild Rate The rebuild rate is the fraction of the compute cycles dedicated to rebuilding failed drives. A rebuild rate of 100 percent means the system is totally dedicated to rebuilding the failed drive.

The ADAC Ultra2 S466 rebuild rate can be configured between 0% and 100%. At 0%, the rebuild is only done if the system is not doing anything else. At 100%, the rebuild has a higher priority than any other system activity.

Physical Array A RAID array is a collection of physical disk drives governed by the RAID management software. A RAID array appears to the host computer as one or more logical drives.

Logical Drive

A logical drive is a partition in a physical array of disks that is made up of contiguous data segments on the physical disks. A logical drive can consist of any of the following:

- an entire physical array,
 - more than one entire physical array,
 - a part of an array,
 - parts of more than one array, or
 - a combination of any two of the above conditions.
-

Hot Swap

A hot swap is the manual replacement of a defective physical disk unit while the computer is still running. When a new drive has been installed, you must issue a command to rebuild the drive.

SCSI Drive States

A SCSI disk drive can be in one of these states:

State	Description
Online (ONLIN)	The drive is functioning normally and is a part of a configured logical drive.
Ready (READY)	The drive is functioning normally but is not part of a configured logical drive and is not designated as a hot spare.
Hot Spare (HOTSP)	The drive is powered up and ready for use as a spare in case an online drive fails.
Fail (FAIL)	A fault has occurred in the drive placing it out of service.
Rebuild (REB)	The drive is being rebuilt with data from a failed drive.

Logical Drive States

State	Description
Optimal	The drive operating condition is good. All configured drives are online
Degraded	The drive operating condition is not optimal. One of the configured drives has failed or is offline.
Failed	The drive has failed.
Offline	The drive is not available to ADAC Ultra2 S466.

Disk Array Types

The RAID disk array types are:

Type	Description
Software-Based	The array is managed by software running in a host computer using the host CPU bandwidth. The disadvantages associated with this method are the load on the host CPU and the need for different software for each operating system.
SCSI to SCSI	The array controller resides outside of the host computer and communicates with the host through a SCSI adapter in the host. The array management software runs in the controller. It is transparent to the host and independent of the host operating system. The disadvantage is the limited data transfer rate of the SCSI channel between the SCSI adapter and the array controller.
Bus-Based	The array controller resides on the bus (for example, a PCI or EISA bus) in the host computer and has its own CPU to generate the parity and handle other RAID functions. A bus-based controller can transfer data at the speed of the host bus (PCI, ISA, EISA, VL-Bus) but is limited to the bus it is designed for. ADAC Ultra2 S466 resides on a PCI bus, which can handle data transfer at up to 132 MB/s. With ADAC Ultra2 S466, the channel can handle data transfer rates up to 80 MB/s per SCSI channel.

Enclosure Management

Enclosure management is the intelligent monitoring of the disk subsystem by software and/or hardware.

The disk subsystem can be part of the host computer or separate from it. Enclosure management helps you stay informed of events in the disk subsystem, such as a drive or power supply failure. Enclosure management increases the fault tolerance of the disk subsystem.

3 RAID Levels

There are six official RAID levels (RAID 0 through RAID 5). ADAC Ultra2 S466 supports RAID levels 0, 1, 3, and 5. Gateway has designed three additional RAID levels (10, 30, and 50) that provide additional benefits. The RAID levels that ADAC Ultra2 S466 supports are:

RAID Level	Type	turn to
0	Standard	page 21
1	Standard	page 22
3	Standard	page 23
5	Standard	page 25
10	ADAC Ultra2 S466 only	page 26
30	ADAC Ultra2 S466 only	page 27
50	ADAC Ultra2 S466 only	page 28

Select RAID Level To ensure the best performance, you should select the optimal RAID level when you create a system drive. The optimal RAID level for your disk array depends on a number of factors:

- the number of drives in the disk array,
- the capacity of the drives in the array,
- the need for data redundancy, and
- the disk performance requirements.

Selecting a RAID Level The factors you need to consider when selecting a RAID level are listed on the next page


Selecting a RAID Level

Level	Description and Use	Pros	Cons	Max. Drives	Fault Tolerant
0	Data divided in blocks and distributed sequentially (pure striping). Use for non-critical data that requires high performance.	High data throughput for large files	No fault tolerance. All data lost if any drive fails.	One to 32	No
1	Data duplicated on another disk (mirroring). Use for read-intensive fault-tolerant systems	100% data redundancy	Doubles disk space. Reduced performance during rebuilds.	2, 4, 6, or 8	Yes
3	Disk striping with a dedicated parity drive. Use for non-interactive apps that process large files sequentially.	Achieves data redundancy at low cost	Performance not as good as RAID 1	Three to eight	Yes
5	Disk striping and parity data across all drives. Use for high read volume but low write volume, such as transaction processing.	Achieves data redundancy at low cost	Performance not as good as RAID 1	Three to eight	Yes
10	Data striping and mirrored drives.	High data transfers, complete redundancy	More complicated	4, 6, or 8	Yes
30	Disk striping with a dedicated parity drive.	High data transfers, redundancy	More complicated	Six to 32	Yes
50	Disk striping and parity data across all drives.	High data transfers, redundancy	More complicated	Six to 32	Yes

RAID 0

RAID 0 provides disk striping across all drives in the RAID subsystem. RAID 0 does not provide any data redundancy, but does offer the best performance of any RAID level. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the array. The size of each block is determined by the stripe size parameter, set during the creation of the RAID set. RAID 0 offers high bandwidth. By breaking up a large file into smaller blocks, ADAC Ultra2 S466 can use several drives to read or write the file faster. RAID 0 involves no parity calculations to complicate the write operation. This makes RAID 0 ideal for applications that require high bandwidth but do not require fault tolerance.

- Uses** RAID 0 provides high data throughput, especially for large files. Any environment that does not require fault tolerance.
- Strong Points** Provides increased data throughput for large files. No capacity loss penalty for parity.
- Weak Points** Does not provide fault tolerance. All data lost if any drive fails.
- Drives** One to 32

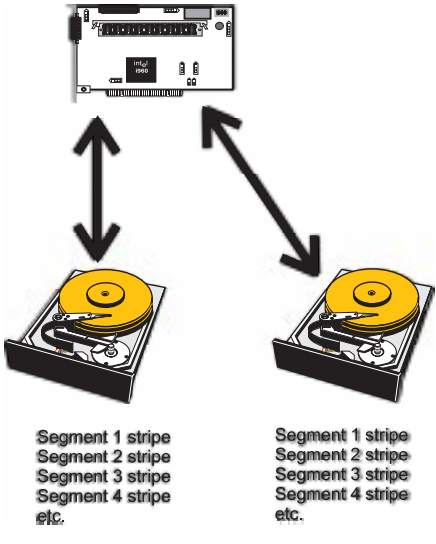

RAID 1


In RAID 1, ADAC Ultra2 S466 duplicates all data from one drive to a second drive. RAID 1 provides complete data redundancy, but at the cost of doubling the required data storage capacity.

Uses Use RAID 1 for small databases or any other environment that requires fault tolerance but small capacity.

Strong Points RAID 1 provides complete data redundancy. RAID 1 is ideal for any application that requires fault tolerance and minimal capacity.

Weak Points RAID 1 requires twice as many disk drives. Performance is impaired during drive rebuilds.

Drives 2, 4, 6, or 8 drives.

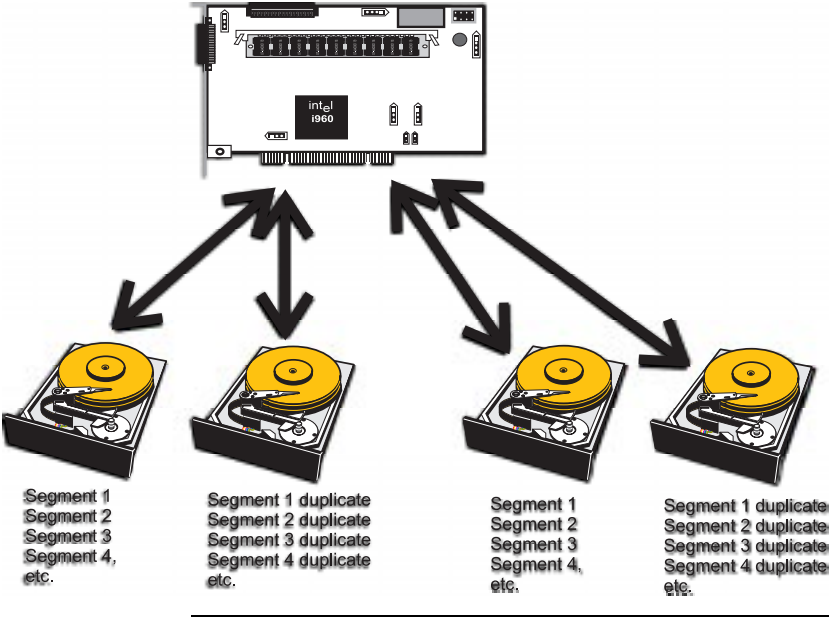

RAID 3

RAID 3 provides disk striping and complete data redundancy through a dedicated parity drive. The stripe size must be 64 KB if RAID 3 is used. RAID 3 handles data at the block level, not the byte level, so it is ideal for networks that often handle very large files, such as graphic images. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. If a single drive fails, a RAID 3 array continues to operate in degraded mode. If the failed drive is a data drive, writes will continue as normal, except no data is written to the failed drive. Reads reconstruct the data on the failed drive by performing an exclusive-or operation on the remaining data in the stripe and the parity for that stripe. If the failed drive is a parity drive, writes will occur as normal, except no parity is written. Reads retrieve data from the disks.

Uses

Best suited for applications such as graphics, imaging, or video that call for reading and writing huge, sequential blocks of data.

Strong Points

Provides data redundancy and high data transfer rates.

Weak Points


The dedicated parity disk is a bottleneck with random I/O.

Drives

Three to eight

Cont'd

RAID 3, Continued

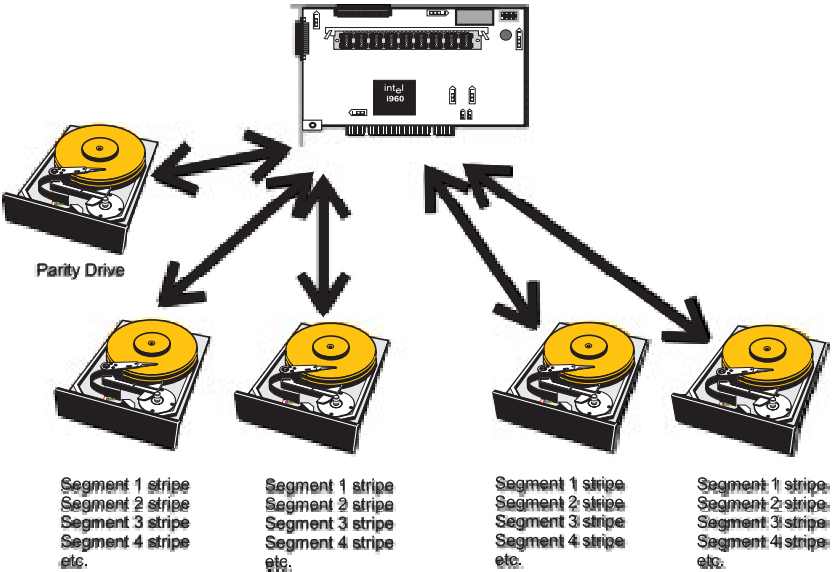

RAID 5 vs RAID 3 You may find that RAID 5 is preferable to RAID 3 even for applications characterized by sequential reads and writes, because ADAC Ultra2 S466 has very robust caching algorithms.

The benefits of RAID 3 disappear if there are many small I/O operations scattered randomly and widely across the disks in the logical drive. The RAID 3 fixed parity disk becomes a bottleneck in such applications. For example: The host attempts to make two small writes and the writes are widely scattered, involving two different stripes and different disk drives. Ideally both writes should take place at the same time. But this is not possible in RAID 3, since the writes must take turns accessing the fixed parity drive. For this reason, RAID 5 is the clear choice in this scenario.

RAID 5

RAID 5 includes disk striping at the byte level and parity. In RAID 5, the parity information is written to several drives. RAID 5 is best suited for networks that perform a lot of small I/O transactions simultaneously.


RAID 5 addresses the bottleneck issue for random I/O operations. Since each drive contains both data and parity numerous writes can take place concurrently. In addition, robust caching algorithms and hardware based exclusive-or assist make RAID 5 performance exceptional in many different environments.

Uses RAID 5 provides high data throughput, especially for large files. Use RAID 5 for transaction processing applications because each drive can read and write independently. If a drive fails, ADAC Ultra2 S466 uses the parity drive to recreate all missing information. Use also for office automation and online customer service that requires fault tolerance. Use for any application that has high read request rates but low write request rates.

Strong Points Provides data redundancy and good performance in most environments

Weak Points Disk drive performance will be reduced if a drive is being rebuilt. Environments with few processes do not perform as well because the RAID overhead is not offset by the performance gains in handling simultaneous processes.

Drives Three to eight

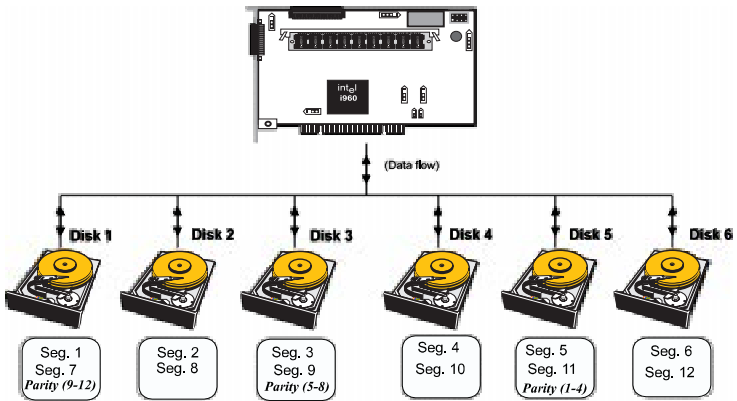

RAID 10

RAID 10 is a combination of RAID 0 and RAID 1. RAID 10 has mirrored drives. RAID 10 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 1 raid set. Each RAID 1 raid set then duplicates its data to its other drive. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set. RAID 10 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 1 array.

Uses

RAID 10 works best for data storage that must have 100% redundancy of mirrored arrays and that also needs the enhanced I/O performance of RAID 0 (striped arrays). RAID 10 works well for medium-sized databases or any environment that requires a higher degree of fault tolerance and moderate to medium capacity.

Strong Points


RAID 10 provides both high data transfer rates and complete data redundancy.

Weak Points

RAID 10 requires twice as many drives as all other RAID levels except RAID 1.

Drives

$2n$, where n is greater than 1.

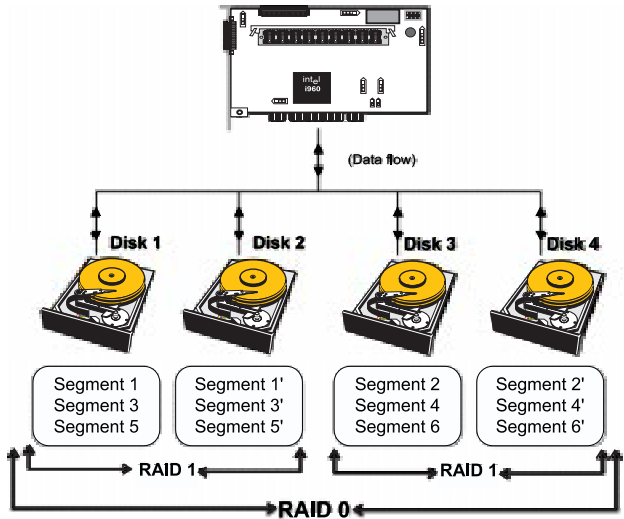


RAID 30

RAID 30 is a combination of RAID 0 and RAID 3. RAID 30 provides high data transfer speeds and high data reliability. RAID 30 is best implemented on two RAID 3 disk arrays with data striped across both disk arrays. RAID 30 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 3 raid set. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in each RAID 3 array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

RAID 30 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 3 array.

- Uses** Use RAID 30 for sequentially written and read data, pre-press and video on demand that requires a higher degree of fault tolerance and medium to large capacity.
- Strong Points** Provides data reliability and high data transfer rates.
- Weak Points** Requires 2 – 4 times as many parity drives as RAID 3.
- Drives** Six to 32

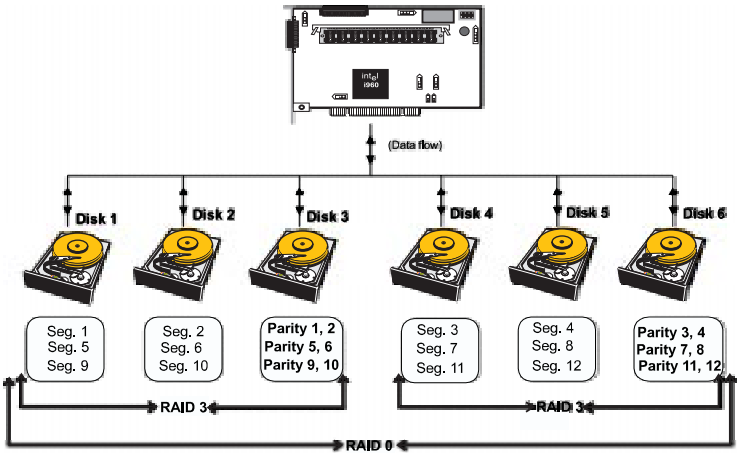


RAID 50

RAID 50 provides the features of both RAID 0 and RAID 5. RAID 50 includes both parity and disk striping across multiple drives. RAID 50 is best implemented on two RAID 5 disk arrays with data striped across both disk arrays. RAID 50 breaks up data into smaller blocks, and then stripes the blocks of data to each RAID 5 raid set. RAID 5 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks of data and parity to each drive in the array. The size of each block is determined by the stripe size parameter, which is set during the creation of the RAID set.

RAID 50 can sustain one to four drive failures while maintaining data integrity if each failed disk is in a different RAID 5 array.

- Uses** RAID 50 works best when used with data that requires high reliability, high request rates, and high data transfer and medium to large capacity.
- Strong Points** RAID 50 provides high data throughput, data redundancy, and very good performance.
- Weak Points** Requires 2 to 4 times as many parity drives as RAID 5.
- Drives** Six to 32

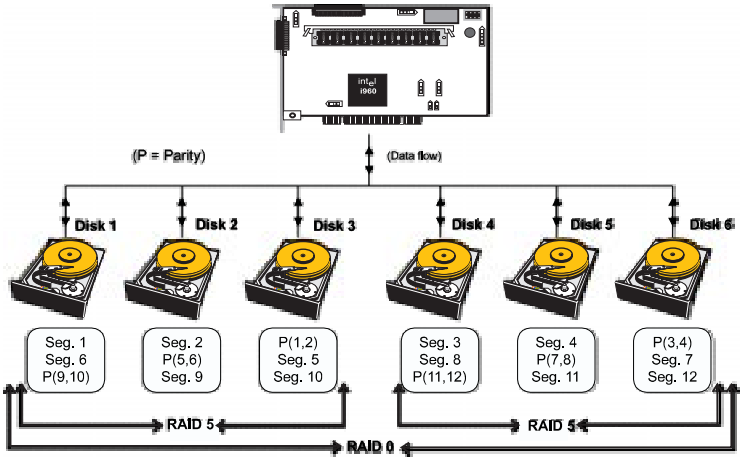

4 ADAC Ultra2 S466 Features

ADAC Ultra2 S466 is a family of high performance intelligent PCI-to-SCSI host adapters with RAID control capabilities. ADAC Ultra2 S466 has a SCSI channel that supports Ultra and Wide SCSI at data transfer rates up to 80 MB/s. The SCSI channel supports up to 15 Wide devices and up to seven non-Wide devices.

In This Chapter Topics described in this chapter include:

- new features,
 - configuration features,
 - hardware architecture features,
 - array performance features,
 - RAID management features,
 - fault tolerance features,
 - utility programs, and
 - software drivers.
-

SMART Technology The ADAC Ultra2 S466 Self Monitoring Analysis and Reporting Technology (SMART) detects up to 70% of all predictable drive failures. SMART monitors the internal performance of all motors, heads, and drive electronics.

Configuration on Disk Configuration on Disk (drive roaming) saves configuration information both in NVRAM on ADAC Ultra2 S466 and on the disk drives connected to ADAC Ultra2 S466. If ADAC Ultra2 S466 is replaced, the new ADAC Ultra2 S466 controller can detect the actual RAID configuration, maintaining the integrity of the data on each drive, even if the drives have changed channel and/or target ID.

Hardware Requirements

ADAC Ultra2 S466 can be installed in an IBM AT®-compatible or EISA computer with a motherboard that has 5 volt PCI expansion slots. The computer must support PCI version 2.0 or later. The computer should have an Intel Pentium, Pentium Pro, or more powerful CPU, a floppy drive, a color monitor and VGA adapter card, and a keyboard. A mouse is recommended.

Configuration Features

Specification	Feature
RAID Levels	0, 1, 3, 5, 10, 30, and 50.
SCSI Channels	1
Maximum number of drives per channel	15
Array interface to host	PCI 2.1
Drive interface	Fast and Wide Ultra SE and LVD
Upgradable cache size	4 MB, 8 MB, 16 MB, 32 MB, 64 MB, or 128 MB
Cache Function	Write-through, write-back, ARA, NRA, RA
Multiple logical drives/arrays per controller	Up to 8 logical drives per controller
Maximum number of ADAC Ultra2 S466 controller per system	12
Online capacity expansion	Yes
Dedicated and pool hot spare	Yes
Flashable firmware	Yes
Hot swap devices supported	Yes
Non-disk devices supported	Yes
Mixed capacity hard disk drives	Yes
Number of 16-bit internal connectors	1
Number of 16-bit external connectors	1
Support for hard disk drives with capacities of more than 8 GB.	Yes
Clustering support (Failover control)	No
Online RAID level migration	Yes
RAID remapping	Yes
No reboot necessary after expansion	Yes
More than 200 Qtags per physical drive	Yes
Hardware clustering support on the board	Yes
User-specified rebuild rate	Yes

Hardware Architecture Features

The ADAC Ultra2 S466 hardware architecture features include:

Specification	Feature
Processor	Intel i960RP3V 33
SCSI Controller	Symbios Logic 53C895
Size of Flash ROM	1 MB
Amount of NVRAM	32 KB
Hardware XOR assistance	No
Direct I/O	Yes
Removable cache memory module	Yes
SCSI bus termination	Active, single-ended or LVD
Double-sided SIMMs	Yes
Auxiliary TermPWR source	No
Direct I/O bandwidth	132 MB/s

Array Performance Features

The ADAC Ultra2 S466 array performance features include:

Specification	Feature
Host data transfer rate	132 MB/s
Drive data transfer rate	80 MB/s
Maximum Scatter/Gathers	26 elements
Maximum size of I/O requests	6.4 MB in 64 KB stripes
Maximum Queue Tags per drive	211
Stripe Sizes	2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB
Maximum number of concurrent commands	255

RAID Management Features

The ADAC Ultra2 S466 RAID management features include:

Specification	Feature
Support for SNMP	Yes
Performance Monitor provided	Yes
Remote control and monitoring	Yes
Event broadcast and event alert	Yes
Hardware connector	RS232C
Drive roaming	Yes
Support for concurrent multiple stripe sizes	Yes
Web-based management tools	Not released yet
Windows NT and NetWare server support via GUI client utility	Yes
SCO Unix, OS/2, and UnixWare server support via GUI client utility	Yes
DMI support	Yes
Management through an industry-standard browser	Not released yet

Fault Tolerance Features

The ADAC Ultra2 S466 fault tolerance features include:

Specification	Feature
Support for SMART	Yes
Enclosure management	SAF-TE compliant
Drive failure detection	Automatic
Drive rebuild using hot spares	Automatic
Parity Generation and checking	Software

Software Utilities

The ADAC Ultra2 S466 software utility features include:

Specification	Feature
Graphical user interface	Yes
Management utility	Yes
Bootup configuration via ADAC Configuration Manager	Yes
Online Read, Write, and cache policy switching	Yes
Internet and intranet support through TCP/IP	Yes

Operating System Software Drivers

Operating System Drivers ADAC Ultra2 S466 includes a DOS software configuration utility and drivers for:

- Windows NT V4.0
- Novell NetWare 4.x,
- OS/2,
- SCO UnixWare 2.1x, and
- SCO Open Server R5.0x

The DOS drivers for ADAC Ultra2 S466 are contained in the firmware on ADAC Ultra2 S466 except the DOS ASPI and CD-ROM drivers. Call your Gateway OEM support representative for information about drivers for other operating systems.

ADAC Ultra2 S466 Specifications

Parameter	Specification
Card Size	7.375" x 4.2" (half length PCI)
Processor	Intel i960RP™ 32-bit RISC processor @ 33 MHz
Bus Type	PCI 2.1
PCI Controller	Intel i960RP
Bus Data Transfer Rate	Up to 132 MB/s
BIOS	AMIBIOS ADAC Ultra2 S466 BIOS
Cache Configuration	4, 8, 16, 32, 64, or 128 MB through a 60 ns × 36 Fast Page Mode or EDO 72-pin SIMM.
Firmware	1 MB × 8 flash ROM
Nonvolatile RAM	32 KB × 8 for storing RAID configuration
Operating Voltage	5.00 V ± 0.25 V
SCSI Controller	One SCSI controller for Ultra and Wide support.
SCSI Data Transfer Rate	Up to 80 MB/s
SCSI Bus	LVD or single-ended
SCSI Termination	Active
Termination Disable	Automatic through cable and device detection
Devices per SCSI Channel	Up to 15 wide or seven non-wide SCSI devices. Up to 6 non-disk SCSI drives per ADAC Ultra2 S466 controller.
SCSI Device Types Supported	Synchronous or Asynchronous. Disk and non-disk.
RAID Levels Supported	0, 1, 3, 5, 10, 30, and 50
SCSI Connectors	One 68-pin internal high-density connector for 16-bit SCSI devices. One ultra-high density 68-pin external connector for Ultra and Wide SCSI.
Serial Port	9-pin RS232C-compatible berg

PCI Bridge/CPU

ADAC Ultra2 S466 uses the Intel i960RP PCI bridge with an embedded 80960JF RISC processor running at 33 MHz. The RP bridge handles data transfers between the primary (host) PCI bus, the secondary PCI bus, cache memory, and the SCSI bus. The DMA controller supports chaining and unaligned data transfers. The embedded 80960JF CPU directs all controller functions, including command processing, SCSI bus transfers, RAID processing, drive rebuilding, cache management, and error recovery.

Cache Memory

ADAC Ultra2 S466 cache memory resides in a memory bank that uses 1 MB x 36, 4 MB x 36, 16 MB x 36, or 32 MB x 36 72-pin 60 or 70 ns Fast Page Mode or EDO SIMMs. Possible configurations are 4, 8, 16, 32, 64, or 128 MB.

ADAC Ultra2 S466 supports write-through or write-back caching, selectable for each logical drive. To improve performance in sequential disk accesses, the ADAC Ultra2 S466 controller uses read-ahead caching by default. You can disable read-ahead caching.

ADAC Ultra2 S466 BIOS

The BIOS resides on a 1 MB × 8 flash ROM for easy upgrade. The ADAC Ultra2 S466 BIOS supports INT 13h calls to boot DOS without special software or device drivers. The ADAC Ultra2 S466 BIOS provides an extensive setup utility that can be accessed by pressing <Ctrl> <M> at BIOS initialization. ADAC BIOS Setup is described in the *ADAC Ultra2 S466 Configuration Software Guide*.

Onboard Speaker

The ADAC Ultra2 S466 controller has an onboard tone generator for audible warnings when system errors occur. Audible warnings can be generated through this speaker. The audible warnings are listed on page 93.

Serial Port

ADAC Ultra2 S466 includes a 9-pin RS232C-compatible serial port berg connector, which can connect to communications devices.

SCSI Bus

ADAC Ultra2 S466 has a Fast and Wide SCSI channel that supports both LVD and single-ended devices with active termination. Synchronous and asynchronous devices are supported. ADAC Ultra2 S466 provides automatic termination disable via cable detection. The SCSI channel supports up to 15 wide or seven non-wide SCSI devices at speeds up to 80 MB/s. ADAC Ultra2 S466 supports up to six non-disk devices per controller.

SCSI Connectors

ADAC Ultra2 S466 has two types of SCSI connectors:

- a 68-pin high density internal connector and
- a 68-pin external ultra-high-density connector.

Both connector *types* can be used for the SCSI channel.

SCSI Termination

ADAC Ultra2 S466 uses active termination on the SCSI bus conforming to Alternative 2 of the SCSI-2 specifications. Termination enable/disable is automatic through cable detection.

SCSI Firmware

The ADAC Ultra2 S466 firmware handles all RAID and SCSI command processing and also supports:

Feature	Description
Disconnect/Reconnect	Optimizes SCSI Bus seek.
Tagged Command Queuing	Multiple tags to improve random access
Scatter/Gather	Multiple address/count pairs
Multi-threading	Up to 255 simultaneous commands with elevator sorting and concatenation of requests per SCSI channel
Stripe Size	Variable for all logical drives: 2 KB, 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, or 128 KB.
Rebuild	Multiple rebuilds and consistency checks with user-definable priority.

RAID Management

RAID management is provided by software utilities that manage and configure the RAID system and ADAC Ultra2 S466, create and manage multiple disk arrays, control and monitor multiple RAID servers, provide error statistics logging, and provide online maintenance. They include:

- ADAC BIOS Setup,
 - Power Console Plus,
 - ADAC Manager
 - General Alert Module.
-

ADAC BIOS Setup BIOS Setup configures and maintains RAID arrays, formats disk drives, and manages the RAID system. It is independent of any operating system. See the *ADAC Ultra2 S466 Configuration Software Guide* for additional information.

Power Console Plus Power Console Plus runs in Windows NT. It configures, monitors, and maintains multiple RAID servers from any network node or a remote location. See the *ADAC Ultra2 S466 Configuration Software Guide* for additional information.

ADAC Configuration Manager This is a character-based utility that works in DOS, SCO Unix SVR3.2 R4.2, SCO UnixWare, OS/2 2.x, OS/2 Warp, and Novell NetWare 3.x and 4.x. See the *ADAC Ultra2 S466 Configuration Software Guide* for additional information.

Fault-Tolerance Features

The ADAC Ultra2 S466 fault-tolerance features are:

- automatic failed drive detection,
 - automatic failed drive rebuild with no user intervention required,
 - hot swap manual replacement without bringing the system down, and
 - SAF-TE compliant enclosure management.
-

Detect Failed Drive The ADAC Ultra2 S466 firmware automatically detects and rebuilds failed drives. This can be done transparently with hot spares.

Hot Swap ADAC Ultra2 S466 supports the manual replacement of a disk unit in the RAID subsystem without system shutdown.

Compatibility

ADAC Ultra2 S466 compatibility issues include:

- server management,
 - SCSI device compatibility, and
 - software compatibility
-

Server Management As an SNMP agent, ADAC Ultra2 S466 supports all SNMP managers and RedAlert from Storage Dimensions.

SCSI Device Compatibility ADAC Ultra2 S466 supports SCSI hard disk drives, CD-ROMs, tape drives, optical drives, DAT drives and other SCSI peripheral devices.

Software All SCSI backup and utility software should work with ADAC Ultra2 S466. Software that has been tested and approved for use with ADAC Ultra2 S466 includes **Cheyenne®**, **CorelSCSI®**, **Arcserve®**, and **Novaback®**. This software is not provided with ADAC Ultra2 S466.

Summary

ADAC Ultra2 S466 Features were discussed in this chapter.

Hardware installation is discussed in Chapter 6.

5 Configuring ADAC Ultra2 S466

Configuring SCSI Physical Drives

SCSI Channel Physical SCSI drives must be organized into logical drives. The arrays and logical drives that you construct must be able to support the RAID level that you select.

Your ADAC Ultra2 S466 adapter has one SCSI channel.

Basic Configuration Rules You should observe the following guidelines when connecting and configuring SCSI devices in a RAID array:

- attach non-disk SCSI devices to a single SCSI channel that does not have any disk drives,
 - you can place up to eight physical disk drives in an array,
 - include all drives that have the same capacity to the same array,
 - make sure any hot spare has a capacity that is at least as large as the largest drive that may be replaced by the hot spare, and
 - when replacing a failed drive, make sure that the replacement drive has a capacity that is at least as large as the drive being replaced.
-

Current Configuration

SCSI ID	Device Description	Termination?
SCSI Channel 1		
0		
1		
2		
3		
4		
5		
6		
8		
9		
10		
11		
12		
13		
14		
15		

Logical Drive Configuration

Logical Drive	RAID Level	Stripe Size	Logical Drive Size	Cache Policy	Read Policy	Write Policy	# of Physical Drives
LD1							
LD2							
LD3							
LD4							
LD5							
LD6							
LD7							
LD8							

Cont'd

	Channel 1
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	
Target ID	
Device Type	
Logical Drive Number/ Drive Number	
Manufacturer/Model Number	
Firmware level	

Configuring Arrays

Organize the physical disk drives in arrays after the drives are connected to ADAC Ultra2 S466, formatted, and initialized. Each array can consist of one to eight physical disk drives.

ADAC Ultra2 S466 supports up to eight arrays. The number of drives in a array determines the RAID levels that can be supported.

Arranging Arrays You must arrange the arrays to provide additional organization for the drive array. You must arrange arrays so that you can create system drives that can function as boot devices.

You can sequentially arrange arrays with an identical number of drives so that the drives in the group are spanned. Spanned drives can be treated as one large drive. Data can be striped across multiple arrays as one logical drive.

You can create spanned drives by using the ADAC BIOS Setup utility or the ADAC Configuration Manager.

Creating Hot Spares Any drive that is present, formatted, and initialized but is not included in a array or logical drive is automatically designated as a hot spare.

You can also designate drives as hot spares via ADAC BIOS Setup, the ADAC Configuration Manager, or Power Console Plus.

Creating Logical Drives Logical drives are arrays or spanned arrays that are presented to the operating system. You must create one or more logical drives.

The logical drive capacity can include all or any portion of a array. The logical drive capacity can also be larger than an array by using spanning. ADAC Ultra2 S466 supports up to 8 logical drives.

Configuration Strategies

The most important factors in RAID array configuration are: drive capacity, drive availability (fault tolerance), and drive performance. You cannot configure a logical drive that optimizes all three factors, but it is easy to choose a logical drive configuration that maximizes one factor at the expense of the other two factors, although needs are seldom that simple.

Maximize Capacity RAID 0 achieves maximum drive capacity, but does not provide data redundancy. Maximum drive capacity for each RAID level is shown below. OEM level firmware that can span up to 4 logical drives is assumed.

RAID Level	Description	Drives Required	Capacity
0	Striping without parity	1 – 32	(Number of disks) X capacity of smallest disk
1	Mirroring	2	(Capacity of smallest disk) X (1)
3	Striping with fixed parity drive	3 – 8	(Number of disks) X (capacity of smallest disk) - (capacity of 1 disk)
5	Striping with floating parity drive	3 – 8	(Number of disks) X (capacity of smallest disk) - (capacity of 1 disk)
10	Mirroring and Striping	4 – 8 (Must be a multiple of 2)	(Number of disks) X (capacity of smallest disk) / (2)
30	RAID 3 and Striping	6 – 32 (Must be a multiple of arrays)	(Number of disks) X (capacity of smallest disk) – (capacity of 1 disk X number of Arrays)
50	RAID 5 and Striping	6 – 32 (Must be a multiple of arrays)	(Number of disks) X (capacity of smallest disk) – (capacity of 1 disk X number of Arrays)

Cont'd

Configuration Strategies, Continued

Maximizing Drive Availability You can maximize the availability of data on the physical disk drive in the logical array by maximizing the level of fault tolerance. The levels of fault tolerance provided by the RAID levels are:

RAID Level	Fault Tolerance Protection
0	No fault tolerance.
1	Disk mirroring, which provides 100% data redundancy.
3	100% protection through a dedicated parity drive.
5	100% protection through striping and parity. The data is striped and parity data is written across a number of physical disk drives.
10	100% protection through data mirroring.
30	100% protection through data striping. All data is striped across all drives in two or more arrays.
50	100% protection through data striping and parity. All data is striped and parity data is written across all drives in two or more arrays.

Maximizing Drive Performance You can configure an array for optimal performance. But optimal drive configuration for one type of application will probably not be optimal for any other application. A basic guideline of the performance characteristics for RAID drive arrays at each RAID level is:

RAID Level	Performance Characteristics
0	Excellent for all types of I/O activity, but provides no data security.
1	Provides data redundancy and good performance.
3	Provides data redundancy.
5	Provides data redundancy and good performance in most environments.
10	Provides data redundancy and excellent performance.
30	Provides data redundancy and good performance in most environments.
50	Provides data redundancy and very good performance.

Assigning RAID Levels

Only one RAID level can be assigned to each logical drive.
The drives required per RAID level is:

RAID Level	Minimum Number of Physical Drives	Maximum Number of Physical Drives
0	One	32
1	Two	Two
3	Three	Eight
5	Three	Eight
10	four	Eight
30	Six	32
50	Six	32

Configuring Logical Drives

After you have installed the ADAC Ultra2 S466 controller in the server and have attached all physical disk drives, perform the following actions to prepare a RAID disk array:

Step	Action
1	Optimize the ADAC Ultra2 S466 controller options for your system. See Chapter 6 for additional information.
2	Perform a low-level format the SCSI drives that will be included in the array and the drives to be used for hot spares.
3	Press <Ctrl> <M> to run the ADAC Configuration Manager.
4	Define and configure one or more logical drives. Select Easy Configuration in ADAC Configuration Manager or select New Configuration to customize the RAID array.
5	Create and configure one or more system drives (logical drives). Select the RAID level, cache policy, read policy, and write policy.
6	Save the configuration.
7	Initialize the system drives. After initialization, you can install the operating system.

Optimizing Data Storage

Data Access Requirements Each type of data stored in the disk subsystem has a different frequency of read and write activity. If you know the data access requirements, you can more successfully determine a strategy for optimizing the disk subsystem capacity, availability, and performance.

Servers that support Video on Demand typically read the data often, but write data infrequently. Both the read and write operations tend to be long. Data stored on a general-purpose file server involves relatively short read and write operations with relatively small files.

Array Functions You must first define the major purpose of the disk array. Will this disk array increase the system storage capacity for general-purpose file and print servers? Does this disk array support any software system that must be available 24 hours per day? Will the information stored in this disk array contains large audio or video files that must be available on demand? Will this disk array contain data from an imaging system?

You must identify the purpose of the data to be stored in the disk subsystem before you can confidently choose a RAID level and a RAID configuration.

Planning the Array Configuration

Answer the following questions about this array:

Question	Answer
Number of physical disk drives in the array	
Purpose of this array. Rank the following factors:	
Maximize drive capacity	
Maximize the safety of the data (fault tolerance)	
Maximize hard drive performance and throughput	
How many hot spares?	
Amount of cache memory installed on ADAC Ultra2 S466	
Are all of the disk drives and the server protected by a UPS?	

Using the Array Configuration Planner The following table lists the possible RAID levels, fault tolerance, and effective capacity for all possible drive configurations for an array consisting of one to eight drives. This table does not take into account any hot spare (standby) drives. You should always have a hot spare drive in case of drive failure. RAID 1 and RAID 10 require 2, 4, 6, or 8 drives. RAID 30 and RAID 50 require at least 6 drives.

Array Configuration Planner

Number of Drives	Possible RAID Levels	Relative Performance	Fault Tolerance	Effective Capacity
1	None	Excellent	No	100%
1	RAID 0	Excellent	No	100%
2	None	Excellent	No	100%
2	RAID 0	Excellent	No	100%
2	RAID 1	Good	Yes	50%
3	None	Excellent	No	100%
3	RAID 0	Excellent	No	100%
3	RAID 3	Good	Yes	67%
3	RAID 5	Good	Yes	67%
4	None	Excellent	No	100%
4	RAID 0	Excellent	No	100%
4	RAID 1	Good	Yes	50%
4	RAID 3	Good	Yes	75%
4	RAID 5	Good	Yes	75%
4	RAID 10	Good	Yes	50%
5	None	Excellent	No	100%
5	RAID 0	Excellent	No	100%
5	RAID 3	Good	Yes	80%
5	RAID 5	Good	Yes	80%
6	None	Excellent	No	100%
6	RAID 0	Excellent	No	100%
6	RAID 1	Good	Yes	50%
6	RAID 3	Good	Yes	83%
6	RAID 5	Good	Yes	83%
6	RAID 10	Good	Yes	50%
6	RAID 30	Good	Yes	67%
6	RAID 50	Good	Yes	67%
7	None	Excellent	No	100%
7	RAID 0	Excellent	No	100%
7	RAID 3	Good	Yes	86%
7	RAID 5	Good	Yes	86%

6 Hardware Installation

Requirements You must have the following:

- a ADAC Ultra2 S466 Controller,
 - a host computer with an available PCI expansion slot,
 - the ADAC Ultra2 S466 Installation diskettes,
 - the necessary SCSI cables and terminators (this depends on the number and type of SCSI devices to be attached),
 - an Uninterruptible Power Supply (UPS) for the entire system, and
 - Fast SCSI 2 or Wide SCSI hard disk drives and other SCSI devices, as desired.
-

Optional Equipment You may also want to install SCSI cables that connect ADAC Ultra2 S466 to external SCSI devices.

Checklist

Check	Step	Action
<input type="checkbox"/>	1	Turn all power off to the server and all hard disk drives, enclosures, and system, components.
<input type="checkbox"/>	2	Prepare the host system. See the host system technical documentation.
<input type="checkbox"/>	3	Determine the SCSI ID and SCSI termination requirements.
<input type="checkbox"/>	4	Make sure the jumper settings on the ADAC Ultra2 S466 controller are correct. Install the cache memory.
<input type="checkbox"/>	5	Install the ADAC Ultra2 S466 card in the server and attach the SCSI cables and terminators as needed. Make sure Pin 1 on the cable matches Pin 1 on the connector. Make sure that the SCSI cables you use conform to all SCSI specifications.
<input type="checkbox"/>	6	Perform a safety check. Make sure all cables are properly attached. Make sure the ADAC card is properly installed. Turn power on after completing the safety check.
<input type="checkbox"/>	7	Install and configure the ADAC software utilities and drivers.
<input type="checkbox"/>	8	Format the hard disk drives as needed.
<input type="checkbox"/>	9	Configure system drives (logical drives).
<input type="checkbox"/>	10	Initialize the logical drives.
<input type="checkbox"/>	11	Install the network operating system drivers as needed.

Installation Steps

ADAC Ultra2 S466 provides extensive customization options. If you need only basic ADAC Ultra2 S466 features and your computer does not use other adapter cards with resource settings that may conflict with ADAC Ultra2 S466 settings, even custom installation can be quick and easy.

Step	Action	Additional Information
1	Unpack the ADAC Ultra2 S466 controller and inspect for damage. Make sure all items are in the package.	If damaged, call your Gateway OEM support representative.
2	Turn the computer off and remove the cover.	
3	Make sure the motherboard jumper settings are correct.	
4	Install cache memory on the ADAC Ultra2 S466 card.	4 MB minimum cache memory is required.
5	Check the jumper settings on the ADAC Ultra2 S466 controller.	See page 57 for the ADAC Ultra2 S466 jumper settings.
6	Set SCSI termination.	
7	Install the ADAC Ultra2 S466 card.	
8	Connect the SCSI cables to SCSI devices.	
9	Set the target IDs for the SCSI devices.	
10	Replace the computer cover and turn the power on.	Be sure the SCSI devices are powered up before or at the same time as the host computer.
11	Run ADAC BIOS Setup.	Optional.
12	Install software drivers for the desired operating systems.	

Each step is described in detail below.

Cont'd

Step 1 Unpack

Unpack and install the hardware in a static-free environment. The ADAC Ultra2 S466 controller card is packed inside an anti-static bag between two sponge sheets. Remove the controller card and inspect it for damage. If the card appears damaged, or if any item listed below is missing, contact your OEM support representative. The ADAC Ultra2 S466 Controller is also shipped with:

- the *ADAC Ultra2 S466 Configuration Software Guide*,
 - the *ADAC Ultra2 S466 Operating System Drivers Guide*,
 - the *ADAC Ultra2 S466 Hardware Guide*,
 - the software license agreement,
 - the ADAC Ultra2 S466 Configuration Utilities diskette for DOS, and
 - the warranty registration card.
-

Step 2 Power Down

Turn off the computer and remove the cover. Make sure the computer is turned off and disconnected from any networks before installing the controller card.

Step 3 Configure Motherboard

Make sure the motherboard is configured correctly for ADAC Ultra2 S466. ADAC Ultra2 S466 is essentially a SCSI Controller. Each ADAC Ultra2 S466 card you install will require an available PCI IRQ; make sure an IRQ is available for each controller you install.

Step 4 Install Cache Memory

Important

A minimum of 4 MB of cache memory is required. The cache memory must be installed before ADAC Ultra2 S466 is operational. Bank0 must be populated by a SIMM.

Fast Page Mode SIMM FPM SIMMs are specified below. The DRAM technology in the SIMM must have equal row and column size.

Memory Type	Volt	Speed	Parity	Type	BBU Support	Bank I	Total Memory
FPM	5 V	60ns	Yes	Single-sided	No	1M x 36	4MB
FPM	5 V	60ns	Yes	Double-sided	No	2M x 36	8MB
FPM	5 V	60ns	Yes	Single-sided	No	4M x 36	16MB
FPM	5 V	60ns	Yes	Double-sided	No	8M x 36	32 MB
FPM	5 V	60ns	Yes	Single-sided	No	16M x 36	64 MB
FPM	5 V	60ns	Yes	Double-sided	No	32M x36	128 MB

EDO SIMM EDO SIMMs are specified below. The DRAM technology in the SIMM must have equal row and column size.

Memory Type	Volt	Speed	Parity	Type	BBU Support	Bank I	Total Memory
EDO	5 V	50ns	Yes	Single-sided	No	1M x 36	4MB
EDO	5 V	50ns	Yes	Double-sided	No	2M x 36	8MB
EDO	5 V	50ns	Yes	Single-sided	No	4M x 36	16MB
EDO	5 V	50ns	Yes	Double-sided	No	8M x 36	32 MB
EDO	5 V	50ns	Yes	Single-sided	No	16M x 36	64 MB
EDO	5 V	50ns	Yes	Double-sided	No	32M x36	128 MB

Important

If the SIMM DRAM is not installed when you receive your ADAC Ultra2 S466 RAID controller, you must call the manufacturer for a list of approved SIMM vendors. You must only use an approved SIMM.

Cont'd


Step 4 Install Cache Memory, Continued

Supported Cache Memory Configurations

Cache	Bank0 (Even)
4 MB	Single-sided 1 MB x 36 Fast Page Mode
8 MB	Double-sided 1 MB x 36 Fast Page Mode
16 MB	Single-sided 4 MB x 36 Fast Page Mode
32 MB	Double-sided 4 MB x 36 Fast Page Mode
64 MB	Single-sided 16 MB x 36 Fast Page Mode
128 MB	Double-sided 32 MB x 36 Fast Page Mode

Install cache memory on the ADAC Ultra2 S466 card in the SIMM socket. This socket accepts a 72-pin x 36 Fast Page Mode or EDO SIMM as specified on the previous page.

Lay the controller card component-side up on a clean static-free surface and install the SIMM. The SIMM clicks into place, indicating proper seating in the socket, as shown below.

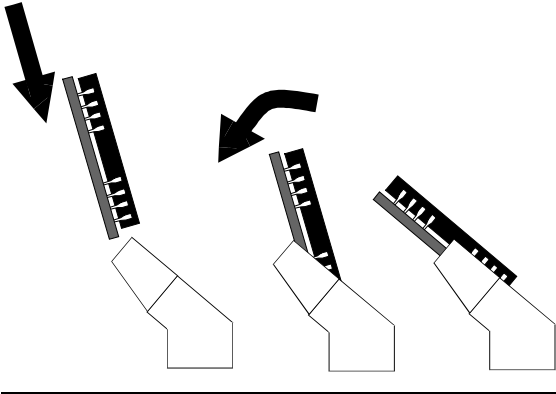


Step 5 Set Jumpers

Make sure the jumper settings on the ADAC Ultra2 S466 card are correct. The jumpers and connectors are:

Connector	Description	Type
J2	Internal SCSI Wide (16-bit) connector	68-pin connector
J6	External SCSI 2 Wide (16-bit) connector	68-pin connector
J5	Disk Activity LED	four-pin connector
J1	Termination Enable Control	3-pin header
J3	I2C connector	4-pin header
J7	Cache memory SIMM socket	72-pin connector
J4	Serial port connector	9-pin connector
J8	Short Pins 1-2.	3-pin header
J9		
J10	Short Pins 1-2	3-pin header
J11	i960RP configuration	2-pin header
J12	i960RP configuration	2-pin header

ADAC Ultra2 S466 Card Layout

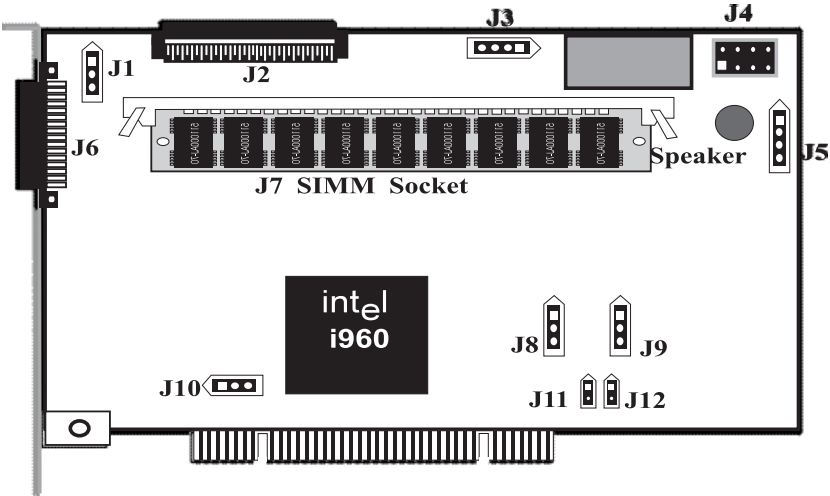

Cont'd

Step 5 Set Jumpers, Continued


J1 Termination Enable J1 is a three-pin header that specifies hardware or software control of SCSI termination.

Type of SCSI Termination	J1 Setting
Software control of SCSI termination via drive detection.	Short Pins 1-2
Permanently disable all onboard SCSI termination.	Short Pins 2-3
Permanently enable all onboard SCSI termination.	OPEN

J3 I2C Interface Connector J3 is a four-pin header that allows the i960JX core processor to serve as a master and slave device that resided on the I2C bus when used with the I2C Bus Interface Unit. Attach a four-wire cable from J3 to the I2C Bus Interface Unit.

J4 Serial Port J4 is a 9-pin berg that attaches to a serial cable. The pinout:

Pin	Signal Description	Pin	Signal Description
1	Carrier Detect	2	Data Set Ready
3	Receive Data	4	Request to Send
5	Transmit Data	6	Clear to Send
7	Data Terminal Ready	8	Ring Indicator
9	Ground		

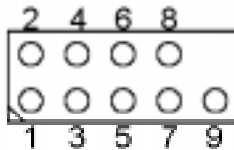

J5 Hard Disk LED J5 is a four-pin connector that attaches to a cable that connects to the hard disk LED mounted on the computer enclosure. The LED indicates data transfers.

Pin	Description
1	High
2	SCSI Activity Signal
3	SCSI Activity Signal
4	High

Cont'd

Step 5 Set Jumpers, Continued

J8, J9 J8 and J9 are 3-pin jumpers. The factory setting is Pins 1-2 shorted. Pins 1-2 should always be shorted for J8 and J9.


J10 J10 is a 3-pin jumper. Make sure Pins 1-2 of J10 are always shorted. This is the factory setting.

J11, J12 i960RP Initialization J11 and J12 are 2-pin bergs that specify the i960RP mode when initially powered up. Mode 3 is used for normal operation (J11 and J12 OPEN). All other modes are used for test purposes only.

I960RP Initialization Mode	J19 Setting	J22 Setting
0	Short Pins 1-2	Short Pins 1-2
1	Short Pins 1-2	OPEN
2	OPEN	Short Pins 1-2
3	OPEN	OPEN

Step 6 Set Termination

You must terminate the SCSI bus properly. Set termination at both ends of the SCSI cable. The SCSI bus is an electrical transmission line and must be terminated properly to minimize reflections and losses. Termination should be set at each end of the SCSI cable(s), as shown below. Termination is always enabled, regardless of the configuration. However, you can override this setting by setting another state.

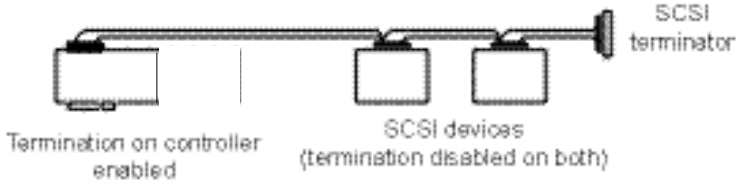

Setup using one connector for one channel

For a disk array, set SCSI bus termination so that removing or adding a SCSI device does not disturb termination. An easy way to do this is to connect the ADAC Ultra2 S466 card to one end of the SCSI cable and to connect an external terminator module at the other end of the cable. The connectors between the two ends can connect SCSI devices. Disable termination on the SCSI devices. See the manual for each SCSI device to disable termination.


SCSI Termination

The SCSI bus is an electrical transmission line and it must be terminated properly to minimize reflections and losses. You complete the SCSI bus by setting termination at both ends.

You can let ADAC Ultra2 S466 automatically provide SCSI termination at one end of the SCSI bus. You can terminate the other end of the SCSI bus by attaching an external SCSI terminator module to the end of the cable or by attaching a SCSI device that internally terminates the SCSI bus at the end of the SCSI channel.

Selecting a Terminator Use standard external SCSI terminators on a SCSI channel operating at 10 MB/s or higher synchronous data transfer.


Terminating Internal SCSI Disk Arrays Set the termination so that SCSI termination and termination power are intact when any disk drive is removed from a SCSI channel, as shown below:

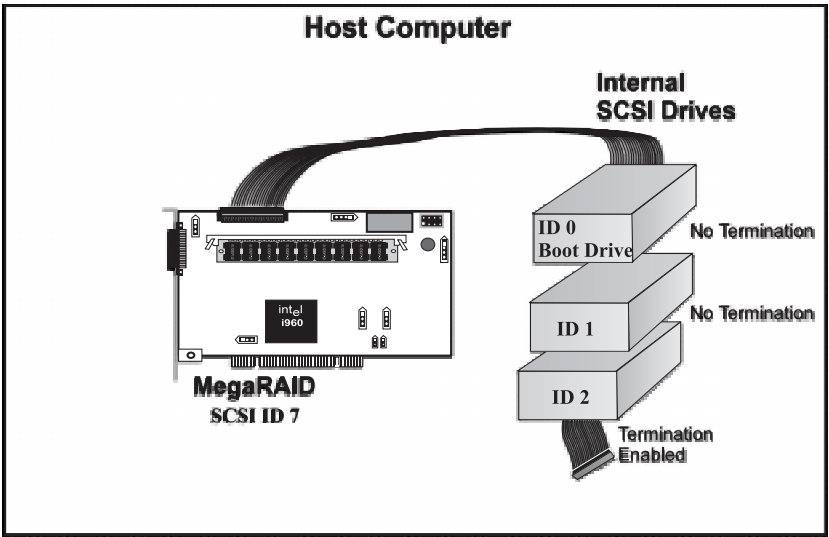


Cont'd

SCSI Termination, Continued

Terminating External Disk Arrays In most array enclosures, the end of the SCSI cable has an independent SCSI terminator module that is not part of any SCSI drive. In this way, SCSI termination is not disturbed when any drive is removed, as shown below:

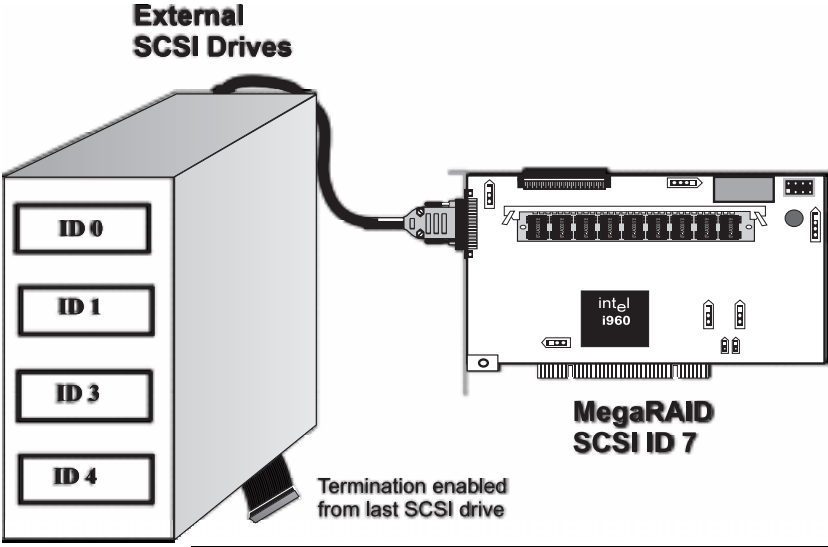

Terminating Internal and External Disk Arrays You can use both internal and external drives with ADAC Ultra2 S466. You still must make sure that the proper SCSI termination and termination power is preserved, as shown below:

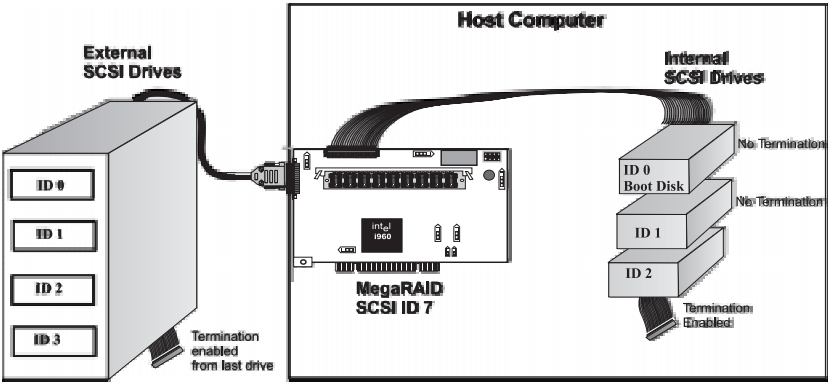

Cont'd

SCSI Termination, Continued


Connecting Non-Disk SCSI Devices SCSI Tape drives, scanners, CD-ROM drives, and other non-disk drive devices must each have a unique SCSI ID regardless of the SCSI channel they are attached to. The general rule for Unix systems is:

- tape drive set to SCSI ID 2, and
- CD-ROM drive set to SCSI ID 5.

Make sure that no hard disk drives are attached to the same SCSI channel as the non-disk SCSI devices. Drive performance will be significantly degraded if SCSI hard disk drives are attached to this channel.


Warning

Since all non-disk SCSI devices are single ended, it is not advisable to attach a non-disk device to a ADAC Ultra2 S466 RAID controller if LVD disk drives are also attached because the SCSI bus will then operate in single ended mode.

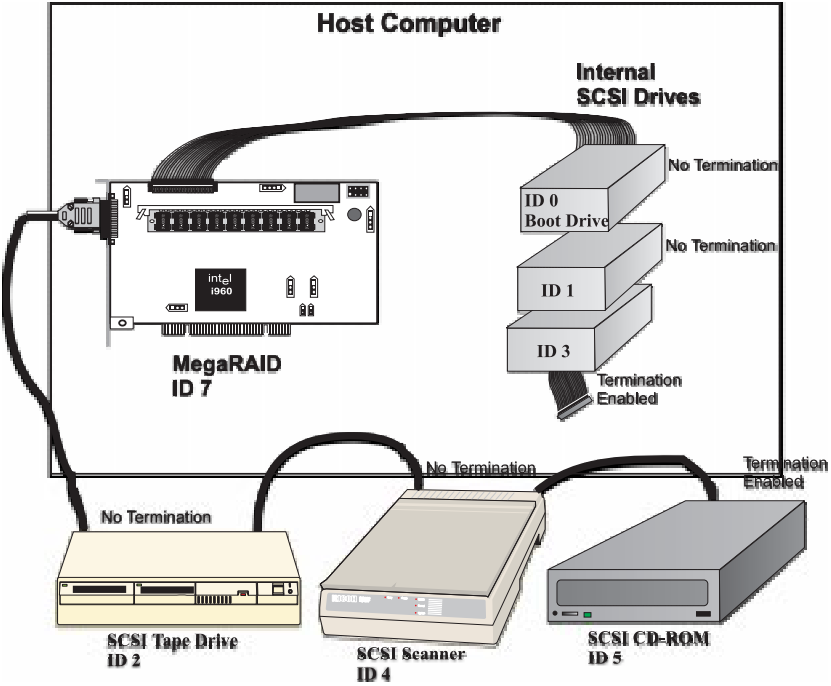


Step 7 Install ADAC Ultra2 S466

Choose a 5 V PCI slot and align the ADAC Ultra2 S466 controller card bus connector to the slot. Press down gently but firmly to make sure that the card is properly seated in the slot. The bottom edge of the controller card should be flush with the slot.

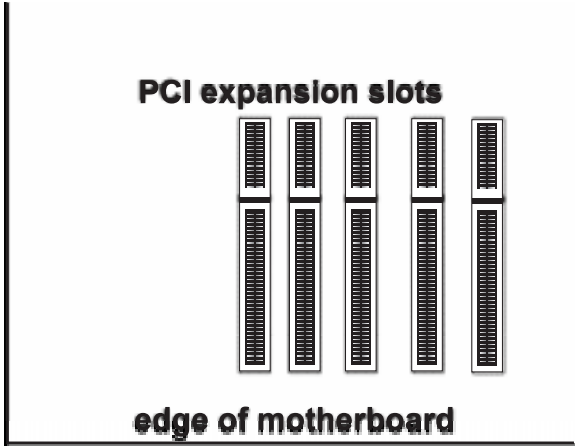


Insert the ADAC Ultra2 S466 card in a PCI slot as shown below:

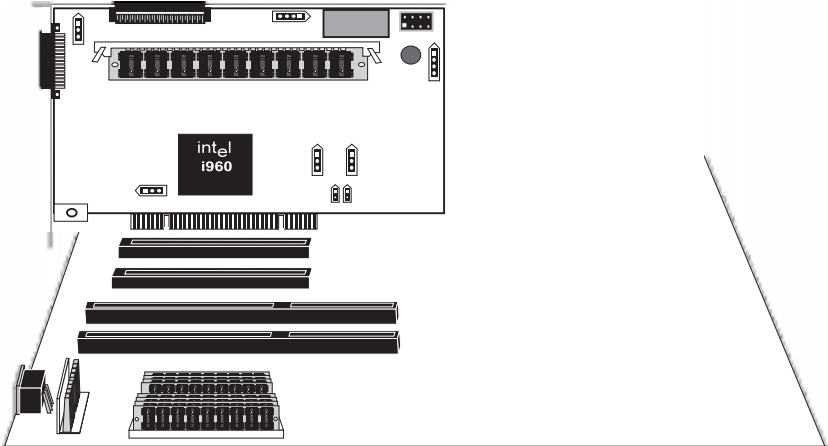

Screw the bracket to the computer frame.

Step 8 Connect SCSI Cables

Connect SCSI cables to SCSI devices. ADAC Ultra2 S466 provides two SCSI connectors: J2, the SCSI channel internal high-density 68-pin connector for Wide (16-bit) SCSI and J6, the SCSI channel external ultra high-density 68-pin connector for Wide (16-bit) SCSI.

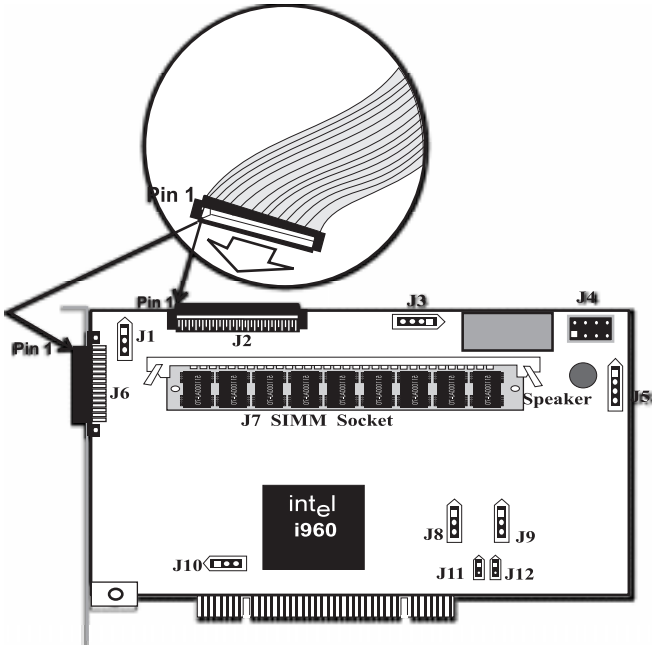

Connect SCSI Devices When connecting SCSI devices:

Step	Action
1	Disable termination on any SCSI device that does <i>not</i> sit at the end of the SCSI bus.
2	Configure all SCSI devices to supply TermPWR.
3	Set proper target IDs (TIDs) for all SCSI devices.
4	The cable length should not exceed three meters for Fast SCSI (10 MB/s) devices or single ended 1.5 meters for Ultra SCSI devices. The cable length can be up to 12 meters for LVD devices.
5	The cable length should not exceed six meters for non-Fast SCSI devices.

Cont'd

Step 8 Connect SCSI Cables, Continued

Cable Suggestions System throughput problems can occur if SCSI cable use is not maximized. You should:

- you can use cables up to 12 meters for LVD devices.
 - for single ended SCSI devices, use the shortest SCSI cables (no more than 3 meters for Fast SCSI, no more than 1.5 meters for an 8-drive Ultra SCSI system and no more than 3 meters for a 6-drive Ultra SCSI system),
 - use active termination,
 - avoid clustering the cable nodes,
 - cable stub length should be no more than 0.1 meter (4 inches),
 - route SCSI cables carefully,
 - use high impedance cables,
 - do not mix cable types (choose either flat or rounded and shielded or non-shielded), and
 - ribbon cables have fairly good cross-talk rejection characteristics.
-

Step 9 Set Target IDs

Set target identifiers (TIDs) on the SCSI devices. Each device in a specific SCSI channel must have a unique TID in that channel. Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs *regardless of the channel where they are connected*. See the documentation for each SCSI device to set the TIDs. The ADAC Ultra2 S466 controller automatically occupies TID 7 in the SCSI channel. Eight-bit SCSI devices can only use the TIDs from 0 to 6. 16-bit devices can use the TIDs from 0 to 15. The arbitration priority for a SCSI device depends on its TID.

Priority	Highest											Lowest
TID	7	6	5	...	2	1	0	15	14	...	9	8

Important

Non-disk devices (CD-ROM or tapes) should have unique SCSI IDs regardless of the channel they are connected to.

Device Identification on ADAC Ultra2 S466

All logical drives on each SCSI bus are identified to the host as ID 0. Differentiate the drives with Logical Unit Identifiers (LUNs). ID 0 cannot be used for non-disk devices because they are limited to IDs 1 through 6. The ADAC Ultra2 S466 is limited to eight logical drives because LUNs are used to present logical drives. The SCSI-2 ANSI specification has a limit of eight LUNs per ID. The SCSI-3 specification increased the number of LUNs to 16. An example of ID mapping follows.

Example of ADAC Ultra2 S466 ID Mapping

ID	Channel 1
0	A1-1
1	A2-1
2	CD
3	A2-5
4	CD
5	A4-1
6	Optical
7	Reserved
8	A5-2
9	A5-6
10	A6-1
11	A6-4
12	A6-7
13	A7-2
14	A7-5
15	A7-8

As Presented to the Operating System

ID	LUN	Device	ID	LUN	Device
0	0	Disk (A1-X)	1	0	Scanner
0	1	Disk (A2-X)	2	0	CD
0	2	Disk (A3-X)	3	0	Tape
0	3	Disk (A4-X)	4	0	CD
0	4	Disk (A5-X)	5	0	Tape
0	5	Disk (A6-X)	6	0	Optical
0	6	Disk (A7-X)			
0	7	Disk (A8-X)			

Step 10 Power Up

Replace the computer cover and reconnect the AC power cords. Turn power on to the host computer. Set up the power supplies so that the SCSI devices are powered up at the same time as or before the host computer. If the computer is powered up before a SCSI device, the device might not be recognized.

During boot, the ADAC Ultra2 S466 BIOS message appears:

```
ADAC Ultra2 S466 Disk Array Adapter BIOS Version x.xx date  
Firmware Initializing... [ Scanning SCSI Device ...(etc)... ]
```

The firmware takes several seconds to initialize. During this time the adapter will scan the SCSI channel. When ready, the following appears:

```
Host Adapter-1 Firmware Version x.xx DRAM Size 4 MB  
0 Logical Drives found on the Host Adapter  
0 Logical Drives handled by BIOS  
Press <Ctrl><M> to run ADAC Ultra2 S466 BIOS Configuration Utility
```

The <Ctrl> <M> utility prompt times out after several seconds. The ADAC Ultra2 S466 host adapter (controller) number, firmware version, and cache DRAM size are displayed in the second portion of the BIOS message. The numbering of the controllers follows the PCI slot scanning order used by the host motherboard.

Step 11 Run ADAC BIOS Setup

Press <Ctrl> <M> to run the ADAC BIOS Setup utility. See the *ADAC Ultra2 S466 Configuration Software Guide* for information about running BIOS Setup.

Step 12 Install Operating System Driver

The ADAC Ultra2 S466 ASPI driver can be used in the DOS and Windows 95 environments. The DOS ASPI driver supports:

- up to six non-disk SCSI devices (each SCSI device must use a unique SCSI ID regardless of the SCSI channel it resides on. SCSI IDs 1 through 6 are valid,
 - up to 12 ADAC Ultra2 S466 adapters, and
 - virtual DMA services (VDS) for up to eight logical drives.
-

ASPI Driver *CorelSCSI, Novaback, and PC Tools are not provided with ADAC Ultra2 S466.*

Drivers	Devices Supported	Application Software	Features
ADACASPI.SYS	CD-ROM, tape, optical drives, etc.	CorelSCSI, Novaback, PC Tools.	VDS

Copy ADACASPI.SYS to your hard disk drive. Add the following line to CONFIG.SYS:

```
device=<path>\ADACASPI.SYS /v
```

Parameters The ADACASPI.SYS parameters are:

Parameter	Description
/h	INT 13h support is not provided.
/v	Verbose mode. All message are displayed on the screen.
/a	Physical drive ccess mode. Direct access to physical drives is permitted.
/q	Quiet mode. All message except error message are suppressed.

Cont'd

Step 12 Install Operating System Driver, Continued

CD-ROM Driver A device driver is provided with ADAC Ultra2 S466 for CD-ROM drives operating under DOS, Windows 3.x, and Windows 95. The driver filename is ADACDROM.SYS.

The ADACASPI.SYS ASPI manager must be added to the CONFIG.SYS file before you can install the CD-ROM device driver. See the instructions on the previous page for adding the ADACASPI.SYS driver. Copy ADACDROM.SYS to the root directory of the C: drive. Add the following line to CONFIG.SYS, making sure it is preceded by the line for ADACASPI.SYS:

```
DEVICE=C:\ADACDROM.SYS
```

Add the following to AUTOEXEC.BAT. Make sure it precedes the SMARTDRV.EXE line.

```
MSCDEX /D:MSCD001
```

MSCDEX is the CD-ROM drive extension file that is supplied with MS-DOS® and PC-DOS® Version 5.0 or later. See your DOS manual for the command line parameters for MSCDEX.

Summary

This chapter discussed hardware installation. Configure the RAID system via software configuration utilities. See the *ADAC Ultra2 S466 Configuration Software Guide* for all information about ADAC Ultra2 S466 software utilities. The utility programs for configuring ADAC Ultra2 S466 are:

Configuration Utility	Operating System
ADAC BIOS Setup	independent of the operating system
ADAC Configuration Manager	DOS SCO UNIX SVR3.2 Novell NetWare 3.x, 4.x SCO UnixWare
Power Console Plus	Microsoft Windows NT, Windows 95

7 Troubleshooting

Problem	Suggested Solution
The system hangs during the boot process after installation.	Make sure the SCSI BIOS on the motherboard has been disabled.
The system hangs during the boot process after installation.	Make sure the ADAC Ultra2 S466 adapter card is installed in the proper PCI expansion slot. It must be installed in the RAID Upgrade PCI slot..
Some operating systems do not load in a computer with a ADAC Ultra2 S466 adapter.	<p>Check the system BIOS configuration for PCI interrupt assignments. Make sure some Interrupts are assigned for PCI.</p> <p>Initialize the logical drive before installing the operating system.</p>
One of the hard drive in the array fails often	<p>Check the drive error counts using Power Console Plus.</p> <p>Format the drive.</p> <p>Rebuild the drive</p> <p>If the drive continues to fail, replace the drive with another drive with the same capacity.</p>
Pressed <Ctrl> <M>. Ran ADACConf.exe and tried to make a new configuration. The system hangs when scanning devices.	<p>Check the drives IDs on each channel to make sure each device has a different ID.</p> <p>Check the termination. The device at the end of the channel must be terminated.</p> <p>Replace the drive cable.</p>
Multiple drives connected to ADAC Ultra2 S466 using the same power supply. There is a problem spinning the drives all at once.	Set the drives to spin on command. This will allow ADAC Ultra2 S466 to spin two devices simultaneously.
Pressing <Ctrl> <M> or running ADACConf.exe does not display the Management Menu.	These utilities require a color monitor.
At system power-up with the ADAC Ultra2 S466 installed, the screen display is garbled or does not appear at all.	For proper cache memory operation, you should install at least 4 MB of memory in ADAC Ultra2 S466.
Cannot flash or update the EEPROM.	You may need a new EEPROM.

Problem	Suggested Solution
<p>Firmware Initializing... appears and remains on the screen.</p>	<p>Make sure that TERMPWR is being properly provided to each peripheral device populated channel.</p> <p>Make sure that each end of the channel chain is properly terminated using the recommended terminator type for the peripheral device. The channel is automatically terminated at the ADAC Ultra2 S466 card if only one cable is connected to a channel.</p> <p>Make sure (on a channel basis) only two type of cables are connected at any one time.</p> <p>If using an FPM SIMM, make sure the RAS Access Time parameter is 70 ns.</p> <p>Make sure that the ADAC Ultra2 S466 controller is properly seated in the PCI slot.</p>
<p>What SCSI IDs can a non-hard disk device have and what is maximum number allowed per adapter?</p>	<p>Non-hard disk devices can only accommodate SCSI IDs 1, 2, 3, 4, 5 or 6, regardless of the channel used. A maximum of six non-hard disk devices are supported per ADAC Ultra2 S466 adapter.</p>
<p>Why does a failed logical array still get a drive assignment?</p>	<p>To maintain the DOS Path statement integrity.</p>

BIOS Boot Error Messages

Message	Problem	Suggested Solution
Adapter BIOS Disabled. No Logical Drives Handled by BIOS	The ADAC Ultra2 S466 BIOS is disabled. Sometimes the BIOS is disabled to prevent booting from the BIOS.	Enable the BIOS via the ADAC Ultra2 S466 BIOS Setup utility.
Host Adapter at Baseport xxxx Not Responding	The BIOS cannot communicate with the adapter firmware.	Make sure ADAC Ultra2 S466 is properly installed.
No ADAC Ultra2 S466 Adapter	The BIOS cannot communicate with the adapter firmware.	Make sure ADAC Ultra2 S466 is properly installed.
Configuration of NVRAM and drives mismatch. Run View/Add Configuration option of Configuration Utility. Press any key to run the Configuration Utility.	The configuration stored in the ADAC Ultra2 S466 adapter does not match the configuration stored in the drives.	Press a key to run ADAC Configuration Manager. Choose View/Add Configuration from the Configure menu. Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.
1 Logical Drive Failed	A logical drive failed to sign on.	Make sure all physical drives are properly connected and are powered on. Run ADAC Configuration Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.

Message	Problem	Suggested Solution
X Logical Drives Degraded	x number of logical drives signed on in a degraded state.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run ADAC Configuration Manager to find if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>
1 Logical Drive Degraded	A logical drive signed on in a degraded state.	<p>Make sure all physical drives are properly connected and are powered on.</p> <p>Run ADAC Configuration Manager to find out if any physical drives are not responding. Reconnect, replace, or rebuild any drive that is not responding.</p>
Insufficient memory to run BIOS. Press any key to continue...	Not enough ADAC Ultra2 S466 memory to run BIOS.	Make sure ADAC Ultra2 S466 memory has been properly installed.
Insufficient Memory	Not enough memory on the ADAC adapter to support the current configuration.	Make ADAC memory has been properly installed.
The following SCSI IDs are not responding: Channel x:a.b.c	The physical drives with SCSI IDs a, b, and c are not responding on SCSI channel x.	Make sure the physical drives are properly connected and are powered on.

Other BIOS Error Messages

Message	Problem	Suggested Solution
Following SCSI disk not found and no empty slot available for mapping it	The physical disk roaming feature did not find the physical disk with the displayed SCSI ID. No slot is available to map the physical drive. ADAC cannot resolve the physical drives into the current configuration.	Reconfigure the array.
Following SCSI IDs have the same data y, z Channel x: a, b, c	The physical drive roaming feature found the same data on two or more physical drive on channel x with SCSI IDs a, b, and c. ADAC cannot determine the drive that has the duplicate information.	Remove the drive or drives that should not be used.
Unresolved configuration mismatch between disks and NVRAM on the adapter	The configuration stored in the ADAC NVRAM does not match the configuration stored on the drives.	Press a key to run ADAC Configuration Manager. Choose View/Add Configuration from the Configure menu. Use View/Add Configuration to examine both the configuration in NVRAM and the configuration stored on the disk drives. Resolve the problem by selecting one of the configurations.

DOS ASPI Driver Error Messages

Message	Corrective Action
Gateway Inc. ASPI Manager has NOT been loaded.	The ASPI manager is not loaded. One of the failure codes listed below is displayed next.
Controller setup FAILED error code=[0xab]	Correct the condition that caused the failure. The failure codes are: 0x40 No ADAC adapters found 0x80 Timed out waiting for interrupt to be posted 0x81 Timed out waiting for Response command. 0x82 Invalid command completion count. 0x83 Invalid completion status received. 0x84 Invalid command ID received. 0x85 No adapters found or no PCI BIOS support. 0x90 Unknown Setup completion error
No non-disk devices were located	The driver did not find any non-hard drive devices during scanning. A SCSI device that is not a hard disk drive, such as a tape drive or CD-ROM drive, must be attached to this SCSI channel. The SCSI ID must be unique for each adapter and cannot be SCSI ID 0. The supported SCSI IDs are 1, 2, 3, 4, 5, and 6.
ERROR: VDS support is *INACTIVE* for logical drives	The /h option is appended to driver in CONFIG.SYS or this driver is used with a BIOS that is earlier than v1.10, or no logical drives are configured.

Other Potential Problems

Topic	Information
DOS ASPI	ADACASPI.SYS, the DOS ASPI manager, uses 6 KB of system memory once it is loaded.
CD-ROM drives under DOS	At this time, copied CDs are not accessible from DOS even after loading ADACASPI.SYS and ADACDRM.SYS.
Physical Drive Errors	To display the ADAC Configuration Manager Media Error and Other Error options, press <F2> after selecting a physical drive under the Physical Drive menu, selected from the Objects menu. A Media Error is an error that occurred while actually transferring data. An Other Error is an error that occurs at the hardware level because of a device failure, poor cabling, bad termination, signal loss, etc.
Virtual Sizing	The Virtual Sizing option enables RAID expansion. Virtual Sizing must be enabled to increase the size of a logical drive or add a physical drive to an existing logical drive. Run ADAC Configuration Manager by pressing <Ctrl> <M> to enable Virtual Sizing. Select the Objects menu, then select the Logical Drive menu. Select View/Update Parameters. Set Virtual Sizing to Enabled.
BSD Unix	We do not provide a driver for BSDI Unix. ADAC Ultra2 S466 does not support BSDI Unix.
Multiple LUNs	ADAC Ultra2 S466 supports one LUN per each target ID. No multiple LUN devices are supported.
Power Requirements	The maximum ADAC Ultra2 S466 power requirements are 15 watts at 5V and 3 Amps.

Topic	Information
<p>SCSI Bus Requirements</p>	<p>The ANSI specification dictates the following:</p> <p>The maximum signal path length between terminators is 3 meters when using up to 4 maximum capacitance (25 pF) devices and 1.5 meters when using more than 4 devices.</p> <p>SCSI devices should be uniformly spaced between terminators, with the end devices located as close as possible to the terminators.</p> <p>The characteristic impedance of the cable should be 90 +/- 6 ohms for the /REQ and /ACK signals and 90 +/- 10 ohms for all other signals.</p> <p>The stub length(the distance from the controller's external connector to the mainline SCSI bus) shall not exceed.1m (approximately 4 inches).</p> <p>The spacing of devices on the mainline SCSI bus should be at least three times the stub length.</p> <p>All signal lines shall be terminated once at both ends of the bus powered by the TERMPWR line.</p>

Topic	Information
Windows NT Installation	<p>When Windows NT is installed via a bootable CD, the devices on the ADAC Ultra2 S466 will not be recognized until after the initial reboot. The Microsoft documented workaround is in SETUP.TXT:</p> <p>SETUP.TXT is on diskette 2 or the CD</p> <p>To install drivers when Setup recognizes one of the supported SCSI host adapters without making the devices attached to it available for use:</p> <ol style="list-style-type: none"> 1 Restart Windows NT Setup. 2 When Windows NT Setup displays <p>Setup is inspecting your computer's hardware configuration....,</p> <p>press <F6> to prevents Windows NT Setup from performing disk controller detection. This allows you to install the driver from the Drivers disk you created. All SCSI adapters must be installed manually.</p> 3. When Windows NT Setup displays <p>Setup could not determine the type of one or more mass storage devices installed in your system, or you have chosen to manually specify an adapter,</p> <p>press S to display a list of supported SCSI host adapters.</p> 4 Select Other from the bottom of the list. 5 Insert the Drivers Disk you made when prompted to do so and select ADAC Ultra2 S466 from this list. In some cases, Windows NT Setup repeatedly prompts to swap disks. Windows NT will now recognize any devices attached to this adapter. Repeat this step for each host adapter not already recognized by Windows NT Setup.

A SCSI Cables and Connectors

SCSI Connectors

ADAC Ultra2 S466 provides several different types of SCSI connectors. The connectors are:

- one 68-pin high density internal connector, and
 - one 68-pin ultra high density external connector.
-

68-Pin High Density SCSI Internal Connector

The SCSI channel on the ADAC Ultra2 S466 Controller has a 68-pin high density 0.050 inch pitch unshielded connector.

This connector provides all signals needed to connect ADAC Ultra2 S466 to wide SCSI devices. The following connector pinouts are provided for both single-ended and differential primary bus (P-CABLE) as specified in SCSI-3 Parallel Interface X3T9.2, Project 885-D, revision 12b, date July 2, 1993.


The cable assemblies that interface with the 68-pin connector is:

- flat ribbon or twisted pair cable for connecting internal wide SCSI devices,
 - flat ribbon or twisted pair cable for connecting internal and external wide SCSI devices,
 - cable assembly for converting from internal wide SCSI connectors to internal non-wide (Type 2) connectors,
 - cable assembly for converting from internal wide to internal non-wide SCSI connectors (Type 30), and
 - cable assembly for converting from internal wide to internal non-wide SCSI connectors.
-

Cont'd

68-Pin High Density Connectors, Continued


Cable Assembly for Internal Wide SCSI Devices The cable assembly for connecting internal wide SCSI devices is shown below:

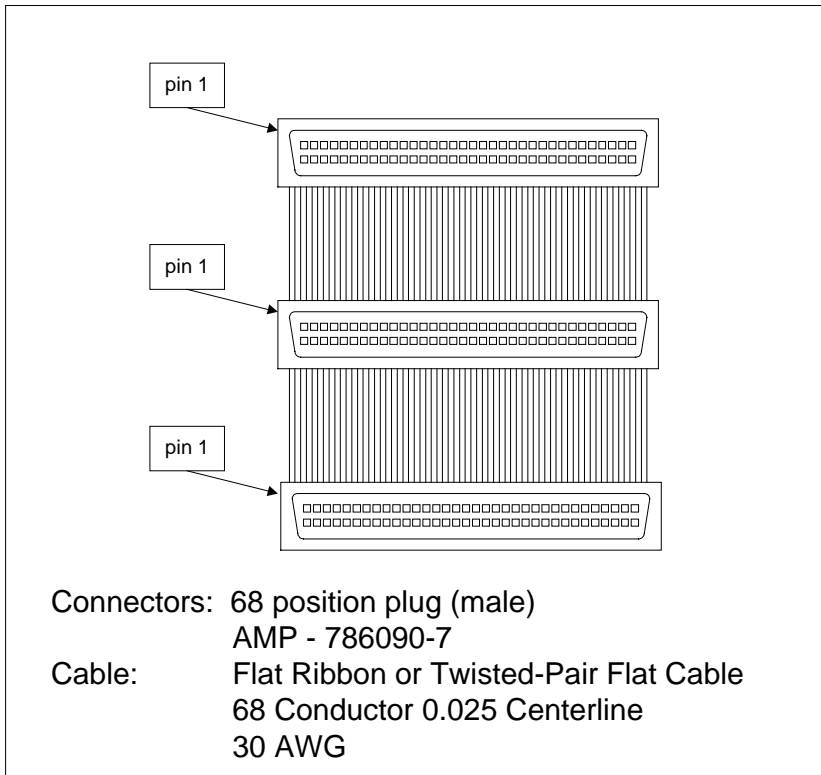

Cont'd

68-Pin High Density Connectors, Continued

Connecting Internal and External Wide Devices The cable assembly for connecting internal wide and external wide SCSI devices is shown below:

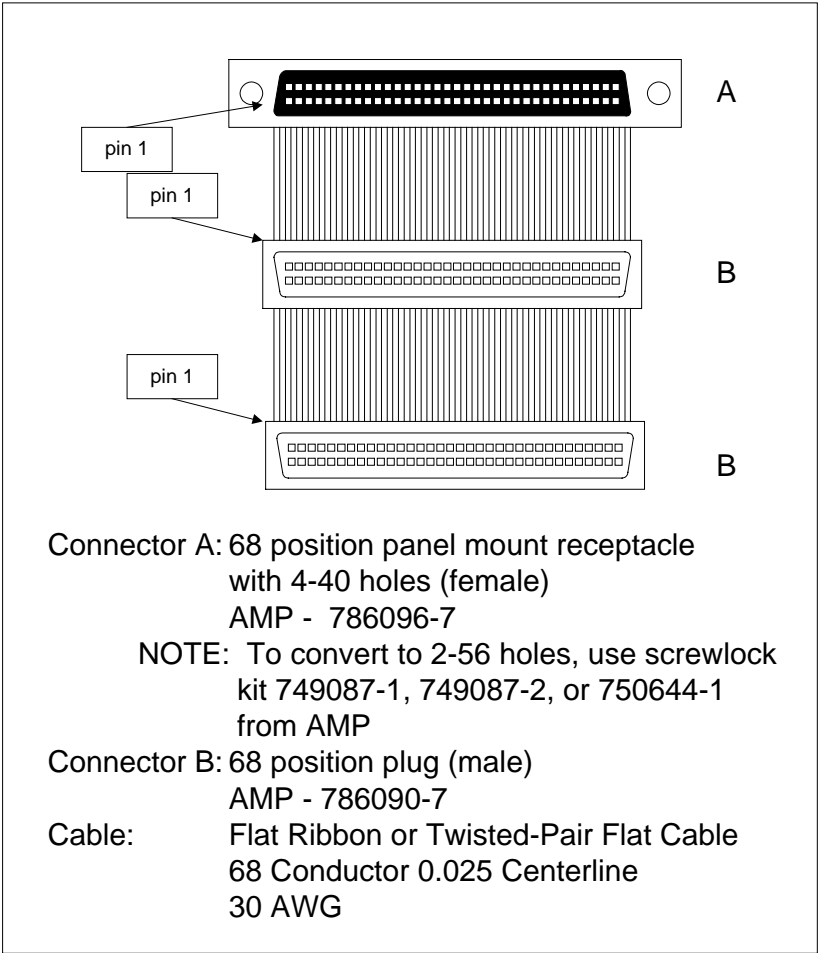

Connector A: 68 position panel mount receptacle with 4-40 holes (female)
AMP - 786096-7

NOTE: To convert to 2-56 holes, use screwlock kit 749087-1, 749087-2, or 750644-1 from AMP

Connector B: 68 position plug (male)
AMP - 786090-7

Cable: Flat Ribbon or Twisted-Pair Flat Cable
68 Conductor 0.025 Centerline
30 AWG


Cont'd

68-Pin High Density Connectors, Continued

Converting Internal Wide to Internal Non-Wide (Type 2) The cable assembly for converting internal wide SCSI connectors to internal non-wide SCSI connectors is shown below:

68 POSITION CONNECTOR CONTACT NUMBER		50 POSITION CONNECTOR CONTACT NUMBER
6	●—————●	1
40	●—————●	2
7	●—————●	3
41	●—————●	4
	*	
	*	
	*	
49	●—————●	20
16	●—————●	21
50	●—————●	22
17	OPEN	23
51	OPEN	24
18	OPEN	25
52	●—————●	26
19	●—————●	27
	*	
	*	
29	●—————●	47
63	●—————●	48
30	●—————●	49
64	●—————●	50


TABLE 1: CONNECTOR CONTACT CONNECTION FOR WIDE TO NON-WIDE CONVERSION

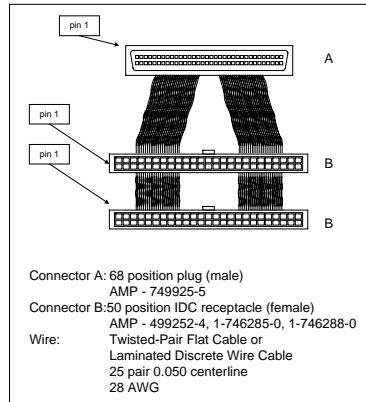

Cont'd

68-Pin High Density Connectors, Continued


Converting Internal Wide to Internal Non-Wide (Type 30) The cable assembly for connecting internal wide SCSI devices to internal non-wide SCSI devices is shown below:

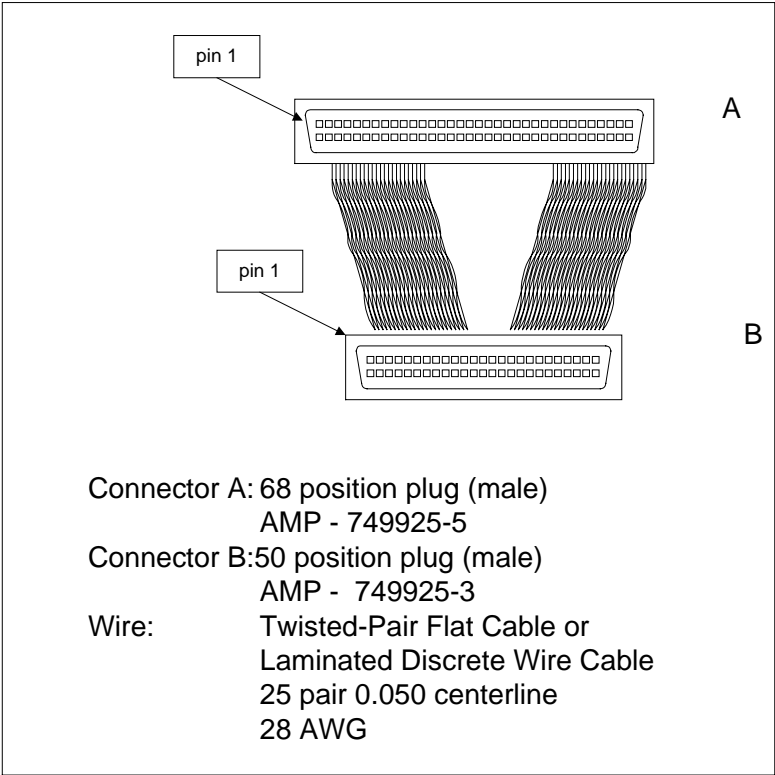

Cont'd

68-Pin High Density Connectors, Continued

Converting from Internal Wide to Internal Non-Wide (Type 3) The cable assembly for connecting internal wide SCSI devices to internal non-wide (Type 3) SCSI devices is shown below:

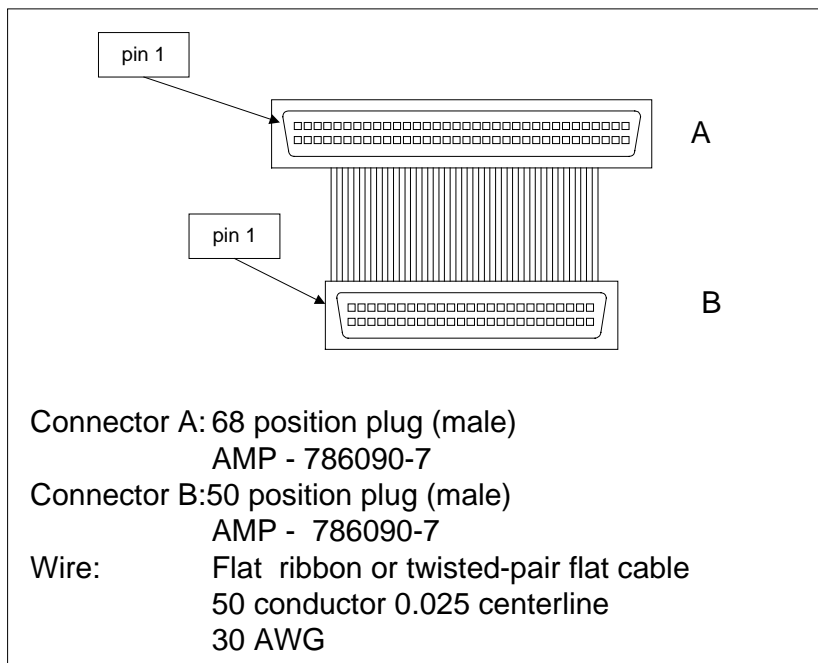

SCSI Cable Vendors

Manufacturer	Telephone Number
Cables To Go	Voice: 800-826-7904 Fax: 800-331-2841
System Connection	Voice: 800-877-1985
Technical Cable Concepts	Voice: 714-835-1081
GWC	Voice: 818-579-0888

SCSI Connector Vendors

Manufacturer	Connector Part Number	Back Shell Part Number
AMP	749111-4	749193-1
Fujitsu	FCN-237R050-G/F	FCN-230C050-D/E
Honda	PCS-XE50MA	PCS-E50LA

High-Density 68-Pin SCSI Connector Pinout

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
Ground	1	1	2	35	-DB(12)
Ground	2	3	4	36	-DB(13)
Ground	3	5	6	37	-DB(14)
Ground	4	7	8	38	-DB(15)
Ground	5	9	10	39	-DB(P1)
Ground	6	11	12	40	-DB(0)
Ground	7	13	14	41	-DB(1)
Ground	8	15	16	42	-DB(2)
Ground	9	17	18	43	-DB(3)
Ground	10	19	20	44	-DB(4)
Ground	11	21	22	45	-DB(5)
Ground	12	23	24	46	-DB(6)
Ground	13	25	26	47	-DB(7)
Ground	14	27	28	48	-DB(P)
Ground	15	29	30	49	SWAP L
Ground	16	31	32	50	SHELF_OK
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	FAULT_CLK H
Ground	21	41	42	55	-ATN
Ground	22	43	44	56	FAULT_DATA H
Ground	23	45	46	57	-BSY
Ground	24	47	48	58	-ACK
Ground	25	49	50	59	-RST
Ground	26	51	52	60	-MSG
Ground	27	53	54	61	-SEL
Ground	28	55	56	62	-C/D
Ground	29	57	58	63	-REQ
Ground	30	59	60	64	-I/O
Ground	31	61	62	65	-DB(8)
Ground	32	63	64	66	-DB(9)
Ground	33	65	66	67	-DB(10)
Ground	34	67	68	68	-DB(11)

Cont'd

68-Pin SCSI Connector Pinout, Continued

High-Density Single Ended Connector The following applies to the high-density SCSI connector table on the previous page:

- A hyphen before a signal name indicates that signal is active low.
- The connector pin refers to the conductor position when using 0.025 inch centerline flat ribbon cable with a high-density connector (AMPLIMITE.050 Series connectors).
- Eight-bit devices connected to the P-Cable must leave the following signals open: -DB (8), -DB (9), -DB (10), -DB (11), -DB(12), -DB (13), -DB (14), -DB (15), and -DB (P1).
- All other signals should be connected as defined.

Caution

Lines labeled RESERVED should be connected to Ground in the bus terminator assemblies or in the end devices on the SCSI cable.

RESERVED lines should be open in the other SCSI devices, but can be connected to Ground.

68-Pin Connector Pinout for LVD SCSI

Signal	Connector Pin	Cable Pin	Cable Pin	Connector Pin	Signal
+DB(12)	1	1	2	35	-DB(12)
+DB(13)	2	3	4	36	-DB(13)
+DB(14)	3	5	6	37	-DB(14)
+DB(15)	4	7	8	38	-DB(15)
+DB(P1)	5	9	10	39	-DB(P1)
+DB(0)	6	11	12	40	-DB(0)
+DB(1)	7	13	14	41	-DB(1)
+DB(2)	8	15	16	42	-DB(2)
+DB(3)	9	17	18	43	-DB(3)
+DB(4)	10	19	20	44	-DB(4)
+DB(5)	11	21	22	45	-DB(5)
+DB(6)	12	23	24	46	-DB(6)
+DB(7)	13	25	26	47	-DB(7)
+DB(P)	14	27	28	48	-DB(P)
Ground	15	29	30	49	Ground
DIFFSENS	16	31	32	50	Ground
TERMPWR	17	33	34	51	TERMPWR
TERMPWR	18	35	36	52	TERMPWR
Reserved	19	37	38	53	Reserved
Ground	20	39	40	54	Ground
+ATN	21	41	42	55	-ATN
Ground	22	43	44	56	Ground
+BSY	23	45	46	57	-BSY
+ACK	24	47	48	58	-ACK
+RST	25	49	50	59	-RST
+MSG	26	51	52	60	-MSG
+SEL	27	53	54	61	-SEL
+C/D	28	55	56	62	-C/D
+REQ	29	57	58	63	-REQ
+I/O	30	59	60	64	-I/O
+DB(8)	31	61	62	65	-DB(8)
+DB(9)	32	63	64	66	-DB(9)
+DB(10)	33	65	66	67	-DB(10)
+DB(11)	34	67	68	68	-DB(11)

Notes

The conductor number refers to the conductor position when using flat-ribbon cable.

B Audible Warnings

The ADAC Ultra2 S466 RAID controller has an onboard tone generator that indicates events and errors.

Tone Pattern	Meaning	Examples
Three seconds on and one second off	A logical drive is offline.	One or more drives in a RAID 0 configuration failed. Two or more drives in a RAID 1, 3, or 5 configuration failed.
One second on and one second off	A logical drive is running in degraded mode.	One drive in a RAID 3 or 5 configuration failed.
One second on and three seconds off	An automatically initiated rebuild has been completed.	While you were away from the system, a disk drive in a RAID 1, 3, or 5 configuration failed and was rebuilt.

Important

The audible warning were not enabled at the time this manual went to press.

Index

6

68-Pin High Density Connectors,
85

A

ADAC BIOS, 35
ADACASPI.SYS, 70
ADACDROM.SYS, 71
AMPLIMITE .050 Series connectors,
92
ASPI Driver Error Messages, 78
ASPI Drivers, 70
ASPI manager, 78
Audible Warnings, 95
Automatic Failed Drive Detection
and Rebuild, 39

B

BIOS, 34
BIOS Boot Error Messages, 75
BIOS Setup, 69
Bus Data Transfer Rate, 34
Bus Type, 34
Bus-Based, 17

C

Cable Assembly for Internal Wide
SCSI Devices, 86
Cable Vendors, 90
Cables To Go, 90
Cache Configuration, 34
Cache Memory, 35
Installing, 57
Cache Memory Configurations, 57
Card Size, 34
CD-ROM Driver, 71
Compatibility, 40
Configuration on Disk Configuration,
29
Connecting Internal and External
Wide Devices, 87
Consistency check, 8

Converting from Internal Wide to
Internal Non-Wide (Type
3), 90
Converting Internal Wide to Internal
Non-Wide, 88
Converting Internal Wide to Internal
Non-Wide (Type 30), 89
CPU, 35

D

Data redundancy
Using mirroring, 11
Dedicated Parity, 12
Degraded, 16
Devices per SCSI Channel, 34
Disconnect/Reconnect, 37
Disk Activity LED, 58
Disk Array Types, 17
Disk Mirroring, 11
Disk Rebuild, 14
Disk Spanning, 10
Disk Striping, 9
Distributed Parity, 12
DOS ASPI driver, 70
DOS CD-ROM Driver, 70
Drive roaming, 29
Drive States, 16
Drivers, 70

E

Enclosure Management, 17
Error
Failure codes, 78
Error Messages
ASPI Driver, 78

F

Fail, 16
Failed, 16
FAST and WIDE SCSI, 29
Fault-Tolerance, 39
Features, 29
Firmware, 34
FTP Site, vi

G

GWC, 90

H

Hardware Installation, 53

Hardware Requirements, 30

High-Density 68-Pin SCSI

Connector and P-Cable

Single-Ended Cable

Pinouts, 91, 93

High-Density Connector, 92

Host-Based RAID Solution, 7

Hot Spare, 13, 16

Using during disk rebuild, 14

Hot Swap, 15, 39

I

Improved I/O, 5

Increased Reliability, 5

Install Drivers, 70

Installation

Custom, 54

J

J 4 Channel 1 WIDE (16-bit) SCSI
connector, 58

J1 Termination Enable, 59

J2, 66

J3 I2C Interface Connector, 59

J4 Serial Port, 59

J5 Disk Activity LED Connector, 59

J6, 66

J7 SIMM socket, 57

J8, J9, J10, 60

J11, J12 i960RP Initialization, 60

J13, 58

J15, 58

Jumpers, 58

on motherboard, 55

L

Logical Drive, 15

Logical Drive States, 16

M

ADAC BIOS Setup, 38

ADAC Ultra2 S466 Card Layout,
58

ADAC Configuration Manager, 38

Mirroring, 11

Motherboard Jumpers, 55

Multi-threading, 37

N

Nonvolatile RAM, 34

Novell NetWare, 33

O

Offline, 16

Onboard Speaker, 36

Online

Drive state, 16

Operating Systems Supported, 33

Operating Voltage, 34

Optimal, 16

OS/2 2.x, 38

Other BIOS Error Messages, 77

P

Package Contents, vi

packing slip, vi

Parity, 12

PCI Controller, 34

Physical Array, 14

Physical drive, 14

Power Console Plus, 38

Power Down, 55

Processor, 34

Product Specifications, 34

R

RAID

Basics, 5

Benefits, 5

Introduction to, 5

RAID 1

Spanning to configure RAID 10,
10

RAID 10

Configuring, 10

RAID 3

Parity disk, 12

Spanning to configure RAID 30,
10

RAID 30

Configuring, 10

RAID 5

Spanning to make RAID 50, 10

RAID 50

- Configuring, 10
- RAID Levels, 19
- RAID Levels Supported, 34
- RAID Management**, 38
- Ready, 16
- Rebuild, 16, 37
- Rebuild Rate, 14
- Rebuilding a disk, 14
- Reconnect, 37
- RedAlert, 40

S

- Scatter/Gather, 37
- SCO Open Server R5.0x, 33
- SCO Unix, 38
- SCO UnixWare 2.1x, 33
- SCSI backup and utility software, 40
- SCSI Bus, 34, 36
- SCSI Cables
 - Attaching, 66
- SCSI Connectors, 34, 37, 83
- SCSI Controller, 34
- SCSI Data Transfer Rate, 34
- SCSI Device Compatibility, 40
- SCSI Device Types Supported, 34
- SCSI Drive State, 16
- SCSI Firmware**, 37
- SCSI Termination, 34, 37, 62
 - Set, 61
- SCSI to SCSI, 17
- SCSI-to-SCSI RAID Product, 7
- Serial Port**, 36

- Serial port connector, 58
- Server Management, 40
- Set SCSI Termination, 61
- SIMM Specifications**, 56
- SIMMs, 57
- SLED, 5
- SMART Technology, 29
- SNMP agent, 40
- SNMP managers, 40
- Software-Based, 17
- Spanning, 10
- Standby rebuild, 14
- Stripe Size, 37
- Stripe Width**, 9
- System Connection, 90

T

- Tagged Command Queuing, 37
- Target identifiers
 - Setting, 67
- Technical Cable Concepts, 90
- Technical Support, vi
- Termination Disable, 34
- Troubleshooting, 73

U

- UnixWare, 38
- Unpack, 55

W

- Windows NT, 33

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>