

# TABLE OF CONTENTS

21A582BH  
21B582BH

## GETTING STARTED

Introduction .....	1
Safety .....	1
Description of Controls .....	2-3
Setting Up Guide .....	Foldout

## HOW TO USE THE ON SCREEN DISPLAY

### MAIN CONTROLS WINDOW

Brightness .....	4
Contrast .....	4
Degauss .....	5

### SCREEN SIZE & POSITION WINDOW

Full Size .....	6
Horizontal Position .....	6
Horizontal Size .....	7
Vertical Position .....	7
Vertical Size .....	7

### COLOR TEMPERATURE WINDOW

9300 K CAD/CAM .....	8
6500 K DTP .....	8
5500 K Photo Retouch .....	8
User Presets .....	9

### SPECIAL CONTROLS WINDOW

Language .....	10
Power Saving .....	10
OSD Controls .....	11
Video Input .....	11

### ADVANCED CONTROLS WINDOW

Rotary Default .....	12
Moire .....	12
Vertical Linearity .....	13
Corner Correction .....	13

### GEOMETRY CONTROLS WINDOW

Pincushion .....	14
Balanced Pincushion .....	14
Trapezoid .....	14
Parallelogram .....	14
Rotation .....	14

EXIT & RESET .....	15
--------------------	----

## ADDITIONAL INFORMATION

BNC & USB Set Ups .....	16
Power Saving Feature .....	17
Pin Assignment .....	18
Specifications .....	18
Index .....	18
Glossary .....	18
Troubleshooting .....	19
Warranty (Appendix) .....	60


## OTHER LANGUAGE VERSIONS

FRENCH (FRANCAIS) .....	.20	SPANISH (ESPAÑOL) .....	.40
-------------------------	-----	-------------------------	-----

## Appendix

English	Information for Users in the U.S. ....	A1
	Declaration FCC .....	A2
	ENERGY DECLARATION .....	A3-A4
	TCO'95 .....	A5-A6
Deutsch	Hinweis / GS / ACHTUNG .....	A7
Français	Declaration FCC .....	A8

BECAUSE OF A POLICY OF CONTINUOUS PRODUCT IMPROVEMENT,  
THE INFORMATION MENTIONED IN THIS DOCUMENT IS SUBJECT TO CHANGE WITHOUT NOTICE.

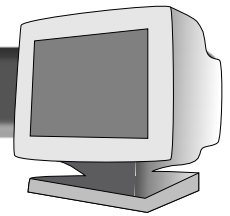

## Introduction

The Philips Brilliance 201P/201B color monitor displays sharp and brilliant images of text and graphics with a maximum resolution of 1800x1440(201P), 1800x1350(201B) pixels. It is optimal for Windows, CAD / CAM / CAE, desktop publishing, spread sheets, multi-media, and any other application that demands a large screen size and high resolutions.

The monitor automatically scans horizontal frequencies from 30KHz to 115KHz(201P), 107KHz(201B), and vertical frequencies from 50Hz to 160Hz. With microprocessor-based digital-controlled circuitry and On-Screen Display (OSD) controls, the monitor can automatically adjust itself to the video card's scanning frequency and displays an image with the precise parameters you desire.

## Features

- An anti-glare, anti-static, and anti-reflection high-contrast screen coating eliminates any bad effects caused by room light reflecting on and dust attracted to the screen's surface.
- With the Color Adjustment feature, you can easily choose different preset color temperatures or set your own customized color parameters.
- The Image Tilt Adjustment feature corrects a rotated image. This correction minimizes the distortions caused by elements such as the Earth's magnetic field.
- The full-size feature expands the image on the monitor to fill the screen when used in factory preset modes.

- USB Bay at back of monitor is prepared for the Universal Serial Bus hub. You can easily and flexibly connect USB-designed devices – such as a mouse or keyboard – to the monitor for true Plug-and-Play function. USB hub sold separately (optional).
- Green Design – including automatic power saving function (NUTEK) and low-emission compliance (TCO '95) – shows your commitment to the environment.
- DDC1/DDC2B allows communication between the monitor and the PC for optimal video configuration.
- New CrystalClear technology for sharpest high brightness and high contrast
- Moire Cancellation eliminates diffraction, a fringe pattern in the picture.

**NOTE:** Your monitor operates according to the VESA DDC level 1/2B. Only computers that support the same guidelines and operate at the same or a higher level can make use of this feature. If your computer does not support the relevant guidelines, you can still use your monitor and computer. However, you may need to manually specify the appropriate resolution in the computer.

As an Energy Star Partner, PHILIPS has determined that this product meets the Energy Star guidelines for energy efficiency.



Contact us at our web site: <http://www.monitors.be.philips.com>

## Safety precautions and maintenance

- Unplug the monitor, if you are not going to use it for an extended period of time.
- Unplug the monitor, if you need to clean it with a slightly damp cloth. Wiping the screen with a dry cloth is okay when the power is off. However, never use alcohol or ammonia-based liquids.
- Consult a service technician if the monitor does not operate normally when following the instructions in this manual.
- The back cover should be removed only by qualified service personnel.
- Keep the monitor out of direct sunlight and away from stoves or any other heat source.
- The top of the monitor is not a shelf. Remove any object that could fall into the vents or prevent proper cooling of the monitor's electronics.

- Keep the monitor dry. To avoid electric shock, do not expose it to rain or excessive moisture.
- Keep the monitor away from magnetic objects, such as speakers, electric motors, transformers, etc.
- When positioning the monitor, make sure the power plug and outlet are easily accessible.


## End-of-life disposal

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.


Please find out about the local regulations on how to dispose of your old monitor.

ENERGY STAR is an U.S. registered mark.

IBM, IBM PC, and Power PC are registered trademarks of International Business Machines Corporation. Apple, Macintosh, Quadra, Performa, and Centris are registered trademarks of Apple Computer, Inc.

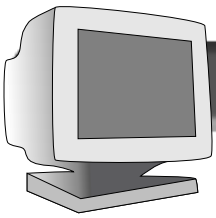


# DESCRIPTION OF CONTROLS

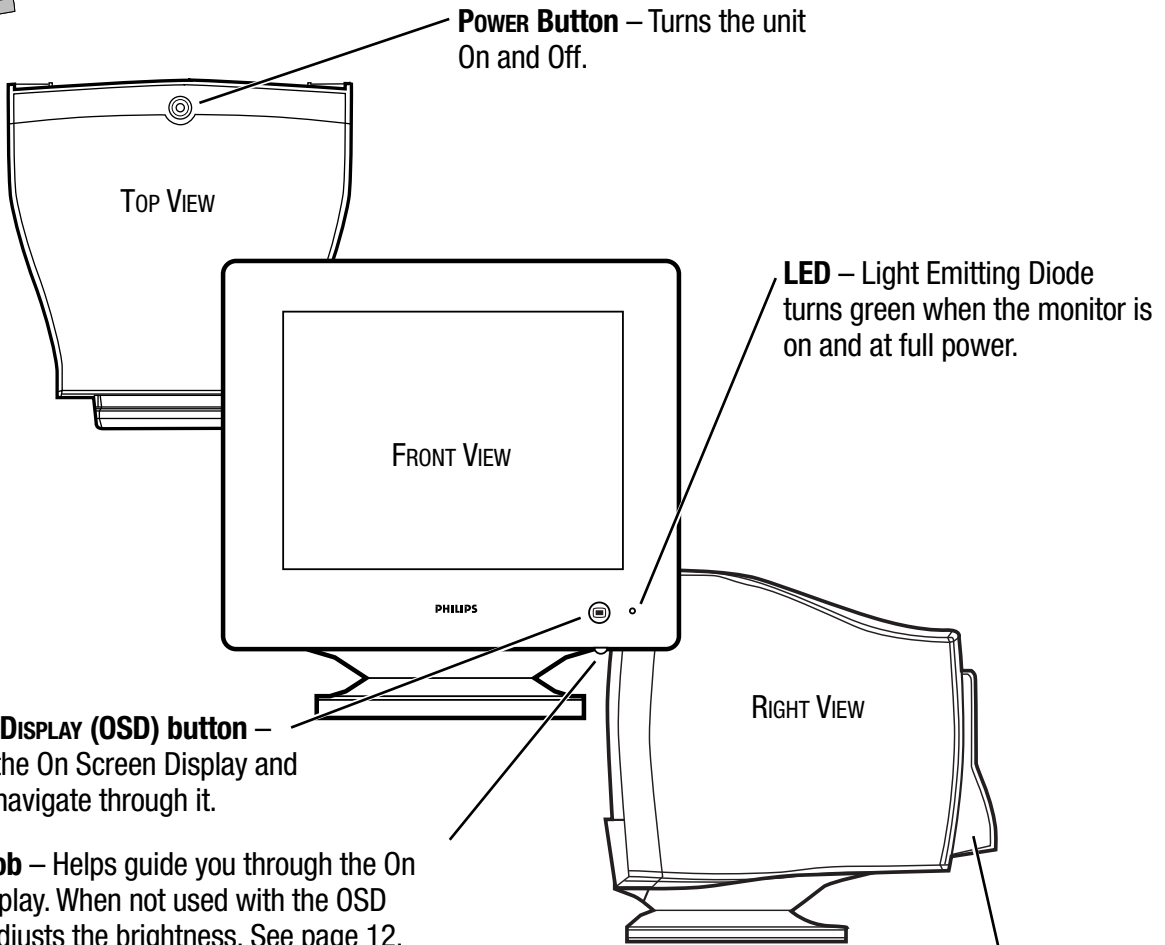

**ON SCREEN DISPLAY (OSD) button** – Brings up the On Screen Display and helps you navigate through it.


**ROTARY Knob** – Helps guide you through the On Screen Display. When not used with the OSD button, it adjusts the brightness. See page 12.

**CABLE COVER** – Snaps onto the back of the monitor to conceal cable connections. (Cable connections shown in the manual are without the cover on.)

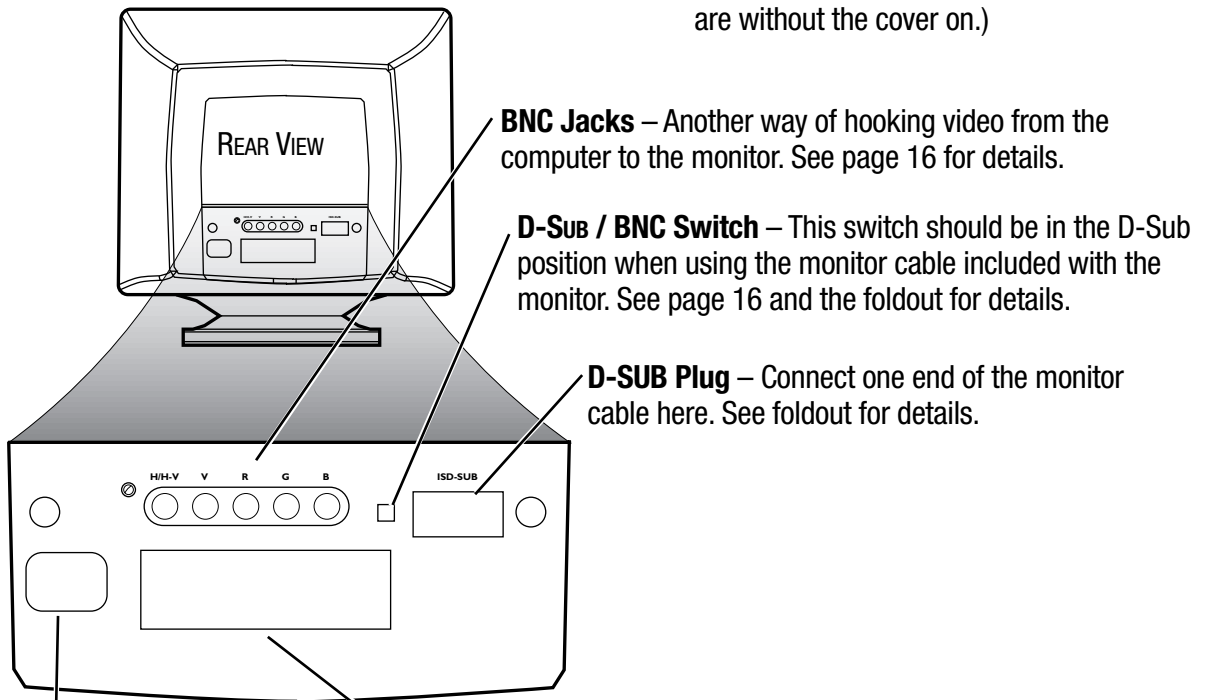


**POWER Plug** – Plug the power cord in here. See foldout for details.

**USB Bay** – Slot for plugging in USB Hub. Optional hardware that allows true Plug-and-Play. See page 16 for details.

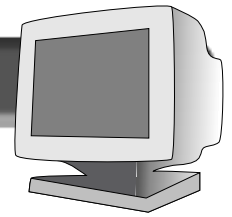


## PEDESTAL

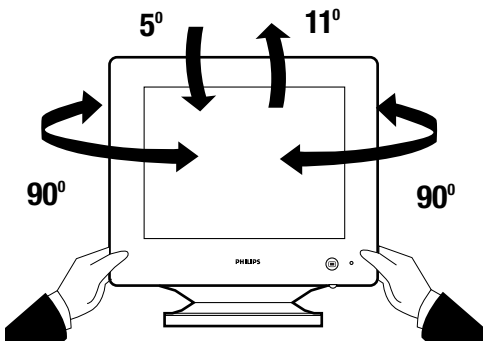

**PEDESTAL** – With the built-in pedestal, you can tilt and swivel the monitor to the most comfortable viewing angle. To best use your monitor, always place it at eye level.

**ON SCREEN DISPLAY** – Your monitor is preset at the factory. However, you can adjust it using the ON SCREEN DISPLAY button and the ROTARY knob described on page 2. The way to do so is through the On Screen Display (OSD). Below is a brief description of the six On Screen Display windows.

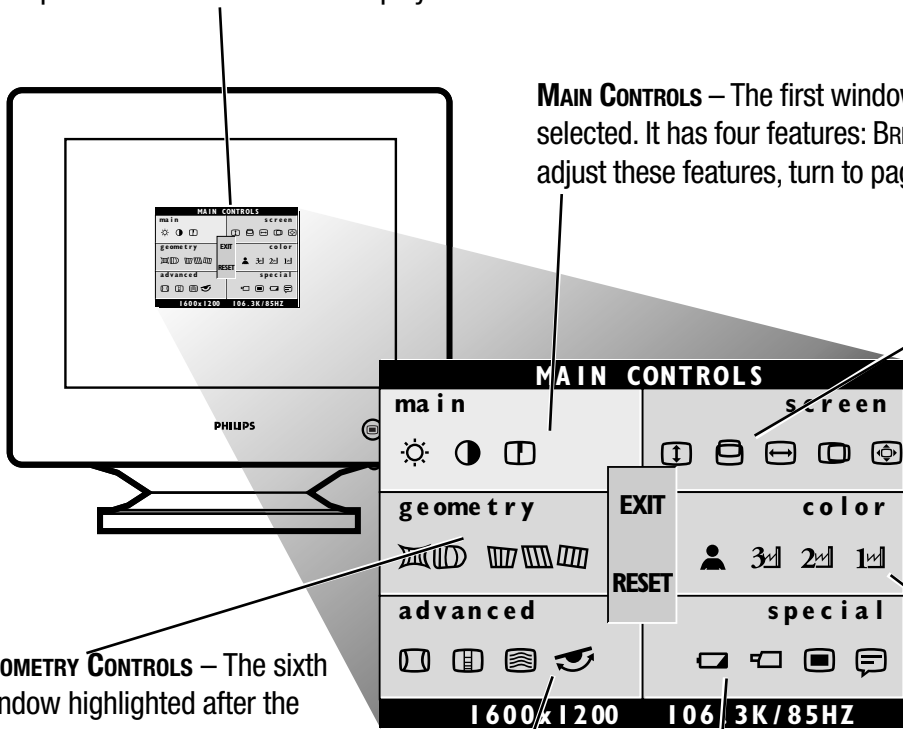

**MAIN CONTROLS** – The first window highlighted after the OSD has been selected. It has four features: BRIGHTNESS, CONTRAST and DEGAUSS. To adjust these features, turn to pages 4 - 5.

**SCREEN SIZE & POSITION** – The second window highlighted after the OSD has been selected. It has five features: FULL SIZE, HORIZONTAL POSITION, HORIZONTAL SIZE, VERTICAL POSITION, and VERTICAL SIZE. To adjust these features, turn to pages 6 - 7.


**COLOR TEMPERATURE** – The third window highlighted after the OSD has been selected. It has four features: CAD/CAM, DTP, PHOTO RETOUCH, and USER PRESETS. To adjust these features, turn to pages 8 - 9.

**GEOMETRY CONTROLS** – The sixth window highlighted after the OSD has been selected. It has five features: PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, and ROTATION. To adjust these features, turn to page 14.

**ADVANCED CONTROLS** – The fifth window highlighted after the OSD has been selected. It has four features: CORNER CORRECTION, VERTICAL LINEARTY, MOIRE, and ROTARY DEFAULT. To adjust these features, turn to page 12.

**SPECIAL CONTROLS** – The fourth window highlighted after the OSD has been selected. It has four features: LANGUAGE, OSD CONTROLS, VIDEO INPUT AND POWER SAVING. To adjust these features, turn to pages 10 - 11.


*Note: LANGUAGE allows you to change the On Screen Display from English to French, Spanish, German, or Italian. See page 10 for details.*

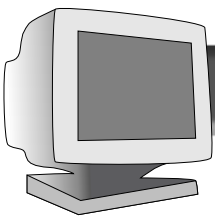


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## MAIN CONTROLS WINDOW


### BRIGHTNESS


 To adjust your screen's brightness, follow the steps below. Brightness is the overall intensity of the light coming from the screen. A 50% brightness level is recommended.

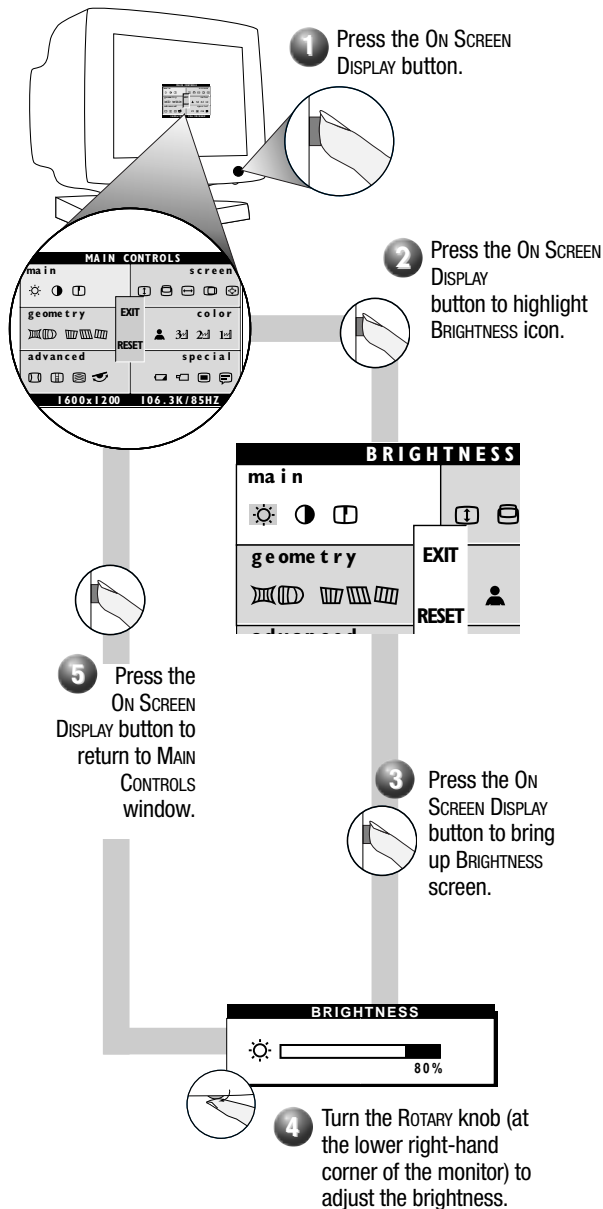

- 1 Press the On SCREEN DISPLAY button.
- 2 Press the On SCREEN DISPLAY button to highlight BRIGHTNESS icon.
- 3 Press the On SCREEN DISPLAY button to bring up BRIGHTNESS screen.
- 4 Turn the ROTARY knob (at the lower right-hand corner of the monitor) to adjust the brightness.
- 5 Press the On SCREEN DISPLAY button to return to MAIN CONTROLS window.

### CONTRAST

 To adjust your screen's contrast, follow the steps below. Contrast is the difference between the light and dark areas on the screen. A 100% contrast level is recommended.

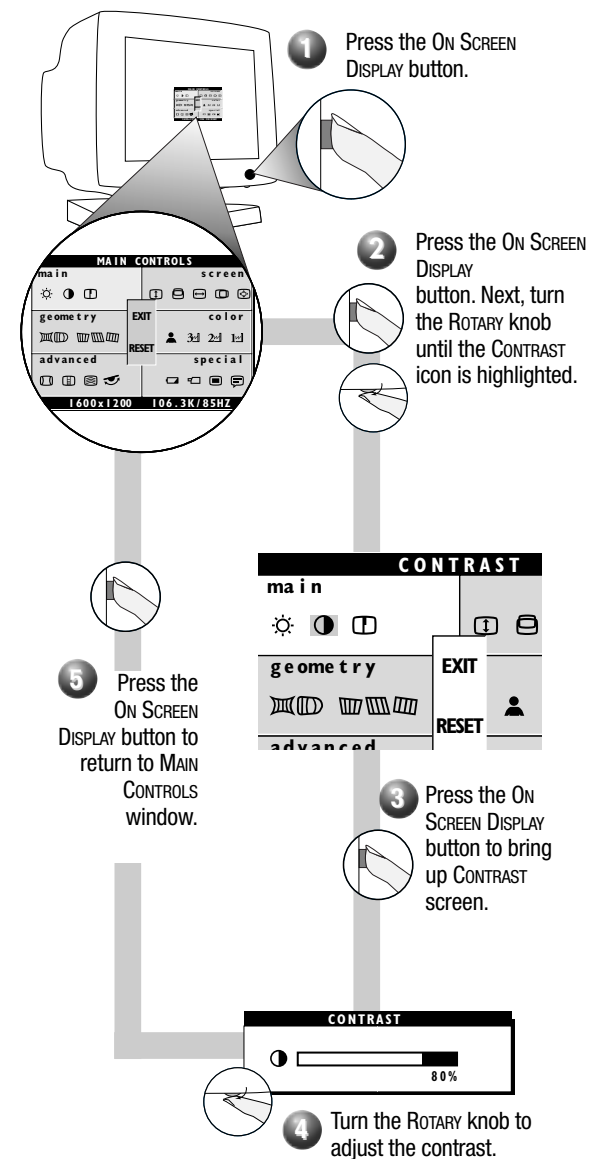

- 1 Press the On SCREEN DISPLAY button.
- 2 Press the On SCREEN DISPLAY button. Next, turn the ROTARY knob until the CONTRAST icon is highlighted.
- 3 Press the On SCREEN DISPLAY button to bring up CONTRAST screen.
- 4 Turn the ROTARY knob to adjust the contrast.
- 5 Press the On SCREEN DISPLAY button to return to MAIN CONTROLS window.

#### SMART HELP

##### After returning to MAIN CONTROLS . . .


. . . to continue to CONTRAST, turn the ROTARY knob until CONTRAST icon is highlighted. Next, follow steps 3 - 5 under CONTRAST.  
 . . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

#### SMART HELP

##### After returning to MAIN CONTROLS . . .

. . . to continue to DEGAUSS, turn the ROTARY knob until DEGAUSS icon is highlighted. Next, follow steps 2-3 under DEGAUSS (on the next page).  
 . . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

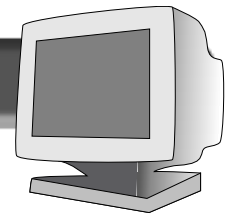



## MAIN CONTROLS WINDOW

### DEGAUSS

 To degauss your screen, follow the steps below. Degaussing removes electromagnetic build up that may distort the color on your screen.

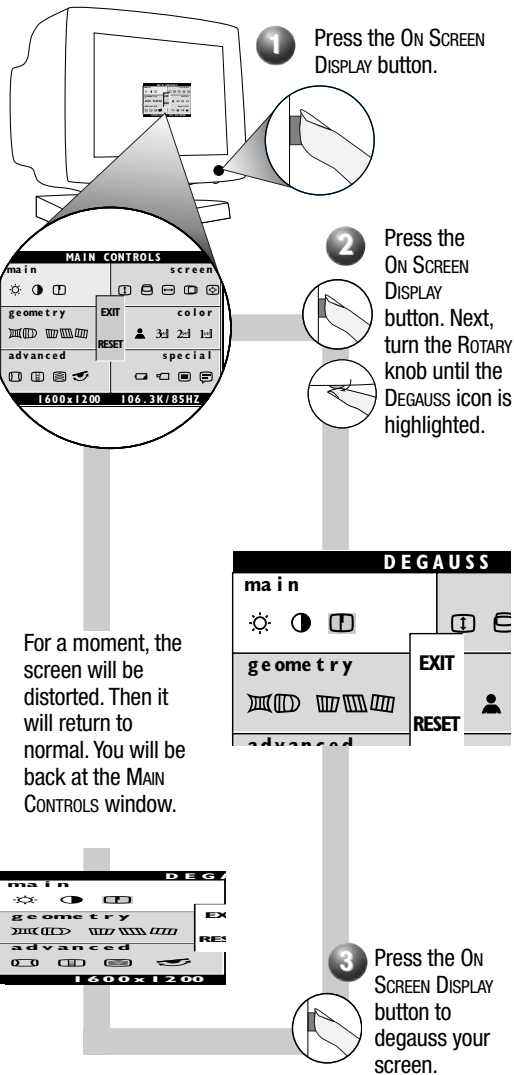

For a moment, the screen will be distorted. Then it will return to normal. You will be back at the MAIN CONTROLS window.

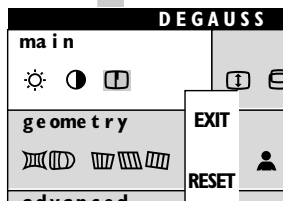


### SMART HELP

#### After returning to MAIN CONTROLS . . .

. . . to continue to the SCREEN SIZE & POSITION window, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Turn to the next page and follow steps 2 - 5 under FULL SIZE.


. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

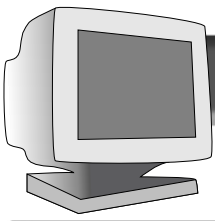


# HOW TO USE THE ON SCREEN DISPLAY (OSD)

## SCREEN SIZE & POSITION WINDOW



### FULL SIZE

 Full Size allows you to adjust the image on your screen to its maximum height and width. If nothing happens when you use this feature, the image is already at full size. You can use Full Size to both enable and disable this feature. *Note: Full Size only works with the monitor's factory presets.*


**1** Press the ON SCREEN DISPLAY button.

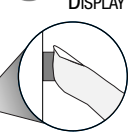


**2** Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. The FULL SIZE icon is highlighted.

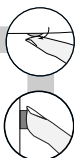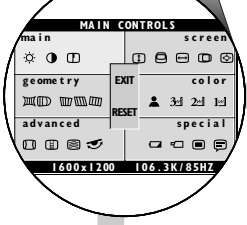The image will automatically adjust to full size. You can now go on to your next adjustment.

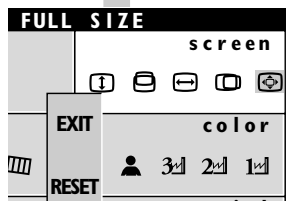

**3** Press the ON SCREEN DISPLAY button.


### SMART HELP
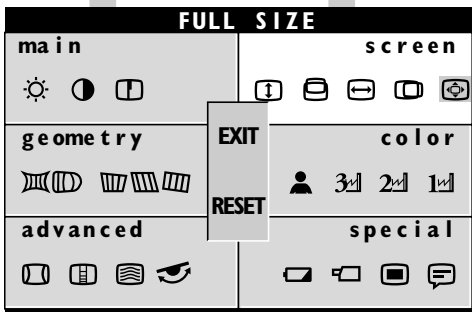
#### After returning to SCREEN SIZE & POSITION . . .


. . . to continue to HORIZONTAL POSITION, turn the ROTARY knob until HORIZONTAL POSITION is highlighted. Next, follow steps 3 - 5 under HORIZONTAL POSITION.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)



### HORIZONTAL POSITION

 Horizontal Position shifts the image on your screen either to the left or right. Use this feature if your image does not appear centered.



**1** Press the ON SCREEN DISPLAY button.

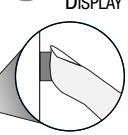

**2** Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until HORIZONTAL POSITION is highlighted.

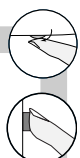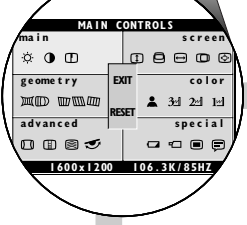
**5** Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.

**3** Press the ON SCREEN DISPLAY button to bring up HORIZONTAL POSITION screen.

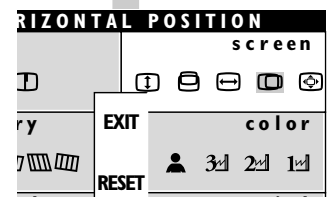


**4** Turn the ROTARY (at the lower right-hand corner of the monitor) knob until the image is horizontally balanced.



### SMART HELP


#### After returning to SCREEN SIZE & POSITION . . .

. . . to continue to HORIZONTAL SIZE, turn the ROTARY knob until HORIZONTAL SIZE is highlighted. Next, follow steps 3 - 5 under HORIZONTAL SIZE (on the next page).

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)



# HOW TO USE THE ON SCREEN DISPLAY (OSD)

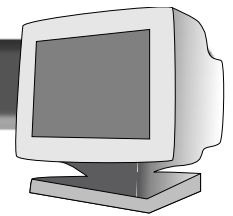

## SCREEN SIZE & POSITION WINDOW

### HORIZONTAL SIZE

Horizontal Size expands or contracts the image on your screen, pushing it out toward the left and right sides or pulling it in toward the center.

- Press the ON SCREEN DISPLAY button.
- Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until HORIZONTAL SIZE is highlighted.
- Press the ON SCREEN DISPLAY button to bring up HORIZONTAL SIZE screen.
- Turn the ROTARY knob (at the lower right-hand corner of the monitor) until the image is the horizontal size you want.
- Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.

### VERTICAL POSITION VERTICAL SIZE

Vertical Position adjusts the image on your screen either up or down. Use this feature if your image does not appear centered. Vertical Size expands or contracts the image on your screen, pushing it out toward the top and bottom sides or pulling it in toward the center.

- Press the ON SCREEN DISPLAY button.
- Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until VERTICAL POSITION or VERTICAL SIZE is highlighted.
- Press the ON SCREEN DISPLAY button to bring up VERTICAL POSITION or VERTICAL SIZE screen.
- Turn the ROTARY knob until the image is vertically balanced or the vertical size your want.
- Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.

#### SMART HELP

##### After returning to SCREEN SIZE & POSITION . . .

. . . to continue to VERTICAL POSITION, turn the ROTARY knob until VERTICAL POSITION is highlighted. Next, follow steps 3 - 5 under VERTICAL POSITION.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)


#### SMART HELP

##### After returning to SCREEN SIZE & POSITION . . .

. . . to continue to COLOR TEMPERATURE, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Then follow steps 2-4 under COLOR TEMPERATURE WINDOW on the next page.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)



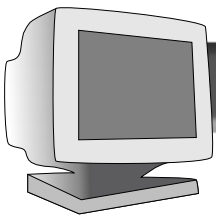


# HOW TO USE THE ON SCREEN DISPLAY (OSD)


## COLOR TEMPERATURE WINDOW

**9300 K CAD/CAM / 6500 K DTP / 5500 K PHOTO RETOUCH**


**1** **2** **3** Your monitor has three preset options you can choose from. One **1** for Computer Aided Design (CAD) work. Two **2** for Desktop Publishing (DTP). And three **3** for Photo Retouch. When you select an option, the computer automatically adjusts itself for that selection.

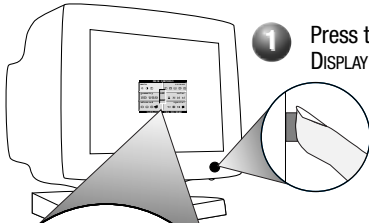

**1** Press the On SCREEN DISPLAY button.

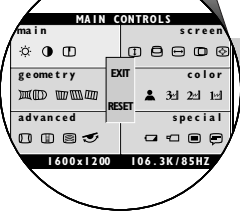


**2** Turn the ROTARY knob until the COLOR TEMPERATURE window is highlighted. Then press the On SCREEN DISPLAY button.

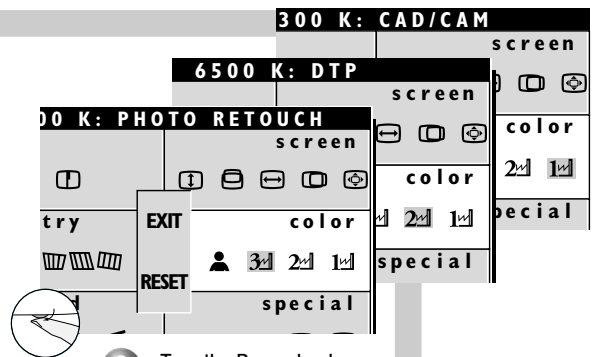

**3** Turn the ROTARY knob until CAD/CAM, DTP, OR PHOTO RETOUCH is highlighted.

After each preset setting is saved, the on screen display automatically returns to the COLOR TEMPERATURE window. To save the next preset setting, simply repeat the steps listed here.

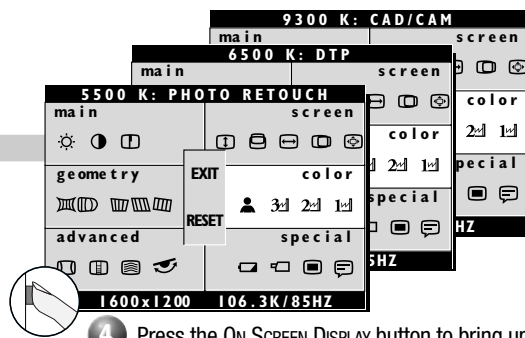


**4** Press the On SCREEN DISPLAY button to bring up and save the preset settings for 9300 K CAD/CAM, 6500 K DTP, or 5500 K PHOTO RETOUCH.

### SMART HELP

#### After returning to COLOR TEMPERATURE . . .

. . . to continue to USER PRESETS, turn the ROTARY knob until USER PRESETS is highlighted. Next, follow steps 3 - 9 under USER PRESETS on the next page.  
. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

# HOW TO USE THE ON SCREEN DISPLAY (OSD)

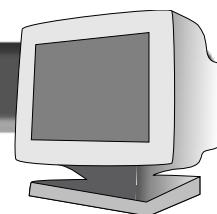

## COLOR TEMPERATURE WINDOW

### USER PRESETS

If you need to adjust any of the three preset options (CAD/CAM, DTP, or PHOTO RETOUCH), follow the steps below to modify the colors that appear on your screen. You can make individual adjustments to each of the preset options.

- 1** Press the On SCREEN DISPLAY button.
- 2** Turn the ROTARY knob until the COLOR window is highlighted. Next, press the On SCREEN DISPLAY button. Then, turn the ROTARY knob until USER PRESETS icon is highlighted.
- 3** Press the On SCREEN DISPLAY button to bring up the USER PRESETS window.
- 4** If necessary, turn the ROTARY knob until 1 of the USER PRESETS is highlighted. Next, press the On SCREEN DISPLAY button.
- 5** First, press the On SCREEN DISPLAY button. RED will be highlighted. Next, to adjust the red, press the On SCREEN DISPLAY button again. Then, turn the ROTARY knob to increase or decrease the red.
- 6** When done with red, press the On SCREEN DISPLAY button. Turn rotary to GREEN, GREEN will be highlighted. To adjust the green, press the On SCREEN DISPLAY button again. Then, turn the ROTARY knob to increase or decrease the green.
- 7** When done with green, press the On SCREEN DISPLAY button. Turn rotary to BLUE, BLUE will be highlighted. To adjust the blue, press the On SCREEN DISPLAY button again. Then, turn the ROTARY knob to increase or decrease the blue.
- 8** To exit USER PRESET 1, press the On SCREEN DISPLAY button.
- 9** You will now be back at the User PRESETS window. See SMART HELP below for options.

### SMART HELP

**USER PRESETS**

GO BACK

1 2


To exit USER PRESETS (step 3 above), turn the ROTARY knob until the Go Back icon is highlighted. Go BACK appears by the icon when highlighted. Next, press the On SCREEN DISPLAY button. You will be back at the COLOR TEMPERATURE window.

After returning to COLOR TEMPERATURE . . .

. . . to continue to USER PRESET 2 OR 3, repeat steps 3 through 8, selecting either USER PRESET 2 or USER PRESET 3.

. . . to continue to SPECIAL CONTROLS window, turn the ROTARY knob until EXIT is highlighted. Next, press the On SCREEN DISPLAY button. Then, turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Now, follow steps 2 - 5 under SPECIAL CONTROLS on the next page.

. . . to exit the On SCREEN DISPLAY completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

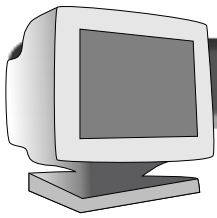

# How to Use the On Screen Display (OSD)

## Special Controls window

### Language

The ON SCREEN DISPLAY shows its settings in one of five languages. The default is English, but you can select French, Spanish, German, or Italian.

- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Then, press the ON SCREEN DISPLAY button to highlight LANGUAGE icon.
- 3 Press the ON SCREEN DISPLAY button to bring up LANGUAGE screen.
- 4 Turn the ROTARY knob (at the lower right-hand corner of the monitor) until desired language is selected.
- 5 Press the ON SCREEN DISPLAY button to confirm your selection and return to SPECIAL CONTROLS.

### Smart Help

After returning to SPECIAL CONTROLS . . .

. . . to continue to POWER SAVING, turn the ROTARY knob until POWER SAVING icon is highlighted. Next, follow steps 3 - 6 under POWER SAVING  
. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

### POWER SAVING

POWER SAVING helps save energy when the monitor is on but not being used. After a preset time, the monitor will go blank if not being used. To select POWER SAVING, follow the steps below.


- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the POWER SAVING icon is highlighted.
- 3 Press the ON SCREEN DISPLAY button to bring up POWER SAVING screen.
- 4 Turn the ROTARY knob to select POWER SAVING ON or OFF.
- 5 Press the ON SCREEN DISPLAY button to confirm your selection and return to SPECIAL CONTROLS.

### Smart Help

After returning to SPECIAL CONTROLS . . .

. . . to continue to OSD CONTROLS, turn the ROTARY knob until OSD CONTROLS icon is highlighted. Next, follow steps 3 - 6 under OSD CONTROLS  
. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

# How to Use the On Screen Display (OSD)

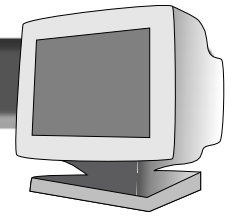

## Special Controls window

### OSD Controls

WITH OSD CONTROLS, you can set the time for the On Screen Display to time out, and change the vertical and horizontal position of the OSD on the monitor screen.

- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the OSD CONTROLS icon is highlighted.
- 3 Press the ON SCREEN DISPLAY button to bring up OSD CONTROLS screen.
- 4 Press the ON SCREEN DISPLAY button to bring up TIMER screen.
- 5 Turn the ROTARY knob to select 05, 10, 25 seconds, or OFF.
- 6 Press the ON SCREEN DISPLAY button to add your change and return to OSD CONTROLS.
- 7 Turn the ROTARY knob to select either VERTICAL or HORIZONTAL POSITION and repeat steps 3 - 6.

### Smart Help

After returning to SPECIAL CONTROLS ...

... to continue to VIDEO INPUT, turn the ROTARY knob until Go BACK is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the VIDEO INPUT icon is highlighted. Next, follow steps 3 - 6 under VIDEO INPUT.

under VIDEO INPUT.

... to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

### Video Input

VIDEO INPUT helps determine what you see on the screen. It is set at 0.7V(plts), but if the video input signal is different than the output signal, you may want to change it to 1.0V.


- 1 Press the ON SCREEN DISPLAY button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the VIDEO INPUT icon is highlighted.
- 3 Press the ON SCREEN DISPLAY button. The VIDEO INPUT screen appears.
- 4 Turn the ROTARY knob to select either 0.7V or 1.0V.
- 5 Press the ON SCREEN DISPLAY button to save your selection and return to SPECIAL CONTROLS.

### Smart Help

After returning to SPECIAL CONTROLS ...

... to continue to ADVANCED CONTROLS, turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob to ADVANCED CONTROLS window and go to the next page.


... to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

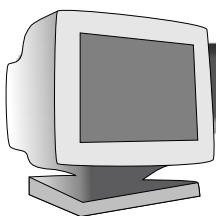







# How to Use the On Screen Display (OSD)

## ADVANCED Controls window

### Rotary Default

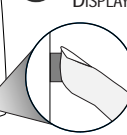 **ROTARY DEFAULT** allows you to pick the feature your ROTARY knob will default to when not used in adjusting your ON SCREEN DISPLAY. The normal default is brightness. To select your ROTARY DEFAULT, follow the steps below.

-  Press the ON SCREEN DISPLAY button.
-  Turn the ROTARY knob until **ADVANCED CONTROLS** is highlighted. Then, press the ON SCREEN DISPLAY button to highlight **ROTARY DEFAULT** icon.
-  Press the ON SCREEN DISPLAY button to bring up **ROTARY DEFAULT** screen.
-  Turn the ROTARY knob to select **BRIGHTNESS, CONTRAST**
-  Press the ON SCREEN DISPLAY button to add your adjustment and return to **ADVANCED CONTROLS**.

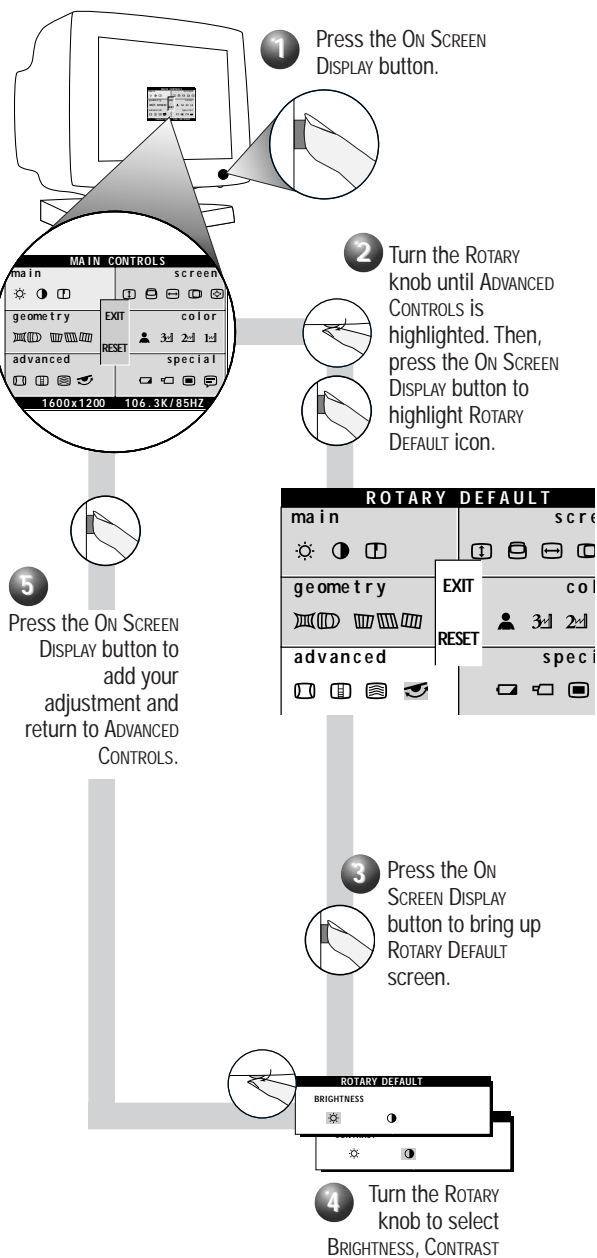


### Smart Help







After returning to **ADVANCED CONTROLS** . . .


. . . to continue to **MOIRE**, turn the ROTARY knob until **MOIRE** is highlighted. Next, follow steps 3 - 5 under **MOIRE**.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)
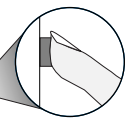
### moire

 **MOIRE** is a fringe pattern arising from the interference between two superimposed line patterns. To adjust your **MOIRE**, follow the steps below. *Note: Use only if necessary. By activating **MOIRE**, sharpness can be affected.*

-  Press the ON SCREEN DISPLAY button.
-  Turn the ROTARY knob until **ADVANCED CONTROLS** is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the **MOIRE** icon is highlighted.
-  Press the ON SCREEN DISPLAY button to bring up **MOIRE** screen.
-  Turn the ROTARY knob until **HORIZONTAL MOIRE** is highlighted. Then, press the ON SCREEN DISPLAY button.
-  Turn the ROTARY knob to adjust the moire.
-  Press the ON SCREEN DISPLAY button to add your adjustment and to bring up **ADVANCED CONTROLS** screen. See **SMART HELP** to select **VERTICAL MOIRE** or turn **MOIRE OFF**.

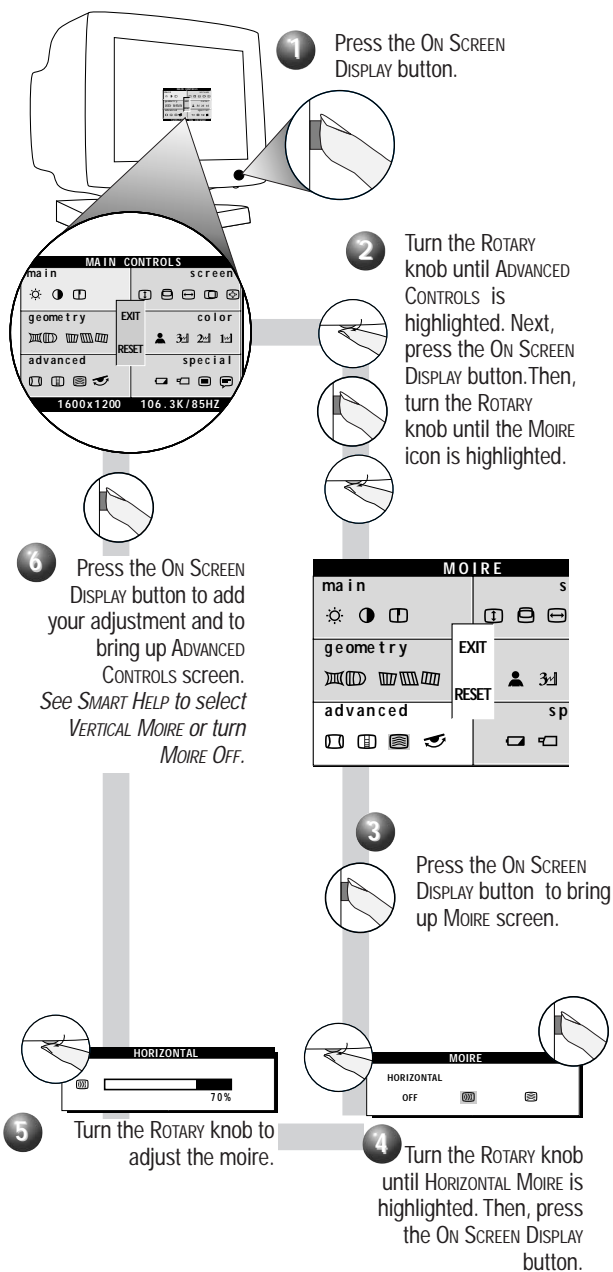

### Smart Help


. . . to select **VERTICAL MOIRE** or to turn **MOIRE** off, follow the steps above, selecting **VERTICAL MOIRE** or **MOIRE OFF** IN STEP 4.

After returning to **ADVANCED CONTROLS** . . .

. . . to continue to **VERTICAL LINEARITY**, turn the ROTARY knob until **VERTICAL LINEARITY** icon is highlighted. Next, follow steps 4 - 5 under **VERTICAL LINEARITY** (on the next page).


. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)




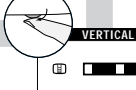

# How to Use the On Screen Display (OSD)

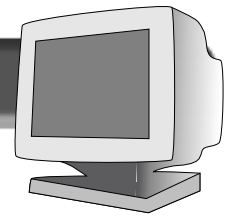


## ADVANCED Controls window

### VERTICAL LINEARITY

 Linearity is the degree with which the actual location of a pixel on the screen corresponds with its intended location. To adjust your VERTICAL LINEARITY, follow the steps below.

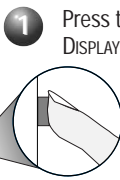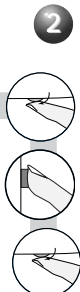-  Press the ON SCREEN DISPLAY button.
-  Turn the ROTARY knob until ADVANCED CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the VERTICAL LINEARITY icon is highlighted.
-  Press the ON SCREEN DISPLAY button to bring up VERTICAL LINEARITY screen.
-  Turn the ROTARY knob to adjust the vertical linearity.
-  Press the ON SCREEN DISPLAY button to add your adjustment and to bring up ADVANCED CONTROLS screen.

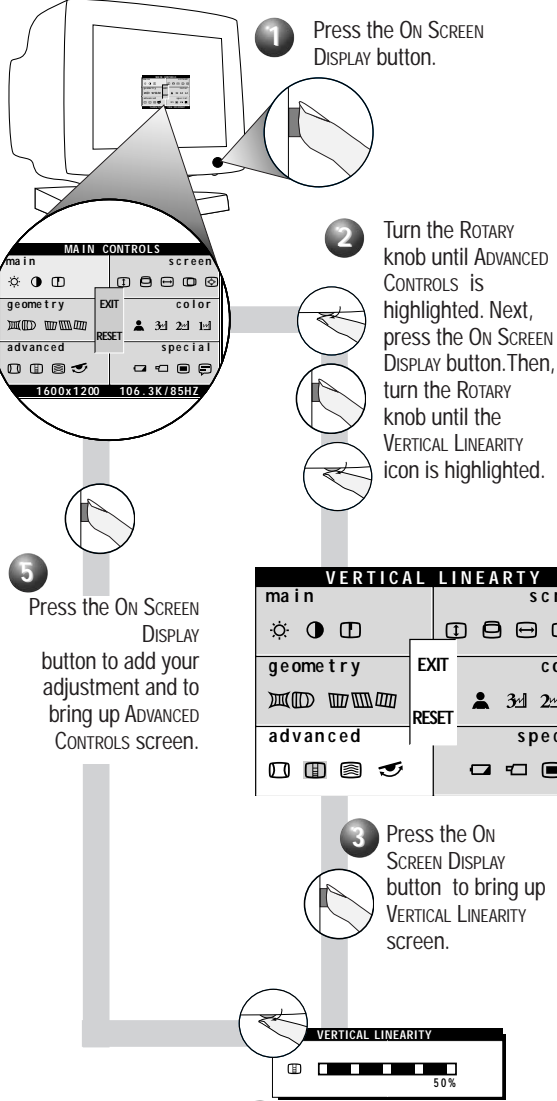


### Smart Help






After returning to ADVANCED CONTROLS . . .


. . . to continue to CORNER CORRECTION, turn the ROTARY knob until CORNER CORRECTION icon is highlighted. Next, follow steps 3 - 4 under CORNER CORRECTION.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)

### CORNER CORRECTION

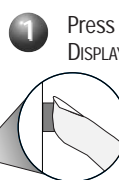 CORNER CORRECTION "squares up" the corners of an image on the screen. To adjust your CORNER CORRECTION, follow the steps below.

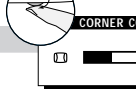-  Press the ON SCREEN DISPLAY button.
-  Turn the ROTARY knob until ADVANCED CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the CORNER CORRECTION icon is highlighted.
-  Press the ON SCREEN DISPLAY button to bring up CORNER CORRECTION screen.
-  Turn the ROTARY knob until desired corner correction is selected.
-  Press the ON SCREEN DISPLAY button to bring up ADVANCED CONTROLS screen.

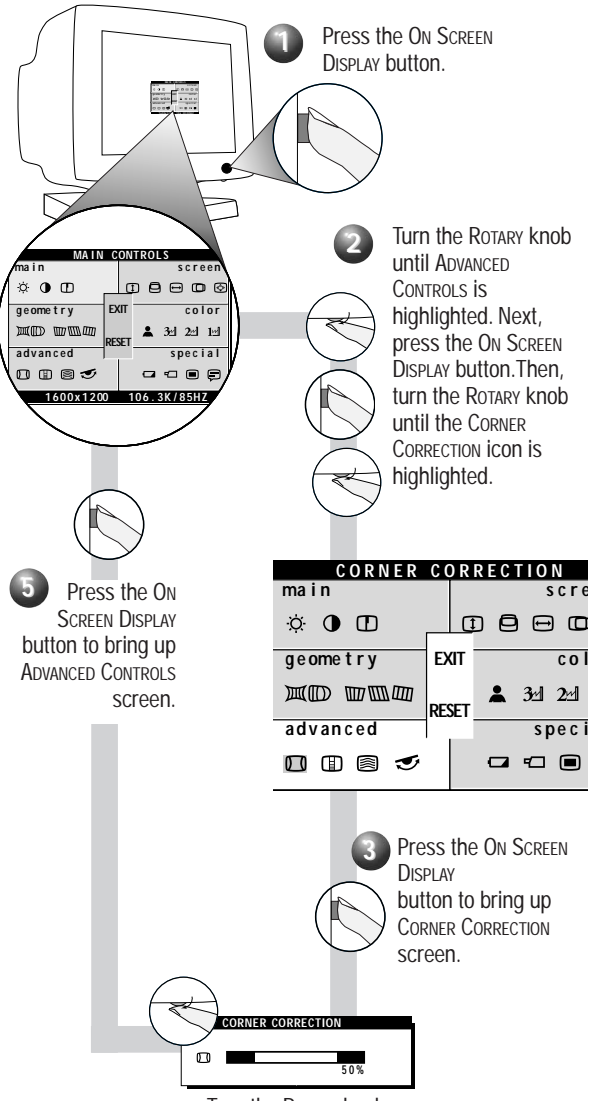


### Smart Help

After returning to ADVANCED CONTROLS . . .

. . . to continue to GEOMETRY WINDOW, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Then follow steps 2a - 2c under GEOMETRY WINDOW on the next page.

. . . to exit completely, press the OSD button and hold for 1.5 seconds. (See page 15 for other exit options.)



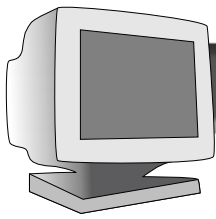


# How to Use the On Screen Display (OSD)

## Geometry Controls window


### Pincushion, Balanced Pincushion, Trapezoid, Parallelogram, Rotation




Follow the steps below to adjust any of the five preset options (PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, or ROTATION). You can make individual adjustments to each of the preset options. *Note: use these features only when the picture is not square.*

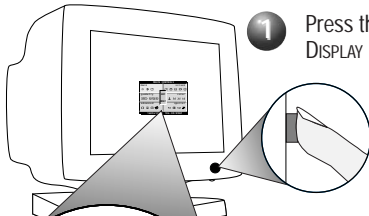


**1** Press the On SCREEN DISPLAY button.

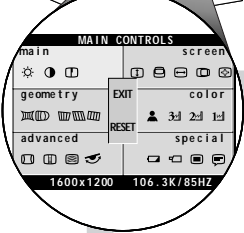

**2a** Turn the ROTARY knob until the GEOMETRY CONTROLS window is highlighted. Next, press the On SCREEN DISPLAY button. Then, if necessary, turn the ROTARY knob until PINCUSHION icon is highlighted.

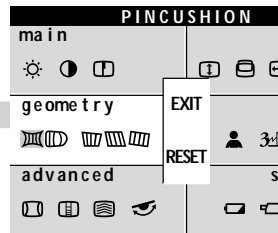


**2b** Press the On SCREEN DISPLAY button. Then, turn the ROTARY knob to adjust the pincushion.

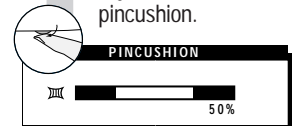

**2c** When done, press the On SCREEN DISPLAY button to save the change and return to GEOMETRY CONTROLS window.




**3a** To select BALANCED PINCUSHION, turn the ROTARY knob until BALANCED PINCUSHION is highlighted. Next, press the On SCREEN DISPLAY button.



**3b** Turn the ROTARY knob (on the lower right-hand corner of the monitor) to adjust the balanced pincushion.





**3c** When done, press the On SCREEN DISPLAY button. This will save the change and return the screen to GEOMETRY CONTROLS.



**5a** To select PARALLELOGRAM or ROTATION, turn the ROTARY knob until PARALLELOGRAM or ROTATION icon is highlighted. Next, press the On SCREEN DISPLAY button. Then follow steps 4b and 4c to make the appropriate changes.

**5b**


**5c**



**4c** When done, press the On SCREEN DISPLAY button. This will save the change and return the screen to GEOMETRY CONTROLS window.



**4b** Turn the ROTARY knob to adjust the trapezoid.



**4a** To select TRAPEZOID, turn the ROTARY knob until TRAPEZOID icon is highlighted. Next, press the On SCREEN DISPLAY button.



### Smart Help

#### To exit GEOMETRY CONTROLS . . .


. . . *but continue to another window*, turn the ROTARY knob until EXIT is highlighted. Next, press the On SCREEN DISPLAY button. Then, turn the ROTARY knob until that window is highlighted. Now, press the On SCREEN DISPLAY button and follow the instructions for that window.

. . . *completely*, press the On SCREEN DISPLAY button and hold for 1.5 seconds. The On Screen Display will disappear. All changes will be saved.

To make changes to one item, follow the steps for that item. Then, follow "To exit GEOMETRY CONTROLS . . ."

To return to factory presets, see "To Reset an Individual Window" on page 15.



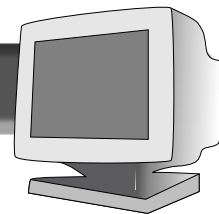


## Exit and Reset


### Exit & Reset from a window

Choosing EXIT allows you to go to another window. Choosing RESET returns all the settings in that window to factory presets.


#### To Exit an individual window

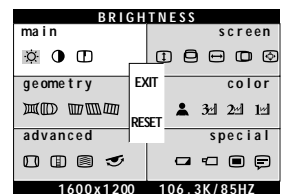

- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

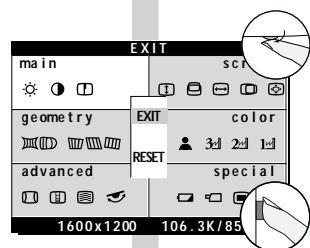


- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button.

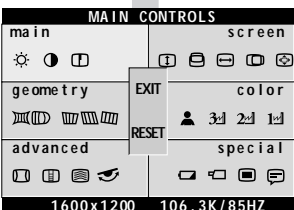


- 3 An entire window is now highlighted. Turn the ROTARY knob to another window and begin adjustments, or turn the knob until EXIT is highlighted as shown in EXIT FROM OSD (at right).


#### To Reset an individual window

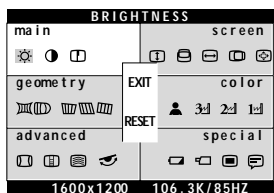

- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

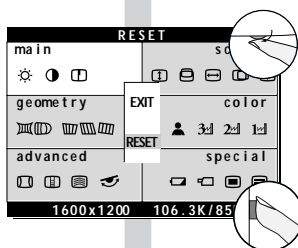

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

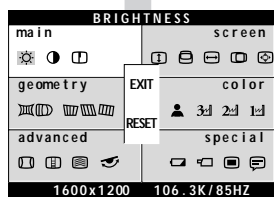


- 3 The first icon in the reset window is now highlighted. Turn the ROTARY knob to select another icon and begin adjustments, or turn the knob until EXIT is highlighted as shown above.


### Exit & Reset from the On Screen Display

Exiting from the On Screen Display removes the On Screen Display from the monitor screen. Resetting from the On Screen Display returns everything in all the windows to factory presets.

#### To Exit an entire On Screen Display

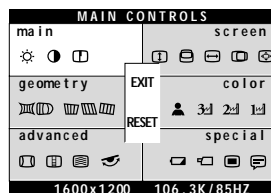


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

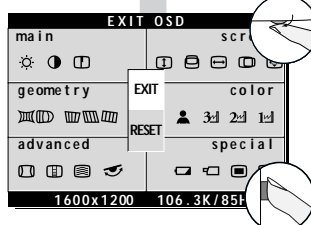


- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button. The On Screen Display will disappear.


#### Reset Entire On Screen Display

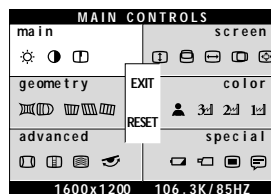


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

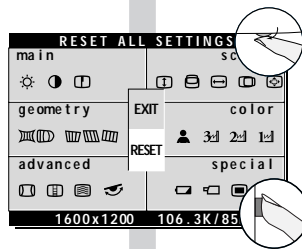

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

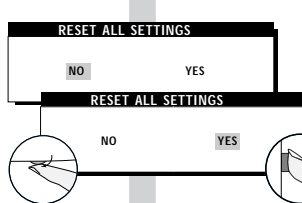


- 3 Turn the ROTARY knob to select No or Yes. Then press the ON SCREEN DISPLAY button.

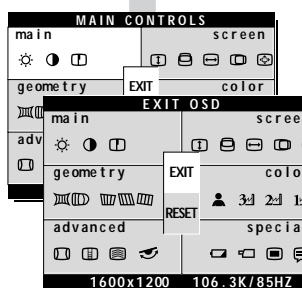

- 4 If No is selected, the On Screen Display appears and MAIN CONTROLS is highlighted.

If Yes is selected, the EXIT OSD screen appears.

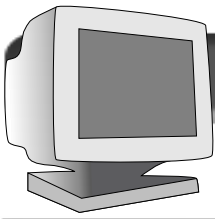

# Additional Hook Up Options

## BNC and USB Set Ups

### BNC Connections

BNC is another way to connect the monitor to the computer. This connection requires an optional BNC cable. It can be connected to either a Macintosh- or IBM-compatible computer. For those who work with graphics or designs, this option may be better.


**Note:** Be sure to flip the D-Sub/BNC switch to BNC when using this connection.

#### For an IBM-compatible computer:

1. Turn off the computer.
2. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
3. Connect the shielded power cable.
4. Turn on the monitor. Then turn on the computer.
5. If you have Windows '95, follow the "If you have Windows '95" steps on the Setting Up foldout sheet.

#### For a Macintosh-type computer:

1. Connect the Mac adapter to one end of the monitor cable.
2. Turn off the computer.
3. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
4. Connect the shielded power cable.
5. Turn on the monitor. Then turn on the computer.

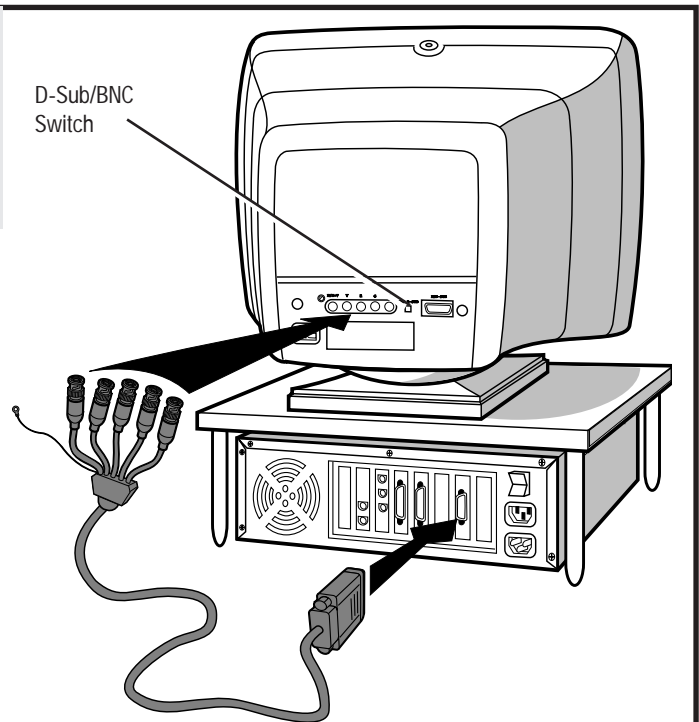

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.


### USB Connections

USB (Universal Serial Bus) is an innovation in connecting your IBM-compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. While the software is still being developed, Philips has included the hardware so you will be ready to take advantage of this next generation in computer development.

#### For an IBM-compatible Computer:

1. Turn off the computer.
2. Connect the (optional) USB Hub and cable to the computer and to the monitor. (Computer must have USB port.)
3. Connect the shielded power cable.
4. Turn on the monitor. Then turn on the computer.
5. With the installation of the correct software, you will be able to connect specially-made peripherals to the monitor.


*Note:* USB Hub and cables sold separately. USB Bay exists in back of monitor.

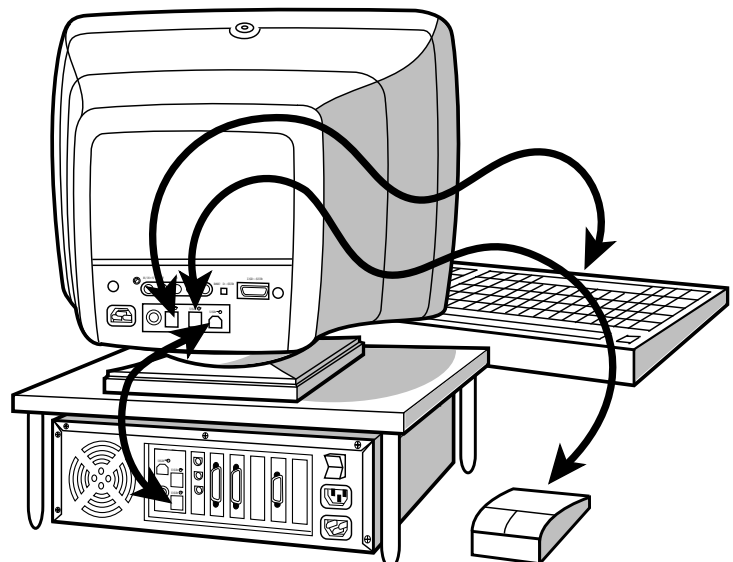

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.

# Additional information

## Power saving feature

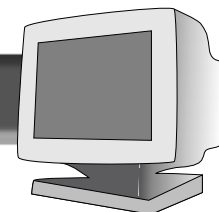

### Automatic Power Savings & Preset Resolution Modes

If you have VESA's DPMS compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If input from a keyboard, mouse, or other device is detected, the monitor automatically "wakes up." The table directly below shows the power consumption and signalling of this automatic power-saving feature. To turn this feature on and off, see page 10. The tables at the bottom of the page show the 13/14 factory preset resolution modes. This leaves room for additions.



Power Management Definition

VESA's mode	Video	H-sync	V-sync	Power used	Power saving(%)	LED color
ON	Active	Yes	Yes	< 160W	0%	Green
Stand-by	Blanked	No	Yes	< 15W	87.5%	Yellow
Suspend	Blanked	Yes	No	< 15W	87.5%	Yellow
OFF	Blanked	No	No	< 5W	95.8%	Amber

This monitor is Energy Star compliant and power management compatible.

AS AN ENERGY STAR PARTNER, PHILIPS HAS DETERMINED THAT THIS PRODUCT MEETS THE ENERGY STAR GUIDELINES FOR ENERGY EFFICIENCY.

The proper operation of the function requires a computer with VESA DPMS power management capabilities. When used with a computer equipped with VESA DPMS, the monitor is Energy Star compliant.


### 201B

Factory Preset Resolution Modes				
MODE	RESOLUTION	H. FREQ. (KHz)	V. FREQ. (Hz)	STANDARD
1	640 x 400	31.5	70	VGA
2	640 x 480	31.5	60	VGA
3	640 x 480	37.5	75	VESA/75
4	800 x 600	46.9	75	VESA/75
5	800 x 600	53.7	85	VESA/85
6	1024 x 768	60	75	VESA/75
7	1024 x 768	68.7	85	VESA/85
8	1152 x 870	69.0	75	MAC
9	1152 x 900	71.8	76	SUN SPARC
10	1280 x 1024	80.0	75	VESA/75
11	1280 x 1024	91.1	85	VESA/85
12	1600 x 1200	106.3	85	VESA/85
13	1800 x 1350	105.5	75	

### 201P

Factory Preset Resolution Modes				
MODE	RESOLUTION	H. FREQ. (KHz)	V. FREQ. (Hz)	STANDARD
1	640 x 400	31.5	70	VGA
2	640 x 480	31.5	60	VGA
3	640 x 480	37.5	75	VESA/75
4	800 x 600	46.9	75	VESA/75
5	800 x 600	53.7	85	VESA/85
6	1024 x 768	60	75	VESA/75
7	1024 x 768	68.7	85	VESA/85
8	1152 x 870	69.0	75	MAC
9	1152 x 900	71.8	76	SUN SPARC
10	1280 x 1024	80.0	75	VESA/75
11	1280 x 1024	91.1	85	VESA/85
12	1600 x 1200	106.3	85	VESA/85
13	1800 x 1350	105.5	75	
14	1600 x 1200	112.5	90	

Unit is capable of up to 1800 x 1440 with user definable modes. 201P/201B Monitors are compliant with VESA standard timing requirements.

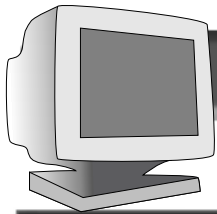


# Additional Information

Coming to Terms with this Book

## Pin Assignment

The 15-pin D-sub connector (male) of the signal cable:

Pin No.	Assignment
1	Red video input
2	Green video input
3	Blue video input
4	Identical output - connected to pin 10
5	Self test
6	Red video ground
7	Green video ground
8	Blue video ground
9	No pin
10	Logic ground
11	Identical output - connected to pin 10
12	Serial data line (SDA)
13	H. Sync / H+V
14	V. Sync (VCLK for DDC)
15	Data clock line (SCL)



## Specifications

### GENERAL

#### CRT

Screen size	:21" (53.3 cm) flat & square
Viewable Image Size (VIS)	:19.9"
Focusing method	:Dynamic focus
Dot pitch	:0.22 mm (horizontal)
Phosphor	:P22 or equivalent, medium short persistence
Screen treatment	:ARASC

#### Display area

Factory preset	:380 mm (H) x 285 mm (V)
Maximum usable	:406 mm (H) x 304 mm (V)

#### Scanning frequency

Horizontal (line)	:30-115kHz(201P) (AutoScan) 30-107kHz(201B) (AutoScan)
Vertical (frame)	:50-160 Hz (AutoScan)

#### Input power

#### Power consumption

#### Thermal dissipation

:100-240 V AC, 50-60 Hz
:110 Watt normal, 160 Watt max.
:(201B) 375.4 BTU normal, 511.9 BTU maximum
:(201P) 375.4 BTU normal, 546.1 BTU maximum

#### Input signal

Video	:0.7 or 1.0 Vpp, 75 Ohm impedance
Sync	:Separate sync. TTL level Composite sync. TTL level

#### Pedestal

Tilt	:5° forward, 11° backward
Swivel	:90° left, 90° right

#### Physical

Unit dimension (WxHxD)	:490 x 529 x 551 mm 19.3" x 21.7" x 20.8"
Net weight	:31.5 kg 69.3 lbs.

#### Operating conditions

Temperature	:0° C - 40° C 32° F - 104° F
Humidity	:10% - 90%

#### Storage conditions

Temperature	:-40° C - 60° C -20° F - 140° F
Humidity	:5% - 95%

## Index

Automatic Power Saving . . . . .	17	Power button . . . . .	Set Up Guide, 2
Balanced Pincushion . . . . .	14	Power plug . . . . .	Set Up Guide, 2
BNC jacks . . . . .	2	Power Saving . . . . .	11
BNC set up . . . . .	16	Reset . . . . .	15
Brightness . . . . .	4	Resolution Modes . . . . .	17
Cable Cover . . . . .	2	Rotary Default . . . . .	12
CAD/CAM . . . . .	8, 9	Rotary knob . . . . .	2
Color Temperature . . . . .	3, 8-9	Rotation . . . . .	14
Contrast . . . . .	4	Safety precautions . . . . .	1
Corner Correction . . . . .	13	Screen Size & Position . . . . .	3, 6-7
Degauss . . . . .	5	Special Controls . . . . .	3, 10-11
Description of controls . . . . .	2, 3	Specifications . . . . .	18
D-Sub/BNC switch . . . . .	2, 16	Trapezoid . . . . .	14
DTP . . . . .	8, 9	Troubleshooting . . . . .	19,
End-of -life disposal . . . . .	1		Set Up Guide
Exit . . . . .	15	USB hub . . . . .	2, 16
Features . . . . .	1	USB set up . . . . .	16
Full Size . . . . .	6	User Presets . . . . .	9
Geometry Controls . . . . .	3, 14	Vertical Linearity . . . . .	13
Glossary . . . . .	18	Vertical Position . . . . .	7
Hook Ups . . . . .	Set Up Guide, 16	Vertical Size . . . . .	7
Horizontal Position . . . . .	6	Video Input . . . . .	11
Horizontal Size . . . . .	7	Warranty (Appendix) . . . . .	60
Language . . . . .	10		
Main Controls . . . . .	3, 4-5		
Maintenance . . . . .	1		
Moire . . . . .	12		
Monitor cable plug . . . . .	2		
On Screen Display . . . . .	2		
OSD button . . . . .	2		
OSD Controls . . . . .	10		
Parallelogram . . . . .	14		
Pedestal . . . . .	2		
Photo Retouch . . . . .	8, 9		
Pin Assignment . . . . .	18		
Pincushion . . . . .	14		


## Glossary

Here are a few definitions that may help you.

Degauss	The process by which metal parts of the monitor are demagnetized in order to reduce screen distortion and color impurity.
D-Sub/ BNC	Two ways of connecting your monitor to your computer. Your monitor comes with a D-Sub cable. For work with a heavy emphasis on graphics, a BNC cable is recommended.
Geometry	A set of controls that allows you to adjust the alignment of the picture on the monitor screen. The goal is to "square up" the picture. This is done by adjusting such items as balanced pincushion, pincushion, parallelogram, rotation, and trapezoid.
Moire	A fringe pattern caused by the interference between two superimposed line patterns.
USB	Universal Serial Bus. A way to connect your computer, monitor, and peripherals for true Plug-and-Play functions.

# Additional Information

## What to Do if Something isn't Working

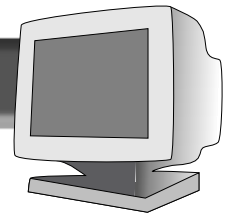

### Troubleshooting

Having trouble? Something not working? Before calling for help, try these suggestions.

#### HAVING THIS PROBLEM?

No Picture  
(Power LED not lit)

#### CHECK THESE ITEMS

Make sure the Power cable is plugged in the wall and back of the monitor.  
Power button on top of the monitor should be in the ON position.  
Disconnect the monitor from the power outlet for about one minute.

No Picture  
(Power LED is Amber  
or Yellow in color)

Make sure the computer is turned on.  
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 16.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.  
The Energy Saving Feature may be activated. See pages 12 and 17 for more detail.

No Picture  
(Power LED is Green  
in color)

Make the Brightness and Contrast controls are set correctly. See page 4 for details  
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 16.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.  
Make sure the computer Power button is on.  
Unplug the monitor from the power outlet for about 3 minutes.

Screen says



when you turn on  
the monitor.

Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 16.  
Make sure the monitor cable is properly connected to your computer. See Setting Up foldout.  
Check to see if the monitor cable has bent pins.  
Make sure the computer is turned on

No Color

If you are using a non-VESA-DDC standard video card, consult your local Philips dealer or service organization to obtain an adapter.

Color appears blotchy

The picture may need degaussing. See page 5 for details.  
Remove any nearby magnetic objects.  
Face the monitor East for best picture quality.

Missing one or  
more colors

Check user settings of Color Temperature. See pages 8 and 9 for details.  
Make sure the monitor cable is properly connected to your computer.  
Check to see if the monitor cable has bent pins.

Dim Picture

Adjust the Brightness and Contrast controls. See page 4 for details.  
Check the Video Input selection and switch from 0.7 volts to 1.0 volts or 1.0 volts to 0.7 volts. See page 11.  
Check your video card and the manual instructions for it. It may be a non-VESA-DDC Standard card.

Picture is too large  
or too small

Adjust the Horizontal and/or Vertical Size. See pages 7 and 8 for details.

Edges of the picture  
are not square

The geometry controls require adjusting. See page 14 for details.

Picture has a double  
image

Eliminate the use of a video extension cable and/or video switch box.  
Face the monitor East for best picture quality.

Picture is not sharp

Check to make sure Moire is switched off. See page 12.

Unstable Picture

Increase your refresh rate. Consult your computer manual for details.

Windows '95 cannot  
find your video card

Select "Super VGA" under STANDARD DISPLAY TYPES, or contact your video card manufacturer for the right drivers.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>